DMX REFERENCE

WARP M

ADB WARP MOUVING

ADB



Manufacturer	ADB
GDTF file	ADB_warp_m_168298.gdtf
GDTF revision	good gma3 3d ok · 2026-11-07
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 4
6 Connections 5
7 Operation 5
8 Functions at a glance 6
9 DMX channels 7
Mode 1 - Standard 16 bit 7
10 Technical specifications 10
11 Maintenance and cleaning 11
12 Troubleshooting 11
13 Disposal 12

1 About this manual

This document describes the ADB WARP MOUVING by ADB. It was compiled from the GDTF file ADB_warp_m_168298.gdtf from the GDTF-Share library.

File revision: “good gma3 3d ok”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by ADB; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	440 W
Weight	32 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode 1 - Standard 16 bit	26	19	1, 27, 53, 79, ...

No light? Check these channels

- Mode 1 - Standard 16 bit: CH 1 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION


- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

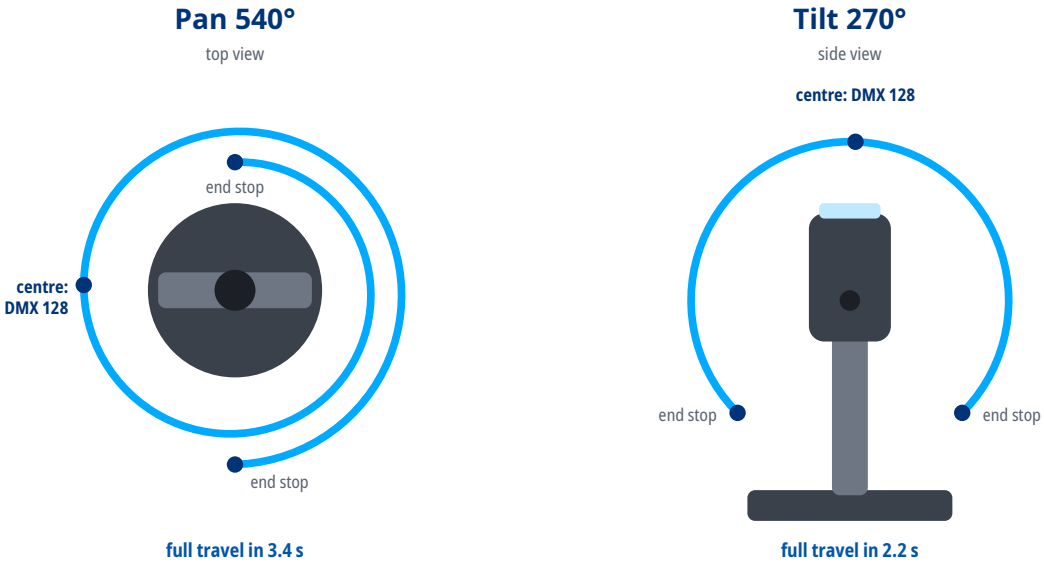

Full-travel times as stated in the GDTF file.

5 Installation


⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 32 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

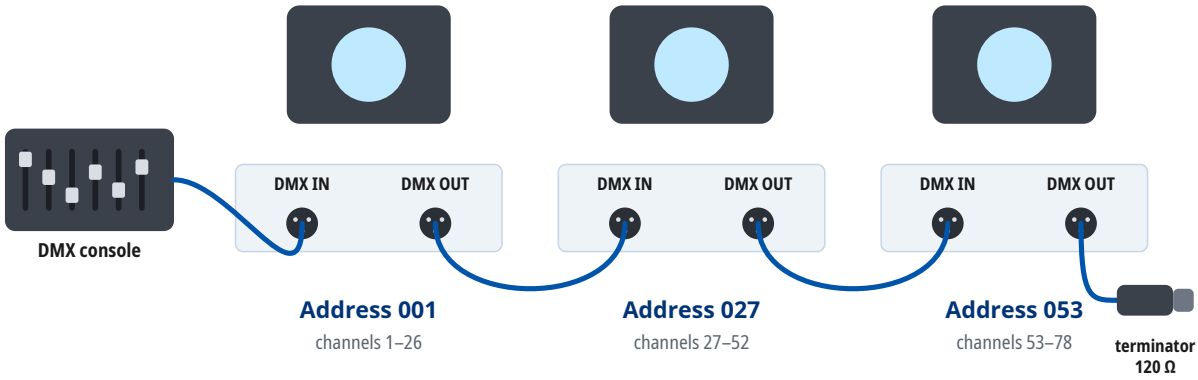

Mode 1 - Standard 16 bit: every unit occupies 26 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode 1 - Standard 16 bit”: 26.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode 1 - Standard 16 bit”, you can use, for example, the start addresses 1, 27, 53, 79.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance


Functions in each DMX mode

	Mode 1 - Standard 16 bit 26 channels
Pan / Tilt	2, 4
Dimmer	1
Gobo wheel	22
Zoom	6
Focus	7
Iris	24

Gobo wheel

1	Fine adjustment of CH 21	DMX 0–8


Spectra of the light sources

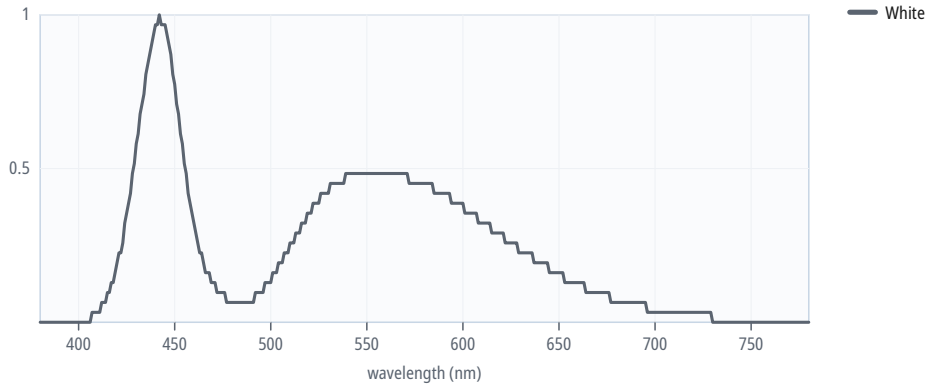

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

9 DMX channels

Units in one DMX universe

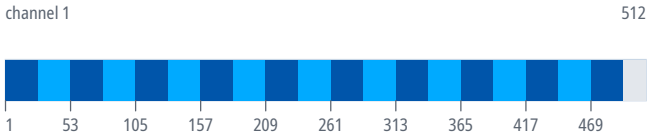

Mode 1 - Standard 16 bit
26 channels

up to 19 units
last address 469

Start addresses of 20 units in the mode “Mode 1 - Standard 16 bit”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	131	11	261	16	391
2	27	7	157	12	287	17	417
3	53	8	183	13	313	18	443
4	79	9	209	14	339	19	469
5	105	10	235	15	365	20	U2 · 1


Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 1 - Standard 16 bit

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

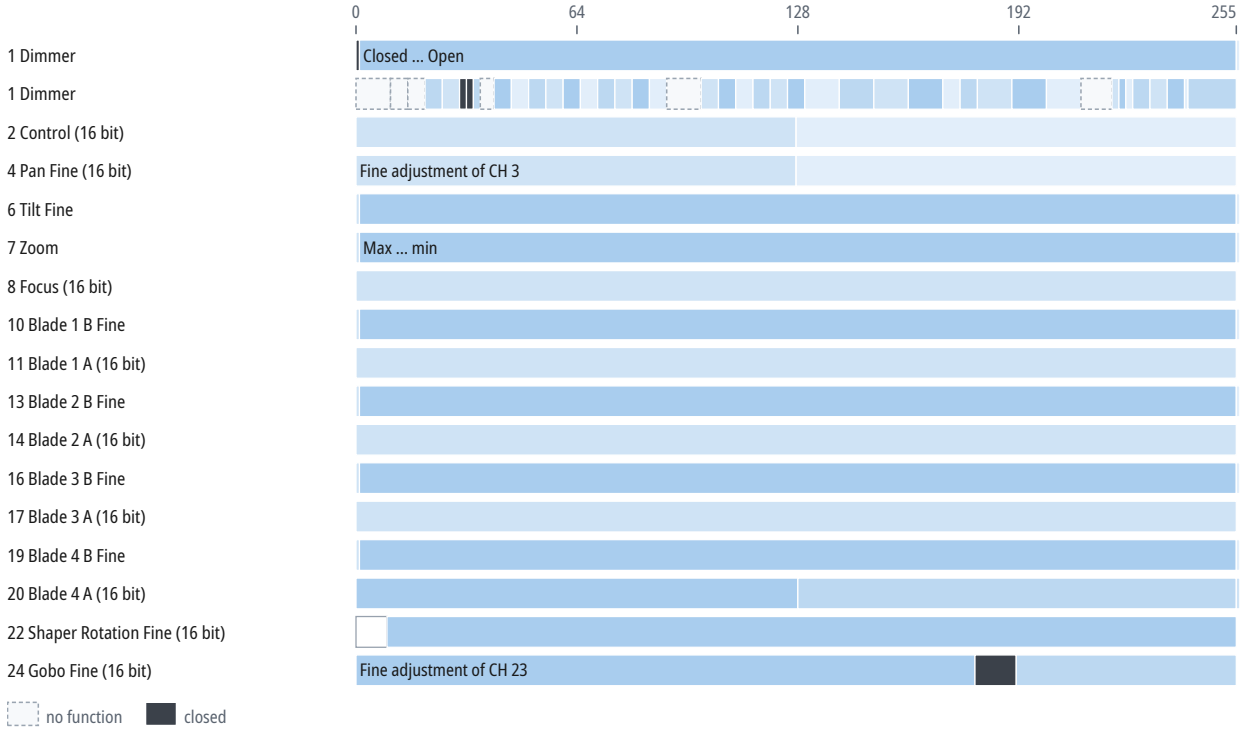

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Control	0–9	No function
		10–14	Wired DMX
		15–19	Wireless DMX
		20–24	Display On
		25–29	Display Off
		30–31	Fans ON at blackout
		32–33	Fans OFF at blackout
		34–35	Dimmer curve: Super square law
		36–39	No function
		40–44	PT mode: Speed
		45–49	PT mode: Time
		50–54	BO while PAN TILT moving: ON
		55–59	BO while PAN TILT moving: OFF
		60–64	BO while color wheels moving: ON
		65–69	BO while color wheels moving: OFF
		70–74	BO while Gobo moving: ON
		75–79	BO while Gobo moving: OFF
		80–84	Fans mode: Auto
		85–89	Fans mode: High
		90–99	No function
		100–104	Focus tracking ON
		105–109	Focus tracking OFF
		110–114	Dimmer curve: Square law
		115–119	Dimmer curve: Linear
		120–124	Parking position ON
		125–129	Parking position OFF
		130–139	Fixture reset (except pan/tilt)
		140–149	Position Reset
		150–159	Color system reset
		160–169	Gobo and Effect wheel reset
		170–174	Pan reset
		175–179	Tilt reset
		180–189	Zoom/focus/frost/prism reset
		190–199	Iris /framing shutters/effect wheel reset
		200–209	Total fixture reset
		210–218	No function
		219–220	Gobo indexing: Maximum speed and shortcut


CH	Function	DMX	Description
2	Control (continued)	221–222	Gobo indexing: Follow speed and follow direction
		223–224	Gobo indexing: Maximum speed and follow direction
		225–229	RoboSpot enabled
		230–234	RoboSpot disabled except faders and PT
		235–239	RoboSpot fully disabled
		240	Disabled Quiet mode
		241–255	Quiet mode min to max
3	Pan	0–127	Pan
		128	Center
		128–255	Pan
4	Pan Fine	0–255	Fine adjustment of CH 3
5	Tilt	0–127	Tilt
		128	Center
		128–255	Tilt
6	Tilt Fine	0–255	Fine adjustment of CH 5
7	Zoom	0	Max
		1–254	Max … min
		255	Min
8	Focus	0	Min
		1–254	Min … max
		255	Max
9	Blade 1 B	0–255	
10	Blade 1 B Fine	0–255	Fine adjustment of CH 9
11	Blade 1 A	0	Min
		1–254	Min … max
		255	Max
12	Blade 2 B	0–255	
13	Blade 2 B Fine	0–255	Fine adjustment of CH 12
14	Blade 2 A	0	Min
		1–254	Min … max
		255	Max
15	Blade 3 B	0–255	
16	Blade 3 B Fine	0–255	Fine adjustment of CH 15
17	Blade 3 A	0	Min
		1–254	Min … max
		255	Max
18	Blade 4 B	0–255	
19	Blade 4 B Fine	0–255	Fine adjustment of CH 18
20	Blade 4 A	0	Min
		1–254	Min … max
		255	Max

CH	Function	DMX	Description
21	Shaper Rotation	0–128	Min ... center
		128–255	Center ... max
		255	Max
22	Shaper Rotation Fine	0–255	Fine adjustment of CH 21
23	Gobo		Gobo 1 Step Index
		0–8	Open/hole
		9–255	Gobo 1 Step Index
24	Gobo Fine	0–255	Fine adjustment of CH 23
25	Iris	0–179	Open ... Closed
		180–191	Closed
		192–255	Iris
26	Iris Fine	0–255	Fine adjustment of CH 25

10 Technical specifications

Parameter	Value
Light	
Light source	halogen lamp
Lamp power	800 W
Luminous flux	20,000 lm
Color temperature	3,200 K
Color rendering index (CRI)	90
Optics	
Zoom	8–48°
Movement	
Pan	540°
Tilt	270°
Control	
DMX connection	5-pin XLR IN/OUT
RJ45 connectors	RJ45 IN, RJ45 OUT (EP version)
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	440 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	32 kg
Operating environment	
Operating temperature	-5 to 45 °C

Spot diameter

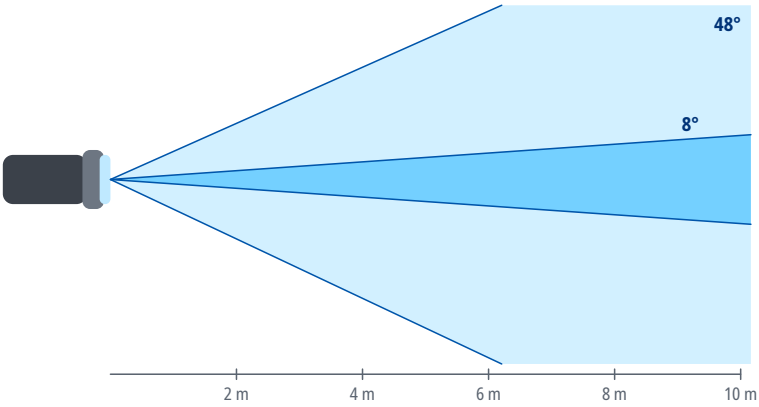

Distance	Ø 8°	Ø 48°
2 m	0.28 m	1.8 m
4 m	0.56 m	3.6 m
6 m	0.84 m	5.3 m
8 m	1.1 m	7.1 m
10 m	1.4 m	8.9 m
15 m	2.1 m	13.4 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.