DMX REFERENCE

Neo Blinder MKIII IP

Neo Blinder MKIII VDL

Ampro



Manufacturer	Ampro
GDTF file	AMPRO_Neo_Blinder_MKIII_IP_122450.gdtf
GDTF revision	VDL - 01 · 2025-12-26
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 7
Mode 1CH 7
Mode 3CH 8
Mode 9CH 8
Mode 13CH 9
Mode 14CH 10
9 Technical specifications 11
10 Maintenance and cleaning 11
11 Troubleshooting 12
12 Disposal 12

1 About this manual

This document describes the Neo Blinder MKIII VDL by Ampro. It was compiled from the GDTF file AMPRO_Neo_Blinder_MKIII_IP_122450.gdtf from the GDTF-Share library.

File revision: “VDL - 01”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Ampro; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	12 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
1CH	1	512	1, 2, 3, 4, ...
3CH	3	170	1, 4, 7, 10, ...
9CH	9	56	1, 10, 19, 28, ...
13CH	13	39	1, 14, 27, 40, ...
14CH	14	36	1, 15, 29, 43, ...

No light? Check these channels

- 3CH: CH 3 Shutter at 0–10 “No Function”
- 9CH: CH 1 Dimmer above 0
- 13CH: CH 1 Dimmer above 0; CH 3 Strobe at 0–10 “No function”
- 14CH: CH 1 Dimmer above 0; CH 3 Strobe at 0–10 “No function”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- This device produces very intense flashes of light.
- Flash rates of about 3 to 30 flashes per second carry the highest risk for people with photosensitive epilepsy.
- Do not aim the device into the eyes of the audience or performers at close range.
- At public events, always give clear advance notice that strobe effects will be used.

4 Installation


⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 12 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

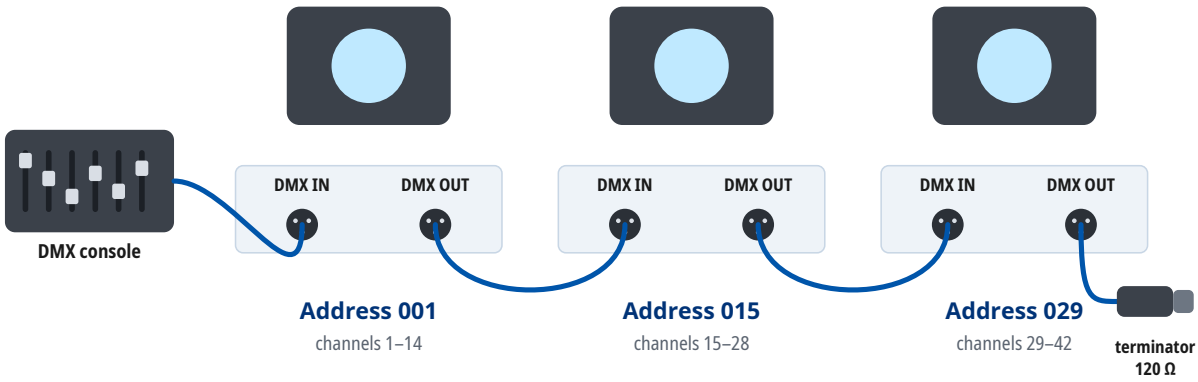

Mode 14CH: every unit occupies 14 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “14CH”: 14.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “14CH”, you can use, for example, the start addresses 1, 15, 29, 43.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	1CH 1 channel	3CH 3 channels	9CH 9 channels	13CH 13 channels	14CH 14 channels
Dimmer	1	1	1	1	1
Dimmer resolution	8 bit	16 bit	8 bit	16 bit	16 bit
Shutter / strobe		3		3	3
Color mixing			2–9	4–11	4–11
Effects / macros				12	12


Cells (pixels)

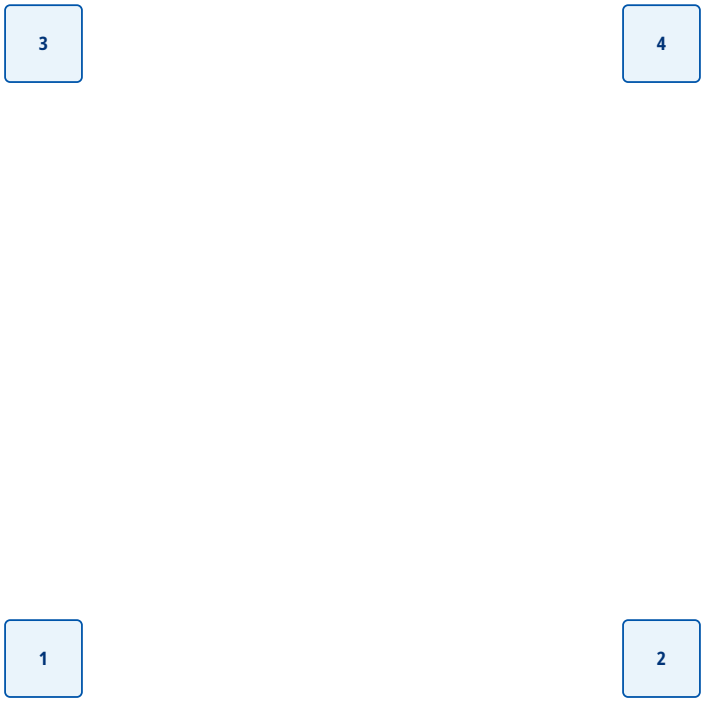

4 cells where the GDTF file places them (seen from above), numbered in the file's order; the mode “14CH” drives them together.

8 DMX channels

Units in one DMX universe

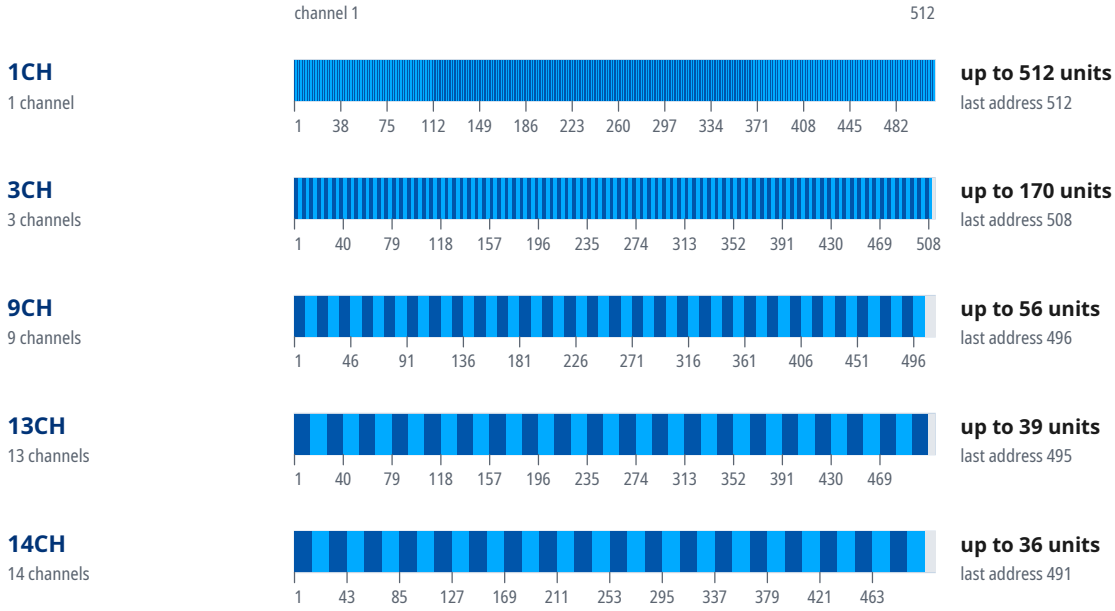


Start addresses of 20 units in the mode “14CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	71	11	141	16	211
2	15	7	85	12	155	17	225
3	29	8	99	13	169	18	239
4	43	9	113	14	183	19	253
5	57	10	127	15	197	20	267

Mode 1CH

The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance




CH	Function	DMX	Description
1	Dimmer		Dim to Warm All Pixels
		0	Min Dimmer
		1–254	Min Dimmer ... Max Dimmer
		255	Max Dimmer

Mode 3CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Shutter at 0–10 “No Function”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

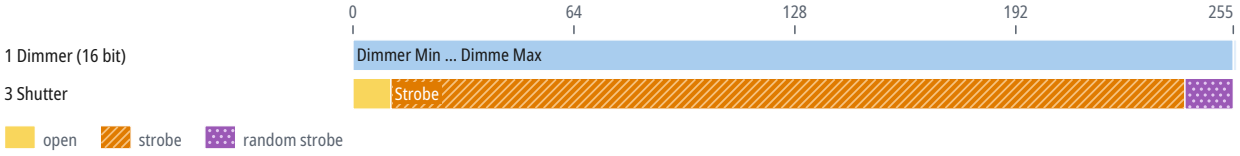

CH	Function	DMX	Description
1	Dimmer	0–255	Dimmer Min ... Dimme Max
		255	Dimme Max
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Shutter	0–10	No Function
		11–240	Strobe
		241–255	Random Strobe

Mode 9CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 2 Cool White 1 255, CH 4 Cool White 2 255, CH 6 Cool White 3 255, CH 8 Cool White 4 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Dimmer	0–255	
2	Cool White 1		Warm White
		0–1	Min
		2–253	Min ... Max
		254–255	Max
3	Warm White 1	0	WW Blinder Min
		1–254	WW Blinder Min ... WW Blinder Max
		255	WW Blinder Max
4	Cool White 2		Warm White
		0–1	Min
		2–253	Min ... Max
		254–255	Max
5	Warm White 2	0	WW Blinder Min
		1–254	WW Blinder Min ... WW Blinder Max
		255	WW Blinder Max


CH	Function	DMX	Description
6	Cool White 3		Warm White
		0–1	Min
		2–253	Min … Max
		254–255	Max
7	Warm White 3	0	WW Blinder Min
		1–254	WW Blinder Min … WW Blinder Max
		255	WW Blinder Max
8	Cool White 4		Warm White
		0–1	Min
		2–253	Min … Max
		254–255	Max
9	Warm White 4	0	WW Blinder Min
		1–254	WW Blinder Min … WW Blinder Max
		255	WW Blinder Max

Mode 13CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 3 Strobe at 0–10 “No function”. The GDTF file gives these values for a console's Highlight function: CH 4 Cool White 1 255, CH 6 Cool White 2 255, CH 8 Cool White 3 255, CH 10 Cool White 4 255.

Channel functions at a glance

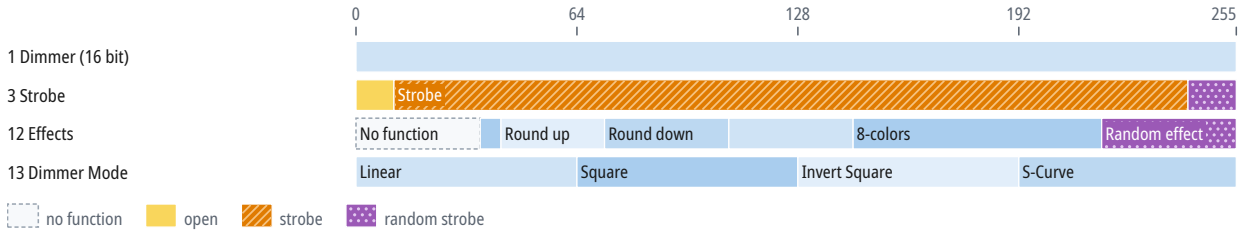

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Strobe	0–10	No function
		11–240	Strobe
		241–255	Random Strobe
4	Cool White 1		Same as CH 2 in the mode “9CH” (p. 8)
5	Warm White 1	0–1	Min
		2–253	Min … Max
		254–255	Max
6	Cool White 2		Same as CH 4 in the mode “9CH” (p. 8)
7	Warm White 2	0–1	Min
		2–253	Min … Max
		254–255	Max


CH	Function	DMX	Description
8	Cool White 3		Same as CH 6 in the mode “9CH” (p. 9)
9	Warm White 3	0–1	Min
		2–253	Min ... Max
		254–255	Max
10	Cool White 4		Same as CH 8 in the mode “9CH” (p. 9)
11	Warm White 4	0–1	Min
		2–253	Min ... Max
		254–255	Max
12	Effects		Auto Mode
		0–35	No function
		36–41	Tungsten effect
		42–71	Round up
		72–107	Round down
		108–143	Round up / down
		144–215	8-colors
		216–255	Random effect
13	Dimmer Mode	0–63	Linear
		64–127	Square
		128–191	Invert Square
		192–255	S-Curve

Mode 14CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 3 Strobe at 0–10 “No function”. The GDTF file gives these values for a console's Highlight function: CH 4 Cool White 1 255, CH 6 Cool White 2 255, CH 8 Cool White 3 255, CH 10 Cool White 4 255.

Channel functions at a glance

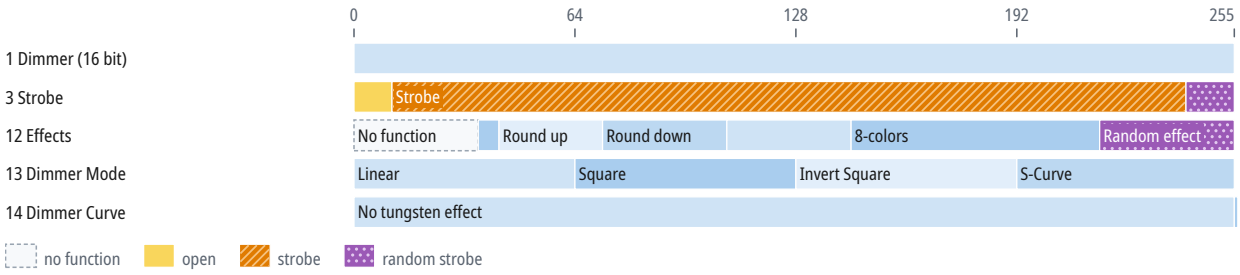


CH	Function	DMX	Description
1	Dimmer	0–255	
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Strobe		Same as CH 3 in the mode “13CH” (p. 9)
4	Cool White 1		Same as CH 2 in the mode “9CH” (p. 8)
5	Warm White 1		Same as CH 5 in the mode “13CH” (p. 9)
6	Cool White 2		Same as CH 4 in the mode “9CH” (p. 8)
7	Warm White 2		Same as CH 7 in the mode “13CH” (p. 9)

CH	Function	DMX	Description
8	Cool White 3		Same as CH 6 in the mode “9CH” (p. 9)
9	Warm White 3		Same as CH 9 in the mode “13CH” (p. 10)
10	Cool White 4		Same as CH 8 in the mode “9CH” (p. 9)
11	Warm White 4		Same as CH 11 in the mode “13CH” (p. 10)
12	Effects		Same as CH 12 in the mode “13CH” (p. 10)
13	Dimmer Mode		Same as CH 13 in the mode “13CH” (p. 10)
14	Dimmer Curve		Dimmer Speed
		0–254	No tungsten effect
		255	Tungsten effect

9 Technical specifications

Parameter	Value
Light source	tungsten lamp
Weight	12 kg
Operating temperature	-15 to 45 °C

Spot diameter

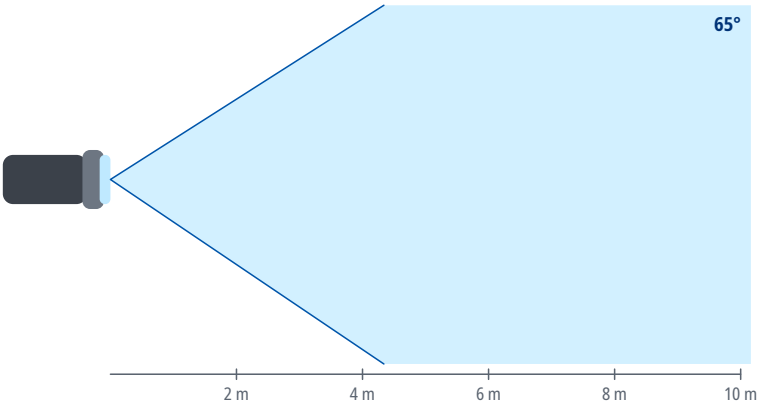

Distance	Ø 65°
2 m	2.5 m
4 m	5.1 m
6 m	7.6 m
8 m	10.2 m
10 m	12.7 m
15 m	19.1 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.