DMX REFERENCE

Kpointe BSW400

BSW400

Aled



Manufacturer	Aled
GDTF file	Aled_Kpointe_BSW400_59300.gdtf
GDTF revision	26ch · 2024-03-12
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 4
6 Connections 4
7 Operation 5
8 Functions at a glance 5
9 DMX channels 8
Mode 1 - Standard 16bit 8
10 Technical specifications 9
11 Maintenance and cleaning 9
12 Troubleshooting 10
13 Disposal 10

1 About this manual

This document describes the BSW400 by Aled. It was compiled from the GDTF file Aled_Kpointe_BSW400_59300.gdtf from the GDTF-Share library.

File revision: “26ch”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Aled; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	470 W
Weight	22.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode 1 - Standard 16bit	25	20	1, 26, 51, 76, ...


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

4 Product description

Description in the GDTF file

“It’s very bright and super-fast with a sharp parallel beam that cuts through the air and across video with ease.”

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 22.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

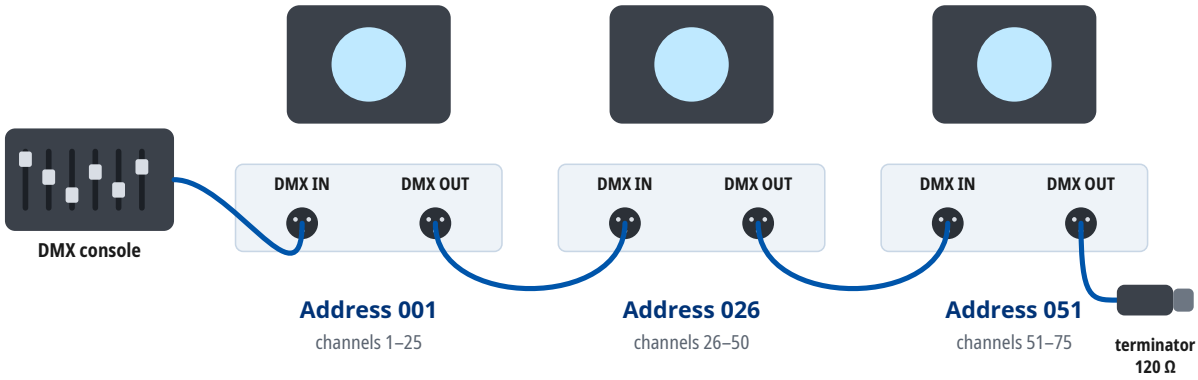

Mode 1 - Standard 16bit: every unit occupies 25 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode 1 - Standard 16bit”: 25.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode 1 - Standard 16bit”, you can use, for example, the start addresses 1, 26, 51, 76.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	Mode 1 - Standard 16bit 25 channels
Focus	24

Gobo wheel 1

1
Open

2 
G01 (Drops Cyclic)

3 
G02 (Irregular Spots 3)

4 
G03 (Cross)

5 
G04 (Zebra)

6 
G05 (Spin)

7 
G06 (Bar)

8 
G07 (Rugged Isles 2)

9 
G08 (Elipse Line)

10 
G09 (Leaves)

Color wheel

1
Open

2 
C01 (Deep Red)

3 
C02 (Deep Blue)

4
C03 (Yellow)

5 
C04 (Green)

6 
C05 (Magenta)

7 
C06 (Azure)

8 
C07 (Red)

9 
C08 (Dark Green)

10 
C09 (Amber)

11 
C10 (Blue)

12 
C11 (Orange)

13 
C12 (CTO)

14 
C13 (UV)

Gobo wheel 2

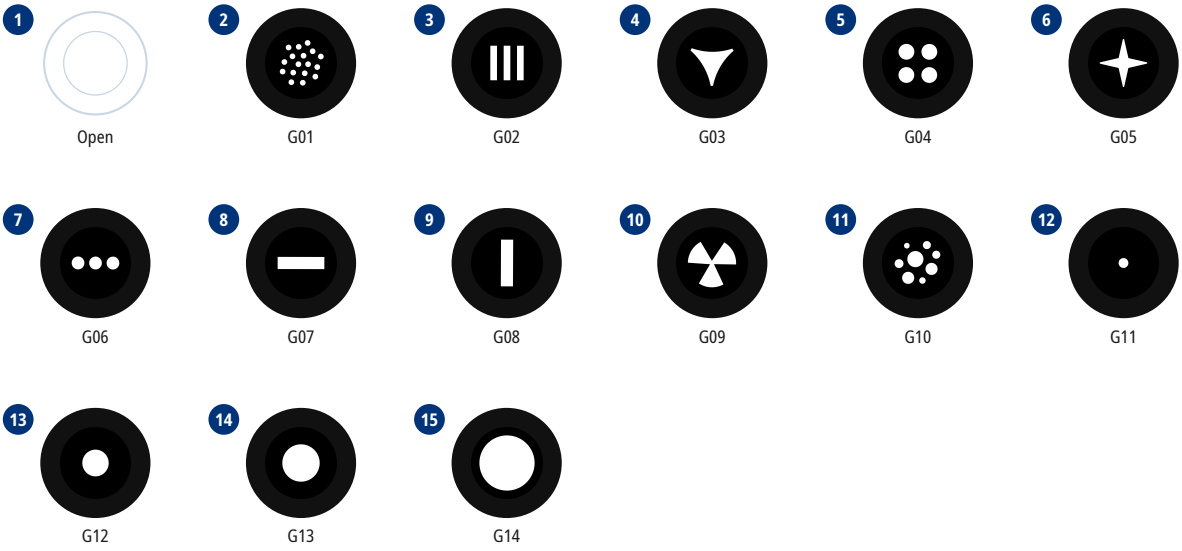

Prism

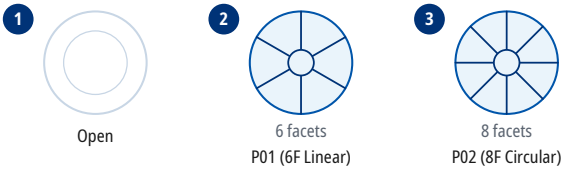

Spectra of the light sources

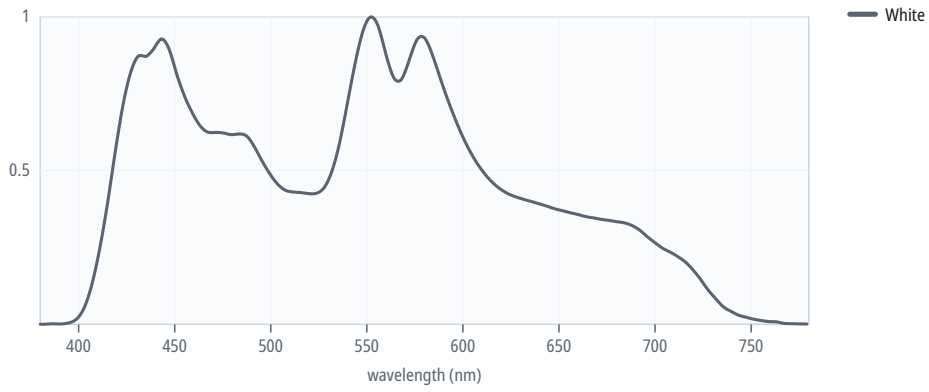

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

9 DMX channels

Units in one DMX universe

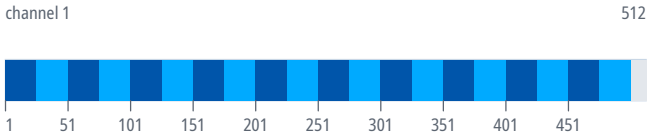

Mode 1 - Standard 16bit
25 channels

up to 20 units
last address 476

Start addresses of 20 units in the mode “Mode 1 - Standard 16bit”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	126	11	251	16	376
2	26	7	151	12	276	17	401
3	51	8	176	13	301	18	426
4	76	9	201	14	326	19	451
5	101	10	226	15	351	20	476

RDM personalities

Mode	Channels	RDM personality
Mode 1 - Standard 16bit	25	1

Mode 1 - Standard 16bit

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance



CH	Function	DMX	Description
22	Dummy	0–255	
24	Focus	0–255	Min ... max
		255	Max
25	Focus Fine	0–255	Fine adjustment of CH 24

10 Technical specifications

Parameter	Value
Light	
Light source	discharge lamp
Lamp power	280 W
Luminous flux	9,870 lm
Color temperature	7,000 K
Color rendering index (CRI)	75
Optics	
Beam angle	20°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45
RDM	yes (manufacturer ID 0x5253, device model ID 0x0079)
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	470 W
Power connectors	NAC3MPA IN
Dimensions and construction	
Weight	22.5 kg
Operating environment	
Operating temperature	-5 to 45 °C

Spot diameter

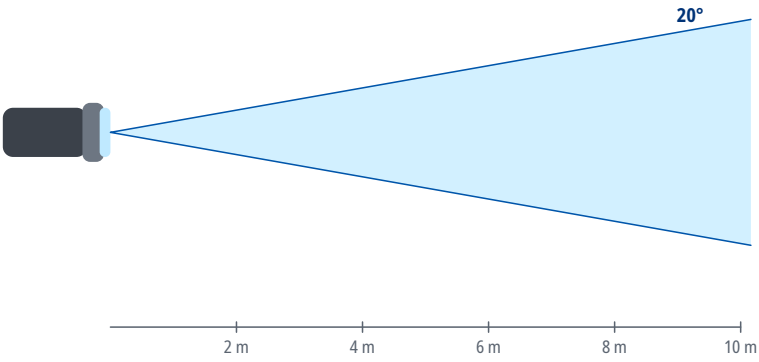

Distance	Ø 20°
2 m	0.71 m
4 m	1.4 m
6 m	2.1 m
8 m	2.8 m
10 m	3.5 m
15 m	5.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner

intended for optics or glass.

- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.