DMX REFERENCE

LEDWashBeam

Amazon LEDWashBeam

Amazon



Manufacturer	Amazon
GDTF file	Amazon_LEDWashBeam_116647.gdtf
GDTF revision	v001 · 2025-11-07
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 14
Mode 3 Reduced RGBW Wash 8bit 14
10 Technical specifications 18
11 Maintenance and cleaning 19
12 Troubleshooting 19
13 Disposal 19

1 About this manual

This document describes the Amazon LEDWashBeam by Amazon. It was compiled from the GDTF file Amazon_LEDWashBeam_116647.gdtf from the GDTF-Share library.

File revision: “v001”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Amazon; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	415 W
Weight	5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode 3 Reduced RGBW Wash 8bit	15	34	1, 16, 31, 46, ...

No light? Check these channels

- Mode 3 Reduced RGBW Wash 8bit: CH 7 Dimmer above 0; CH 8 Shutter at 240–255 “Shutter open”


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Description in the GDTF file

“The super-slim ROBIN® 600 LEDWash features 37x 10 Watt RGBW multichip LEDs with colour output ranging from gentle pastels to the richest saturation.”

Range of movement

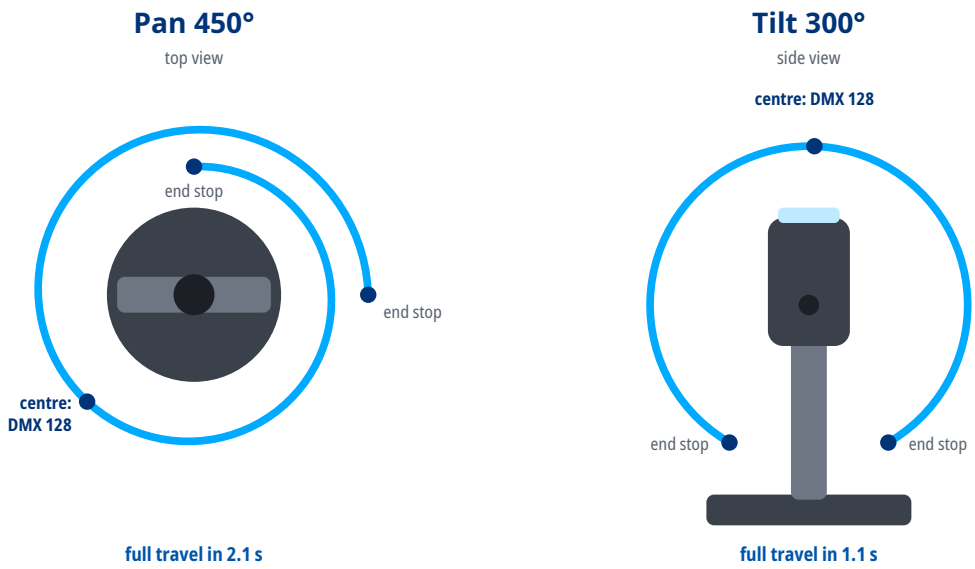

Full-travel times as stated in the GDTF file.

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

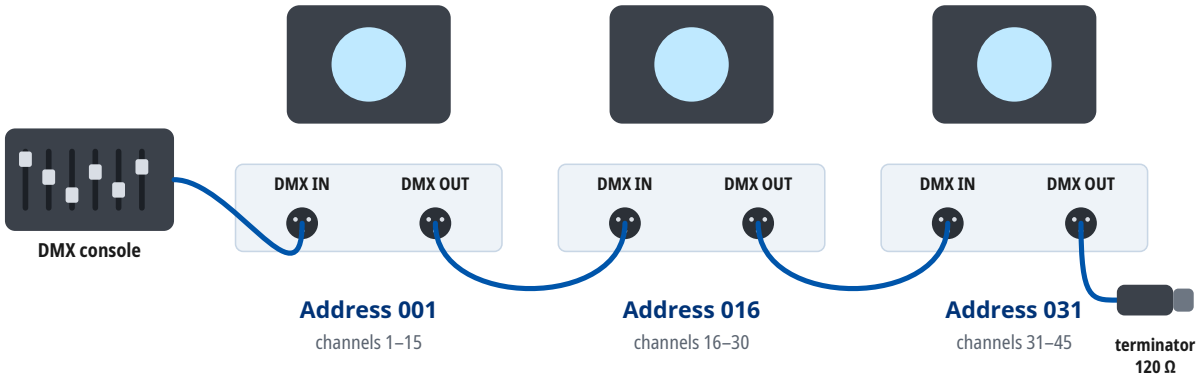

Mode 3 Reduced RGBW Wash 8bit: every unit occupies 15 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode 3 Reduced RGBW Wash 8bit”: 15.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode 3 Reduced RGBW Wash 8bit”, you can use, for example, the start addresses 1, 16, 31, 46.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	Mode 3 Reduced RGBW Wash 8bit 15 channels
Pan / Tilt	1, 3
Dimmer	7
Shutter / strobe	8
Color mixing	11–14 *
Color temperature	10
Color wheel	9
Zoom	6

* The function works only when another channel switches it on; see the DMX table.

Color wheel

1
Color: Open
DMX 0

2 
White 2700 K
DMX 1

3 
White 2700 K
DMX 2

4 
White 2700 K (Halogen lamp mode)
DMX 3

5
White 3200 K
DMX 4

6
White 2700 K
DMX 5

7
White 3200 K (Halogen lamp mode)
DMX 6

8
White 4200 K
DMX 7

9
White 4200 K
DMX 8

10
White 4200 K
DMX 9

11
White 5600 K
DMX 10

12
White 4200 K
DMX 11

13
White 4200 K
DMX 12

14
White 8000 K
DMX 13

15
White 8000 K
DMX 14

16
White 8000 K
DMX 15

17 
Blue
DMX 16

18 
Blue + Green >> 0...38
DMX 17

19 
Blue + Green >> 01
DMX 18

20 
Blue + Green >> 02
DMX 19

21 
Blue + Green >> 03
DMX 20

22 
Blue + Green >> 04
DMX 21

23 
Blue + Green >> 05
DMX 22

24 
Blue + Green >> 06
DMX 23

25 
Blue + Green >> 07
DMX 24

26 
Blue + Green >> 08
DMX 25

27 
Blue + Green >> 09
DMX 26

28 
Blue + Green >> 10
DMX 27

29 
Blue + Green >> 11
DMX 28

30 
Blue + Green >> 12
DMX 29

31 
Blue + Green >> 13
DMX 30

32 
Blue + Green >> 14
DMX 31

33 
Blue + Green >> 15
DMX 32

34 
Blue + Green >> 16
DMX 33

35 
Blue + Green >> 17
DMX 34

36 
Blue + Green >> 18
DMX 35

37 
Blue + Green >> 19
DMX 36

38 
Blue + Green >> 20
DMX 37

39 
Blue + Green >> 21
DMX 38

40 
Blue + Green >> 22
DMX 39

41
Blue + Green >> 23
DMX 40

42
Blue + Green >> 24
DMX 41

43
Blue + Green >> 25
DMX 42

44
Blue + Green >> 26
DMX 43

45
Blue + Green >> 27
DMX 44

46
Blue + Green >> 28
DMX 45

47
Blue + Green >> 29
DMX 46

48
Blue + Green >> 30
DMX 47


49
Blue + Green >> 31
DMX 48
50
Blue + Green >> 32
DMX 49
51
Blue + Green >> 33
DMX 50
52
Blue + Green >> 34
DMX 51
53
Blue + Green >> 35
DMX 52
54
Blue + Green >> 36
DMX 53
55
Blue + Green >> 37
DMX 54
56
Blue + Green >> 38
DMX 55
57
LightBlue
DMX 56
58
Green + Blue << 0...38
DMX 57
59
Green + Blue << 01
DMX 58
60
Green + Blue << 02
DMX 59
61
Green + Blue << 03
DMX 60
62
Green + Blue << 04
DMX 61
63
Green + Blue << 05
DMX 62
64
Green + Blue << 06
DMX 63
65
Green + Blue << 07
DMX 64
66
Green + Blue << 08
DMX 65
67
Green + Blue << 09
DMX 66
68
Green + Blue << 10
DMX 67
69
Green + Blue << 11
DMX 68
70
Green + Blue << 12
DMX 69
71
Green + Blue << 13
DMX 70
72
Green + Blue << 14
DMX 71
73
Green + Blue << 15
DMX 72
74
Green + Blue << 16
DMX 73
75
Green + Blue << 17
DMX 74
76
Green + Blue << 18
DMX 75
77
Green + Blue << 19
DMX 76
78
Green + Blue << 20
DMX 77
79
Green + Blue << 21
DMX 78
80
Green + Blue << 22
DMX 79
81
Green + Blue << 23
DMX 80
82
Green + Blue << 24
DMX 81
83
Green + Blue << 25
DMX 82
84
Green + Blue << 26
DMX 83
85
Green + Blue << 27
DMX 84
86
Green + Blue << 28
DMX 85
87
Green + Blue << 29
DMX 86
88
Green + Blue << 30
DMX 87
89
Green + Blue << 31
DMX 88
90
Green + Blue << 32
DMX 89
91
Green + Blue << 33
DMX 90
92
Green + Blue << 34
DMX 91
93
Green + Blue << 35
DMX 92
94
Green + Blue << 36
DMX 93
95
Green + Blue << 37
DMX 94
96
Green + Blue << 38
DMX 95

97 
Green
DMX 96

98 
Green + Red >> 0...37
DMX 97

99 
Green + Red >> 01
DMX 98

100 
Green + Red >> 02
DMX 99

101 
Green + Red >> 03
DMX 100

102 
Green + Red >> 04
DMX 101

103 
Green + Red >> 05
DMX 102

104 
Green + Red >> 06
DMX 103

105 
Green + Red >> 07
DMX 104

106 
Green + Red >> 08
DMX 105

107 
Green + Red >> 09
DMX 106

108 
Green + Red >> 10
DMX 107

109 
Green + Red >> 11
DMX 108

110 
Green + Red >> 12
DMX 109

111 
Green + Red >> 13
DMX 110

112 
Green + Red >> 14
DMX 111

113 
Green + Red >> 15
DMX 112

114 
Green + Red >> 16
DMX 113

115 
Green + Red >> 17
DMX 114

116 
Green + Red >> 18
DMX 115

117 
Green + Red >> 19
DMX 116

118 
Green + Red >> 20
DMX 117

119 
Green + Red >> 21
DMX 118

120 
Green + Red >> 22
DMX 119

121 
Green + Red >> 23
DMX 120

122
Green + Red >> 24
DMX 121

123
Green + Red >> 25
DMX 122

124
Green + Red >> 26
DMX 123

125
Green + Red >> 27
DMX 124

126
Green + Red >> 28
DMX 125

127
Green + Red >> 29
DMX 126

128
Green + Red >> 30
DMX 127

129
Green + Red >> 31
DMX 128

130
Green + Red >> 32
DMX 129

131
Green + Red >> 33
DMX 130

132
Green + Red >> 34
DMX 131

133
Green + Red >> 35
DMX 132

134
Green + Red >> 36
DMX 133

135
Green + Red >> 37
DMX 134

136
Yellow
DMX 135

137
Red + Green << 0...38
DMX 136

138
Red + Green << 01
DMX 137

139
Red + Green << 02
DMX 138

140
Red + Green << 03
DMX 139

141
Red + Green << 04
DMX 140

142
Red + Green << 05
DMX 141

143
Red + Green << 06
DMX 142

144
Red + Green << 07
DMX 143

145 
Red + Green << 08
DMX 144

146 
Red + Green << 09
DMX 145

147 
Red + Green << 10
DMX 146

148 
Red + Green << 11
DMX 147

149 
Red + Green << 12
DMX 148

150 
Red + Green << 13
DMX 149

151 
Red + Green << 14
DMX 150

152 
Red + Green << 15
DMX 151

153 
Red + Green << 16
DMX 152

154 
Red + Green << 17
DMX 153

155 
Red + Green << 18
DMX 154

156 
Red + Green << 19
DMX 155

157 
Red + Green << 20
DMX 156

158 
Red + Green << 21
DMX 157

159 
Red + Green << 22
DMX 158

160 
Red + Green << 23
DMX 159

161 
Red + Green << 24
DMX 160

162 
Red + Green << 25
DMX 161

163 
Red + Green << 26
DMX 162

164 
Red + Green << 27
DMX 163

165 
Red + Green << 28
DMX 164

166 
Red + Green << 29
DMX 165

167 
Red + Green << 30
DMX 166

168 
Red + Green << 31
DMX 167

169 
Red + Green << 32
DMX 168

170 
Red + Green << 33
DMX 169

171 
Red + Green << 34
DMX 170

172 
Red + Green << 35
DMX 171

173 
Red + Green << 36
DMX 172

174 
Red + Green << 37
DMX 173

175 
Red + Green << 38
DMX 174

176 
Red
DMX 175

177 
Red + Blue >> 0...38
DMX 176

178 
Red + Blue >> 01
DMX 177

179 
Red + Blue >> 02
DMX 178

180 
Red + Blue >> 03
DMX 179

181 
Red + Blue >> 04
DMX 180

182 
Red + Blue >> 05
DMX 181

183 
Red + Blue >> 06
DMX 182

184 
Red + Blue >> 07
DMX 183

185
Red + Blue >> 08
DMX 184

186
Red + Blue >> 09
DMX 185

187
Red + Blue >> 10
DMX 186

188
Red + Blue >> 11
DMX 187

189
Red + Blue >> 12
DMX 188

190
Red + Blue >> 13
DMX 189

191
Red + Blue >> 14
DMX 190

192
Red + Blue >> 15
DMX 191

193 
Red + Blue >> 16
DMX 192

194 
Red + Blue >> 17
DMX 193

195 
Red + Blue >> 18
DMX 194

196 
Red + Blue >> 19
DMX 195

197 
Red + Blue >> 20
DMX 196

198 
Red + Blue >> 21
DMX 197

199 
Red + Blue >> 22
DMX 198

200 
Red + Blue >> 23
DMX 199

201 
Red + Blue >> 24
DMX 200

202 
Red + Blue >> 25
DMX 201

203 
Red + Blue >> 26
DMX 202

204 
Red + Blue >> 27
DMX 203

205 
Red + Blue >> 28
DMX 204

206 
Red + Blue >> 29
DMX 205

207 
Red + Blue >> 30
DMX 206

208 
Red + Blue >> 31
DMX 207

209 
Red + Blue >> 32
DMX 208

210 
Red + Blue >> 33
DMX 209

211 
Red + Blue >> 34
DMX 210

212 
Red + Blue >> 35
DMX 211

213 
Red + Blue >> 36
DMX 212

214 
Red + Blue >> 37
DMX 213

215 
Red + Blue >> 38
DMX 214

216 
Magenta
DMX 215

217 
Blue + Red << 0...30
DMX 216

218 
Blue + Red << 01
DMX 217

219 
Blue + Red << 02
DMX 218

220 
Blue + Red << 03
DMX 219

221 
Blue + Red << 04
DMX 220

222 
Blue + Red << 05
DMX 221

223 
Blue + Red << 06
DMX 222

224 
Blue + Red << 07
DMX 223

225 
Blue + Red << 08
DMX 224

226 
Blue + Red << 09
DMX 225

227 
Blue + Red << 10
DMX 226

228 
Blue + Red << 11
DMX 227

229 
Blue + Red << 12
DMX 228

230 
Blue + Red << 13
DMX 229

231 
Blue + Red << 14
DMX 230

232 
Blue + Red << 15
DMX 231

233
Blue + Red << 16
DMX 232

234
Blue + Red << 17
DMX 233

235
Blue + Red << 18
DMX 234

236
Blue + Red << 19
DMX 235

237
Blue + Red << 20
DMX 236

238
Blue + Red << 21
DMX 237

239
Blue + Red << 22
DMX 238

240
Blue + Red << 23
DMX 239

241 Blue + Red << 24
DMX 240

242 Blue + Red << 25
DMX 241

243 Blue + Red << 26
DMX 242

244 Blue + Red << 27
DMX 243

245 Blue + Red << 28
DMX 244

246 Blue + Red << 29
DMX 245

247 Blue + Red << 30
DMX 246

248 Blue
DMX 247–248

249 Black

LED colors and the colors they mix

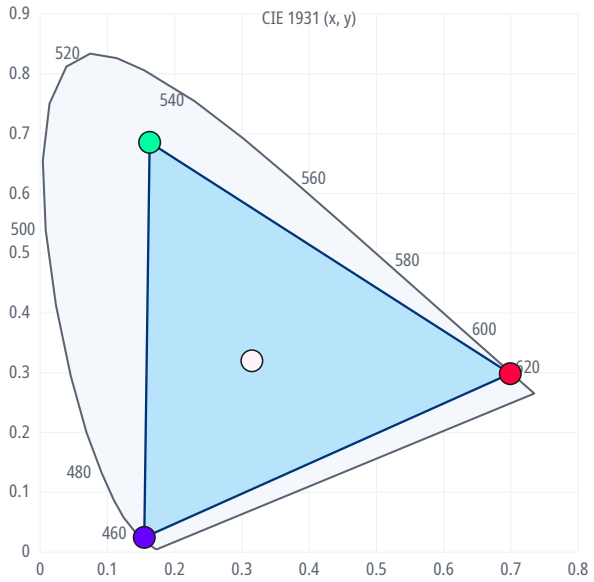

LED	x	y	nm
Red	0.699	0.299	626
Green	0.163	0.685	522
Blue	0.155	0.025	453
White	0.315	0.320	

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Spectra of the light sources

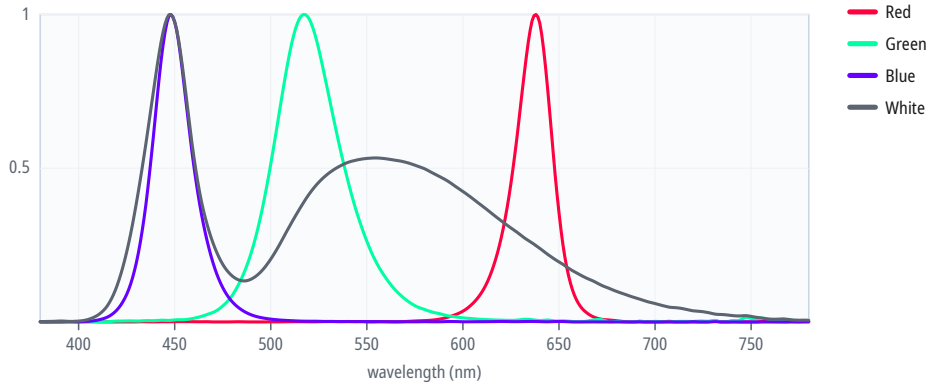

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

Strobe rate

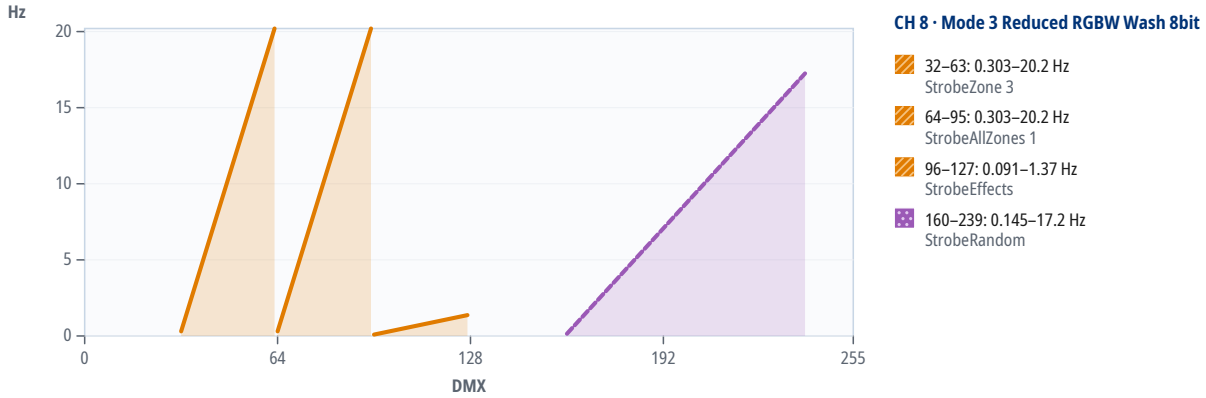

Cells (pixels)

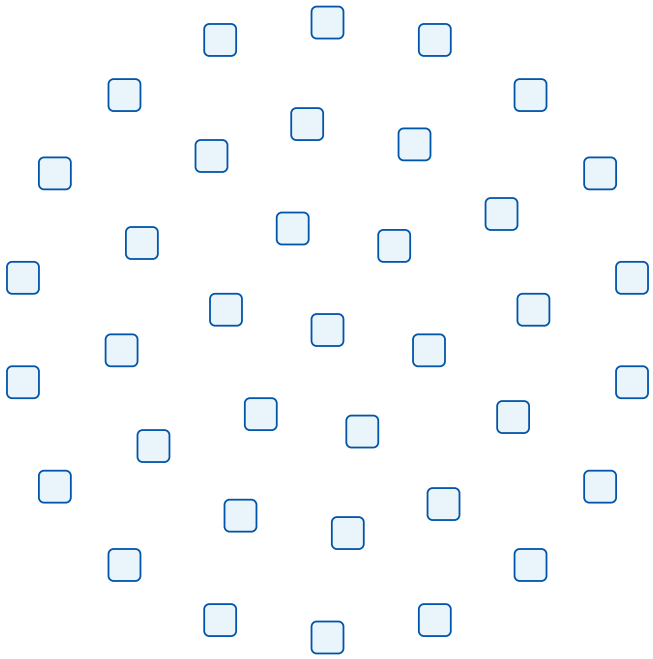

Cells where the GDTF file places them (seen from above), 37 in all in the mode “Mode 3 Reduced RGBW Wash 8bit”.

9 DMX channels

Units in one DMX universe

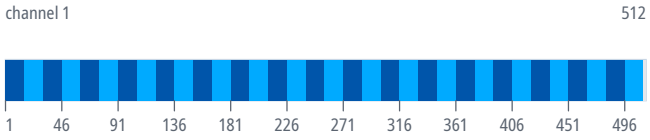

Mode 3 Reduced RGBW Wash 8bit
15 channels

up to 34 units
last address 496

Start addresses of 20 units in the mode “Mode 3 Reduced RGBW Wash 8bit”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	76	11	151	16	226
2	16	7	91	12	166	17	241
3	31	8	106	13	181	18	256
4	46	9	121	14	196	19	271
5	61	10	136	15	211	20	286

RDM personalities

Mode	Channels	RDM personality
Mode 3 Reduced RGBW Wash 8bit	15	3

Mode 3 Reduced RGBW Wash 8bit

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Dimmer above 0; CH 8 Shutter at 240–255 “Shutter open”. The GDTF file gives these values for a console's Highlight function: CH 7 Dimmer 255, CH 8 Shutter 255, CH 9 Colors 0, CH 10 CTO 0, CH 11 Red 255, CH 12 Green 255, CH 13 Blue 255, CH 14 White 255.

Channel functions at a glance

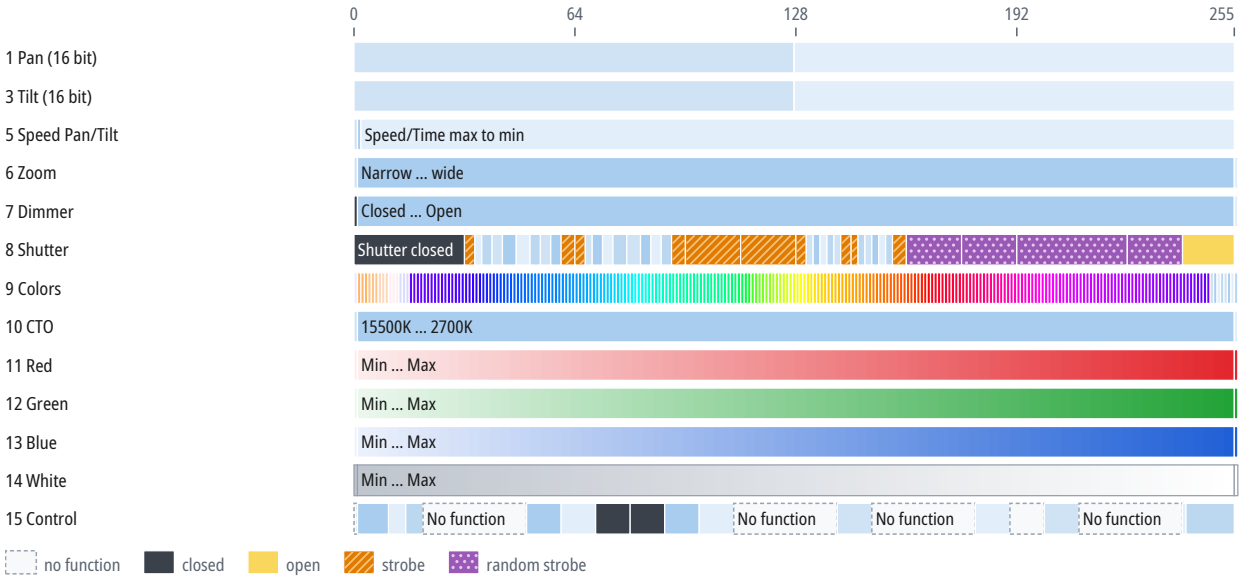

CH	Function	DMX	Description
1	Pan	0–127	Pan
		128	Center
		128–255	Pan
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Tilt
		128	Center
		128–255	Tilt
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0	Standard mode
		1	Max speed time
		2–255	Speed/Time max to min
6	Zoom	0	Narrow
		1–254	Narrow ... wide
		255	Wide
7	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
8	Shutter	0–31	Shutter closed
		32–34	Strobe Zone: Slow to fast - Slow (0.3–0.41 Hz)
		35–59	Strobe Zone: Slow to fast - Slow ... Slow to fast - Fast (0.46–11 Hz)
		60–63	Strobe Zone: Slow to fast - Fast (13–20 Hz)
		64–66	Strobe All Zones: Slow to fast - Slow (0.3–0.41 Hz)
		67–91	Strobe All Zones: Slow to fast - Slow ... Slow to fast - Fast (0.46–11 Hz)
		92–95	Strobe All Zones: Slow to fast - Fast (13–20 Hz)
		96–111	Zone + Rainbow effects slow to fast
		112–127	Zone + Rainbow effects fast to slow
		128–130	Shutter 1 Strobe Pulse Open: Slow to fast - Slow (0.119–0.179 Hz)
		131–140	Shutter 1 Strobe Pulse Open: Slow to fast - Slow ... Slow to fast - Fast (0.208–0.476 Hz)
		141–143	Shutter 1 Strobe Pulse Open: Slow to fast - Fast (0.526–0.667 Hz)
		144–145	Shutter 1 Strobe Pulse Close: Fast to slow - Slow (0.667–0.588 Hz)
		146–155	Shutter 1 Strobe Pulse Close: Fast to slow - Slow ... Fast to slow - Fast (0.526–0.238 Hz)
		156–159	Shutter 1 Strobe Pulse Close: Fast to slow - Fast (0.208–0.119 Hz)
		160–175	Random zone effect slow to fast (0.14–17.2 Hz)
		176–191	Random zone + strobe effect slow to fast (0.14–17.2 Hz)
		192–223	Random strobe slow to fast (all zones) (0.14–17.2 Hz)

CH	Function	DMX	Description
8	Shutter (continued)	224–239	Random strobe slow to fast (random LEDs) (0.14–17.2 Hz)
		240–255	Shutter open
9	Colors	0	Color: Open
		1–2	White 2700 K
		3	White 2700 K (Halogen lamp mode)
		4	White 3200 K
		5	White 2700 K
		6	White 3200 K (Halogen lamp mode)
		7–9	White 4200 K
		10	White 5600 K
		11–12	White 4200 K
		13–15	White 8000 K
		16	Blue
		17–55	Blue + Green >> 0...38
		56	LightBlue
		57–95	Green + Blue << 0...38
		96	Green
		97–134	Green + Red >> 0...37
		135	Yellow
		136–174	Red + Green << 0...38
		175	Red
		176–214	Red + Blue >> 0...38
		215	Magenta
		216–246	Blue + Red << 0...30
		247	Blue
		248	Rainbow effect (with fade time)
		249	Rainbow effect
		250–255	Zone effect 1...6
10	CTO	0	15500K
		1–254	15500K ... 2700K
		255	2700K
11	Red		When CH 9 is 0:
		0	Min
		1–254	Min ... Max
		255	Max
			When CH 9 is 1–255:
		0–255	
12	Green		When CH 9 is 0:
		0	Min
		1–254	Min ... Max
		255	Max

CH	Function	DMX	Description
12	Green (continued)		When CH 9 is 1–255:
		0–255	
13	Blue		When CH 9 is 0:
		0	Min
		1–254	Min ... Max
		255	Max
			When CH 9 is 1–255:
		0–255	
14	White		When CH 9 is 0:
		0	Min
		1–254	Min ... Max
		255	Max
			When CH 9 is 1–255:
		0–255	
15	Control	0	No function
		1–9	No function
		10–14	Wired DMX
		15–19	Wireless DMX
		20–49	No function
		50–59	P/T speed mode
		60–69	P/T time mode
		70–79	Blackout while P/T moving: ON
		80–89	Blackout while P/T moving: OFF
		90–99	Theatre mode ON
		100–109	Theatre mode OFF
		110–139	No function
		140–149	P/T reset
		150–179	No function
		180–189	Zoom/Beam shaper reset
		190–199	No function
		200–209	Total reset
		210–239	No function
		240	Disabled Quiet mode
		241–255	Quiet mode min to max

10 Technical specifications

Parameter	Value
Light	
Light source	LED
Optics	
Zoom	15–60°
Movement	
Pan	450°
Tilt	300°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45
RDM	yes (manufacturer ID 0x5253, device model ID 0x0076)
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	415 W
Power connectors	powerCON TRUE1 IN
Dimensions and construction	
Weight	5 kg
Operating environment	
Operating temperature	0 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	2700–15500 K
Strobe frequency	0.303–20.2 Hz

Spot diameter

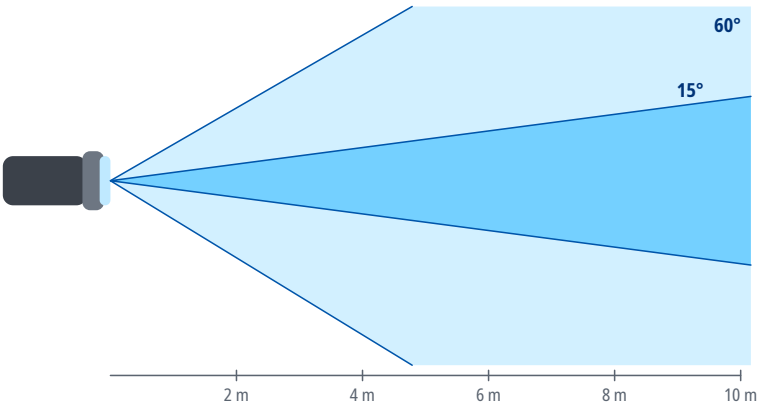

Distance	Ø 15°	Ø 60°
2 m	0.53 m	2.3 m
4 m	1.1 m	4.6 m
6 m	1.6 m	6.9 m
8 m	2.1 m	9.2 m
10 m	2.6 m	11.5 m
15 m	3.9 m	17.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.