DMX REFERENCE

Amaran F22C

Aputure



Manufacturer	Aputure
GDTF file	Aputure_Amaran_F22C_169537.gdtf
GDTF revision	Firmware V1_1 · 2026-11-16
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 1 CCT+RGB 8-bit 9
Mode 3 CCT+HSI 8bit 10
Mode 5 HSI 8bit 11
Mode 6 GEL 8bit 11
Mode 7 FX 8bit 12
Mode 2 CCT 8bit 13
Mode 4 RGB 8-bit 14
9 Technical specifications 15
10 Maintenance and cleaning 15
11 Troubleshooting 16
12 Disposal 16

1 About this manual

This document describes the Amaran F22C by Aputure. It was compiled from the GDTF file Aputure_Amaran_F22C_169537.gdtf from the GDTF-Share library.

File revision: “Firmware V1_1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Aputure; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	4.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode 1 CCT+RGB 8-bit	10	51	1, 11, 21, 31, ...
Mode 3 CCT+HSI 8bit	9	56	1, 10, 19, 28, ...
Mode 5 HSI 8bit	6	85	1, 7, 13, 19, ...
Mode 6 GEL 8bit	8	64	1, 9, 17, 25, ...
Mode 7 FX 8bit	9	56	1, 10, 19, 28, ...
Mode 2 CCT 8bit	6	85	1, 7, 13, 19, ...
Mode 4 RGB 8-bit	7	73	1, 8, 15, 22, ...

No light? Check these channels

- Mode 1 CCT+RGB 8-bit: CH 1 Dimmer above 0; CH 10 Shutter at 0–19 “Open”
- Mode 3 CCT+HSI 8bit: CH 1 Dimmer above 0
- Mode 5 HSI 8bit: CH 1 Dimmer above 0; CH 6 Shutter at 0 “Open”
- Mode 6 GEL 8bit: CH 1 Dimmer above 0; CH 8 Strobe at 0 “Open”
- Mode 7 FX 8bit: CH 1 Dimmer above 0
- Mode 2 CCT 8bit: CH 1 Dimmer above 0; CH 6 Shutter at 0 “Open”
- Mode 4 RGB 8-bit: CH 1 Dimmer above 0; CH 7 Shutter at 0 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation


⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 4.48 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

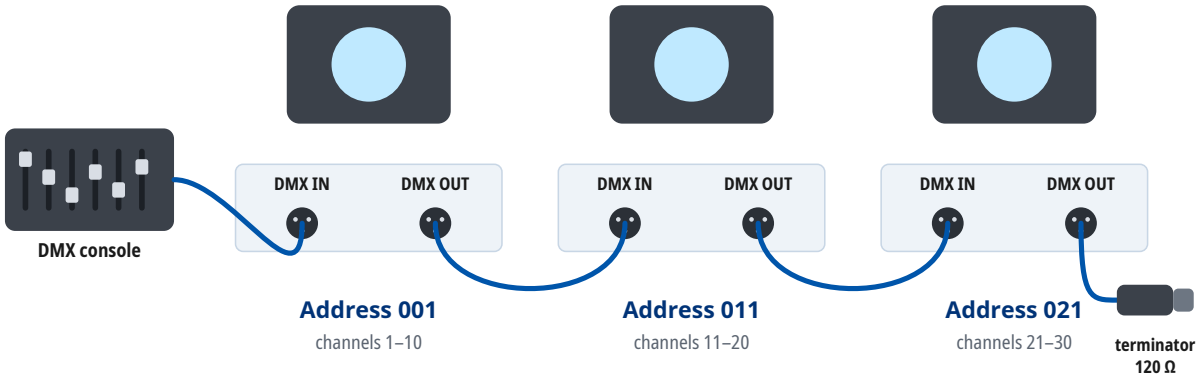

Mode 1 CCT+RGB 8-bit: every unit occupies 10 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode 1 CCT+RGB 8-bit”: 10.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode 1 CCT+RGB 8-bit”, you can use, for example, the start addresses 1, 11, 21, 31.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	Mode 1 CCT+RGB 8-bit 10 channels	Mode 3 CCT+HSI 8bit 9 channels	Mode 5 HSI 8bit 6 channels	Mode 6 GEL 8bit 8 channels	Mode 7 FX 8bit 9 channels	Mode 2 CCT 8bit 6 channels	Mode 4 RGB 8-bit 7 channels
Dimmer	1	1	1	1	1	1	1
Shutter / strobe	10	9	6	8		6	7
Color mixing	5–7						2–4
Color temperature	2						
Effects / macros					4–9		


LED colors and the colors they mix

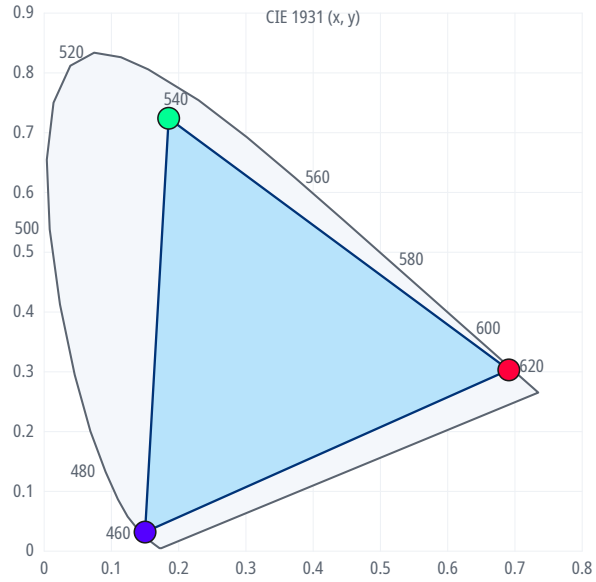

LED	x	y	nm
Red LED	0.691	0.303	635
Green LED	0.185	0.724	520
Blue LED	0.150	0.032	455

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

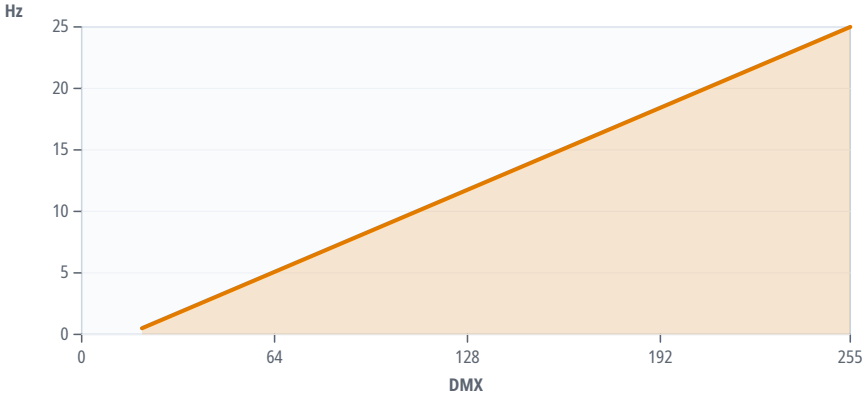


CH 10 · Mode 1 CCT+RGB 8-bit

20–255: 0.5–25 Hz
Strobe

8 DMX channels

Units in one DMX universe

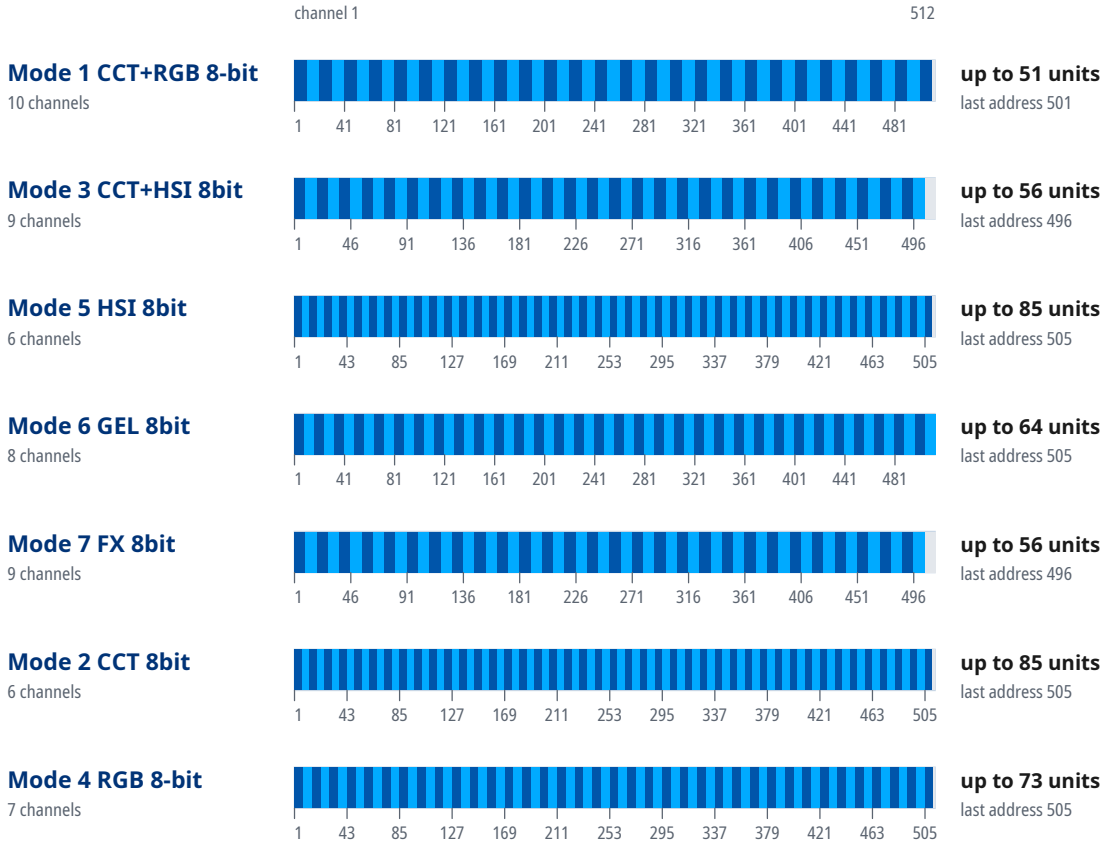


Start addresses of 20 units in the mode “Mode 1 CCT+RGB 8-bit”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	51	11	101	16	151
2	11	7	61	12	111	17	161
3	21	8	71	13	121	18	171
4	31	9	81	14	131	19	181
5	41	10	91	15	141	20	191

Mode 1 CCT+RGB 8-bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 10 Shutter at 0–19 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 10 Shutter 0.

Channel functions at a glance

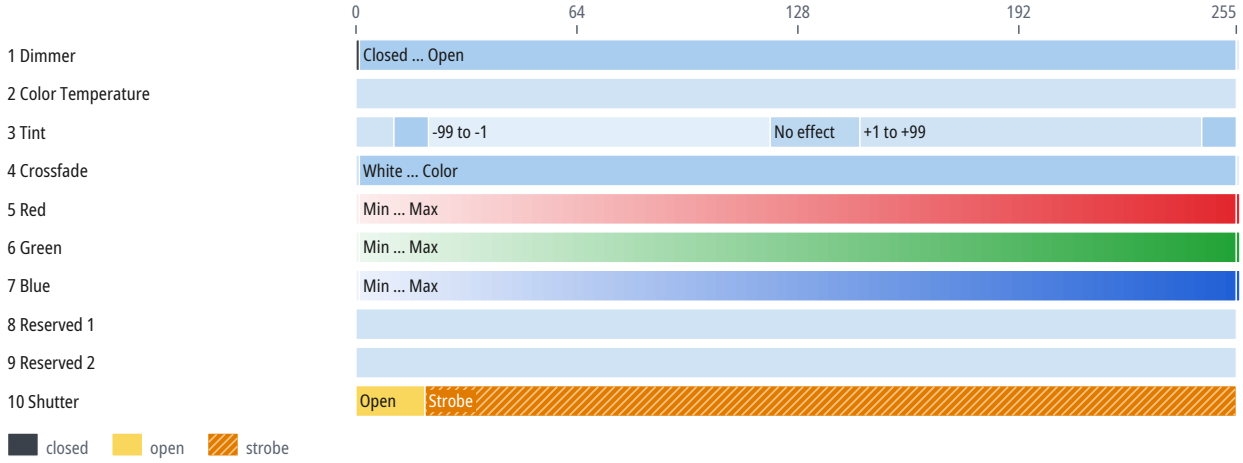


CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Color Temperature	0–255	2200–7000 K
3	Tint	0–10	Tint
		11–20	Full minus green
		21–119	-99 to -1
		120–145	No effect
		146–244	+1 to +99
		245–255	Full plus green
4	Crossfade	0	White
		1–254	White ... Color
		255	Color
5	Red	0	Min
		1–254	Min ... Max
		255	Max
6	Green	0	Min
		1–254	Min ... Max
		255	Max
7	Blue	0	Min
		1–254	Min ... Max
		255	Max
8	Reserved 1	0–255	

CH	Function	DMX	Description
9	Reserved 2	0–255	
10	Shutter	0–19	Open
		20–255	Strobe (0.5–25 Hz)

Mode 3 CCT+HSI 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

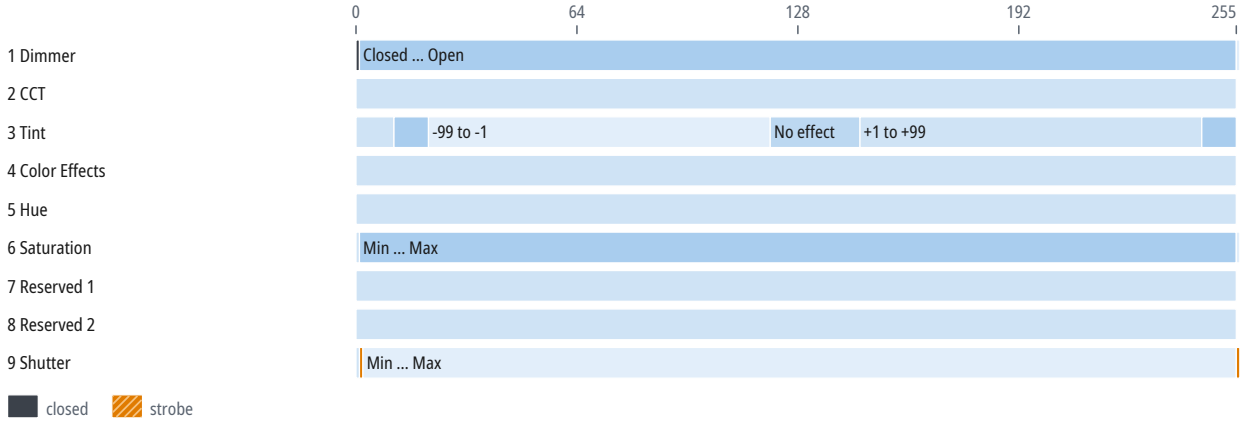


CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	CCT	0–255	
3	Tint		Same as CH 3 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
4	Color Effects	0–255	
5	Hue	0–255	
6	Saturation	0	Min
		1–254	Min ... Max
		255	Max
7	Reserved 1	0–255	
8	Reserved 2	0–255	
9	Shutter	0	Shutter 1 Strobe 1
		1	Min
		2–254	Min ... Max
		255	Max

Mode 5 HSI 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 6 Shutter at 0 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 6 Shutter 0.

Channel functions at a glance

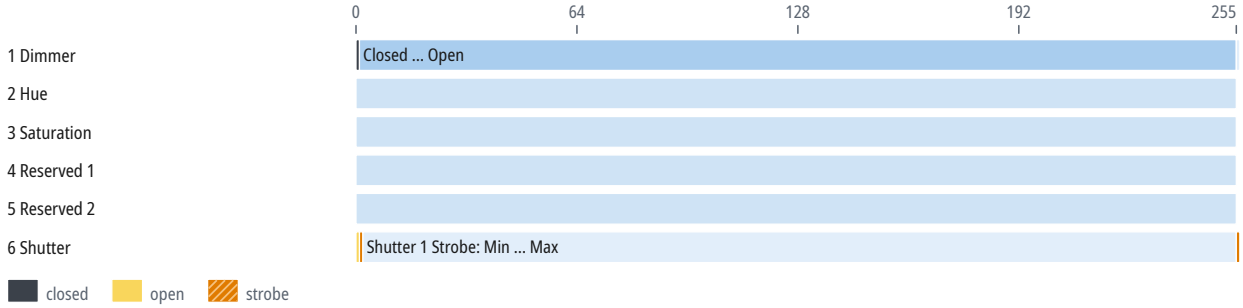


CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	Hue	0–255	
3	Saturation	0–255	
4	Reserved 1	0–255	
5	Reserved 2	0–255	
6	Shutter	0	Shutter 1: Open
		1	Shutter 1 Strobe: Min
		2–254	Shutter 1 Strobe: Min ... Max
		255	Shutter 1 Strobe: Max

Mode 6 GEL 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 8 Strobe at 0 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

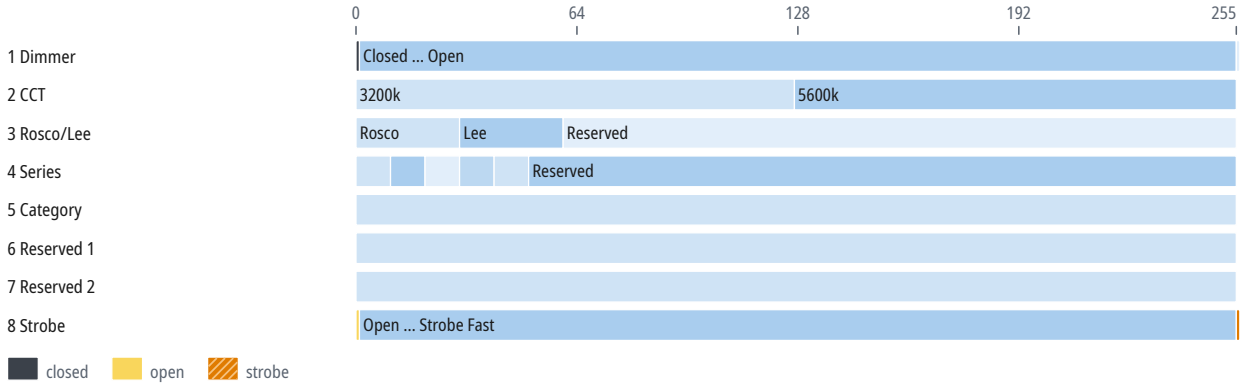


CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	CCT	0–126	3200k
		127–255	5600k
3	Rosco/Lee	0–29	Rosco
		30–59	Lee
		60–255	Reserved
4	Series	0–9	R-Col/ L-Col
		10–19	R-Cal/L-Col
		20–29	R-Storaro/L-600 Series
		30–39	R-Cinelux/L-Cosmetic
		40–49	R-Reserved/L-700 Series
		50–255	Reserved
5	Category	0–255	
6	Reserved 1	0–255	
7	Reserved 2	0–255	
8	Strobe	0	Open
		1–254	Open ... Strobe Fast
		255	Strobe Fast

Mode 7 FX 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

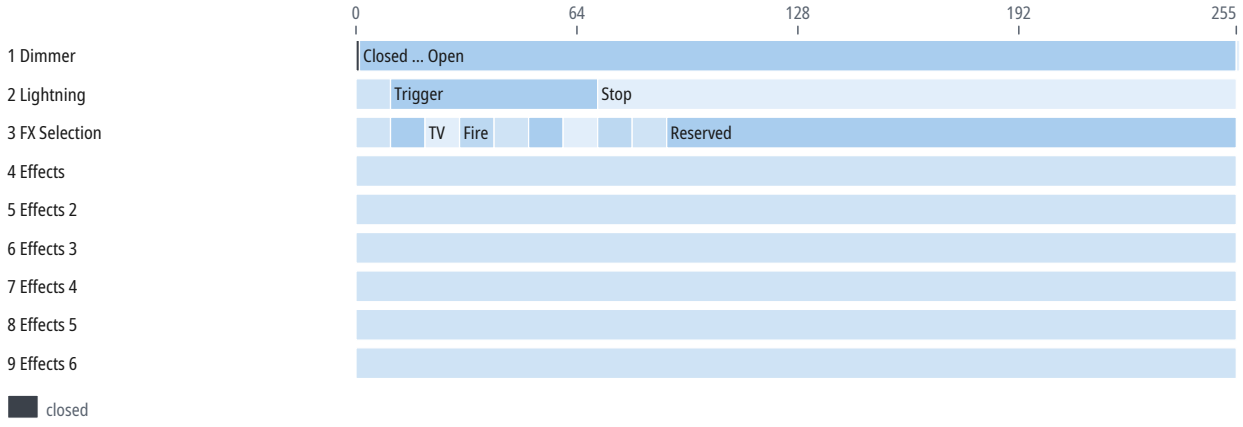


CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	Lightning	0–9	Loop
		10–69	Trigger
		70–255	Stop
3	FX Selection	0–9	Paparazzi

CH	Function	DMX	Description
3	FX Selection (continued)	10–19	Lightning
		20–29	TV
		30–39	Fire
		40–49	Faulty Bulb
		50–59	Pulsing
		60–69	Cop Car
		70–79	Party Lights
		80–89	Fireworks
		90–255	Reserved
4	Effects	0–255	
5	Effects 2	0–255	
6	Effects 3	0–255	
7	Effects 4	0–255	
8	Effects 5	0–255	
9	Effects 6	0–255	

Mode 2 CCT 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 6 Shutter at 0 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 6 Shutter 0.

Channel functions at a glance

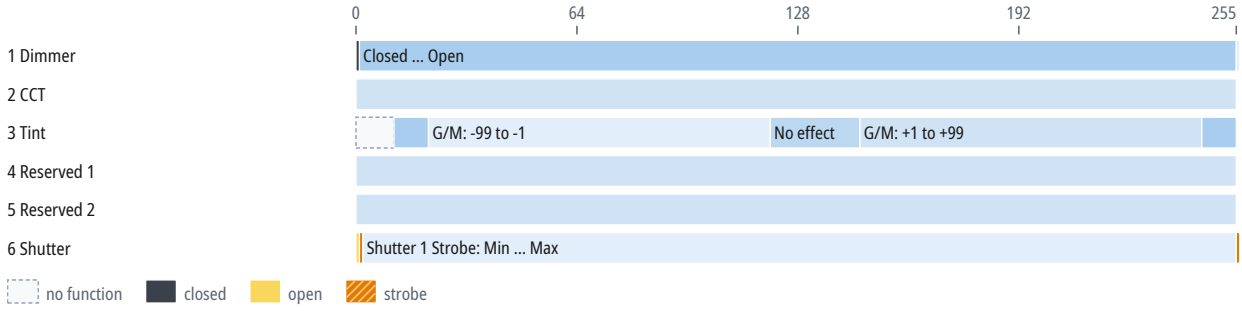


CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	CCT	0–255	
3	Tint	0–10	No function
		11–20	Full minus green
		21–119	G/M: -99 to -1
		120–145	No effect
		146–244	G/M: +1 to +99
		245–255	Full plus green
4	Reserved 1	0–255	
5	Reserved 2	0–255	

CH	Function	DMX	Description
6	Shutter	0	Open
		1	Shutter 1 Strobe: Min
		2–254	Shutter 1 Strobe: Min … Max
		255	Shutter 1 Strobe: Max (1–25 Hz)

Mode 4 RGB 8-bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 7 Shutter at 0 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 7 Shutter 0.

Channel functions at a glance

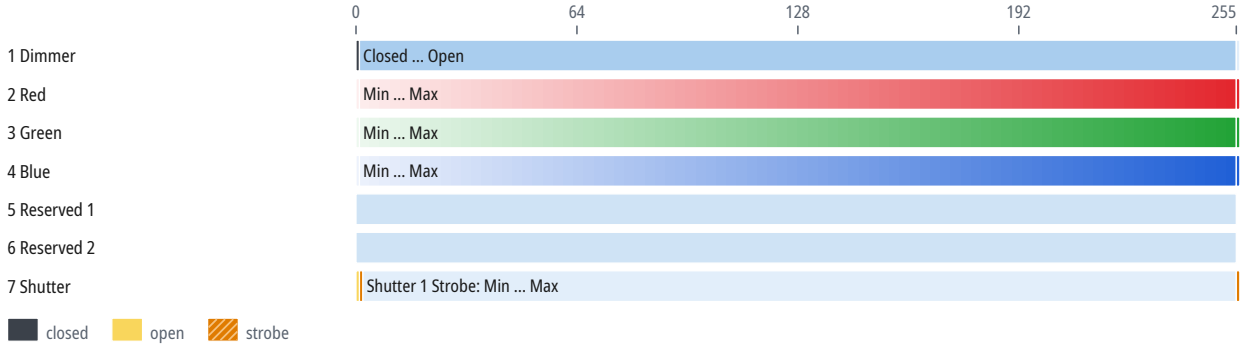

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
2	Red		Same as CH 5 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
3	Green		Same as CH 6 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
4	Blue		Same as CH 7 in the mode “Mode 1 CCT+RGB 8-bit” (p. 9)
5	Reserved 1	0–255	
6	Reserved 2	0–255	
7	Shutter	0	Open
		1	Shutter 1 Strobe: Min
		2–254	Shutter 1 Strobe: Min … Max
		255	Shutter 1 Strobe: Max

9 Technical specifications


Parameter	Value
Light	
Light source	LED
LED power	200 W
Luminous flux	20,000 lm
Color temperature	6,500 K
Color rendering index (CRI)	97
Optics	
Beam angle	104°
Dimensions and construction	
Weight	4.5 kg
Operating environment	
Operating temperature	-10 to 40 °C

Speeds and ranges

Parameter	Value
Color temperature range	2200–7000 K
Strobe frequency	0–25 Hz

Dimensions

weight 4.5 kg

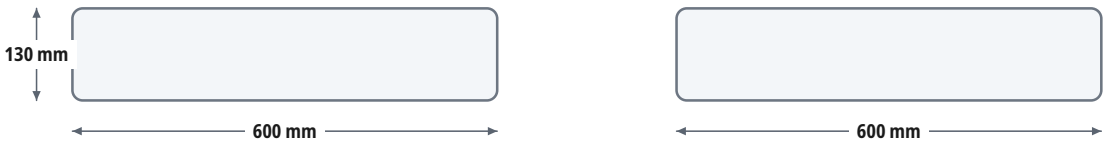

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.