DMX REFERENCE

Solar M

Beam Wash 2-in-1, 12x40w RGBW, Pixel Tech

Artfox



Manufacturer	Artfox
GDTF file	Artfox_Solar_M_160247.gdtf
GDTF revision	Official · 2026-05-17
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 9
Mode 19 Channel (17 Channel) 10
Mode 27 13
Mode 17 Channel 15
10 Technical specifications 16
11 Maintenance and cleaning 16
12 Troubleshooting 17
13 Disposal 17

1 About this manual

This document describes the Beam Wash 2-in-1, 12x40w RGBW, Pixel Tech by Artfox. It was compiled from the GDTF file Artfox_Solar_M_160247.gdtf from the GDTF-Share library.

File revision: “Official”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Artfox; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	8.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
19 Channel (17 Channel)	19	26	1, 20, 39, 58, ...
27	31	16	1, 32, 63, 94, ...
17 Channel	17	30	1, 18, 35, 52, ...

No light? Check these channels

- 19 Channel (17 Channel): CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0
- 27: CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0
- 17 Channel: CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

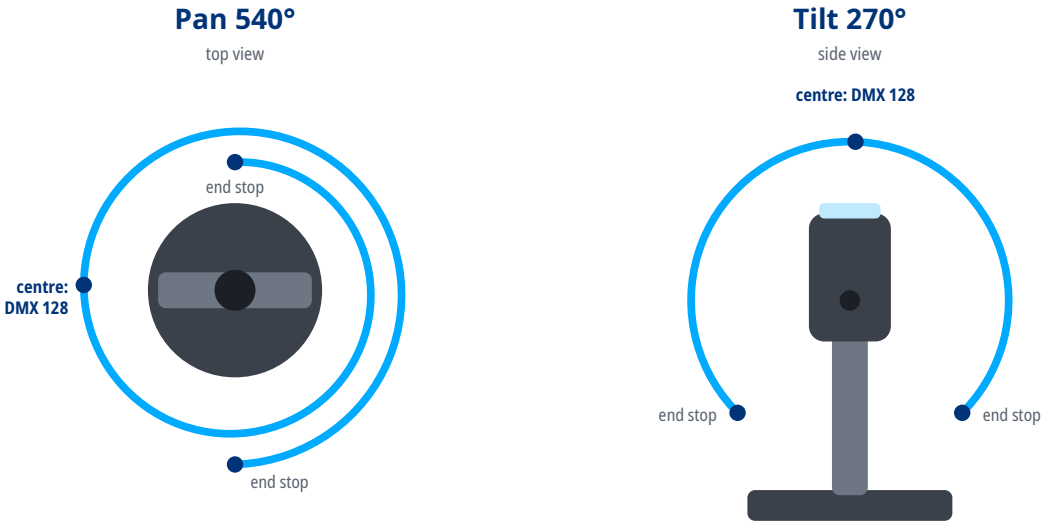

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 8.75 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

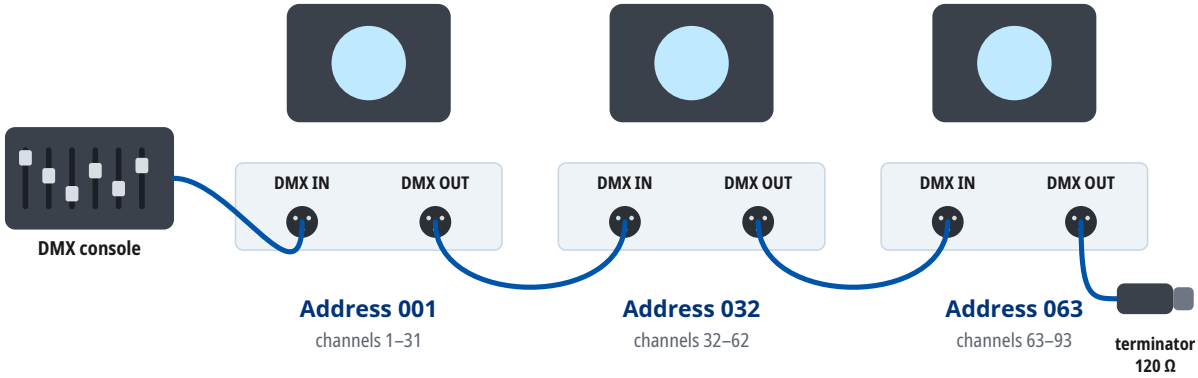

Mode 27: every unit occupies 31 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “27”: 31.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “27”, you can use, for example, the start addresses 1, 32, 63, 94.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	19 Channel (17 Channel) 19 channels	27 31 channels	17 Channel 17 channels
Pan / Tilt	1, 3	1, 3	1, 3
Dimmer	7	7	7
Shutter / strobe	6	6	6
Color mixing	10–13	10–25	10–13
Zoom	9	9	9
Effects / macros	15	27	
Pixel control		✓	

Strobe rate

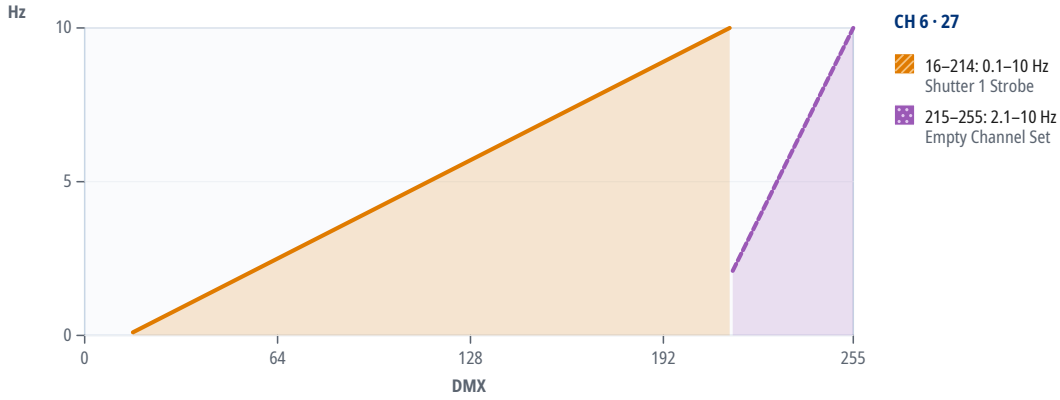

Cells (pixels)

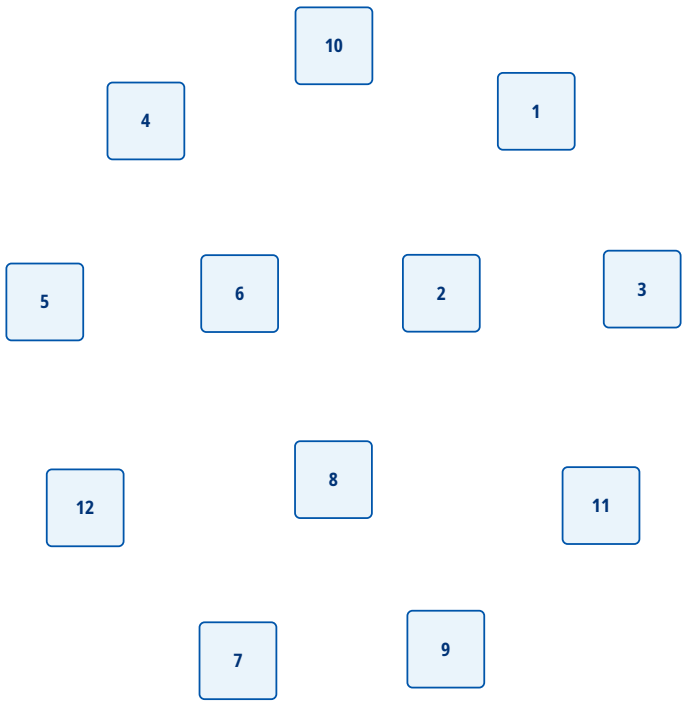

12 cells where the GDTF file places them (seen from above), numbered in the file's order; the mode “27” drives them together.

9 DMX channels

Units in one DMX universe

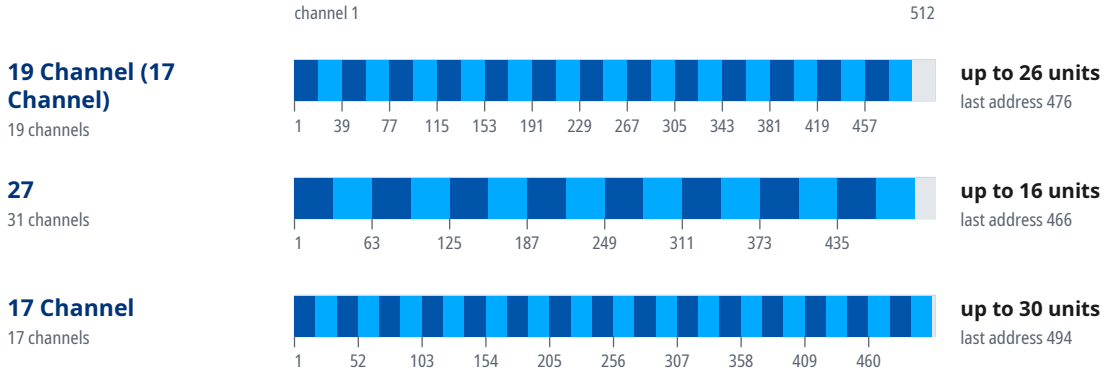

Start addresses of 20 units in the mode “27”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	156	11	311	16	466
2	32	7	187	12	342	17	U2 · 1
3	63	8	218	13	373	18	U2 · 32
4	94	9	249	14	404	19	U2 · 63
5	125	10	280	15	435	20	U2 · 94

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 19 Channel (17 Channel)

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0.

Channel functions at a glance

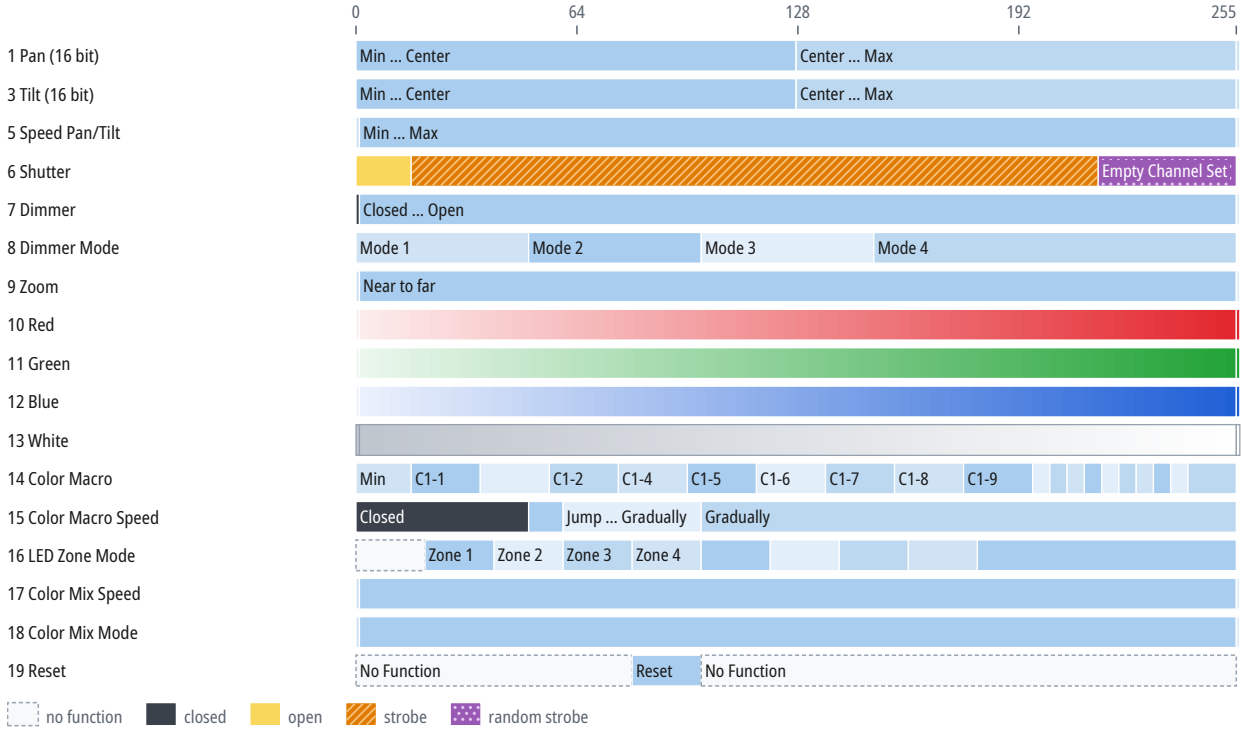

CH	Function	DMX	Description
1	Pan	0–127	Min ... Center
		128–255	Center ... Max
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Min ... Center
		128–255	Center ... Max
		255	Max
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0	Min
		1–254	Min ... Max
		255	Max
6	Shutter	0–15	Shutter: Open
		16–214	Shutter 1 Strobe (0.1–10 Hz)
		215–255	Empty Channel Set (0.1–10 Hz)
7	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
8	Dimmer Mode	0–49	Mode 1

CH	Function	DMX	Description
8	Dimmer Mode (continued)	50–99	Mode 2
		100–149	Mode 3
		150–255	Mode 4
9	Zoom	0	Min
		1–254	Near to far
		255	Max
10	Red	0	Empty Channel Set
		1–254	Color Add_R 1
		255	Empty Channel Set
11	Green	0	Empty Channel Set
		1–254	Color Add_G 1
		255	Empty Channel Set
12	Blue	0	Empty Channel Set
		1–254	Color Add_B 1
		255	Empty Channel Set
13	White	0	Empty Channel Set
		1–254	Color Add_W 1
		255	Empty Channel Set
14	Color Macro	0–15	Min
		16–35	C1-1
		36–55	C1-1 ... C1-2
		56–75	C1-2
		76–95	C1-4
		96–115	C1-5
		116–135	C1-6
		136–155	C1-7
		156–175	C1-8
		176–195	C1-9
		196–200	2800K
		201–205	3200K
		206–210	4000K
		211–215	4500K
		216–220	5000K
		221–225	5600K
		226–230	6500K
		231–235	7000K
		236–240	7500K
		241–255	8000K
15	Color Macro Speed		Color Mix Mode 1
		0–49	Closed
		50–59	Jump
		60–99	Jump ... Gradually

CH	Function	DMX	Description
15	Color Macro Speed (continued)	100–255	Gradually
16	LED Zone Mode	0–19	No Function
		20–39	Zone 1
		40–59	Zone 2
		60–79	Zone 3
		80–99	Zone 4
		100–119	Zone 1+2+3
		120–139	Zone 1.2.3; rotate counterclockwise
		140–159	Zone 1.2.3; rotate clockwise
		160–179	Change between Zone 4 and Zone 1+2+3
		180–255	Keep Zone 4 ; zone 1.2.3 counterclockwise
17	Color Mix Speed	0	Empty Channel Set
		1–254	Color Mix MSpeed 1
		255	Empty Channel Set
18	Color Mix Mode	0	Empty Channel Set
		1–254	Color Mix Mode 1
		255	Empty Channel Set
19	Reset	0–79	No Function
		80–99	Reset
		100–255	No Function

Mode 27

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 10 Red 1 255, CH 14 Red 2 255.

Channel functions at a glance

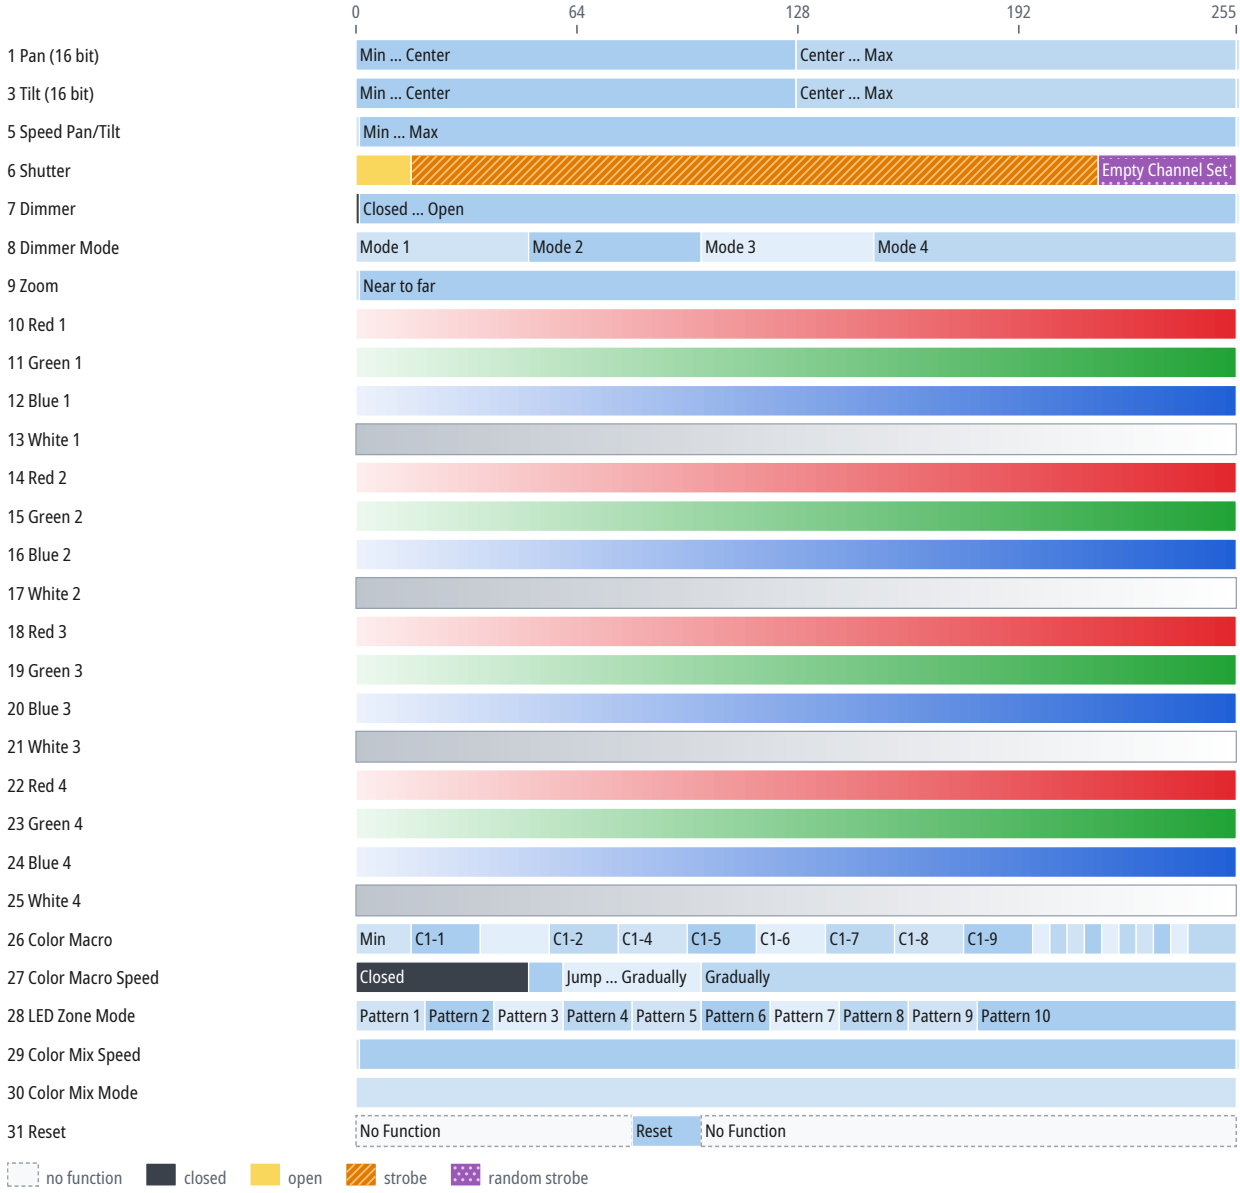

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19 Channel (17 Channel)” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “19 Channel (17 Channel)” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt		Same as CH 5 in the mode “19 Channel (17 Channel)” (p. 10)
6	Shutter	0–15	Shutter: Open

CH	Function	DMX	Description
6	Shutter (continued)	16–214	Shutter 1 Strobe (0.1–10 Hz)
		215–255	Empty Channel Set (2.1–10 Hz)
7	Dimmer		Same as CH 7 in the mode “19 Channel (17 Channel)” (p. 10)
8	Dimmer Mode		Same as CH 8 in the mode “19 Channel (17 Channel)” (p. 10)
9	Zoom		Same as CH 9 in the mode “19 Channel (17 Channel)” (p. 11)
10	Red 1	0–255	
11	Green 1	0–255	
12	Blue 1	0–255	
13	White 1	0–255	
14	Red 2	0–255	
15	Green 2	0–255	
16	Blue 2	0–255	
17	White 2	0–255	
18	Red 3	0–255	
19	Green 3	0–255	
20	Blue 3	0–255	
21	White 3	0–255	
22	Red 4	0–255	
23	Green 4	0–255	
24	Blue 4	0–255	
25	White 4	0–255	
26	Color Macro		Same as CH 14 in the mode “19 Channel (17 Channel)” (p. 11)
27	Color Macro Speed		Color Macro
		0–49	Closed
		50–59	Jump
		60–99	Jump ... Gradually
		100–255	Gradually
28	LED Zone Mode		LED Zone
		0–19	Pattern 1
		20–39	Pattern 2
		40–59	Pattern 3
		60–79	Pattern 4
		80–99	Pattern 5
		100–119	Pattern 6
		120–139	Pattern 7
		140–159	Pattern 8
		160–179	Pattern 9
		180–255	Pattern 10
29	Color Mix Speed		Same as CH 17 in the mode “19 Channel (17 Channel)” (p. 12)
30	Color Mix Mode	0–255	
31	Reset		Same as CH 19 in the mode “19 Channel (17 Channel)” (p. 12)

Mode 17 Channel

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–15 “Open”; CH 7 Dimmer above 0.

Channel functions at a glance

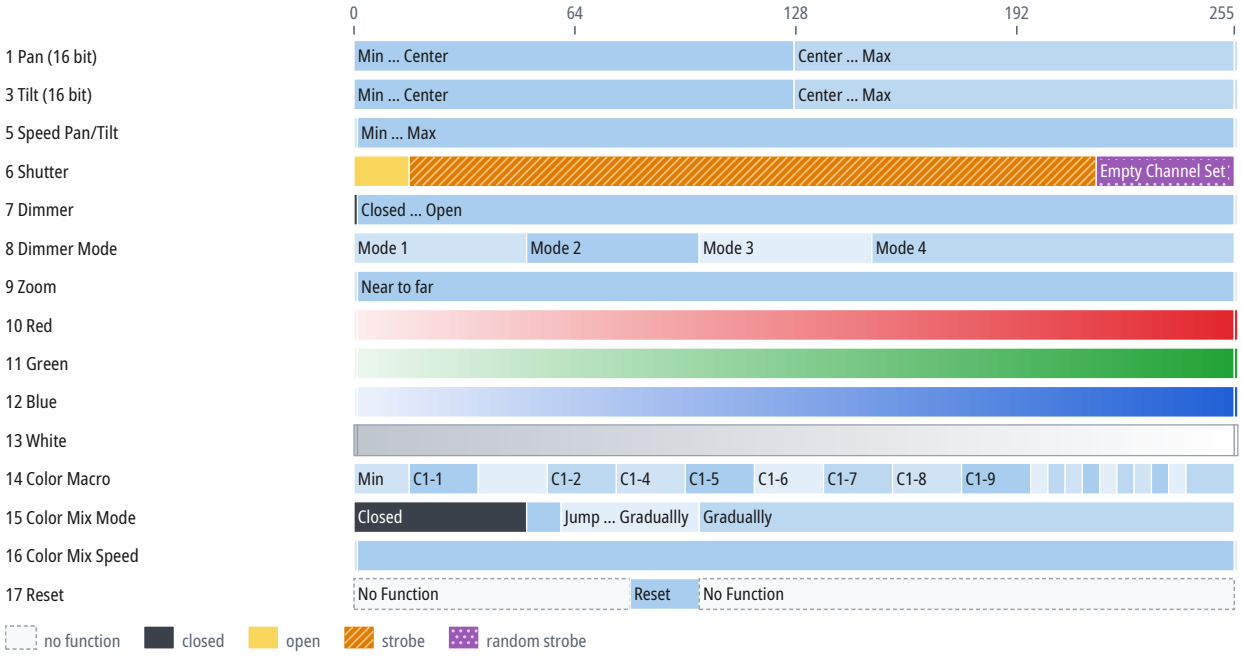

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19 Channel (17 Channel)” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “19 Channel (17 Channel)” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt		Same as CH 5 in the mode “19 Channel (17 Channel)” (p. 10)
6	Shutter		Same as CH 6 in the mode “19 Channel (17 Channel)” (p. 10)
7	Dimmer		Same as CH 7 in the mode “19 Channel (17 Channel)” (p. 10)
8	Dimmer Mode		Same as CH 8 in the mode “19 Channel (17 Channel)” (p. 10)
9	Zoom		Same as CH 9 in the mode “19 Channel (17 Channel)” (p. 11)
10	Red		Same as CH 10 in the mode “19 Channel (17 Channel)” (p. 11)
11	Green		Same as CH 11 in the mode “19 Channel (17 Channel)” (p. 11)
12	Blue		Same as CH 12 in the mode “19 Channel (17 Channel)” (p. 11)
13	White		Same as CH 13 in the mode “19 Channel (17 Channel)” (p. 11)
14	Color Macro		Same as CH 14 in the mode “19 Channel (17 Channel)” (p. 11)

CH	Function	DMX	Description
15	Color Mix Mode	0–49	Closed
		50–59	Jump
		60–99	Jump ... Graduallly
		100–255	Graduallly
16	Color Mix Speed		Same as CH 17 in the mode “19 Channel (17 Channel)” (p. 12)
17	Reset		Same as CH 19 in the mode “19 Channel (17 Channel)” (p. 12)

10 Technical specifications

Parameter	Value
Light source	LED
Zoom	6–45°
Pan	540°
Tilt	270°
Weight	8.8 kg
Operating temperature	-20 to 45 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0.1–10 Hz

Spot diameter

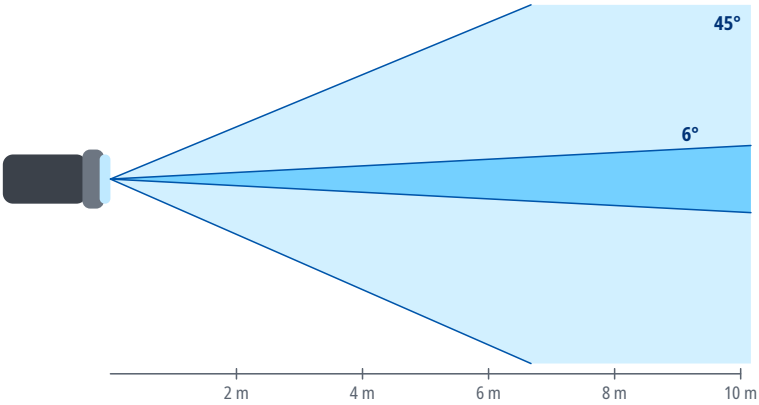

Distance	Ø 6°	Ø 45°
2 m	0.21 m	1.7 m
4 m	0.42 m	3.3 m
6 m	0.63 m	5 m
8 m	0.84 m	6.6 m
10 m	1 m	8.3 m
15 m	1.6 m	12.4 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much

faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.