DMX REFERENCE

ERO 150 BSW MKII

Ayra ERO 150 BSW MKII

Ayra



Manufacturer	Ayra
GDTF file	Ayra_ERO_150_BSW_MKII_135844.gdtf
GDTF revision	0-3 20ch fixed colorwheel · 2026-03-28
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 17CH 9
Mode 20CH 12
10 Technical specifications 13
11 Maintenance and cleaning 14
12 Troubleshooting 14
13 Disposal 15

1 About this manual

This document describes the Ayra ERO 150 BSW MKII by Ayra. It was compiled from the GDTF file Ayra_ERO_150_BSW_MKII_135844.gdtf from the GDTF-Share library.

File revision: “0-3 20ch fixed colorwheel”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Ayra; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	12 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
17CH	17	30	1, 18, 35, 52, ...
20CH	20	25	1, 21, 41, 61, ...

No light? Check these channels

- 17CH: CH 15 Shutter at 8–15 “ON” or 132–139, 182–189, 232–239, 248–255 “Open”; CH 16 Dimmer above 0
- 20CH: CH 18 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Description in the GDTF file

- ERO 150BSW MKII
- LED Moving Head with Beam, Spot and Wash
- Function

Range of movement

Pan 540°

top view

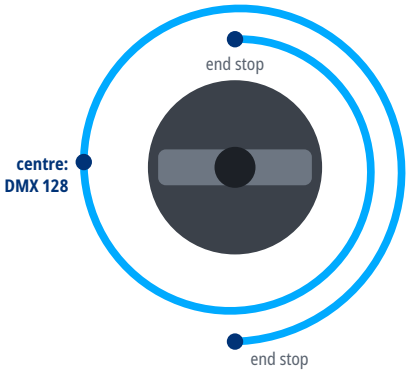

Tilt 220°

side view

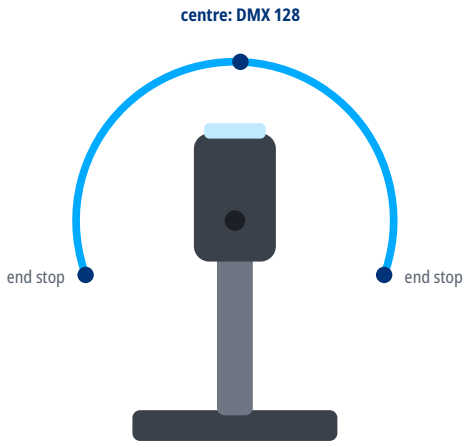

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 12 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

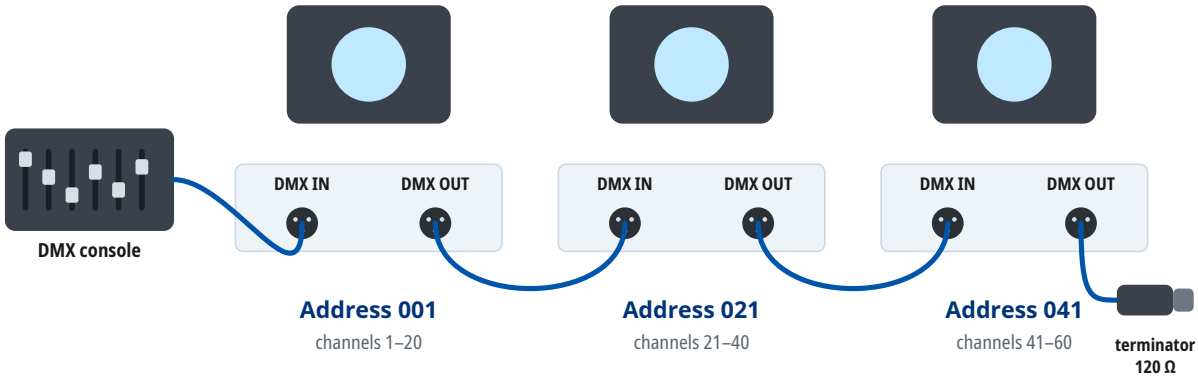

Mode 20CH: every unit occupies 20 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “20CH”: 20.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “20CH”, you can use, for example, the start addresses 1, 21, 41, 61.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	17CH 17 channels	20CH 20 channels
Pan / Tilt	1, 2	1, 3
Pan / Tilt resolution	8 bit	16 bit
Dimmer	16	18
Shutter / strobe	15	17
Color wheel	7	9
Gobo wheel	8, 9	10, 11
Gobo rotation	10	12
Prism	12, 13	14, 15
Zoom	11	13
Focus	14	16

Color wheel

1
Open
DMX 0–27

2 
Red
DMX 28–56

3 
Orange
DMX 57–84

4 
Yellow
DMX 85–113

5 
Green
DMX 114–141

6 
Blue
DMX 142–170

7 
Purple
DMX 171–198

8 
Light Blue
DMX 199–227

9 
Pink
DMX 228–255

Gobo wheel 1

1 Open	4 Beam 3/4	7 radial shard
2 Beam 1/4	5 Beam 4/4	
3 Beam 2/4	6 Bio	

Gobo wheel 2

1 Open	4 Oval Breakup	7 Stars
2 Bar	5 Radial spokes	
3 Spiral	6 Bolt break-up	

Prism

1
Open

2 
3 facets
Prism

9 DMX channels

Units in one DMX universe

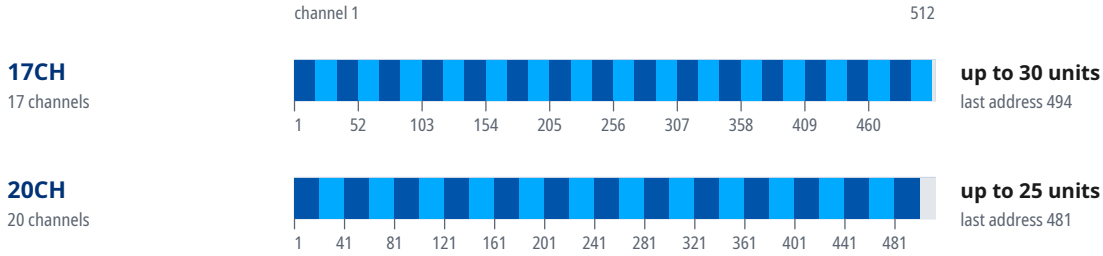

Start addresses of 20 units in the mode “20CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	101	11	201	16	301
2	21	7	121	12	221	17	321
3	41	8	141	13	241	18	341
4	61	9	161	14	261	19	361
5	81	10	181	15	281	20	381

Mode 17CH

If the device receives DMX in this mode but gives no light, check these channels: CH 15 Shutter at 8–15 “ON” or 132–139, 182–189, 232–239, 248–255 “Open”; CH 16 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 16 Dimmer 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Pan	0–127	Pan 1
		128	Home
		129–255	Pan 1
2	Tilt	0–127	Tilt 1
		128	Home
		129–255	Tilt 1
3	Speed Pan/Tilt	0–255	
4	mode		no value
		0–15	No value
		16–63	Show 1
		64–127	Show 2
		128–191	Show 3
		192–255	Show 4
5	pan/tilt macro	0–255	Empty Channel Set
6	macro speed	0–255	
7	Colors	0–27	Open
		28–56	Red
		57–84	Orange
		85–113	Yellow
		114–141	Green
		142–170	Blue
		171–198	Purple
		199–227	Light Blue
		228–255	Pink
8	Gobo	0–7	Open
		8–16	Beam 1/4
		17–25	Beam 2/4
		26–34	Beam 3/4
		35–43	Beam 4/4
		44–52	Bio
		53–61	Radial shard
		62–72	Beam 1/4 shake
		73–83	Beam 2/4 shake
		84–94	Beam 3/4 shake
		95–105	Beam 4/4 shake
		106–116	Bio shake
		117–127	Radial shard shake
		128–189	Anti-clockwise rotation fast to slow
		190–193	Stop Gobo wheel rotation
		194–255	Clockwise rotation slow to fast
9	Gobo 2	0–36	Open

CH	Function	DMX	Description
9	Gobo 2 (continued)	37–72	Bar
		73–109	Spiral
		110–145	Oval Breakup
		146–182	Radial spokes
		183–218	Bolt break-up
		219–255	Stars
10	Gobo 2 Rotation Speed	0–255	
11	Zoom Mode Beam	0–7	Off
		8–128	Spot
		129–255	Frost
12	Prism	0–7	Open
		8–255	Prism
13	Prism Rotation Speed	0–127	Prisma indexing
		128–189	Prisma rotation anti clockwise fast to slow (0–360 °/s)
		190–193	Stop Prisma rotation
		194–255	Prisma rotation clockwise slow to fast (0–360 °/s)
14	Focus	0–255	
15	Shutter	0–7	OFF
		8–15	ON
		16–131	Linear strobe
		132–139	Open
		140–181	Slow open fast close
		182–189	Open
		190–231	Slow close fast open
		232–239	Open
		240–247	Random Strobe
		248–255	Open
16	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
17	Function	0–69	No function
		70–79	Blackout while moving
		80–89	Disable blackout while moving
		90–99	Blackout during color change
		100–109	Disable Blackout during color change
		110–119	Blackout during gobo change
		120–129	Disable Blackout during gobo change
		130–139	No function
		140–149	Pan/Tilt reset
		150–159	Reset fx wheels
		160–199	No function
		200–209	Reset all

CH	Function	DMX	Description
17	Function (continued)	210–219	Blackout during changes
		220–229	Disable blackout during changes
		230–255	No function

Mode 20CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 18 Dimmer above 0.

Channel functions at a glance

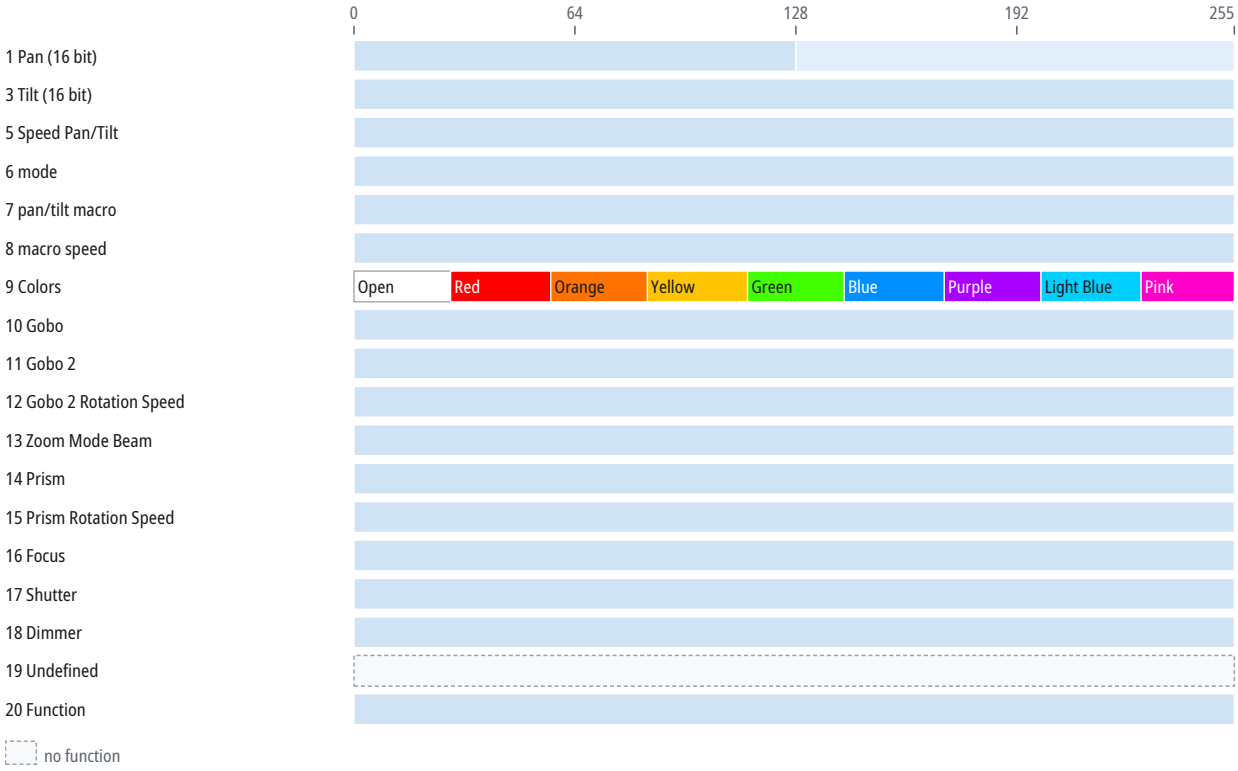

CH	Function	DMX	Description
1	Pan	0–128	Pan 1
		128	Home
		128–255	Pan 1
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–255	
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0–255	
6	mode	0–255	
7	pan/tilt macro	0–255	
8	macro speed	0–255	
9	Colors		Same as CH 7 in the mode “17CH” (p. 10)
10	Gobo	0–255	
11	Gobo 2	0–255	

CH	Function	DMX	Description
12	Gobo 2 Rotation Speed	0–255	
13	Zoom Mode Beam	0–255	
14	Prism	0–255	
15	Prism Rotation Speed	0–255	
16	Focus	0–255	
17	Shutter	0–255	
18	Dimmer	0–255	
19	Undefined	0–255	
20	Function	0–255	

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	150 W
Luminous flux	15,000 lm
Color temperature	7,000 K
Color rendering index (CRI)	85
Optics	
Beam angle	20°
Movement	
Pan	540°
Tilt	220°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	12 kg
Operating environment	
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Prism rotation	up to 360 °/s (60 rpm)

Spot diameter

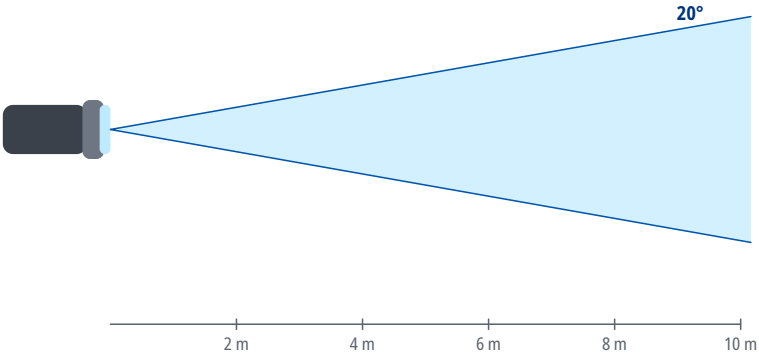

Distance	Ø 20°
2 m	0.71 m
4 m	1.4 m
6 m	2.1 m
8 m	2.8 m
10 m	3.5 m
15 m	5.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.