DMX REFERENCE

Betopper LF350

Betopper betopper LF350

Betopper



Manufacturer	Betopper
GDTF file	BETOPPER_Betopper_LF350_144279.gdtf
GDTF revision	Rev 25 17ch and 38ch mode · 2026-05-25
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 6
7 Operation 6
8 Functions at a glance 7
9 DMX channels 8
Mode 17ch 9
Mode 38Ch 11
10 Technical specifications 13
11 Maintenance and cleaning 13
12 Troubleshooting 13
13 Disposal 14

1 About this manual

This document describes the Betopper betopper LF350 by Betopper. It was compiled from the GDTF file BETOPPER_Betopper_LF350_144279.gdtf from the GDTF-Share library.

File revision: “Rev 25 17ch and 38ch mode”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Betopper; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	7.9 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
17ch	17	30	1, 18, 35, 52, ...
38Ch	38	13	1, 39, 77, 115, ...

No light? Check these channels

- 17ch: CH 1 Dimmer above 0
- 38Ch: CH 4 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Description in the GDTF file

“XML import to GDTF modified Via Jason Parsons”

Range of movement

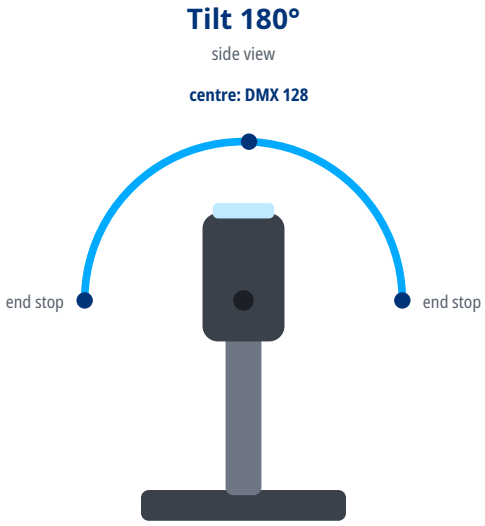

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 7.9 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

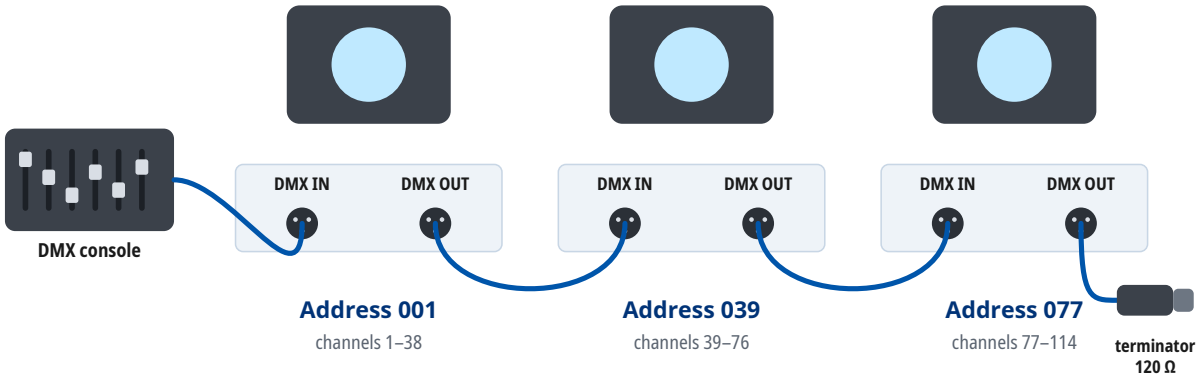

Mode 38Ch: every unit occupies 38 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “38Ch”: 38.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “38Ch”, you can use, for example, the start addresses 1, 39, 77, 115.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	17ch 17 channels	38Ch 38 channels
Pan / Tilt	7	1
Dimmer	1	4
Shutter / strobe	2	5
Color mixing	3–6	13–37
Effects / macros	10, 12	6, 8, 9
Pixel control		8 cells

Cells (pixels)



8 cells where the GDTF file places them (seen from above), numbered by their first DMX channel (CH) in the mode “38Ch”.

9 DMX channels

Units in one DMX universe

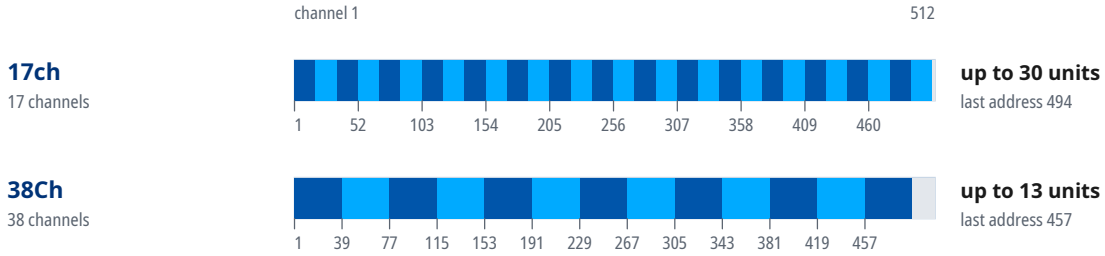

Start addresses of 20 units in the mode “38Ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	191	11	381	16	U2 · 77
2	39	7	229	12	419	17	U2 · 115
3	77	8	267	13	457	18	U2 · 153
4	115	9	305	14	U2 · 1	19	U2 · 191
5	153	10	343	15	U2 · 39	20	U2 · 229

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 17ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 3 Red 255, CH 4 Green 255, CH 5 Blue 255.

Channel functions at a glance

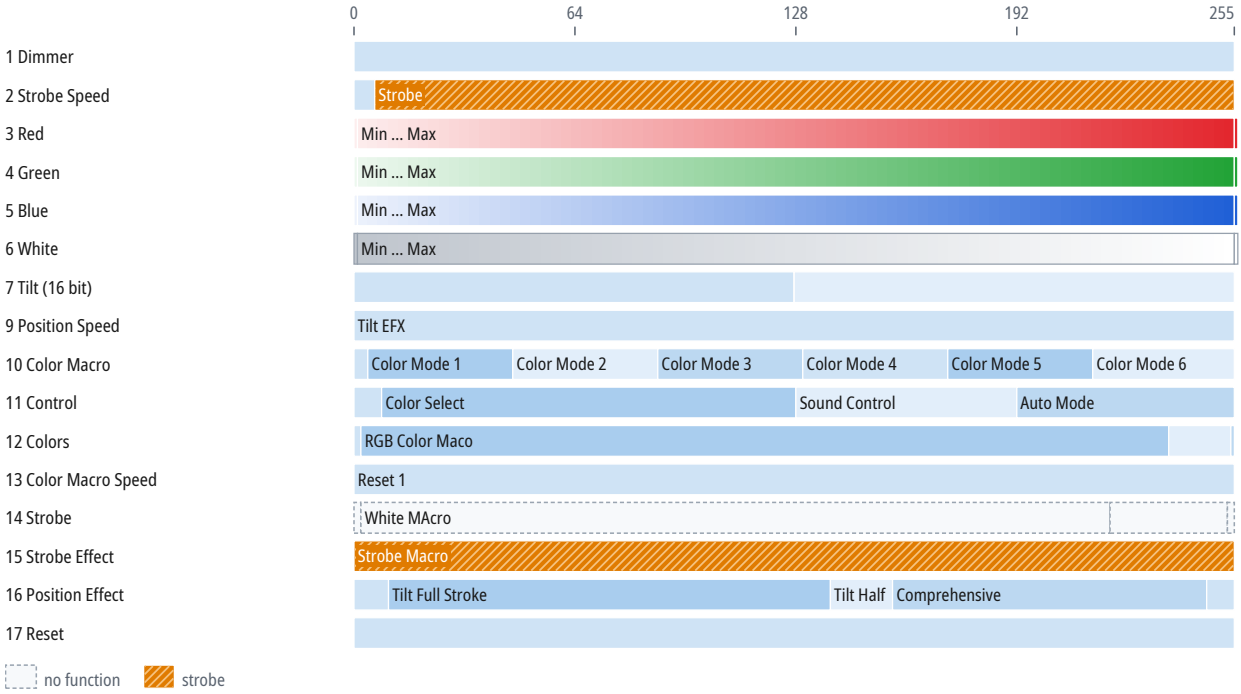

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Strobe Speed	0–255	Strobe
3	Red		Red 1
		0	Min
		1–254	Min ... Max
		255	Max
4	Green		Green 1
		0	Min
		1–254	Min ... Max
		255	Max
5	Blue		Blue 1
		0	Min
		1–254	Min ... Max
		255	Max
6	White		White 1
		0	Min
		1–254	Min ... Max
		255	Max

CH	Function	DMX	Description
7	Tilt	0–127	Tilt 1
		128	Center
		128–255	Tilt 1
8	Tilt Fine	0–255	Fine adjustment of CH 7
9	Position Speed		Tilt EFX
		0–255	Tilt EFX
10	Color Macro		Color Modes
		0–3	Color Modes
		4–45	Color Mode 1
		46–87	Color Mode 2
		88–129	Color Mode 3
		130–171	Color Mode 4
		172–213	Color Mode 5
		214–255	Color Mode 6
11	Control		MODE Select
		0–7	MODE Select
		8–127	Color Select
		128–191	Sound Control
		192–255	Auto Mode
12	Colors		RGB MACRO
		0–1	RGB MACRO
		2–235	RGB Color Maco
		236–253	Comprehensive Macro
		254–255	Auto switching
13	Color Macro Speed		Reset 1
		0–255	Reset 1
14	Strobe		Reserved 4 1
		0–1	Reserved 4 1
		2–218	White MAcro
		219–252	Comprensive Macro
		253–255	Auto switching
15	Strobe Effect		Strobe Macro
		0–255	Strobe Macro
16	Position Effect	0–9	Macro selection 1
		10–137	Tilt Full Stroke
		138–155	Tilt Half
		156–246	Comprehensive
		247–255	Auto switching
17	Reset	0–255	

Mode 38Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 4 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 14 Red 100 (the same in each of the 8 cells), CH 15 Green 100 (the same in each of the 8 cells), CH 16 Blue 100 (the same in each of the 8 cells).

Channel functions at a glance

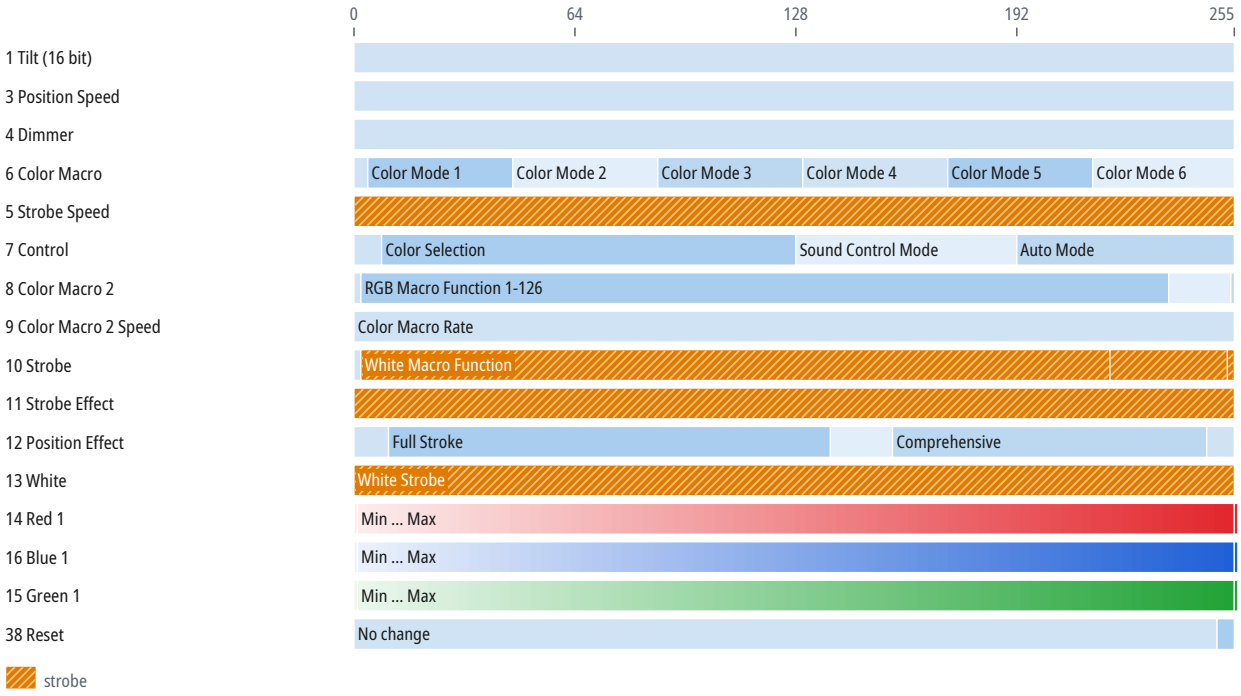

CH	Function	DMX	Description
1	Tilt	0–255	180°
2	Tilt Fine	0–255	Fine adjustment of CH 1
3	Position Speed	0–255	Position Speed
4	Dimmer	0–255	
5	Strobe Speed	0–255	
6	Color Macro		Color Mode
		0–3	Color Mode
		4–45	Color Mode 1
		46–87	Color Mode 2
		88–129	Color Mode 3
		130–171	Color Mode 4
		172–213	Color Mode 5
		214–255	Color Mode 6
7	Control	0–7	Control
		8–127	Color Selection
		128–191	Sound Control Mode
		192–255	Auto Mode

CH	Function	DMX	Description
8	Color Macro 2		RGB Macro
		0–1	RGB Macro
		2–235	RGB Macro Function 1-126
		236–253	RGB Comprehensive
		254–255	Automatic Switching
9	Color Macro 2 Speed		Color Macro Rate
		0–255	Color Macro Rate
10	Strobe	0–1	Strobe Mode Strobe
		2–218	White Macro Function
		219–252	Comprehensive White
		253–255	Automatic White
11	Strobe Effect	0–255	
12	Position Effect	0–9	Position Effect
		10–137	Full Stroke
		138–155	Half Stroke
		156–246	Comprehensive
		247–255	Automatic Switching
13	White		White Strobe
		0–255	White Strobe
14	Red 1	0	Min
		1–254	Min ... Max
		255	Max
15	Green 1	0	Min
		1–254	Min ... Max
		255	Max
16	Blue 1	0	Min
		1–254	Min ... Max
		255	Max
38	Reset	0–249	No change
		250–255	Fixture Reset

CH 14–37: 8 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 14–16); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	14	15	16	2	17	18	19	3	20	21	22
4	23	24	25	5	26	27	28	6	29	30	31
7	32	33	34	8	35	36	37				

10 Technical specifications

Parameter	Value
Light source	LED
Tilt	180°
Weight	7.9 kg
Operating temperature	-20 to 40 °C

Spot diameter

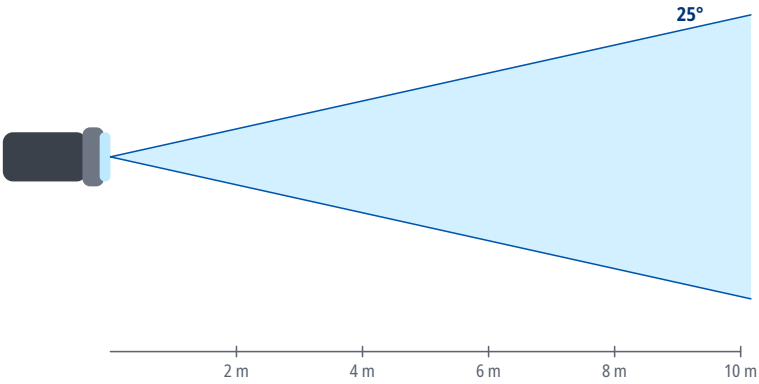

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.

Problem	Remedy
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.