DMX REFERENCE

BS384 Strobe

BS384 Stroboscope LED RGBW Combi

BeamZ



Manufacturer	BeamZ
GDTF file	BeamZ_BS384_Strobe_143844.gdtf
GDTF revision	BS384_Release_V1 · 2026-05-22
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 9
Mode 6 Channel 9
Mode 9 Channels 10
Mode 112 Channels 11
Mode 64 Channels 12
9 Technical specifications 13
10 Maintenance and cleaning 13
11 Troubleshooting 14
12 Disposal 14

1 About this manual

This document describes the BS384 Stroboscope LED RGBW Combi by BeamZ. It was compiled from the GDTF file BeamZ_BS384_Strobe_143844.gdtf from the GDTF-Share library.

File revision: “BS384_Release_V1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by BeamZ; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	2 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
6 Channel	6	85	1, 7, 13, 19, ...
9 Channels	9	56	1, 10, 19, 28, ...
112 Channels	112	4	1, 113, 225, 337
64 Channels	64	8	1, 65, 129, 193, ...

No light? Check these channels

- 6 Channel: CH 1 Dimmer above 0
- 9 Channels: CH 1 Dimmer above 0
- 112 Channels: CH 97 Dimmer above 0 (the same in each of the 16 cells)
- 64 Channels: CH 49 Dimmer above 0 (the same in each of the 16 cells)


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 2.05 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

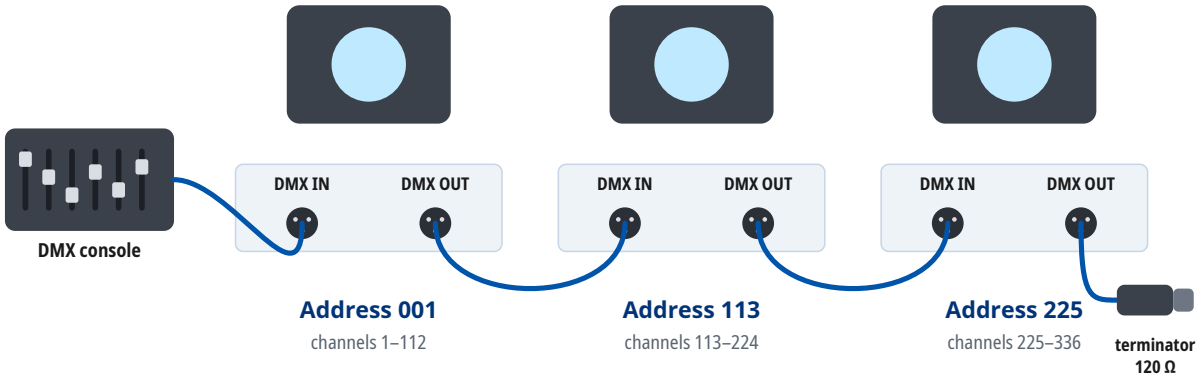

Mode 112 Channels: every unit occupies 112 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “112 Channels”: 112.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “112 Channels”, you can use, for example, the start addresses 1, 113, 225, 337.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	6 Channel 6 channels	9 Channels 9 channels	112 Channels 112 channels	64 Channels 64 channels
Dimmer	1	1	97–112	49–64
Shutter / strobe	2	6		
Color mixing	3–6	2–5	1–96	1–48
Effects / macros		8, 9		
Pixel control			32 + 16 cells	16 + 16 cells

Color wheel

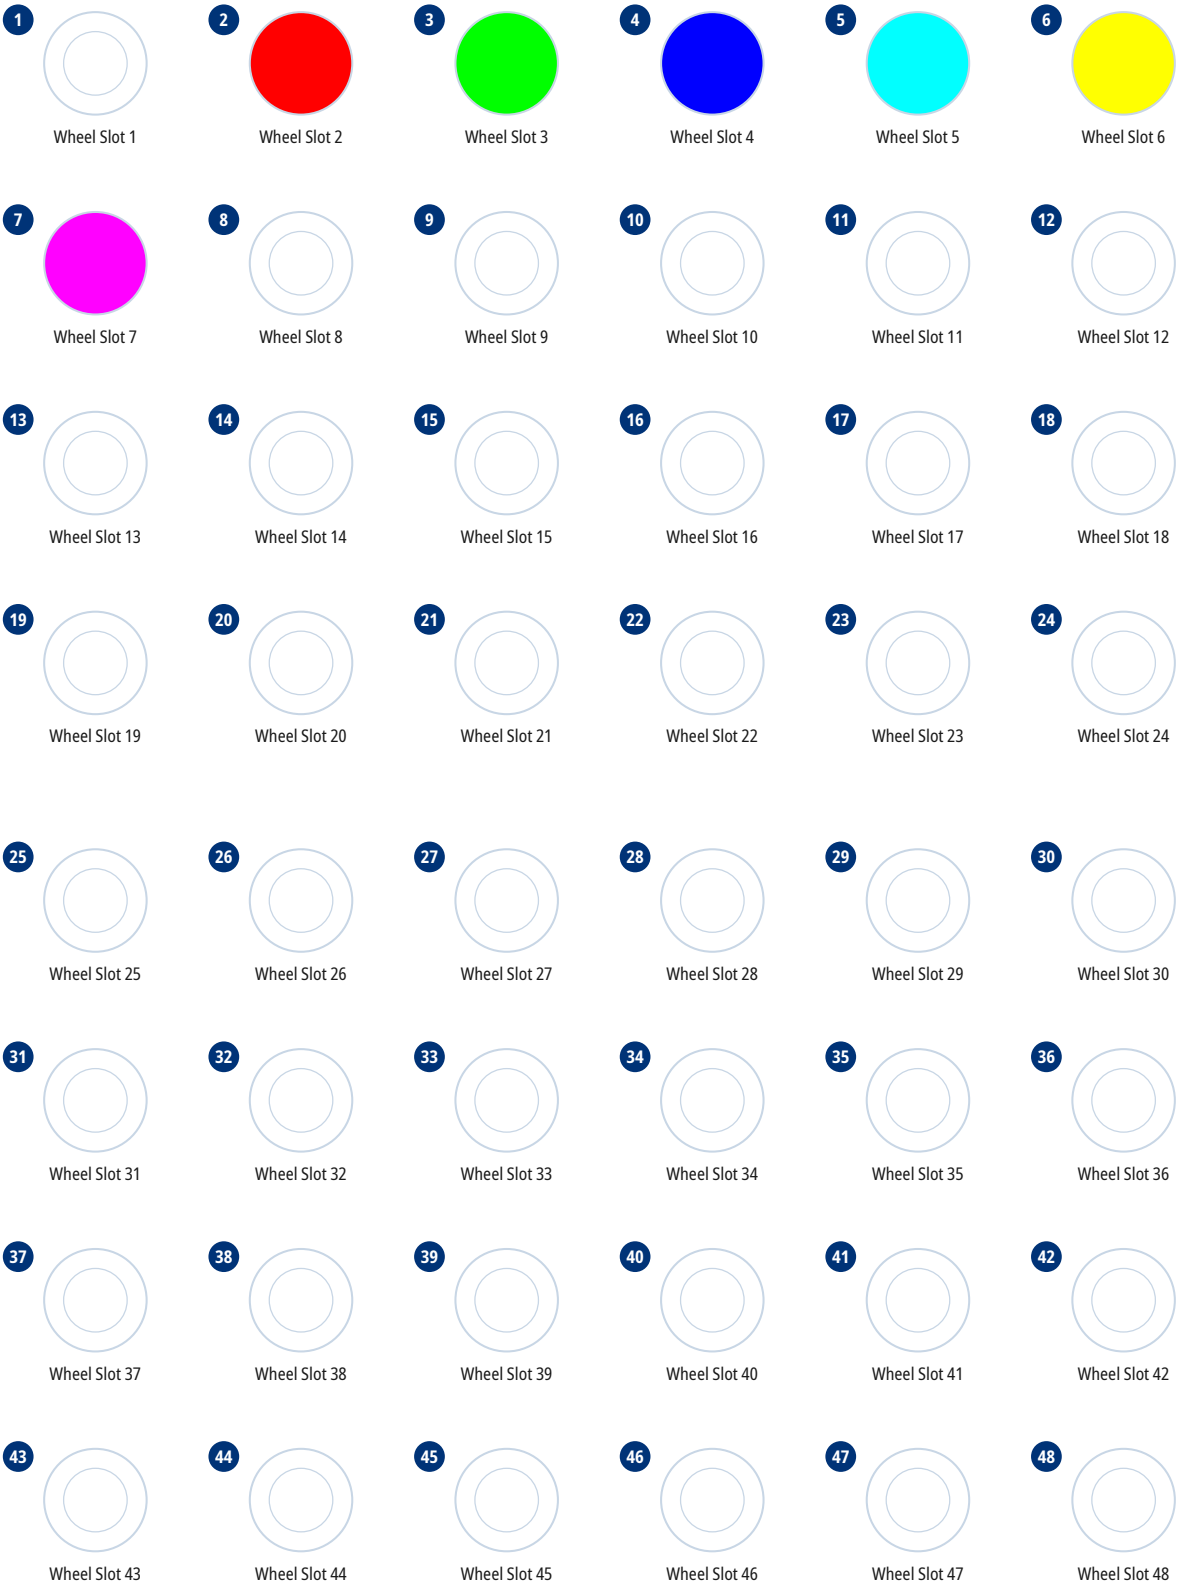
1
Wheel Slot 1
2
Wheel Slot 2
3
Wheel Slot 3
4
Wheel Slot 4
5
Wheel Slot 5
6
Wheel Slot 6
7
Wheel Slot 7
8
Wheel Slot 8
9
Wheel Slot 9
10
Wheel Slot 10
11
Wheel Slot 11
12
Wheel Slot 12
13
Wheel Slot 13
14
Wheel Slot 14
15
Wheel Slot 15
16
Wheel Slot 16
17
Wheel Slot 17
18
Wheel Slot 18
19
Wheel Slot 19
20
Wheel Slot 20
21
Wheel Slot 21
22
Wheel Slot 22
23
Wheel Slot 23
24
Wheel Slot 24
25
Wheel Slot 25
26
Wheel Slot 26
27
Wheel Slot 27
28
Wheel Slot 28
29
Wheel Slot 29
30
Wheel Slot 30
31
Wheel Slot 31
32
Wheel Slot 32
33
Wheel Slot 33
34
Wheel Slot 34
35
Wheel Slot 35
36
Wheel Slot 36
37
Wheel Slot 37
38
Wheel Slot 38
39
Wheel Slot 39
40
Wheel Slot 40
41
Wheel Slot 41
42
Wheel Slot 42
43
Wheel Slot 43
44
Wheel Slot 44
45
Wheel Slot 45
46
Wheel Slot 46
47
Wheel Slot 47
48
Wheel Slot 48

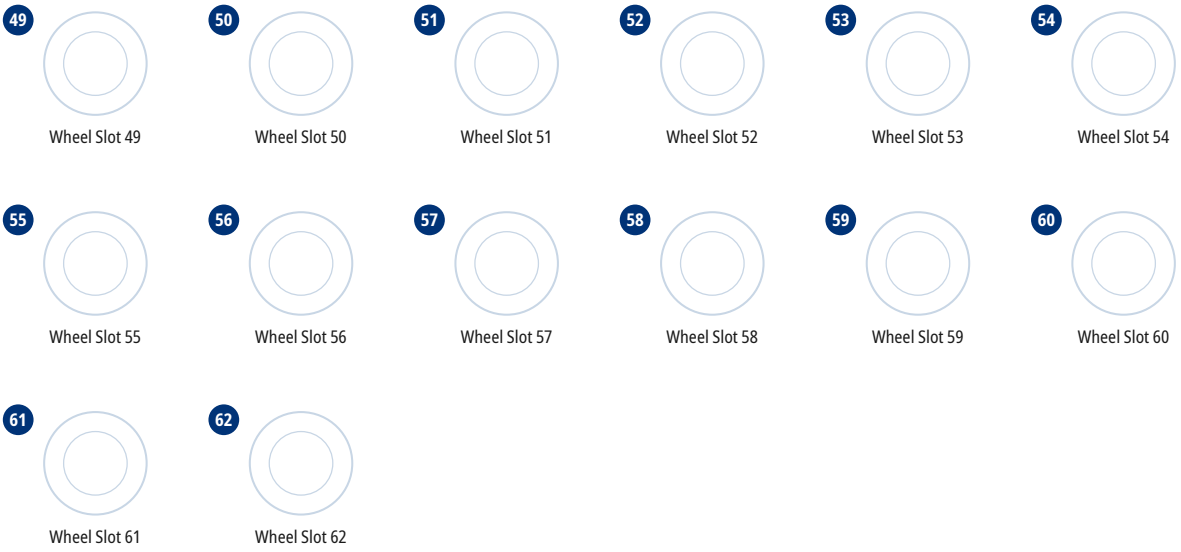

Cells (pixels)

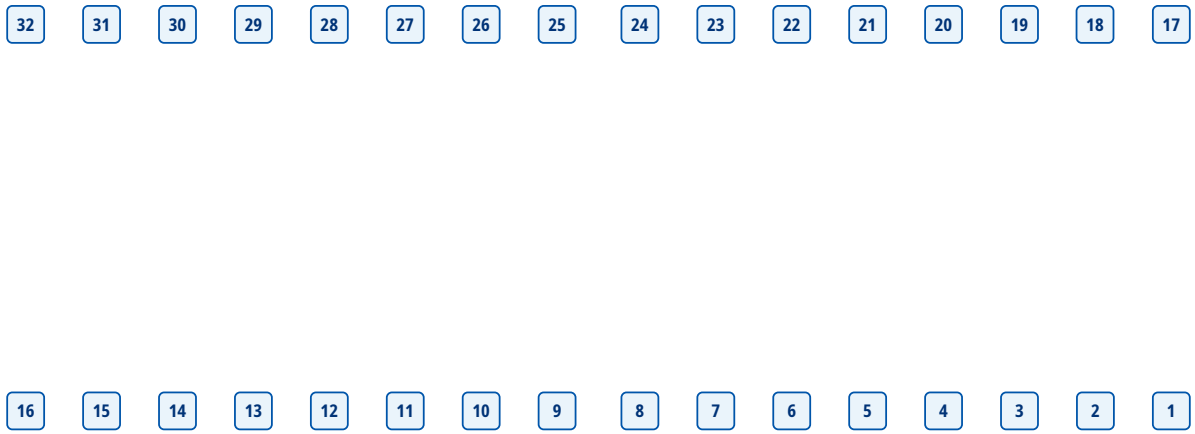

Cells where the GDTF file places them (seen from above), 32 in all; numbered in the order of their first DMX channel in the mode “112 Channels”.

8 DMX channels

Units in one DMX universe

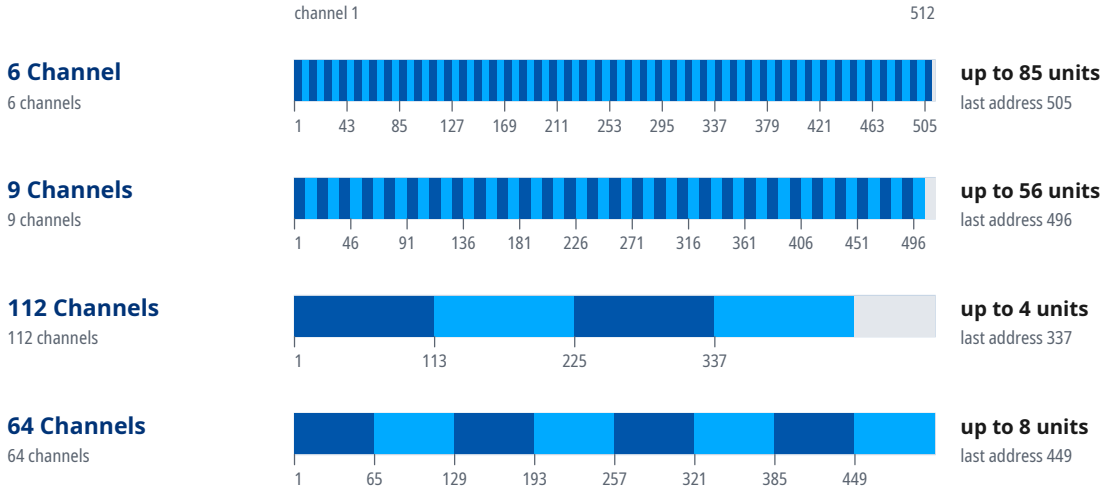

Start addresses of 20 units in the mode “112 Channels”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	U2 · 113	11	U3 · 225	16	U4 · 337
2	113	7	U2 · 225	12	U3 · 337	17	U5 · 1
3	225	8	U2 · 337	13	U4 · 1	18	U5 · 113
4	337	9	U3 · 1	14	U4 · 113	19	U5 · 225
5	U2 · 1	10	U3 · 113	15	U4 · 225	20	U5 · 337

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 6 Channel

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 3 Red 255, CH 4 Green 255, CH 5 Blue 255, CH 6 White 255.

Channel functions at a glance

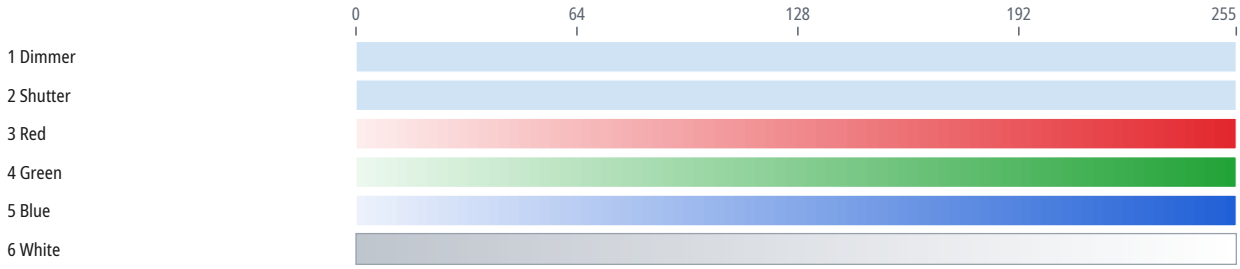

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Shutter	0–255	
3	Red	0–255	
4	Green	0–255	
5	Blue	0–255	
6	White	0–255	

Mode 9 Channels

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255, CH 5 White 255.

Channel functions at a glance

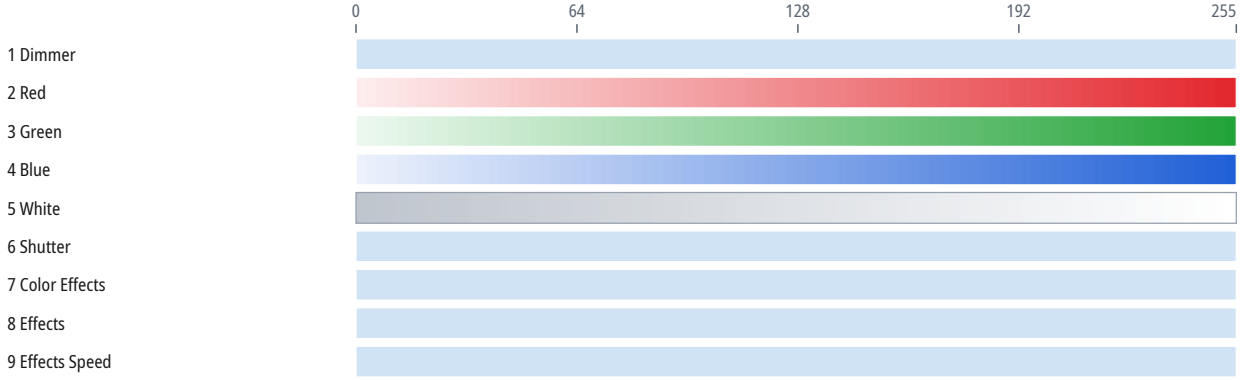

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red	0–255	
3	Green	0–255	
4	Blue	0–255	
5	White	0–255	
6	Shutter	0–255	
7	Color Effects	0–255	
8	Effects	0–255	
9	Effects Speed	0–255	

Mode 112 Channels

If the device receives DMX in this mode but gives no light, check these channels: CH 97 Dimmer above 0 (the same in each of the 16 cells).

Channel functions at a glance

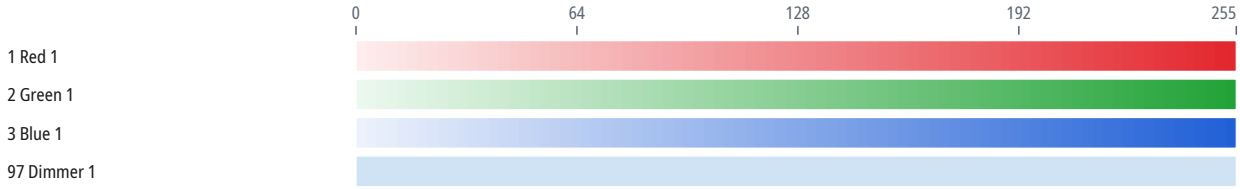

CH	Function	DMX	Description
1	Red 1	0–255	
2	Green 1	0–255	
3	Blue 1	0–255	
97	Dimmer 1	0–255	

CH 1–96: 32 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 1–3); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	1	2	3	2	4	5	6	3	7	8	9
4	10	11	12	5	13	14	15	6	16	17	18
7	19	20	21	8	22	23	24	9	25	26	27
10	28	29	30	11	31	32	33	12	34	35	36
13	37	38	39	14	40	41	42	15	43	44	45
16	46	47	48	17	49	50	51	18	52	53	54
19	55	56	57	20	58	59	60	21	61	62	63
22	64	65	66	23	67	68	69	24	70	71	72
25	73	74	75	26	76	77	78	27	79	80	81
28	82	83	84	29	85	86	87	30	88	89	90
31	91	92	93	32	94	95	96				

CH 97–112: 16 cells of 1 channel each. Every cell works as cell 1 in the table above (CH 97); the table below gives each cell's channel numbers.

Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer
1	97	2	98	3	99	4	100	5	101	6	102
7	103	8	104	9	105	10	106	11	107	12	108
13	109	14	110	15	111	16	112				

Mode 64 Channels

If the device receives DMX in this mode but gives no light, check these channels: CH 49 Dimmer above 0 (the same in each of the 16 cells).

Channel functions at a glance

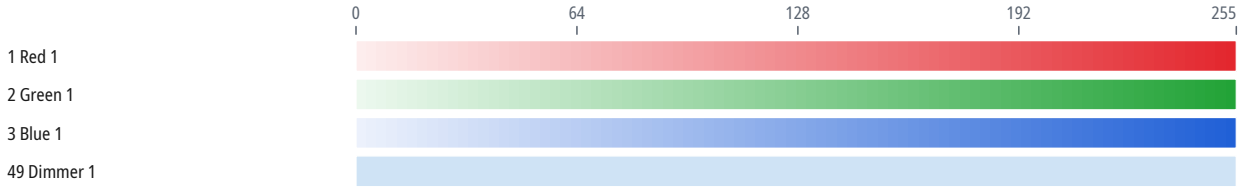

CH	Function	DMX	Description
1	Red 1	0–255	
2	Green 1	0–255	
3	Blue 1	0–255	
49	Dimmer 1	0–255	

CH 1–48: 16 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 1–3); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	1	2	3	2	4	5	6	3	7	8	9
4	10	11	12	5	13	14	15	6	16	17	18
7	19	20	21	8	22	23	24	9	25	26	27
10	28	29	30	11	31	32	33	12	34	35	36
13	37	38	39	14	40	41	42	15	43	44	45
16	46	47	48								

CH 49–64: 16 cells of 1 channel each. Every cell works as cell 1 in the table above (CH 49); the table below gives each cell's channel numbers.

Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer	Cell	Dimmer
1	49	2	50	3	51	4	52	5	53	6	54
7	55	8	56	9	57	10	58	11	59	12	60
13	61	14	62	15	63	16	64				

9 Technical specifications

Parameter	Value
Weight	2 kg
Operating temperature	-5 to 45 °C

Dimensions

weight 2 kg



Spot diameter

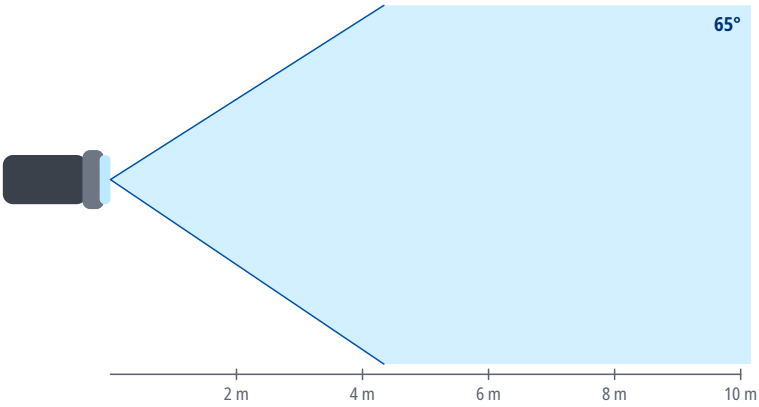

Distance	Ø 65°
2 m	2.5 m
4 m	5.1 m
6 m	7.6 m
8 m	10.2 m
10 m	12.7 m
15 m	19.1 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.