DMX REFERENCE

LUCID 2 8

LUCID 2 8 LED BAR 8x 30W RGBW

BeamZ



Manufacturer	BeamZ
GDTF file	BeamZ_LUCID_2_8_59603.gdtf
GDTF revision	LUCID 2.8 LED BAR 8x 30W RGBW · 2024-03-15
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 8
Mode 3 channels 8
Mode 4 channels 9
Mode 5 channels 9
Mode 6 channels 11
Mode 12 channels 11
Mode 32 channels 12
Mode 36 channels 13
10 Technical specifications 14
11 Maintenance and cleaning 14
12 Troubleshooting 15
13 Disposal 15

1 About this manual

This document describes the LUCID 2 8 LED BAR 8x 30W RGBW by BeamZ. It was compiled from the GDTF file BeamZ_LUCID_2_8_59603.gdtf from the GDTF-Share library.

File revision: “LUCID 2.8 LED BAR 8x 30W RGBW”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by BeamZ; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	2.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
3 channels	3	170	1, 4, 7, 10, ...
4 channels	4	128	1, 5, 9, 13, ...
5 channels	5	102	1, 6, 11, 16, ...
6 channels	6	85	1, 7, 13, 19, ...
12 channels	12	42	1, 13, 25, 37, ...
32 channels	32	16	1, 33, 65, 97, ...
36 channels	36	14	1, 37, 73, 109, ...

No light? Check these channels

- 5 channels: CH 1 Dimmer above 0
- 6 channels: CH 5 Dimmer above 0; CH 6 Strobe Effect at 0 or 6–10 “No function”
- 12 channels: CH 1 Dimmer above 0
- 36 channels: CH 1 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“The LUCID is equipped with 4 or 8 high power COB LEDs that can be used for either wash effects or as a pixel controlled bar. With the latest COB technology it's possible to create flawless RGBW colour mixing. The LUCID can either be used in stand-alone mode and run its preset programs in a certain

speed or follows the music, thanks to the built-in microphone. But for full control you can also use a DMX controller to program this light effect into your shows. The LUCID can be placed on the floor by turning the bracket upside down, making it ideal for both fixed installations and rental."

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 2.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

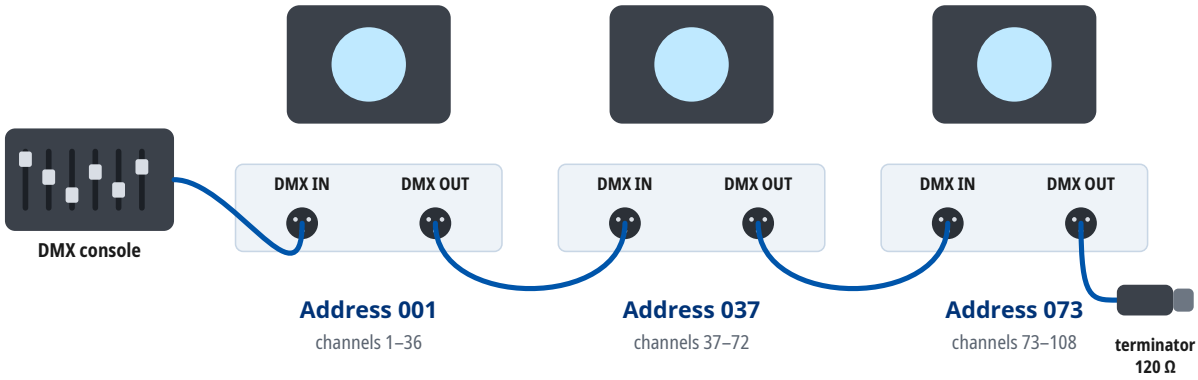

Mode 36 channels: every unit occupies 36 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “36 channels”: 36.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “36 channels”, you can use, for example, the start addresses 1, 37, 73, 109.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	3 channels 3 channels	4 channels 4 channels	5 channels 5 channels	6 channels 6 channels	12 channels 12 channels	32 channels 32 channels	36 channels 36 channels
Dimmer			1	5	1		1
Color mixing	1–3	1–4		1–4		1–32	3–34
Effects / macros			4		11		35
Pixel control						8 cells	8 cells

LED colors and the colors they mix

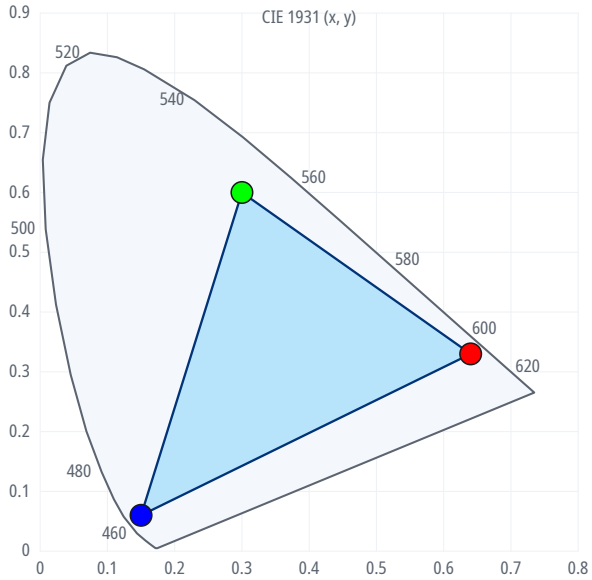

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

9 DMX channels

Units in one DMX universe

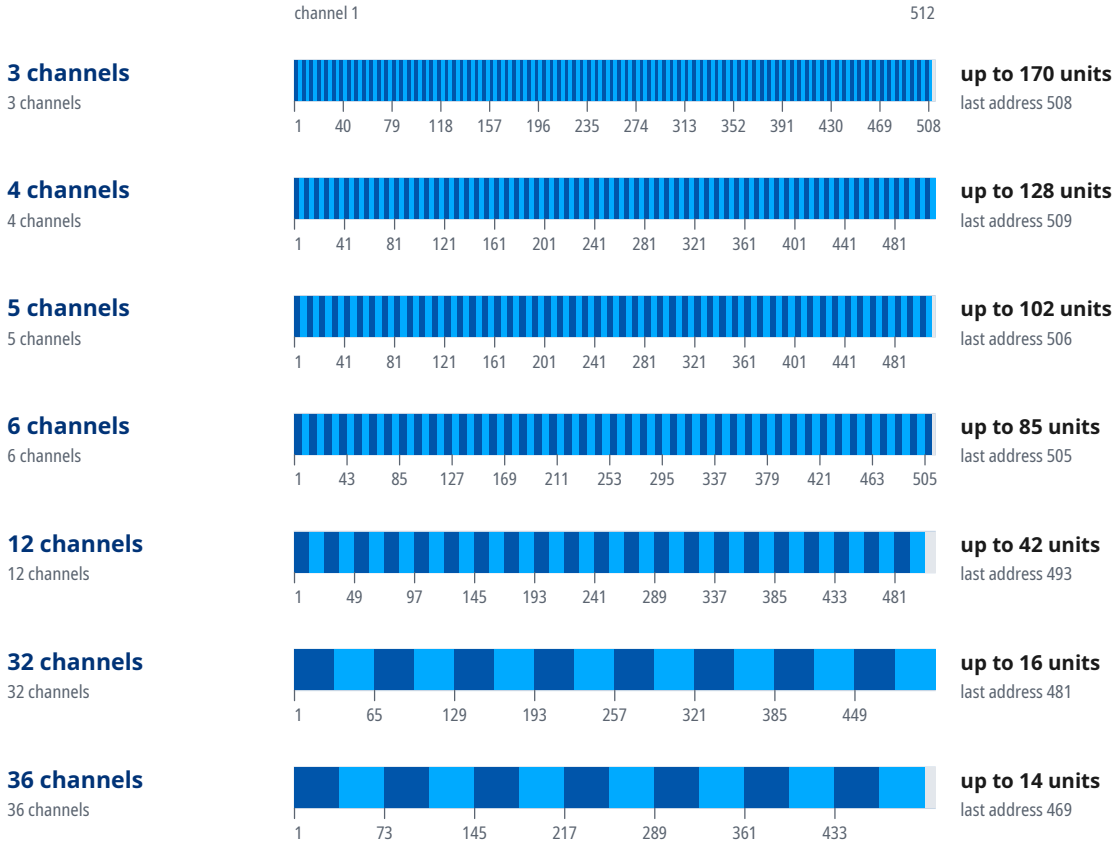

Start addresses of 20 units in the mode “36 channels”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	181	11	361	16	U2 · 37
2	37	7	217	12	397	17	U2 · 73
3	73	8	253	13	433	18	U2 · 109
4	109	9	289	14	469	19	U2 · 145
5	145	10	325	15	U2 · 1	20	U2 · 181

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 3 channels

Channel functions at a glance

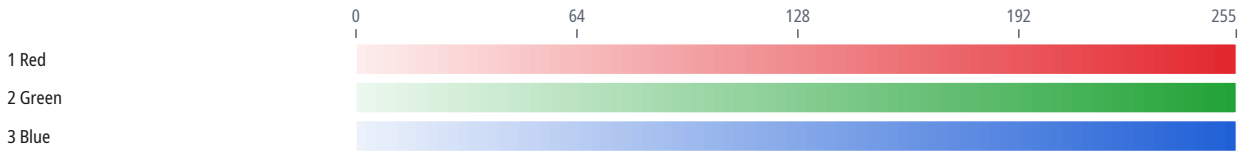

CH	Function	DMX	Description
1	Red	0–255	
2	Green	0–255	
3	Blue	0–255	

Mode 4 channels

Channel functions at a glance

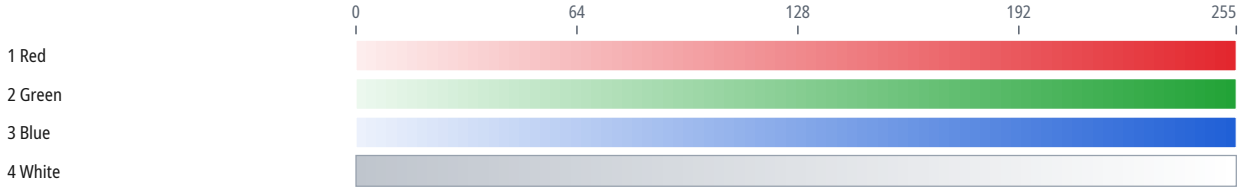

CH	Function	DMX	Description
1	Red	0–255	
2	Green	0–255	
3	Blue	0–255	
4	White	0–255	

Mode 5 channels

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

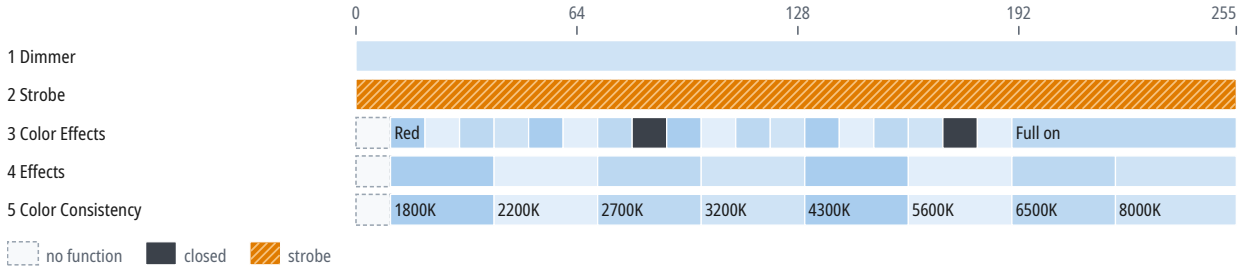

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Strobe	0–255	
3	Color Effects	0–9	No function
		10–19	Red
		20–29	Green
		30–39	Blue
		40–49	White
		50–59	Yellow
		60–69	Magenta
		70–79	Cyan
		80–89	Dark orange

CH	Function	DMX	Description
3	Color Effects (continued)	90–99	Green yellow
		100–109	Salmon
		110–119	Turquoise
		120–129	Light green
		130–139	Orange
		140–149	Straw
		150–159	Lavender
		160–169	Light blue
		170–179	Dark blue
		180–189	Pink
		190–255	Full on
4	Effects	0–9	No function
		10–39	Auto program 1
		40–69	Auto program 2
		70–99	Auto program 3
		100–129	Auto program 4
		130–159	Sound program 1
		160–189	Sound program 2
		190–219	Sound program 3
		220–255	Sound program 4
5	Color Consistency	0–9	No function
		10–39	1800K
		40–69	2200K
		70–99	2700K
		100–129	3200K
		130–159	4300K
		160–189	5600K
		190–219	6500K
		220–255	8000K

Mode 6 channels

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Dimmer above 0; CH 6 Strobe Effect at 0 or 6–10 “No function”.

Channel functions at a glance

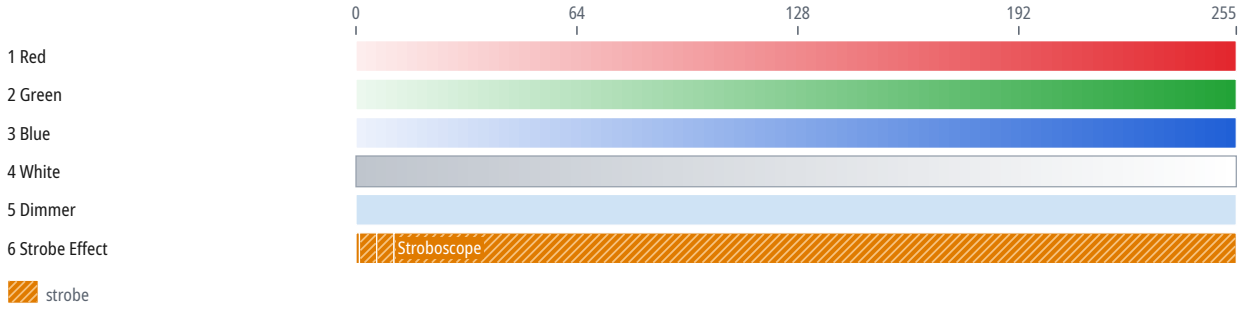

CH	Function	DMX	Description
1	Red	0–255	
2	Green	0–255	
3	Blue	0–255	
4	White	0–255	
5	Dimmer	0–255	
6	Strobe Effect	0	No function
		1–5	Sound controle
		6–10	No function
		11–255	Stroboscope

Mode 12 channels

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

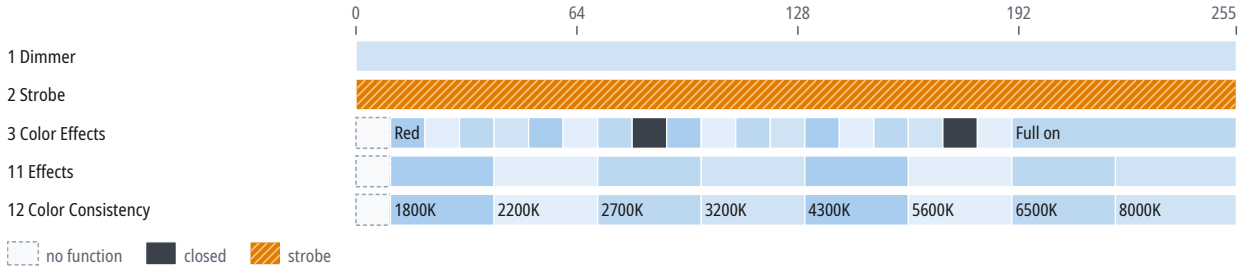

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Strobe	0–255	
3	Color Effects	0–9	No function
		10–19	Red
		20–29	Green
		30–39	Blue
		40–49	White

CH	Function	DMX	Description
3	Color Effects (continued)	50–59	Yellow
		60–69	Magenta
		70–79	Cyan
		80–89	Dark orange
		90–99	Green yellow
		100–109	Salmon
		110–119	Turquoise
		120–129	Light green
		130–139	Orange
		140–149	Straw
		150–159	Lavender
		160–169	Light blue
		170–179	Dark blue
		180–189	Pink
		190–255	Full on
11	Effects		Same as CH 4 in the mode “5 channels” (p. 10)
12	Color Consistency		Same as CH 5 in the mode “5 channels” (p. 10)

CH 3–10: 8 cells of 1 channel each. Every cell works as cell 1 in the table above (CH 3); the table below gives each cell's channel numbers.

Cell	Color Effects	Cell	Color Effects	Cell	Color Effects	Cell	Color Effects	Cell	Color Effects	Cell	Color Effects
1	3	2	4	3	5	4	6	5	7	6	8
7	9	8	10								

Mode 32 channels

Channel functions at a glance

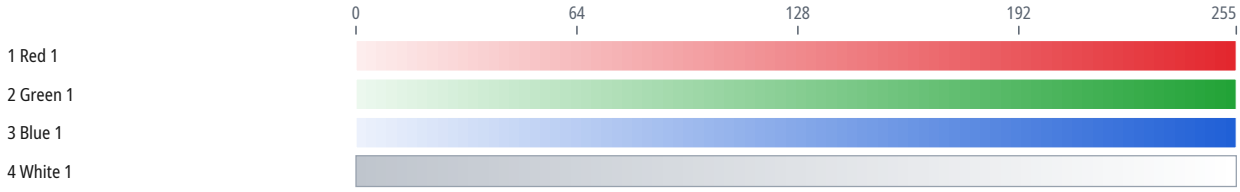

CH	Function	DMX	Description
1	Red 1	0–255	
2	Green 1	0–255	
3	Blue 1	0–255	
4	White 1	0–255	

CH 1–32: 8 cells of 4 channels each. Every cell works as cell 1 in the table above (CH 1–4); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	White	Cell	Red	Green	Blue	White
1	1	2	3	4	2	5	6	7	8
3	9	10	11	12	4	13	14	15	16
5	17	18	19	20	6	21	22	23	24
7	25	26	27	28	8	29	30	31	32

Mode 36 channels

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

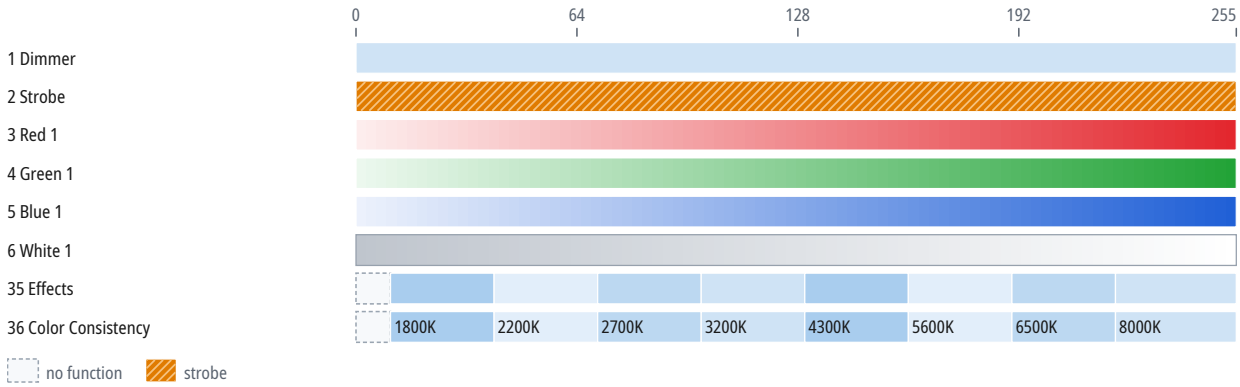

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Strobe	0–255	
3	Red 1	0–255	
4	Green 1	0–255	
5	Blue 1	0–255	
6	White 1	0–255	
35	Effects		Same as CH 4 in the mode “5 channels” (p. 10)
36	Color Consistency		Same as CH 5 in the mode “5 channels” (p. 10)

CH 3–34: 8 cells of 4 channels each. Every cell works as cell 1 in the table above (CH 3–6); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	White	Cell	Red	Green	Blue	White
1	3	4	5	6	2	7	8	9	10
3	11	12	13	14	4	15	16	17	18
5	19	20	21	22	6	23	24	25	26
7	27	28	29	30	8	31	32	33	34

10 Technical specifications

Parameter	Value
Weight	2.5 kg
Operating temperature	0 to 55 °C

Spot diameter

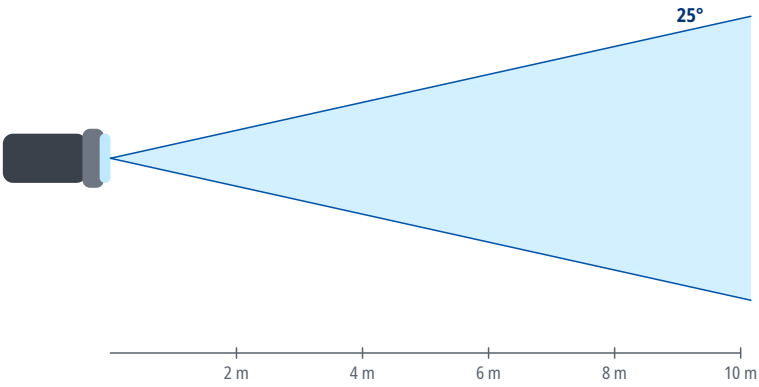

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.