DMX REFERENCE

# Ignite 180 Spot

BeamZ Pro




| | |
|---|---|
| **Manufacturer** | BeamZ Pro |
| **GDTF file** | BeamZ_Pro_Ignite_180_Spot_154328.gdtf |
| **GDTF revision** | rev100b RELEASE · 2026-08-06 |
| **Generated** | 2026-11-23 |

# Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 17 Ch 10
Mode 13 Ch 16
10 Technical specifications 17
11 Maintenance and cleaning 18
12 Troubleshooting 18
13 Disposal 19

# 1 About this manual

This document describes the Ignite180spot by BeamZ Pro. It was compiled from the GDTF file BeamZ_Pro_Ignite_180_Spot_154328.gdtf from the GDTF-Share library.

File revision: “rev100b RELEASE”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by BeamZ Pro; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

# 2 Quick reference

| Parameter | Value |
|---|---|
| Power consumption | 850 W |
| Weight | 10.2 kg |
| Ingress protection | IP20 |

### DMX modes

| Mode | Channels | Units in one universe | First start addresses |
|---|---|---|---|
| 17 Ch | 17 | 30 | 1, 18, 35, 52, ... |
| 13 Ch | 13 | 39 | 1, 14, 27, 40, ... |

### No light? Check these channels

- 17 Ch: CH 7 Shutter at 250–255 “Shutter OPEN”
- 13 Ch: CH 5 Shutter at 250–255 “Shutter OPEN”


Read the manual before use


Risk of electric shock


Do not stare into the light



Indoor use only

# 3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light



Indoor use only

**⚠ WARNING**

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

**⚠ WARNING**

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

**⚠ WARNING**

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Ingress protection rating: IP20.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

**⚠ CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

# 4 Product description

**Description in the GDTF file**

“Moving Head Hybrid LED Spot :: IP20 / 180 W LED 7000K / Color: Open + 7 / 15 degree angle / 1 x Rotating Gobowheel 6 + Open / 1x Fixed Gobowheel 8 + Open / 3-facet and 6-facet prism (overlapping)”

**Range of movement**

**Pan 540°**

top view

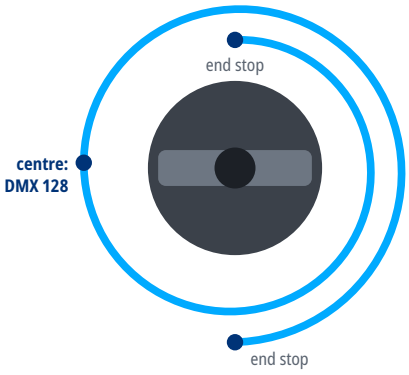


**Tilt 220°**

side view

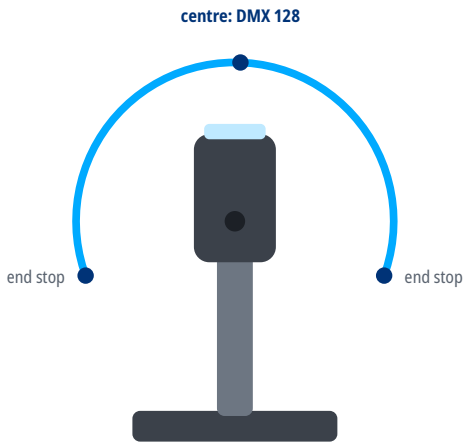

# 5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 10.2 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

# 6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

### DMX line

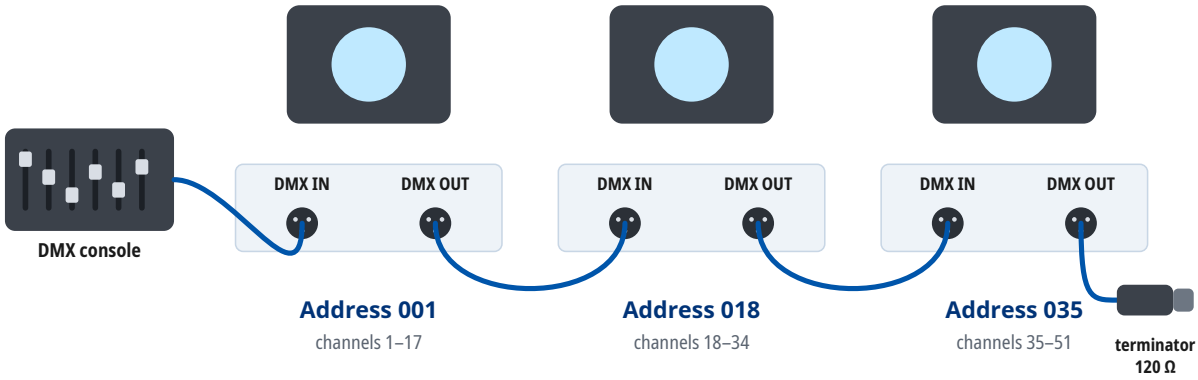


Mode 17 Ch: every unit occupies 17 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

# 7 Operation

### Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “17 Ch”: 17.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “17 Ch”, you can use, for example, the start addresses 1, 18, 35, 52.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

# 8 Functions at a glance

### Functions in each DMX mode

| | 17 Ch<br>17 channels | 13 Ch<br>13 channels |
|---|---|---|
| Pan / Tilt | **1, 3** | **1, 2** |
| Pan / Tilt resolution | 16 bit | 8 bit |
| Dimmer | **6** | **4** |
| Shutter / strobe | **7** | **5** |
| Color wheel | **8** | **6** |
| Gobo wheel | **11, 13, 14** | **8, 10** |
| Gobo rotation | **12** | **9** |
| Prism | **15, 16** | **11, 12** |
| Focus | **10** | **7** |

## Color wheel

1 
Wheel Slot 0 OPEN
**DMX 0–19**

2 
Wheel Slot 1
**DMX 20–39**

3 
Wheel Slot 2
**DMX 40–59**

4 
Wheel Slot 3
**DMX 60–79**

5 
Wheel Slot 4
**DMX 80–99**

6 
Wheel Slot 5
**DMX 100–119**

7 
Wheel Slot 6
**DMX 120–139**

8 
Wheel Slot 7
**DMX 140–160**

## Gobo wheel 1

1 
Wheel Slot 0 OPEN
**DMX 0–24**

2 
Wheel Slot 1
**DMX 25–49**

3 
Wheel Slot 2
**DMX 50–74**

4 
Wheel Slot 3
**DMX 75–99**

5 
Wheel Slot 4
**DMX 100–124**

6 
Wheel Slot 5
**DMX 125–149**

7 
Wheel Slot 6
**DMX 150–180**

## Gobo wheel 2

1 
Wheel Slot 0 OPEN
**DMX 0–19**

2 
Wheel Slot 1
**DMX 20–39**

3 
Wheel Slot 2
**DMX 40–59**

4 
Wheel Slot 3
**DMX 60–79**

5 
Wheel Slot 4
**DMX 80–99**

6 
Wheel Slot 5
**DMX 100–119**

7 
Wheel Slot 6
**DMX 120–139**

8 
Wheel Slot 7
**DMX 140–159**

9 
Wheel Slot 8
**DMX 160–180**

## Prism

1 
1 facet
Wheel Slot 0 OPEN
**DMX 0–63**

2 
3 facets
Wheel Slot 1
**DMX 64–127**

3 
6 facets
Wheel Slot 2
**DMX 128–191**

4 
9 facets
Wheel Slot 3 Dual
**DMX 192–255**

### Strobe rate

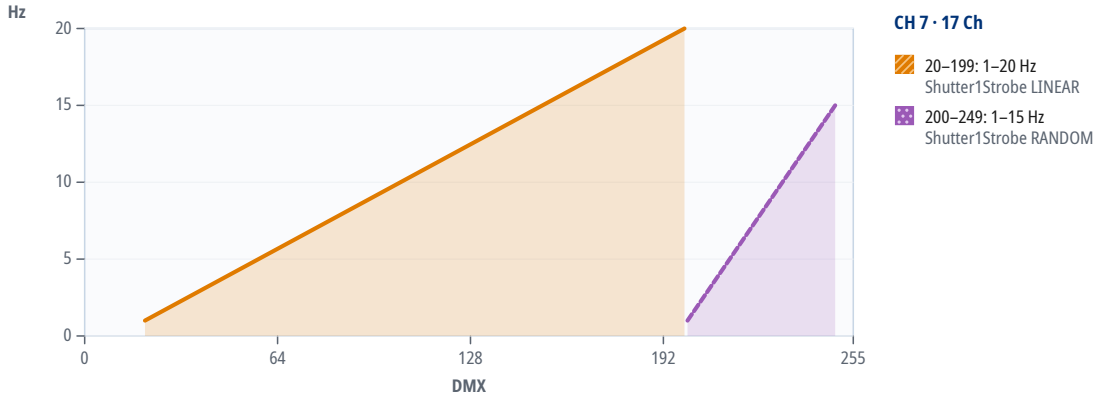


# 9 DMX channels

### Units in one DMX universe

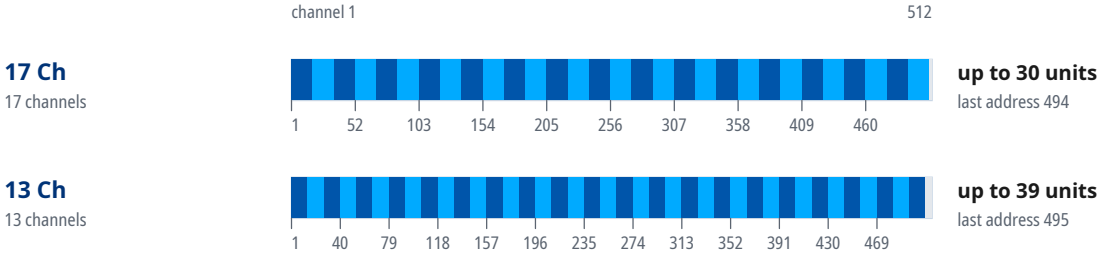


### Start addresses of 20 units in the mode “17 Ch”

| Unit | Start address | Unit | Start address | Unit | Start address | Unit | Start address |
|---|---|---|---|---|---|---|---|
| 1 | 1 | 6 | 86 | 11 | 171 | 16 | 256 |
| 2 | 18 | 7 | 103 | 12 | 188 | 17 | 273 |
| 3 | 35 | 8 | 120 | 13 | 205 | 18 | 290 |
| 4 | 52 | 9 | 137 | 14 | 222 | 19 | 307 |
| 5 | 69 | 10 | 154 | 15 | 239 | 20 | 324 |

## Mode 17 Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Shutter at 250–255 “Shutter OPEN”. The GDTF file gives these values for a console's Highlight function: CH 6 Dimmer 255, CH 7 Shutter 255, CH 8 Colors 0.

### Channel functions at a glance

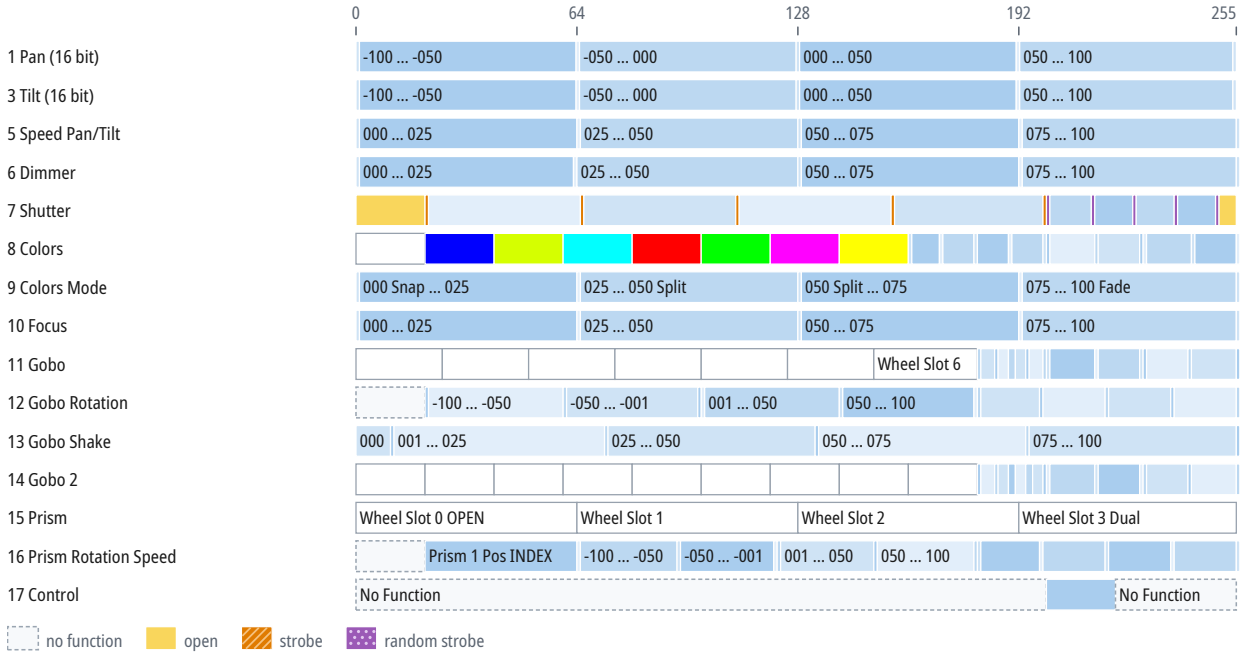


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | 0 | -100 |
| | | 1–63 | -100 … -050 |
| | | 64 | -050 |
| | | 65–127 | -050 … 000 |
| | | 128 | 000 |
| | | 129–191 | 000 … 050 |
| | | 192 | 050 |
| | | 193–254 | 050 … 100 |
| | | 255 | 100 |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | 0 | -100 |
| | | 1–63 | -100 … -050 |
| | | 64 | -050 |
| | | 65–127 | -050 … 000 |
| | | 128 | 000 |
| | | 129–191 | 000 … 050 |
| | | 192 | 050 |
| | | 193–254 | 050 … 100 |
| | | 255 | 100 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | 0 | 000 |
| | | 1–63 | 000 … 025 |
| | | 64 | 025 |
| | | 65–127 | 025 … 050 |
| | | 128 | 050 |
| | | 129–191 | 050 … 075 |
| | | 192 | 075 |
| | | 193–254 | 075 … 100 |
| | | 255 | 100 |
| **6** | Dimmer | 0 | 000 |
| | | 1–62 | 000 … 025 |
| | | 63 | 025 |
| | | 64–127 | 025 … 050 |
| | | 128 | 050 |
| | | 129–191 | 050 … 075 |
| | | 192 | 075 |
| | | 193–254 | 075 … 100 |
| | | 255 | 100 |
| **7** | Shutter | 0–19 | Shutter 1 OPEN |
| | | 20 | Shutter 1 Strobe LINEAR: 001 |
| | | 21–64 | Shutter 1 Strobe LINEAR: 001 … 025 |
| | | 65 | Shutter 1 Strobe LINEAR: 025 |
| | | 66–109 | Shutter 1 Strobe LINEAR: 025 … 050 |
| | | 110 | Shutter 1 Strobe LINEAR: 050 |
| | | 111–154 | Shutter 1 Strobe LINEAR: 050 … 075 |
| | | 155 | Shutter 1 Strobe LINEAR: 075 |
| | | 156–198 | Shutter 1 Strobe LINEAR: 075 … 100 |
| | | 199 | Shutter 1 Strobe LINEAR: 100 |
| | | 200 | Shutter 1 Strobe RANDOM: 001 |
| | | 201–212 | Shutter 1 Strobe RANDOM: 001 … 025 |
| | | 213 | Shutter 1 Strobe RANDOM: 025 |
| | | 214–224 | Shutter 1 Strobe RANDOM: 025 … 050 |
| | | 225 | Shutter 1 Strobe RANDOM: 050 |
| | | 226–236 | Shutter 1 Strobe RANDOM: 050 … 075 |
| | | 237 | Shutter 1 Strobe RANDOM: 075 |
| | | 238–248 | Shutter 1 Strobe RANDOM: 075 … 100 |
| | | 249 | Shutter 1 Strobe RANDOM: 100 |
| | | 250–255 | Shutter OPEN |
| **8** | Colors | 0–19 | Wheel Slot 0 OPEN |
| | | 20–39 | Wheel Slot 1 |
| | | 40–59 | Wheel Slot 2 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **8** | Colors (continued) | 60–79 | Wheel Slot 3 |
| | | 80–99 | Wheel Slot 4 |
| | | 100–119 | Wheel Slot 5 |
| | | 120–139 | Wheel Slot 6 |
| | | 140–159 | Wheel Slot 7 |
| | | 160 | Color 1 Wheel Snap: 001 |
| | | 161–168 | 001 … 025 |
| | | 169 | 025 |
| | | 170–178 | 025 … 050 |
| | | 179 | Color 1 Wheel Snap: 050 |
| | | 180–188 | 050 … 075 |
| | | 189 | 075 |
| | | 190–198 | 075 … 100 |
| | | 199 | Color 1 Wheel Snap: 100 |
| | | 200 | -100 |
| | | 201–213 | -100 … -050 |
| | | 214 | -050 |
| | | 215–226 | -050 … -001 |
| | | 227 | -001 |
| | | 228 | Color 1 Wheel Spin: 001 |
| | | 229–241 | 001 … 050 |
| | | 242 | Color 1 Wheel Spin: 050 |
| | | 243–254 | 050 … 100 |
| | | 255 | Color 1 Wheel Spin: 100 |
| **9** | Colors Mode | 0 | 000 Snap |
| | | 1–63 | 000 Snap … 025 |
| | | 64 | 025 |
| | | 65–127 | 025 … 050 Split |
| | | 128 | 050 Split |
| | | 129–191 | 050 Split … 075 |
| | | 192 | 075 |
| | | 193–254 | 075 … 100 Fade |
| | | 255 | 100 Fade |
| **10** | Focus | 0 | 000 |
| | | 1–63 | 000 … 025 |
| | | 64 | 025 |
| | | 65–127 | 025 … 050 |
| | | 128 | 050 |
| | | 129–191 | 050 … 075 |
| | | 192 | 075 |
| | | 193–254 | 075 … 100 |
| | | 255 | 100 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **11** | Gobo | 0–24 | Wheel Slot 0 OPEN |
| | | 25–49 | Wheel Slot 1 |
| | | 50–74 | Wheel Slot 2 |
| | | 75–99 | Wheel Slot 3 |
| | | 100–124 | Wheel Slot 4 |
| | | 125–149 | Wheel Slot 5 |
| | | 150–179 | Wheel Slot 6 |
| | | 180 | Gobo 1 Wheel Spin Step: 100 |
| | | 181–184 | 100 ... 075 |
| | | 185 | 075 |
| | | 186–188 | 075 ... 050 |
| | | 189–190 | Gobo 1 Wheel Spin Step: 050 |
| | | 191–193 | 050 ... 025 |
| | | 194 | 025 |
| | | 195–198 | 025 ... 001 |
| | | 199 | Gobo 1 Wheel Spin Step: 001 |
| | | 200 | -100 |
| | | 201–213 | -100 ... -050 |
| | | 214 | -050 |
| | | 215–226 | -050 ... -001 |
| | | 227 | -001 |
| | | 228 | Gobo 1 Wheel Spin Fade: 001 |
| | | 229–240 | 001 ... 050 |
| | | 241 | Gobo 1 Wheel Spin Fade: 050 |
| | | 242–254 | 050 ... 100 |
| | | 255 | Gobo 1 Wheel Spin Fade: 100 |
| **12** | Gobo Rotation | 0–19 | No Function |
| | | 20 | -100 |
| | | 21–59 | -100 ... -050 |
| | | 60 | -050 |
| | | 61–98 | -050 ... -001 |
| | | 99 | -001 |
| | | 100 | Gobo 1 Pos Rotate: 001 |
| | | 101–139 | 001 ... 050 |
| | | 140 | Gobo 1 Pos Rotate: 050 |
| | | 141–178 | 050 ... 100 |
| | | 179 | Gobo 1 Pos Rotate: 100 |
| | | 180 | Gobo 1 Pos Bounce: 001 |
| | | 181–197 | 001 ... 075 |
| | | 198 | 075 |
| | | 199–216 | 075 ... 050 |
| | | 217 | Gobo 1 Pos Bounce: 050 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **12** | Gobo Rotation (continued) | 218–235 | 050 ... 025 |
| | | 236 | 025 |
| | | 237–254 | 025 ... 100 |
| | | 255 | Gobo 1 Pos Bounce: 100 |
| **13** | Gobo Shake | 0–9 | 000 |
| | | 10 | 001 |
| | | 11–71 | 001 ... 025 |
| | | 72 | 025 |
| | | 73–132 | 025 ... 050 |
| | | 133 | 050 |
| | | 134–193 | 050 ... 075 |
| | | 194 | 075 |
| | | 195–254 | 075 ... 100 |
| | | 255 | 100 |
| **14** | Gobo 2 | 0–19 | Wheel Slot 0 OPEN |
| | | 20–39 | Wheel Slot 1 |
| | | 40–59 | Wheel Slot 2 |
| | | 60–79 | Wheel Slot 3 |
| | | 80–99 | Wheel Slot 4 |
| | | 100–119 | Wheel Slot 5 |
| | | 120–139 | Wheel Slot 6 |
| | | 140–159 | Wheel Slot 7 |
| | | 160–179 | Wheel Slot 8 |
| | | 180 | 100 |
| | | 181–184 | 100 ... 075 |
| | | 185 | 075 |
| | | 186–188 | 075 ... 050 |
| | | 189–190 | 050 |
| | | 191–193 | 050 ... 025 |
| | | 194–195 | 025 |
| | | 196–198 | 025 ... 001 |
| | | 199 | 001 |
| | | 200 | -100 CW |
| | | 201–213 | -100 CW ... -050 CW |
| | | 214 | -050 CW |
| | | 215–226 | -050 CW ... -001 CW |
| | | 227 | -001 CW |
| | | 228 | 001 CCW |
| | | 229–240 | 001 CCW ... 050 CCW |
| | | 241 | 050 CCW |
| | | 242–254 | 050 CCW ... 100 CCW |
| | | 255 | 100 CCW |

| CH | Function | DMX | Description |
|---|---|---|---|
| **15** | Prism | 0–63 | Wheel Slot 0 OPEN |
| | | 64–127 | Wheel Slot 1 |
| | | 128–191 | Wheel Slot 2 |
| | | 192–255 | Wheel Slot 3 Dual |
| **16** | Prism Rotation Speed | 0–19 | No Function |
| | | 20–63 | Prism 1 Pos INDEX |
| | | 64 | -100 |
| | | 65–92 | -100 … -050 |
| | | 93 | -050 |
| | | 94–120 | -050 … -001 |
| | | 121 | -001 |
| | | 122 | Prism 1 Pos ROTATE: 001 |
| | | 123–149 | 001 … 050 |
| | | 150 | Prism 1 Pos ROTATE: 050 |
| | | 151–178 | 050 … 100 |
| | | 179 | Prism 1 Pos ROTATE: 100 |
| | | 180 | Prism 1 Pos BOUNCE: 001 |
| | | 181–197 | 001 … 025 |
| | | 198 | 025 |
| | | 199–216 | 025 … 050 |
| | | 217 | Prism 1 Pos BOUNCE: 050 |
| | | 218–235 | 050 … 075 |
| | | 236 | 075 |
| | | 237–254 | 075 … 100 |
| | | 255 | Prism 1 Pos BOUNCE: 100 |
| **17** | Control | 0–199 | No Function |
| | | 200–219 | Reset: ALL |
| | | 220–255 | No Function |

## Mode 13 Ch

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Shutter at 250–255 “Shutter OPEN”. The GDTF file gives these values for a console's Highlight function: CH 4 Dimmer 255, CH 5 Shutter 255, CH 6 Colors 0.

### Channel functions at a glance

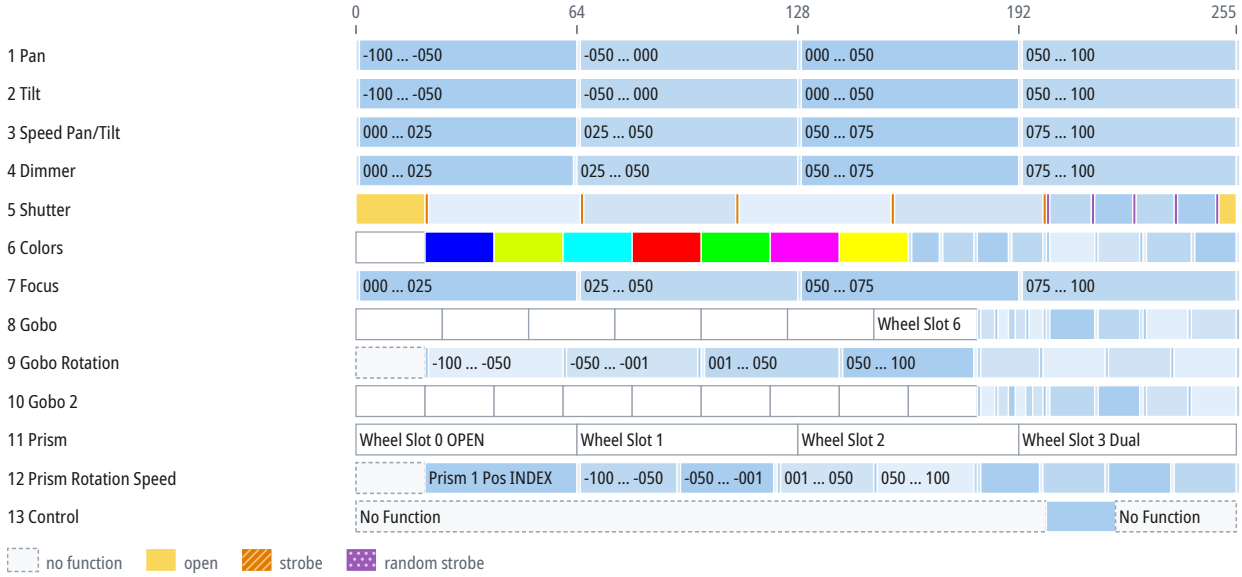


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | | Same as CH 1 in the mode “17 Ch” (p. 10) |
| **2** | Tilt | | Same as CH 3 in the mode “17 Ch” (p. 10) |
| **3** | Speed Pan/Tilt | | Same as CH 5 in the mode “17 Ch” (p. 11) |
| **4** | Dimmer | | Same as CH 6 in the mode “17 Ch” (p. 11) |
| **5** | Shutter | | Same as CH 7 in the mode “17 Ch” (p. 11) |
| **6** | Colors | | Same as CH 8 in the mode “17 Ch” (p. 11) |
| **7** | Focus | | Same as CH 10 in the mode “17 Ch” (p. 12) |
| **8** | Gobo | | Same as CH 11 in the mode “17 Ch” (p. 13) |
| **9** | Gobo Rotation | | Same as CH 12 in the mode “17 Ch” (p. 13) |
| **10** | Gobo 2 | | Same as CH 14 in the mode “17 Ch” (p. 14) |
| **11** | Prism | | Same as CH 15 in the mode “17 Ch” (p. 15) |
| **12** | Prism Rotation Speed | | Same as CH 16 in the mode “17 Ch” (p. 15) |
| **13** | Control | | Same as CH 17 in the mode “17 Ch” (p. 15) |

# 10 Technical specifications

| Parameter | Value |
|---|---|
| **Light** | |
| Light source | LED |
| LED power | 180 W |
| Luminous flux | 2,000 lm |
| Color temperature | 7,000 K |
| Color rendering index (CRI) | 85 |
| **Optics** | |
| Beam angle | 20° |
| **Movement** | |
| Pan | 540° |
| Tilt | 220° |
| **Control** | |
| DMX connection | 3-pin XLR IN/OUT |
| **Electrical** | |
| Power supply | 100–240 V, 50/60 Hz |
| Power consumption | 850 W |
| Power connectors | powerCON TRUE1 IN/OUT |
| **Dimensions and construction** | |
| Weight | 10.2 kg |
| **Operating environment** | |
| Ingress protection | IP20 |
| Meaning of the IP code (IEC 60529) | Protected against contact with a finger and solid objects of 12.5 mm diameter and larger; no protection against water |
| Operating temperature | -5 to 45 °C |

### Speeds and ranges

| Parameter | Value |
|---|---|
| Strobe frequency | 1–20 Hz |
| Color wheel rotation | up to 100 °/s (17 rpm) |
| Gobo wheel 1 rotation | up to 240 °/s (40 rpm) |
| Gobo wheel 2 rotation | up to 360 °/s (60 rpm) |
| Gobo 1 rotation | up to 360 °/s (60 rpm) |
| Prism rotation | up to 240 °/s (40 rpm) |

### Spot diameter

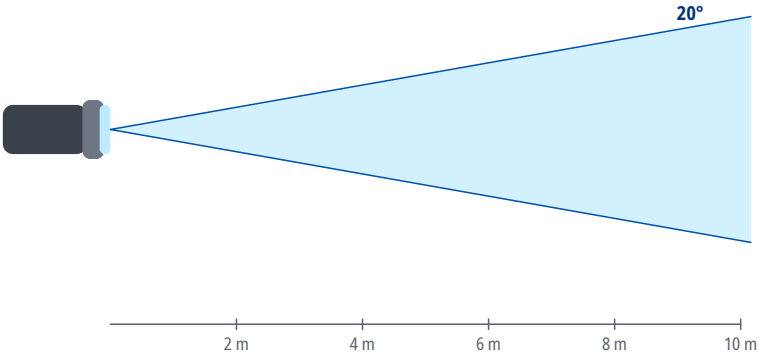


| Distance | Ø 20° |
|---|---|
| 2 m | 0.71 m |
| 4 m | 1.4 m |
| 6 m | 2.1 m |
| 8 m | 2.8 m |
| 10 m | 3.5 m |
| 15 m | 5.3 m |

Spot diameter square to the beam axis, calculated from the beam angle.

# 11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

# 12 Troubleshooting

| Problem | Remedy |
|---|---|
| The device does not switch on | Check the supply voltage, the cables and the fuse, if the device has one. |
| The device does not respond to DMX | Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe). |
| The device behaves erratically or flickers | Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter. |
| Only some devices on the line respond | Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on. |
| Devices respond to the wrong channels or affect each other | Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller. |
| The device or the connected load does not light up although it receives DMX | Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open. |
| Movement is reversed | Check whether Pan/Tilt inversion is enabled in the device menu or in the controller. |
| Moving parts do not reach the correct position after power-on or transport | Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center. |
| Movement is jerky | Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal. |

# 13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.