DMX REFERENCE

Nereid120W

BeamZ Pro

Manufacturer	BeamZ Pro
GDTF file	BeamZ_Pro_Nereid120W_134359.gdtf
GDTF revision	rev4 · 2026-03-19
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 14CH 9
10 Technical specifications 12
11 Maintenance and cleaning 13
12 Troubleshooting 13
13 Disposal 14

1 About this manual

This document describes the Nereid120W by BeamZ Pro. It was compiled from the GDTF file BeamZ_Pro_Nereid120W_134359.gdtf from the GDTF-Share library.

File revision: “rev4”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by BeamZ Pro; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	12.5 kg
Ingress protection	IP65

DMX modes

Mode	Channels	Units in one universe	First start addresses
14CH	14	36	1, 15, 29, 43, ...

No light? Check these channels

- 14CH: CH 6 Dimmer above 0; CH 7 Shutter at 0–3 or 250–255 “Open”


Read the manual before use


Risk of electric shock


Do not stare into the light

3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ CAUTION

- The device is rated IP65 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

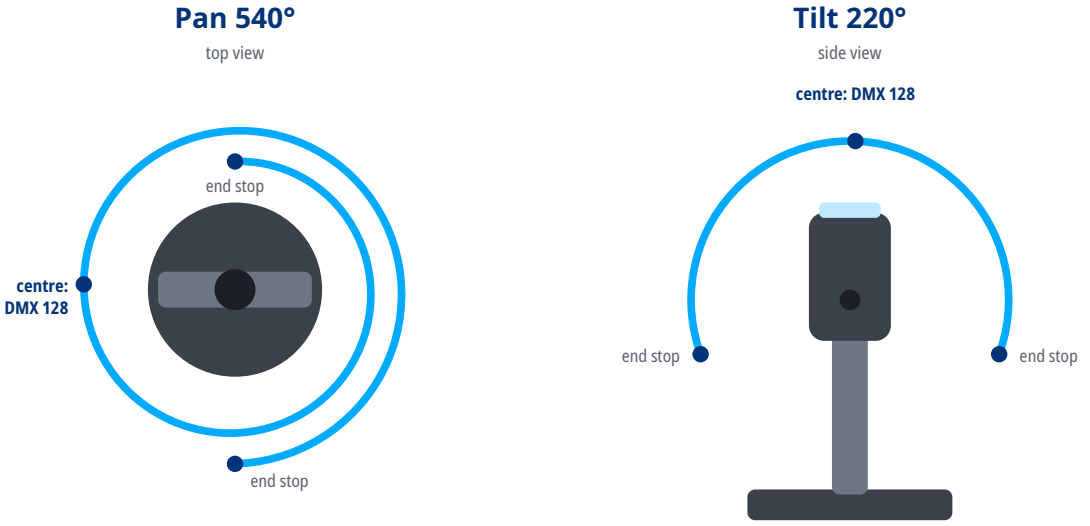

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 12.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

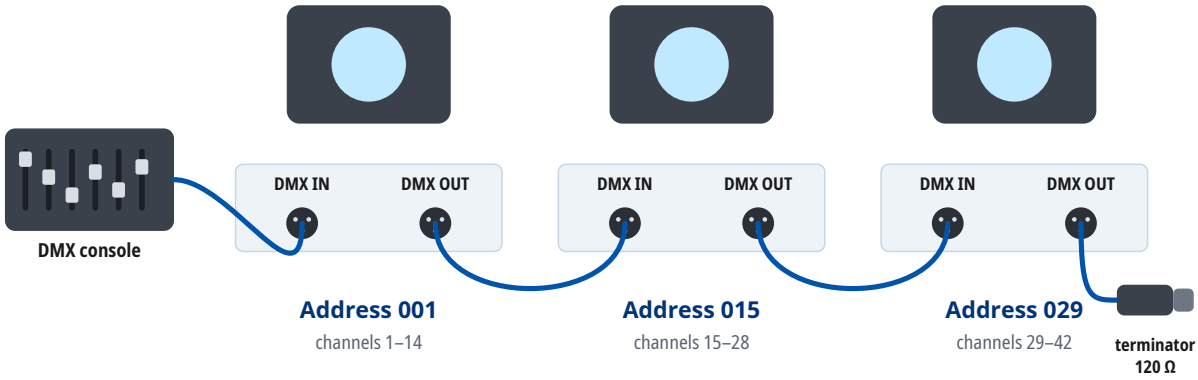

Mode 14CH: every unit occupies 14 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “14CH”: 14.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “14CH”, you can use, for example, the start addresses 1, 15, 29, 43.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	14CH 14 channels
Pan / Tilt	1, 3
Dimmer	6
Shutter / strobe	7
Color wheel	8
Gobo wheel	9
Prism	11, 12
Focus	13

Color wheel

1. White — DMX 0–6
2. Red — DMX 7–11
3. Green — DMX 12–16
4. Light Blue — DMX 17–21
5. Yellow — DMX 22–26
6. Pink — DMX 27–31
7. Green Lime — DMX 32–36
8. Dark blue — DMX 37–41
9. Light Pink — DMX 42–46
10. Orange — DMX 47–51
11. Cyan — DMX 52–56
12. CTB — DMX 57–61
13. CTB2 — DMX 62–66
14. CTO — DMX 67–71

Gobo wheel

1	Open	DMX 0–2	7	3 Dots Line	DMX 23–26
2	Iris1	DMX 3–6	8	3 Lines	DMX 27–30
3	Iris2	DMX 7–10	9	Atom	DMX 31–34
4	Triangle	DMX 11–14	10	Flower	DMX 35–38
5	Circle 4	DMX 15–18	11	Weird Flower	DMX 39–42
6	Swirl	DMX 19–22	12	Star	DMX 43–46

13	Points	DMX 47–50
14	PentaPoint	DMX 51–54
15	TriCurve	DMX 55–58
16	Dots Circle	DMX 59–62

Prism

1. Prism Off — DMX 0
2. 15 facets — Prism On

Strobe rate

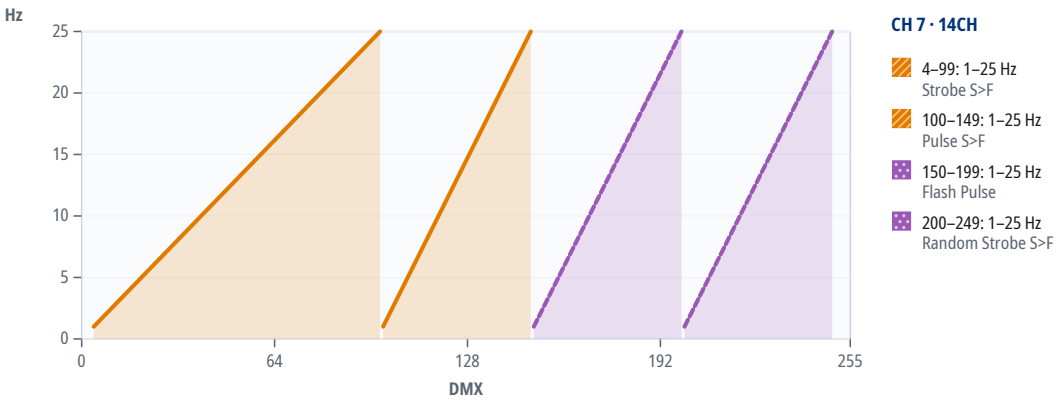

9 DMX channels

Units in one DMX universe

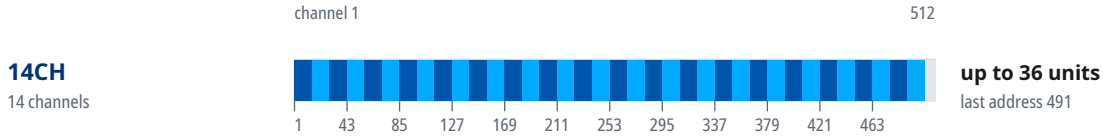

Start addresses of 20 units in the mode “14CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	71	11	141	16	211
2	15	7	85	12	155	17	225
3	29	8	99	13	169	18	239
4	43	9	113	14	183	19	253
5	57	10	127	15	197	20	267

Mode 14CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Dimmer above 0; CH 7 Shutter at 0–3 or 250–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 6 Dimmer 255, CH 7 Shutter 0, CH 8 Colors 0.

Channel functions at a glance

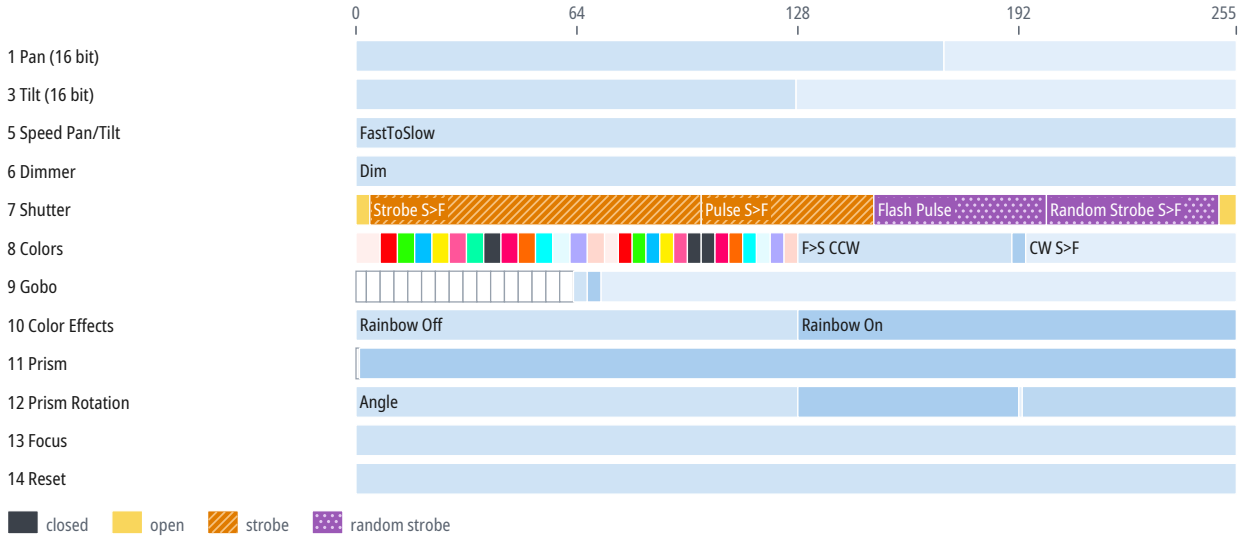

CH	Function	DMX	Description
1	Pan	0–170	Pan 1
		171	Home
		171–255	Pan 1
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Tilt 1
		128	Home

CH	Function	DMX	Description
3	Tilt (continued)	128–255	Tilt 1
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0–255	FastToSlow
6	Dimmer	0–255	Dim
7	Shutter	0–3	Open
		4–99	Strobe S>F (1–25 Hz)
		100–149	Pulse S>F (1–25 Hz)
		150–199	Flash Pulse (1–25 Hz)
		200–249	Random Strobe S>F (1–25 Hz)
		250–255	Open
8	Colors	0–6	White
		7–11	Red
		12–16	Green
		17–21	Light Blue
		22–26	Yellow
		27–31	Pink
		32–36	Green Lime
		37–41	Dark blue
		42–46	Light Pink
		47–51	Orange
		52–56	Cyan
		57–61	CTB
		62–66	CTB2
		67–71	CTO
		72–75	White/Red
		76–79	Red/Green
		80–83	Green/Light Blue
		84–87	Light Blue/Yellow
		88–91	Yellow/Pink
		92–95	Pink/Lime
		96–99	Lime/Dark Blue
		100–103	Dark Blue/Magenta
		104–107	Magenta/Orange
		108–111	Orange/Cyan
		112–115	Cyan/CTB
		116–119	CTB/CTB2
		120–123	CTB2/CTO
		124–127	CTO/White
		128–189	F>S CCW (180–1 °/s)
		190–193	Stop Rotation
		194–255	CW S>F (180–1 °/s)
9	Gobo	0–2	Open

CH	Function	DMX	Description
9	Gobo (continued)	3–6	Iris1
		7–10	Iris2
		11–14	Triangle
		15–18	Circle 4
		19–22	Swirl
		23–26	3 Dots Line
		27–30	3 Lines
		31–34	Atom
		35–38	Flower
		39–42	Weird Flower
		43–46	Star
		47–50	Points
		51–54	PentaPoint
		55–58	TriCurve
		59–62	Dots Circle
		63–66	Gobo 16
		67–70	Gobo 17
		71–255	Gobo 1 1
10	Color Effects	0–127	Rainbow Off
		128–255	Rainbow On
11	Prism	0	Prism Off
		1–255	Prism 1 1
12	Prism Rotation	0–127	Angle (360°)
		128–191	Prism 1 Pos Rotate: Fast To Slow (180–1 °/s)
		192	Prism 1 Pos Rotate: Stop
		193–255	Prism 1 Pos Rotate: Slow To Fast (1–180 °/s)
13	Focus	0–255	
14	Reset	0–255	

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	199 W
Luminous flux	20,000 lm
Color temperature	7,800 K
Color rendering index (CRI)	85
Optics	
Beam angle	2°
Movement	
Pan	540°
Tilt	220°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	12.5 kg
Operating environment	
Ingress protection	IP65
Meaning of the IP code (IEC 60529)	Dust-tight; protected against water jets
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–25 Hz
Color wheel rotation	up to 180 °/s (30 rpm)
Prism rotation	up to 180 °/s (30 rpm)

Spot diameter

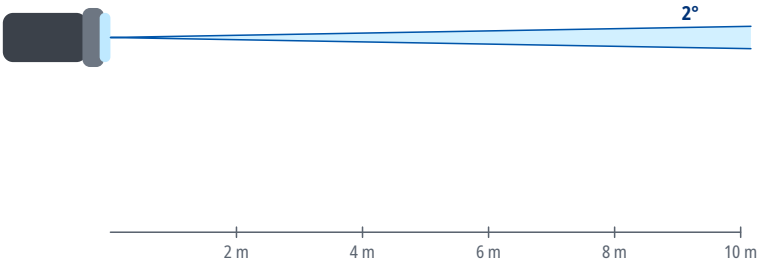

Distance	Ø 2°
2 m	0.07 m
4 m	0.14 m
6 m	0.21 m
8 m	0.28 m
10 m	0.35 m
15 m	0.52 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.