DMX REFERENCE

BT-MAGICFLASH RGB

Briteq



Manufacturer	Briteq
GDTF file	Briteq_BT-MAGICFLASH_RGB_68068.gdtf
GDTF revision	20240710_Misdat · 2024-07-10
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 1CH 9
Mode 3CH 9
Mode 4CH 9
Mode 4+CH 10
Mode 6CH 11
Mode 7CH 11
Mode 13CH 12
Mode 1Ch - Pix 14
Mode 3Ch - Pix 14
Mode 9Ch - Pix 14
9 Technical specifications 15
10 Maintenance and cleaning 15
11 Troubleshooting 16
12 Disposal 16

1 About this manual

This document describes the BT-MAGICFLASH RGB by Briteq. It was compiled from the GDTF file Briteq_BT-MAGICFLASH_RGB_68068.gdtf from the GDTF-Share library.

File revision: “20240710_Misdat”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Briteq; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	4 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
1CH	1	512	1, 2, 3, 4, ...
3CH	3	170	1, 4, 7, 10, ...
4CH	4	128	1, 5, 9, 13, ...
4+CH	4	128	1, 5, 9, 13, ...
6CH	6	85	1, 7, 13, 19, ...
7CH	7	73	1, 8, 15, 22, ...
13CH	13	39	1, 14, 27, 40, ...
1Ch - Pix	1	512	1, 2, 3, 4, ...
3Ch - Pix	3	170	1, 4, 7, 10, ...
9Ch - Pix	9	56	1, 10, 19, 28, ...



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 4 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

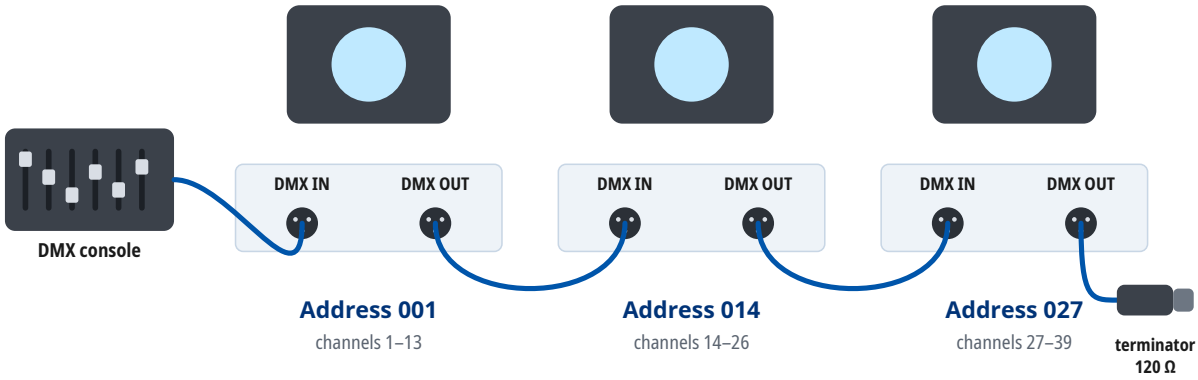

Mode 13CH: every unit occupies 13 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “13CH”: 13.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “13CH”, you can use, for example, the start addresses 1, 14, 27, 40.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	1CH 1 channel	3CH 3 channels	4CH 4 channels	4+CH 4 channels	6CH 6 channels	7CH 7 channels	13CH 13 channels	1Ch - Pix 1 channel
Dimmer		1	1	1 *	1	1 *	1 *	1
Shutter / strobe	1	2, 3	2–4	2–4	5, 6	5–7	11–13	
Color mixing					2–10	2–10	2–10	

* The function works only when another channel switches it on; see the DMX table.

LED colors and the colors they mix

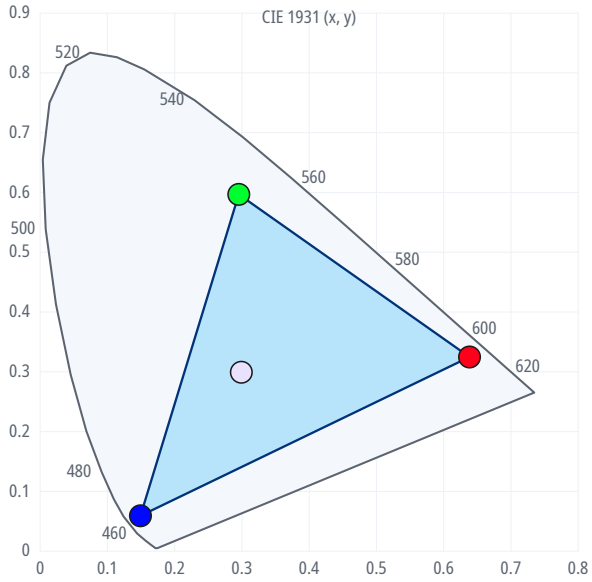

LED	x	y
Red	0.638	0.325
Green	0.295	0.597
Blue	0.149	0.059
White	0.299	0.299

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

8 DMX channels

Units in one DMX universe

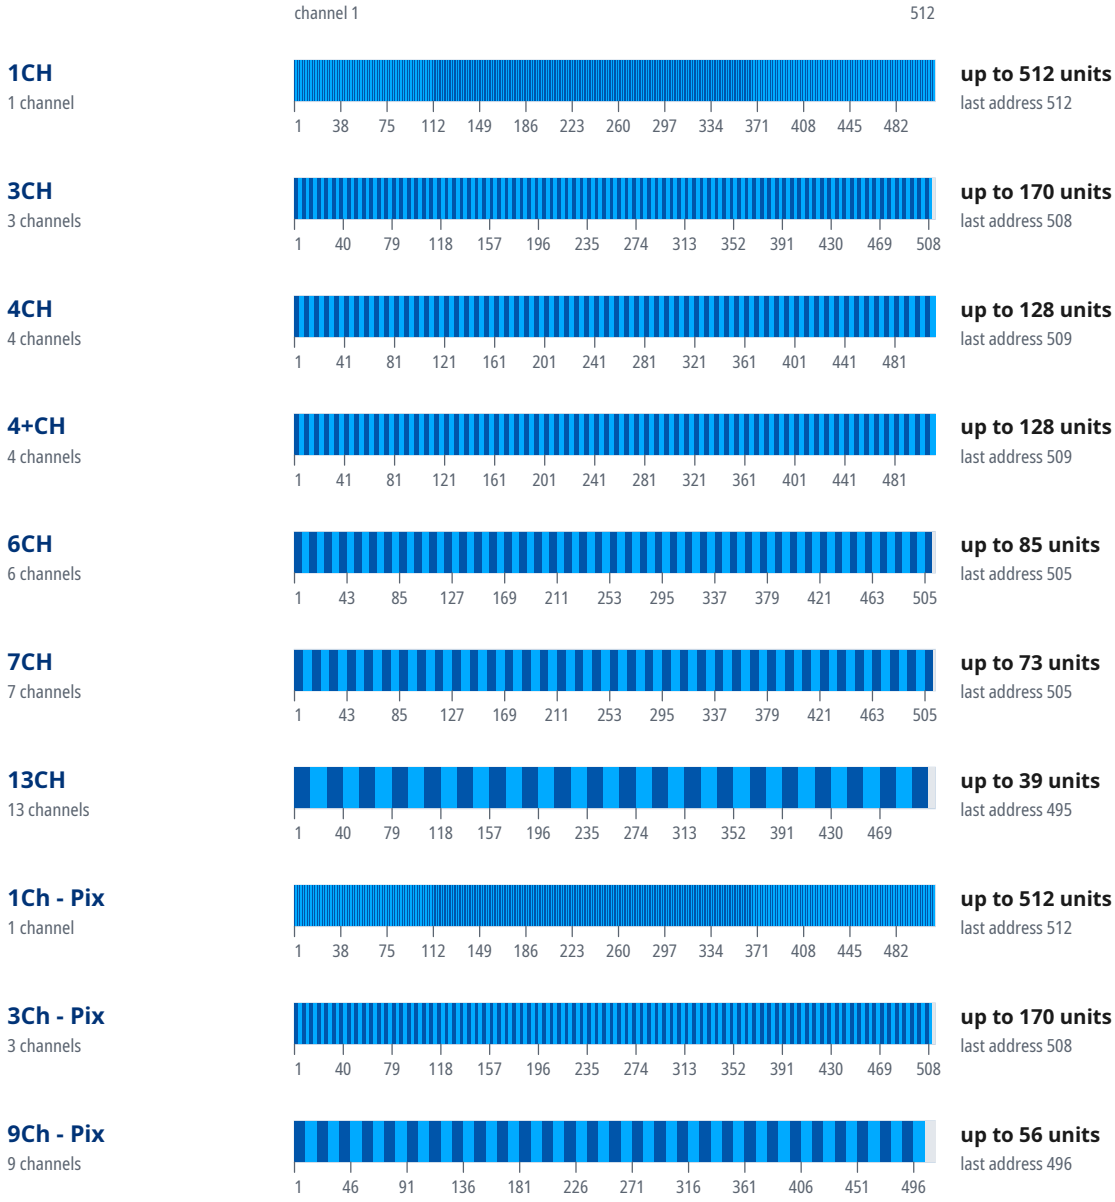

Start addresses of 20 units in the mode “13CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	66	11	131	16	196
2	14	7	79	12	144	17	209
3	27	8	92	13	157	18	222
4	40	9	105	14	170	19	235
5	53	10	118	15	183	20	248

Mode 1CH

CH	Function	DMX	Description
1	Shutter	0–5	Blackout
		6	Min strobe
		7–246	Min strobe ... Max strobe
		247	Max strobe
		248–255	Blinder

Mode 3CH

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Strobe Speed at 0–5 “No strobe”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

CH	Function	DMX	Description
1	Dimmer	0–5	BO
		6	Min
		7–254	Min ... Max
		255	Max
2	Strobe Duration	0	Min
		1–254	Min ... max
		255	Max
3	Strobe Speed	0–5	No strobe
		6	Min strobe
		7–254	Min strobe ... Max strobe
		255	Max strobe

Mode 4CH

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Strobe Speed at 0–5 “No strobe”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “3CH” (p. 9)
2	Strobe Duration	0	Min
		1–254	Min ... Max
		255	Max
3	Strobe Speed		Same as CH 3 in the mode “3CH” (p. 9)
4	Strobe Effect	0–5	Strobe
		6	Ramp up: Min
		7–41	Ramp up: Min ... Max
		42	Ramp up: Max
		43	Ramp down: Min
		44–84	Ramp down: Min ... Max
		85	Ramp down: Max
		86	Ramp up-down: Min
		87–127	Ramp up-down: Min ... Max

CH	Function	DMX	Description
4	Strobe Effect (continued)	128	Ramp up-down: Max
		129	Random effect: Min
		130–170	Random effect: Min ... Max
		171	Random effect: Max
		172	Lightning Effect: Min
		173–213	Lightning Effect: Min ... Max
		214	Lightning Effect: Max
		215–255	Spike

Mode 4+CH

If the device receives DMX in this mode but gives no light, check these channels: CH 4 Strobe Effect at 0–5 “No effect”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

CH	Function	DMX	Description
1	Dimmer		When CH 4 is 0–5:
		0–5	BO
		6	Min
		7–254	Min ... Max
		255	Max
2	Strobe Duration		When CH 4 is 0–5:
		0–255	
3	Strobe Speed		When CH 4 is 0–5:
		0–5	No strobe
		6	Min strobe
		7–254	Strobe <>
		255	Max strobe
4	Strobe Effect	0–5	No effect
		6	Color FX: Min
		7–40	Color FX: Min ... Max
		41	Color FX: Max
		42	Color FX: Min
		43–82	Color FX: Min ... Max
		83	Color FX: Max
		84	Color FX: Min
		85–124	Color FX: Min ... Max
		125	Color FX: Max
		126	Color FX: Min
		127–166	Color FX: Min ... Max
		167	Color FX: Max
		168	Color FX: Min
		169–208	Color FX: Min ... Max
		209	Color FX: Max

CH	Function	DMX	Description
4	Strobe Effect (continued)	210	Color FX: Min
		211–254	Color FX: Min ... Max
		255	Color FX: Max

Mode 6CH

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Strobe Speed at 0–5 “No strobe”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 0.

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “3CH” (p. 9)
2	Red	0	Min
		1–254	Min ... Max
		255	Max
3	Green	0	Min
		1–254	Min ... Max
		255	Max
4	Blue	0	Min
		1–254	Min ... Max
		255	Max
5	Strobe Duration		Same as CH 2 in the mode “4CH” (p. 9)
6	Strobe Speed	0–5	No strobe
		6	Min strobe
		7–254	Strobe <>
		255	Max strobe

Mode 7CH

The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255.

CH	Function	DMX	Description
1	Dimmer		When CH 7 is 0–5:
		0–5	BO
		6	Min
		7–254	Min ... Max
		255	Max
2	Red		When CH 7 is 0–5:
		0	Min
		1–254	Min ... Max
		255	Max
3	Green		Same as CH 3 in the mode “6CH” (p. 11)
4	Blue		Same as CH 4 in the mode “6CH” (p. 11)
5	Strobe Duration		When CH 7 is 0–5:
		0	Min

CH	Function	DMX	Description
5	Strobe Duration (continued)	1–254	Min ... Max
		255	Max
6	Strobe Speed		When CH 7 is 0–5:
		0–5	No strobe
		6	Min strobe
		7–254	Strobe <>
		255	Max strobe
7	Strobe Effect	0–5	Strobe
		6	Color FX: Min
		7–40	Color FX: Min ... Max
		41	Color FX: Max
		42	Color FX: Min
		43–82	Color FX: Min ... Max
		83	Color FX: Max
		84	Color FX: Min
		85–124	Color FX: Min ... Max
		125	Color FX: Max
		126	Color FX: Min
		127–166	Color FX: Min ... Max
		167	Color FX: Max
		168	Color FX: Min
		169–208	Color FX: Min ... Max
		209	Color FX: Max
		210	Color FX: Min
		211–254	Color FX: Min ... Max
		255	Color FX: Max

Mode 13CH

If the device receives DMX in this mode but gives no light, check these channels: CH 13 Strobe Effect at 0–5 “No effect”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 1 255, CH 5 Red 2 255, CH 8 Red 3 255.

CH	Function	DMX	Description
1	Dimmer		When CH 13 is 0–5:
		0–5	BO
		6	Min
		7–254	Min ... Max
		255	Max
2	Red 1		When CH 13 is 0–5:
		0	Min
		1–254	Min ... Max
		255	Max
3	Green 1	0	Min

CH	Function	DMX	Description
3	Green 1 (continued)	1–254	Min … Max
		255	Max
4	Blue 1	0	Min
		1–254	Min … Max
		255	Max
5	Red 2		When CH 13 is 0–5:
		0	Min
		1–254	Min … Max
		255	Max
6	Green 2	0	Min
		1–254	Min … Max
		255	Max
7	Blue 2	0	Min
		1–254	Min … Max
		255	Max
8	Red 3		When CH 13 is 0–5:
		0	Min
		1–254	Min … Max
		255	Max
9	Green 3	0	Min
		1–254	Min … Max
		255	Max
10	Blue 3	0	Min
		1–254	Min … Max
		255	Max
11	Strobe Duration		When CH 13 is 0–5:
		0	Min
		1–254	Min … Max
		255	Max
12	Strobe Speed		When CH 13 is 0–5:
		0–5	No strobe
		6	Min strobe
		7–254	Strobe <>
		255	Max strobe
13	Strobe Effect	0–5	No effect
		6	Pixel FX: Min
		7–40	Pixel FX: Min … Max
		41	Pixel FX: Max
		42	Pixel FX: Min
		43–82	Pixel FX: Min … Max
		83	Pixel FX: Max

CH	Function	DMX	Description
13	Strobe Effect (continued)	84	Pixel FX: Min
		85–124	Pixel FX: Min ... Max
		125	Pixel FX: Max
		126	Pixel FX: Min
		127–166	Pixel FX: Min ... Max
		167	Pixel FX: Max
		168	Pixel FX: Min
		169–208	Pixel FX: Min ... Max
		209	Pixel FX: Max
		210	Pixel FX: Min
		211–254	Pixel FX: Min ... Max
		255	Pixel FX: Max

Mode 1Ch - Pix

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 5. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

CH	Function	DMX	Description
1	Dimmer	0–5	Closed
		6–254	Closed ... Open
		255	Open

Mode 3Ch - Pix

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255.

CH	Function	DMX	Description
1	Red	0	Closed
		1–254	Closed ... Open
		255	Open
2	Green		Same as CH 3 in the mode “6CH” (p. 11)
3	Blue		Same as CH 4 in the mode “6CH” (p. 11)

Mode 9Ch - Pix

The GDTF file gives these values for a console's Highlight function: CH 1 Red 1 255, CH 4 Red 2 255, CH 7 Red 3 255.

CH	Function	DMX	Description
1	Red 1	0	Closed
		1–254	Closed ... Open
		255	Open
2	Green 1		Same as CH 3 in the mode “13CH” (p. 12)
3	Blue 1		Same as CH 4 in the mode “13CH” (p. 13)
4	Red 2	0	Closed
		1–254	Closed ... Open

CH	Function	DMX	Description
4	Red 2 (continued)	255	Open
5	Green 2		Same as CH 6 in the mode “13CH” (p. 13)
6	Blue 2		Same as CH 7 in the mode “13CH” (p. 13)
7	Red 3	0	Closed
		1–254	Closed ... Open
		255	Open
8	Green 3		Same as CH 9 in the mode “13CH” (p. 13)
9	Blue 3		Same as CH 10 in the mode “13CH” (p. 13)

9 Technical specifications

Parameter	Value
Light source	discharge lamp
Weight	4 kg
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0.25–30 Hz

Spot diameter

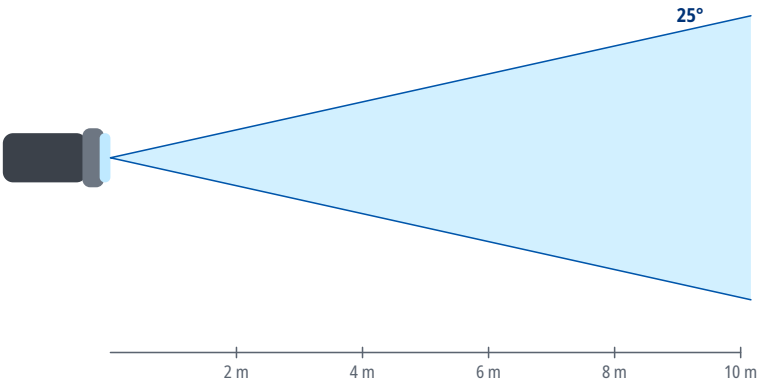

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.