DMX REFERENCE

BT-TVPANEL TW

BT-TVpanel

Briteq



Manufacturer	Briteq
GDTF file	Briteq_BT-TVPANEL_TW_57966.gdtf
GDTF revision	20240220 · 2024-02-20
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 8
Mode 8Bit CCT 8
Mode 16Bit CCT 9
Mode 16Bit CCT control 10
Mode 16Bit+Str 11
Mode 16Bit Full 12
10 Technical specifications 13
11 Maintenance and cleaning 13
12 Troubleshooting 13
13 Disposal 14

1 About this manual

This document describes the BT-TVpanel by Briteq. It was compiled from the GDTF file Briteq_BT-TVPANEL_TW_57966.gdtf from the GDTF-Share library.

File revision: “20240220”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Briteq; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	9 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
8Bit CCT	2	256	1, 3, 5, 7, ...
16Bit CCT	3	170	1, 4, 7, 10, ...
16Bit CCT control	4	128	1, 5, 9, 13, ...
16Bit+Str	5	102	1, 6, 11, 16, ...
16Bit Full	7	73	1, 8, 15, 22, ...

No light? Check these channels

- 8Bit CCT: CH 1 Dimmer above 0
- 16Bit CCT: CH 1 Dimmer above 0
- 16Bit CCT control: CH 1 Dimmer above 0
- 16Bit+Str: CH 1 Dimmer above 0; CH 4 Shutter at 0–5 “Open”
- 16Bit Full: CH 1 Dimmer above 0; CH 6 Shutter at 0–5 “Open”



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“Professional soft-light for TV-studio and outdoor applications (only under dry conditions). Compact but powerful output: 640 CW / WW LEDs with 260W total power. Tunable white 3000K → 5600K with precise CCT-presets. Excellent photometric specifications: Ra> 98, TLCI > 99, ...”

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 9 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

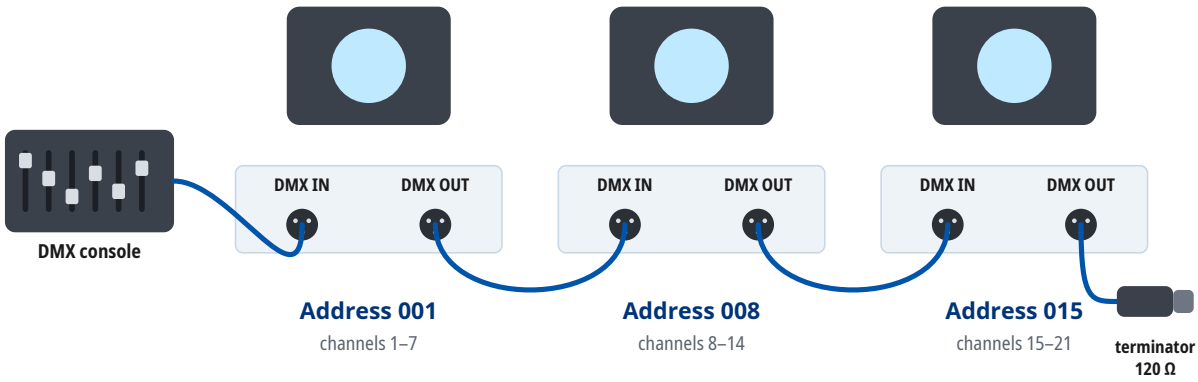

Mode 16Bit Full: every unit occupies 7 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “16Bit Full”: 7.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “16Bit Full”, you can use, for example, the start addresses 1, 8, 15, 22.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	8Bit CCT 2 channels	16Bit CCT 3 channels	16Bit CCT control 4 channels	16Bit+Str 5 channels	16Bit Full 7 channels
Pan / Tilt	✓	✓	✓	✓	✓
Dimmer	1	1	1	1	1
Dimmer resolution	8 bit	16 bit	16 bit	16 bit	16 bit
Shutter / strobe				4	6
Color mixing					4, 5
Color wheel	2	3	3	3	3

Color wheel

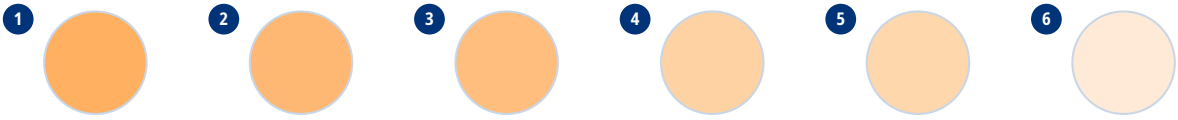

LED colors

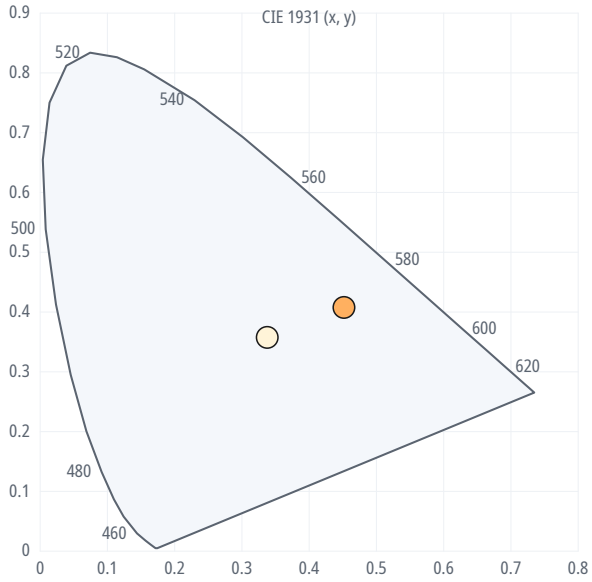

LED	x	y
Cold White	0.338	0.358
Warm White	0.452	0.408

The dots are the LED colors the GDTF file states.

Spectra of the light sources

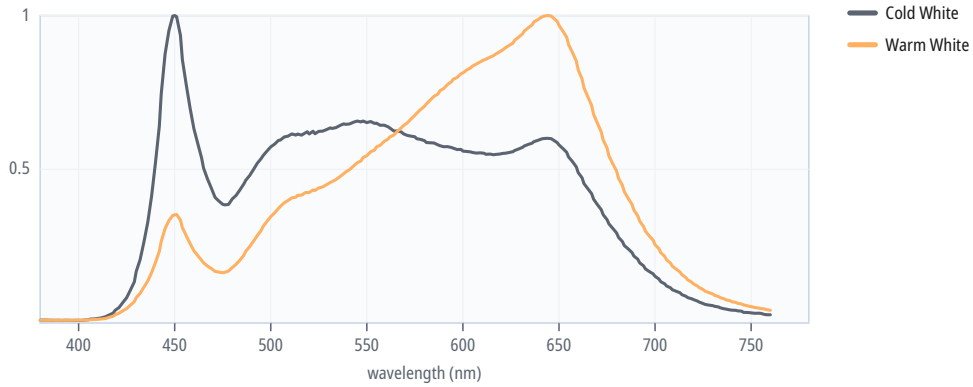

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

Strobe rate

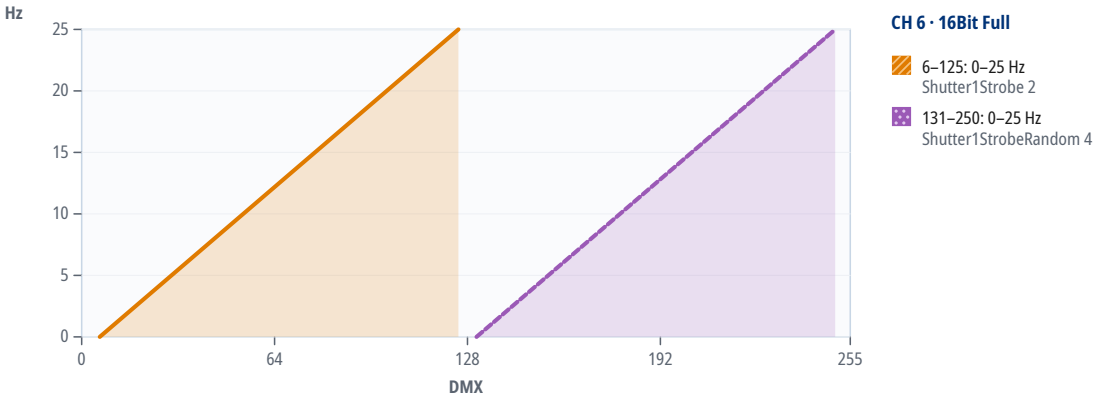

9 DMX channels

Units in one DMX universe

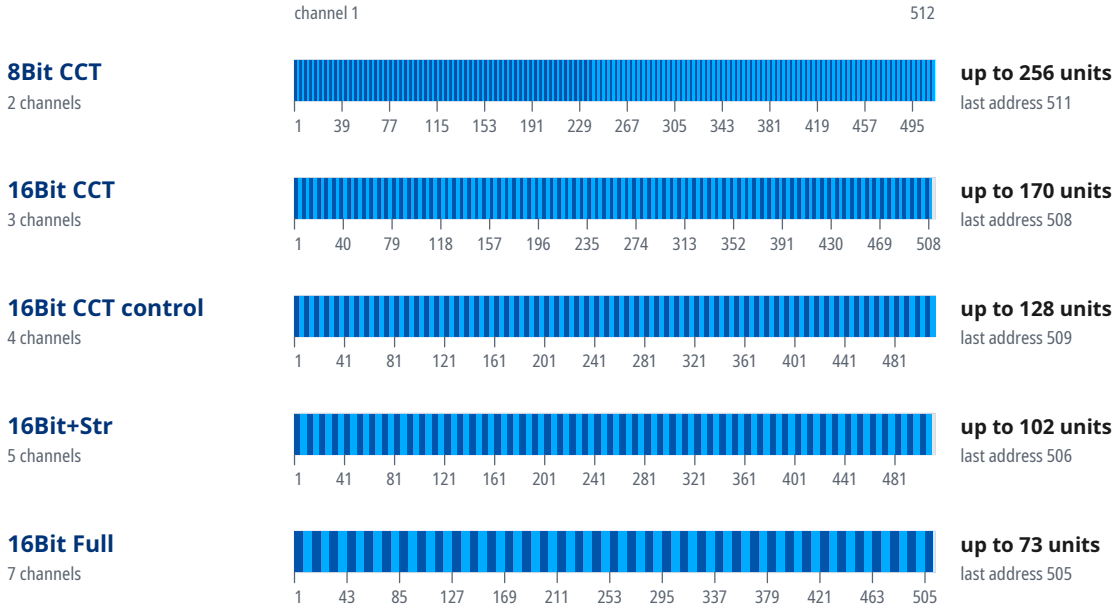

Start addresses of 20 units in the mode “16Bit Full”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	36	11	71	16	106
2	8	7	43	12	78	17	113
3	15	8	50	13	85	18	120
4	22	9	57	14	92	19	127
5	29	10	64	15	99	20	134

Mode 8Bit CCT

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

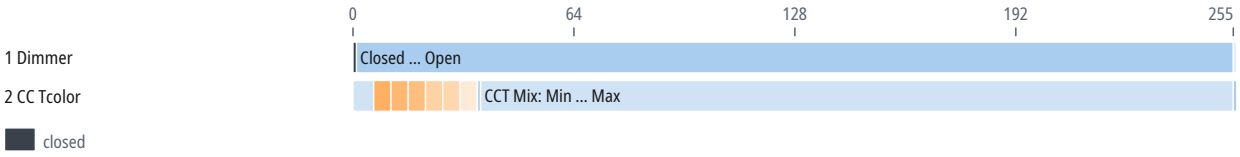

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	CC Tcolor	0–5	CCT disabled
		6–10	2800K
		11–15	3000K

CH	Function	DMX	Description
2	CC Tcolor (continued)	16–20	3200K
		21–25	4000K
		26–30	4300K
		31–35	5600K
		36	CCT Mix: Min
		37–254	CCT Mix: Min … Max
		255	CCT Mix: Max

Mode 16Bit CCT

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

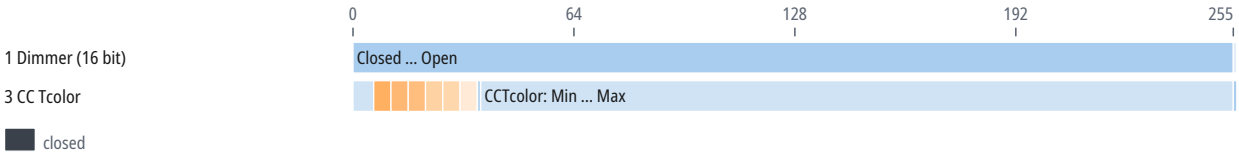

CH	Function	DMX	Description
1	Dimmer	0–255	Closed … Open
		255	Open
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	CC Tcolor	0–5	CCT disabled
		6–10	2800K
		11–15	3000K
		16–20	3200K
		21–25	4000K
		26–30	4300K
		31–35	5600K
		36	CCTcolor: Min
		37–254	CCTcolor: Min … Max
		255	CCTcolor: Max

Mode 16Bit CCT control

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

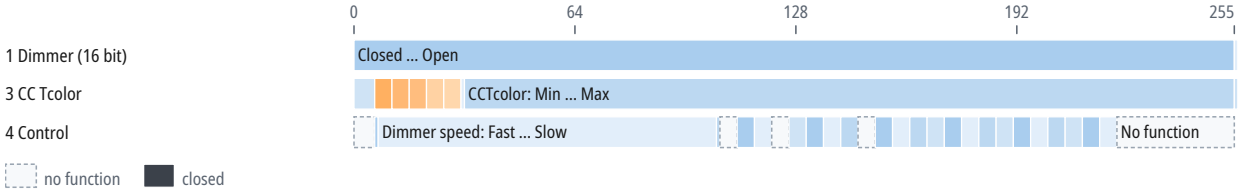

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “16Bit CCT” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	CC Tcolor	0–5	CCT disabled
		6–10	3000K
		11–15	3200K
		16–20	4000K
		21–25	4300K
		26–30	5600K
		31	CCTcolor: Min
		32–254	CCTcolor: Min ... Max
		255	CCTcolor: Max
4	Control	0–5	No Function
		6	Dimmer speed: Fast
		7–104	Dimmer speed: Fast ... Slow
		105	Dimmer speed: Slow
		106–110	No function
		111–115	Silent mode
		116–120	Auto Mode
		121–125	No function
		126–130	Linear Curve
		131–135	Square Curve
		136–140	Inv Square Curve
		141–145	S-Curve
		146–150	No function
		151–155	900Hz
		156–160	1000Hz
		161–165	1100Hz
		166–170	1200Hz
		171–175	1300Hz
		176–180	1400Hz

CH	Function	DMX	Description
4	Control (continued)	181–185	1500Hz
		186–190	2500Hz
		191–195	4000Hz
		196–200	5000Hz
		201–205	10000Hz
		206–210	15000Hz
		211–215	20000Hz
		216–220	25000Hz
		221–255	No function

Mode 16Bit+Str

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 4 Shutter at 0–5 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

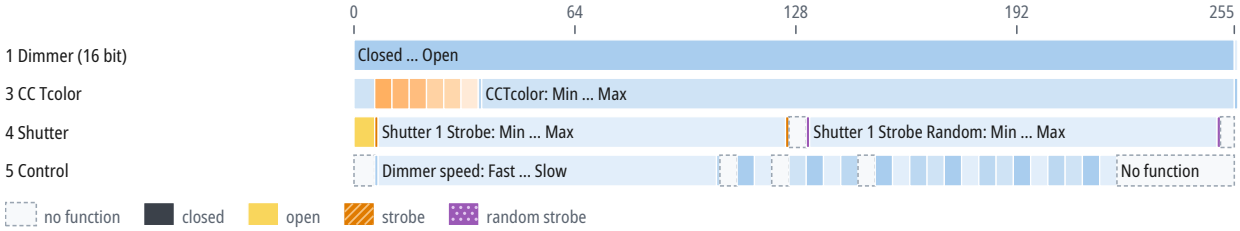

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “16Bit CCT” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	CC Tcolor		Same as CH 3 in the mode “16Bit CCT” (p. 9)
4	Shutter	0–5	Shutter: Open
		6	Shutter 1 Strobe: Min
		7–124	Shutter 1 Strobe: Min ... Max
		125	Shutter 1 Strobe: Max
		126–130	Shutter 1
		131	Shutter 1 Strobe Random: Min
		132–249	Shutter 1 Strobe Random: Min ... Max
		250	Shutter 1 Strobe Random: Max
		251–255	Shutter 2
5	Control		Same as CH 4 in the mode “16Bit CCT control” (p. 10)

Mode 16Bit Full

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 6 Shutter at 0–5 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

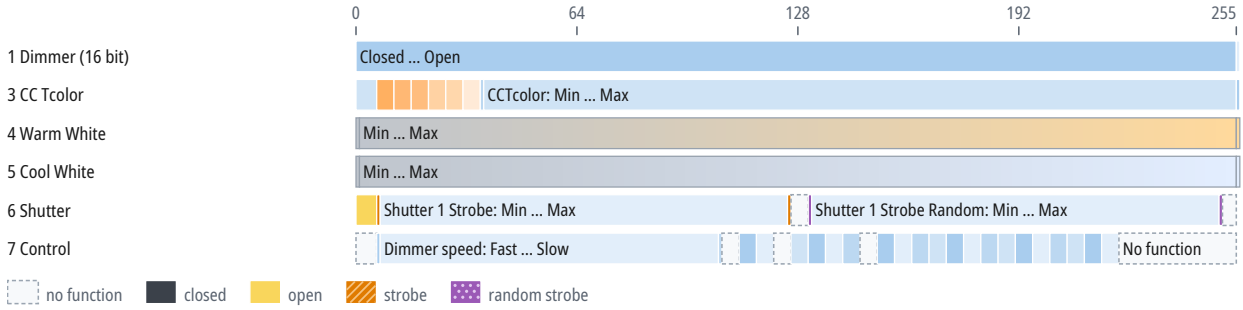

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “16Bit CCT” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	CC Tcolor		Same as CH 3 in the mode “16Bit CCT” (p. 9)
4	Warm White	0	Min
		1–254	Min ... Max
		255	Max
5	Cool White	0	Min
		1–254	Min ... Max
		255	Max
6	Shutter		Same as CH 4 in the mode “16Bit+Str” (p. 11)
7	Control		Same as CH 4 in the mode “16Bit CCT control” (p. 10)

10 Technical specifications

Parameter	Value
Light source	LED
Luminous flux	10,000 lm
RDM	yes (manufacturer ID 0x2122, device model ID 0x0040)
Weight	9 kg
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0–25 Hz
LED frequency	900–25000 Hz

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.