DMX REFERENCE

# UV P40 IP

CKC Lighting



| | |
|---|---|
| **Manufacturer** | CKC Lighting |
| **GDTF file** | CKC_Lighting_UV_P40_IP_114781.gdtf |
| **GDTF revision** | Revision 1 · 2025-10-23 |
| **Generated** | 2026-11-23 |

# Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 7
Mode 6CH 8
Mode 3CH 10
Mode 2CH 10
Mode 1CH 10
9 Technical specifications 11
10 Maintenance and cleaning 11
11 Troubleshooting 12
12 Disposal 12

# 1 About this manual

This document describes the UV P40 IP by CKC Lighting. It was compiled from the GDTF file CKC_Lighting_UV_P40_IP_114781.gdtf from the GDTF-Share library.

File revision: “Revision 1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by CKC Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

# 2 Quick reference

| Parameter | Value |
|---|---|
| Power consumption | 28 W |

### DMX modes

| Mode | Channels | Units in one universe | First start addresses |
|---|---|---|---|
| 6CH | 6 | 85 | 1, 7, 13, 19, ... |
| 3CH | 3 | 170 | 1, 4, 7, 10, ... |
| 2CH | 2 | 256 | 1, 3, 5, 7, ... |
| 1CH | 1 | 512 | 1, 2, 3, 4, ... |

### No light? Check these channels

- 6CH: CH 1 Shutter at 32–63 “Shutter Open”
- 3CH: CH 1 Shutter at 32–63 “Shutter Open”


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

# 3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

**⚠ WARNING**

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

**⚠ WARNING**

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

**⚠ WARNING**

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

**⚠ CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

**⚠ WARNING**

- This device emits ultraviolet (UV) radiation, which can harm the eyes and skin.
- Do not look directly into the light source and avoid prolonged exposure of the eyes and skin at close range. Install the device so that people are not exposed at close range.
- People with increased sensitivity to light, including those taking medication that increases this sensitivity, should avoid UV exposure.

**⚠ CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

# 4 Installation

**⚠ WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

# 5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

### DMX line

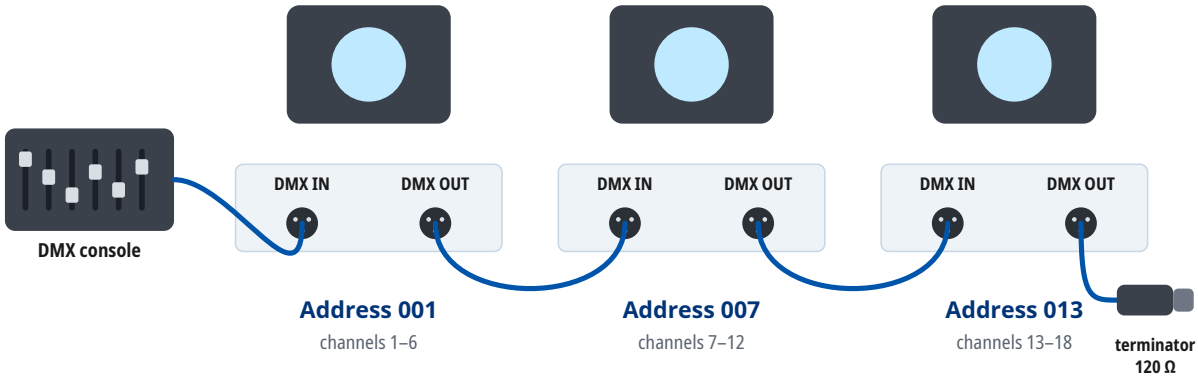


Mode 6CH: every unit occupies 6 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

# 6 Operation

### Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “6CH”: 6.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “6CH”, you can use, for example, the start addresses 1, 7, 13, 19.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

# 7 Functions at a glance

### Functions in each DMX mode

| | 6CH<br>6 channels | 3CH<br>3 channels | 2CH<br>2 channels | 1CH<br>1 channel |
|---|---|---|---|---|
| Dimmer | 2 | 2 | 1 | 1 |
| Dimmer resolution | 16 bit | 16 bit | 16 bit | 8 bit |
| Shutter / strobe | 1 | 1 | | |

### Strobe rate

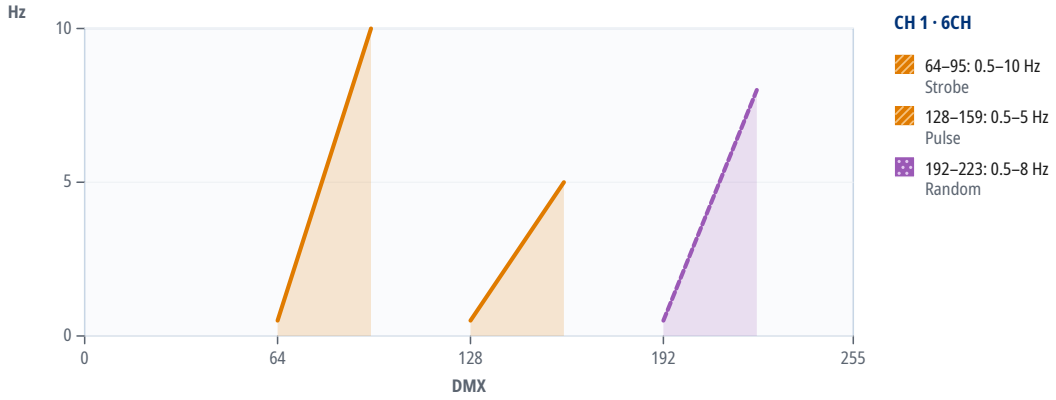


# 8 DMX channels

### Units in one DMX universe

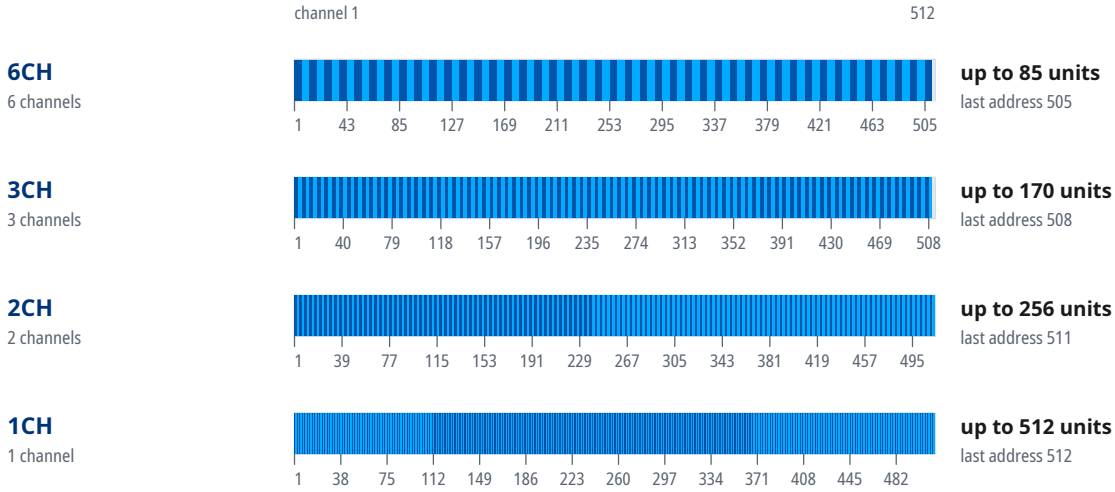


### Start addresses of 20 units in the mode “6CH”

| Unit | Start address | Unit | Start address | Unit | Start address | Unit | Start address |
|---|---|---|---|---|---|---|---|
| 1 | 1 | 6 | 31 | 11 | 61 | 16 | 91 |
| 2 | 7 | 7 | 37 | 12 | 67 | 17 | 97 |
| 3 | 13 | 8 | 43 | 13 | 73 | 18 | 103 |
| 4 | 19 | 9 | 49 | 14 | 79 | 19 | 109 |
| 5 | 25 | 10 | 55 | 15 | 85 | 20 | 115 |

## Mode 6CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 32–63 “Shutter Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 50, CH 2 Dimmer 255.

### Channel functions at a glance

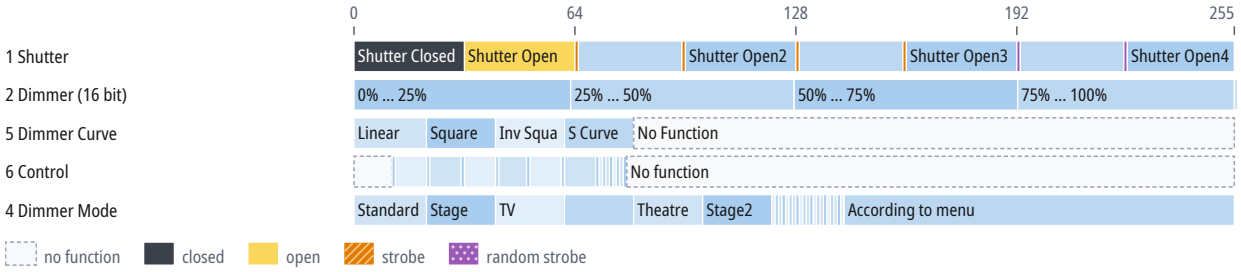


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Shutter | 0–31 | Shutter Closed |
| | | 32–63 | Shutter Open |
| | | 64 | Min strobe |
| | | 65–94 | Min strobe ... Max strobe |
| | | 95 | Max strobe |
| | | 96–127 | Shutter Open2 |
| | | 128 | Min Pulse |
| | | 129–158 | Min Pulse ... Max Pulse |
| | | 159 | Max Pulse |
| | | 160–191 | Shutter Open3 |
| | | 192 | Min Random |
| | | 193–222 | Min Random ... Max Random |
| | | 223 | Max Random |
| | | 224–255 | Shutter Open4 |
| **2** | Dimmer | 0–62 | 0% ... 25% |
| | | 63–127 | 25% ... 50% |
| | | 128–192 | 50% ... 75% |
| | | 193–255 | 75% ... 100% |
| | | 255 | 100% |
| **3** | Dimmer Fine | 0–255 | Fine adjustment of CH 2 |
| **4** | Dimmer Mode | 0–20 | Standard |
| | | 21–40 | Stage |
| | | 41–60 | TV |
| | | 61–80 | Architectural |
| | | 81–100 | Theatre |
| | | 101–120 | Stage2 |
| | | 121 | 0s |
| | | 122 | 0*1s |

| CH | Function | DMX | Description |
|---|---|---|---|
| **4** | Dimmer Mode (continued) | 123 | 0*2s |
| | | 124 | 0*3s |
| | | 125 | 0*4s |
| | | 126 | 0*5s |
| | | 127 | 0*6s |
| | | 128 | 0*7s |
| | | 129 | 0*8s |
| | | 130 | 0*9s |
| | | 131 | 1s |
| | | 132 | 1*5s |
| | | 133–141 | 2...10s |
| | | 142–255 | According to menu |
| **5** | Dimmer Curve | 0–20 | Linear |
| | | 21–40 | Square |
| | | 41–60 | Inv Squa |
| | | 61–80 | S Curve |
| | | 81–255 | No Function |
| **6** | Control | 0–10 | No function |
| | | 11 | 900 Hz |
| | | 12–20 | 900 Hz ... 1000 Hz |
| | | 21 | 1000 Hz |
| | | 22–30 | 1000 Hz ... 1100 Hz |
| | | 31 | 1100 Hz |
| | | 32–40 | 1100 Hz ... 1210 Hz |
| | | 41 | 1210 Hz |
| | | 42–49 | 1210 Hz ... 1300 Hz |
| | | 50 | 1300 Hz |
| | | 51–59 | 1300 Hz ... 1400 Hz |
| | | 60 | 1400 Hz |
| | | 61–69 | 1400 Hz ... 1500 Hz |
| | | 70 | 1500 Hz |
| | | 71 | 2500 Hz |
| | | 72 | 4000 Hz |
| | | 73 | 5000 Hz |
| | | 74 | 6000 Hz |
| | | 75 | 10000 Hz |
| | | 76 | 15000 Hz |
| | | 77 | 20000 Hz |
| | | 78 | 25000 Hz |
| | | 79–255 | No function |

## Mode 3CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 32–63 “Shutter Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 50, CH 2 Dimmer 255.

### Channel functions at a glance

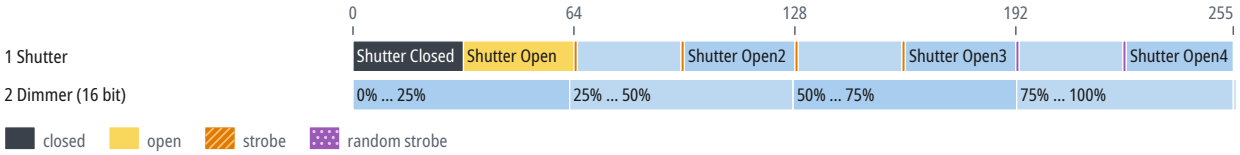


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Shutter | | Same as CH 1 in the mode “6CH” (p. 8) |
| **2** | Dimmer | | Same as CH 2 in the mode “6CH” (p. 8) |
| **3** | Dimmer Fine | 0–255 | Fine adjustment of CH 2 |

## Mode 2CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

### Channel functions at a glance




| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Dimmer | | Same as CH 2 in the mode “6CH” (p. 8) |
| **2** | Dimmer Fine | 0–255 | Fine adjustment of CH 1 |

## Mode 1CH

The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

### Channel functions at a glance




| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Dimmer | 0 | 0% |
| | | 1–62 | 0% … 25% |
| | | 63 | 25% |
| | | 64–127 | 25% … 50% |
| | | 128 | 50% |
| | | 129–192 | 50% … 75% |
| | | 193 | 75% |
| | | 194–254 | 75% … 100% |

| CH | Function | DMX | Description |
|---|---|---|---|
| 1 | Dimmer (continued) | 255 | 100% |

# 9 Technical specifications

| Parameter | Value |
|---|---|
| **Light** | |
| Light source | LED |
| LED power | 36 W |
| Luminous flux | 800 lm |
| Color temperature | 6,000 K |
| Color rendering index (CRI) | 70 |
| **Optics** | |
| Beam angle | 28° |
| **Control** | |
| DMX connection | 3-pin XLR IN/OUT |
| **Electrical** | |
| Power supply | 100–240 V, 50/60 Hz |
| Power consumption | 28 W |
| Power connectors | powerCON TRUE1 IN |
| **Operating environment** | |
| Operating temperature | 0 to 40 °C |

### Speeds and ranges

| Parameter | Value |
|---|---|
| Strobe frequency | 0.5–10 Hz |

### Spot diameter

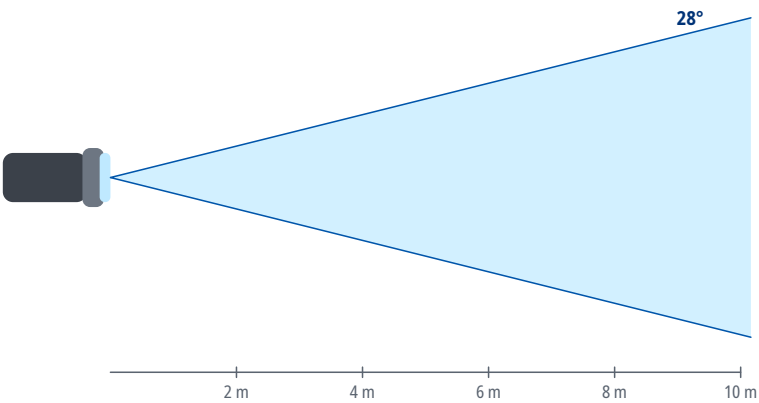


| Distance | Ø 28° |
|---|---|
| 2 m | 1 m |
| 4 m | 2 m |
| 6 m | 3 m |
| 8 m | 4 m |
| 10 m | 5 m |
| 15 m | 7.5 m |

Spot diameter square to the beam axis, calculated from the beam angle.

# 10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or

pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

# 11 Troubleshooting

| Problem | Remedy |
|---|---|
| The device does not switch on | Check the supply voltage, the cables and the fuse, if the device has one. |
| The device does not respond to DMX | Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe). |
| The device behaves erratically or flickers | Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter. |
| Only some devices on the line respond | Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on. |
| Devices respond to the wrong channels or affect each other | Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller. |
| The device or the connected load does not light up although it receives DMX | Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open. |

# 12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.