DMX REFERENCE

Wash Z350

CKC Lighting



Manufacturer	CKC Lighting
GDTF file	CKC_Lighting_Wash_Z350_150734.gdtf
GDTF revision	Revision 1 · 2026-07-13
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 19CH 10
Mode 17CH 12
Mode 16CH 13
Mode 15CH 14
10 Technical specifications 15
11 Maintenance and cleaning 16
12 Troubleshooting 16
13 Disposal 17

1 About this manual

This document describes the Wash Z350 by CKC Lighting. It was compiled from the GDTF file CKC_Lighting_Wash_Z350_150734.gdtf from the GDTF-Share library.

File revision: “Revision 1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by CKC Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	425 W
Weight	17.7 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
19CH	19	26	1, 20, 39, 58, ...
17CH	17	30	1, 18, 35, 52, ...
16CH	16	32	1, 17, 33, 49, ...
15CH	15	34	1, 16, 31, 46, ...

No light? Check these channels

- 19CH: CH 11 Dimmer above 0
- 17CH: CH 9 Dimmer above 0
- 15CH: CH 10 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 90–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

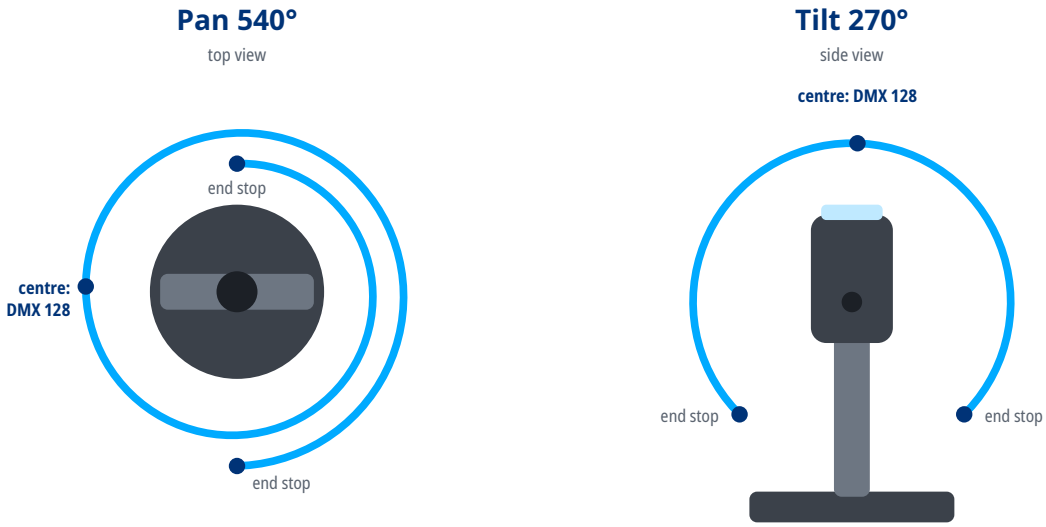

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 17.7 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

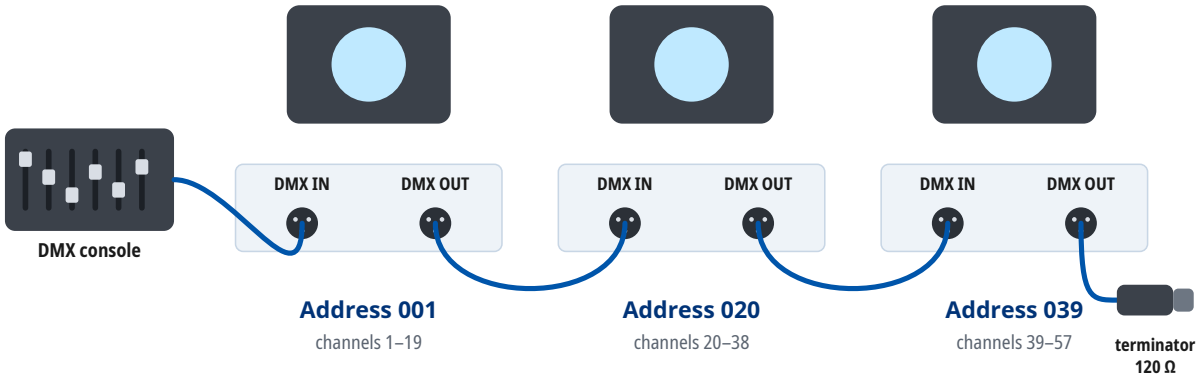

Mode 19CH: every unit occupies 19 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “19CH”: 19.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “19CH”, you can use, for example, the start addresses 1, 20, 39, 58.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	19CH 19 channels	17CH 17 channels	16CH 16 channels	15CH 15 channels
Pan / Tilt	1, 3	1, 3	1, 3	1, 3
Dimmer	11	9		10
Dimmer resolution	16 bit	8 bit		16 bit
Shutter / strobe	9	5	5	9
Color mixing	5–8	6–8		5–8
Zoom	13	11	10	12
Effects / macros	10, 14–16	10, 12–14	9, 11–13	

LED colors and the colors they mix

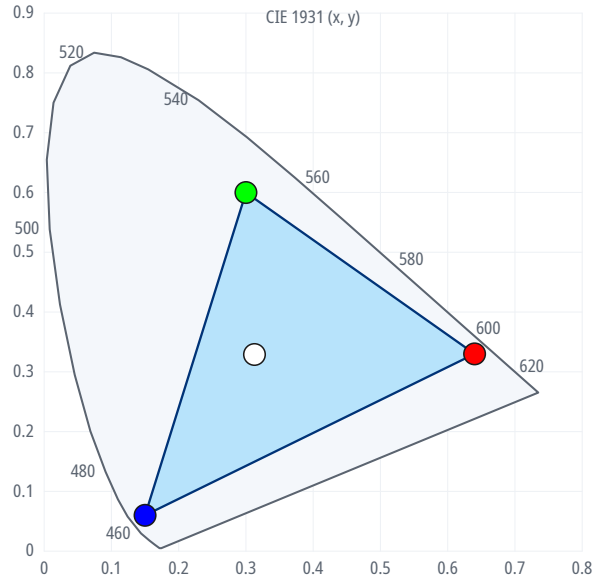

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060
White	0.313	0.329

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

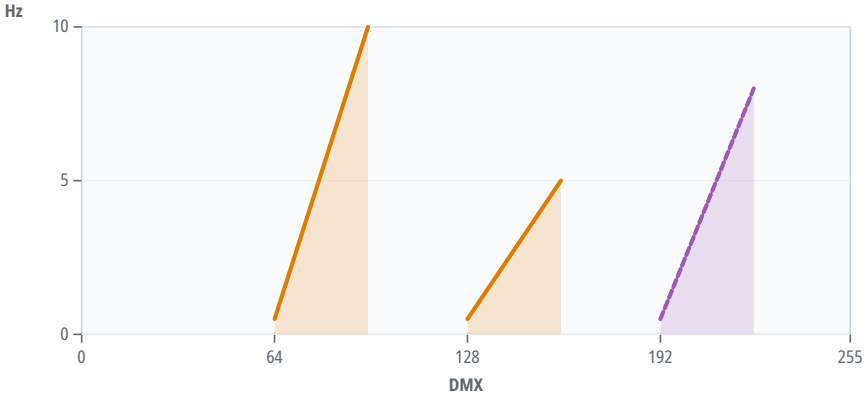

CH 9 · 19CH

- 64–95: 0.5–10 Hz Strobe
- 128–159: 0.5–5 Hz Pulse
- 192–223: 0.5–8 Hz Random

9 DMX channels

Units in one DMX universe

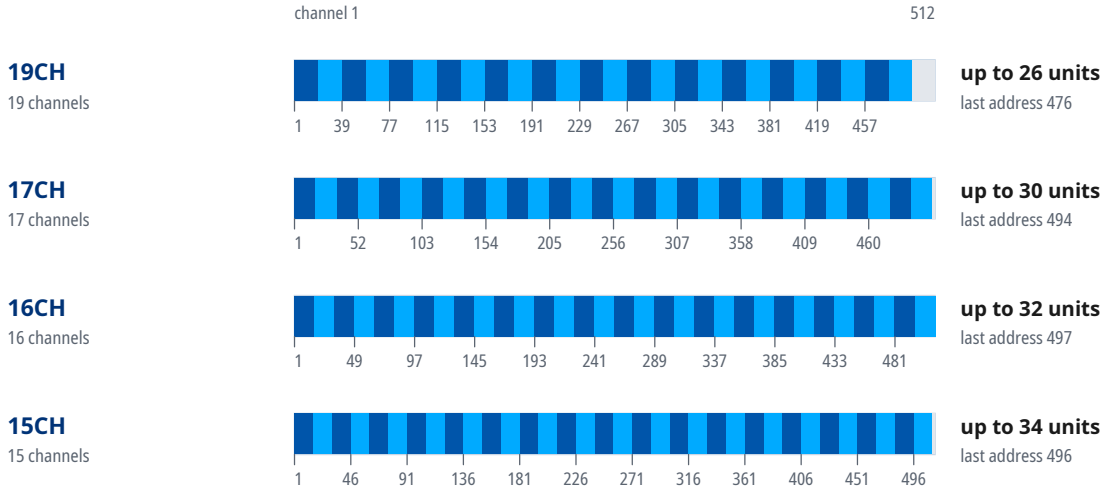

Start addresses of 20 units in the mode “19CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	96	11	191	16	286
2	20	7	115	12	210	17	305
3	39	8	134	13	229	18	324
4	58	9	153	14	248	19	343
5	77	10	172	15	267	20	362

Mode 19CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 11 Dimmer above 0.

Channel functions at a glance

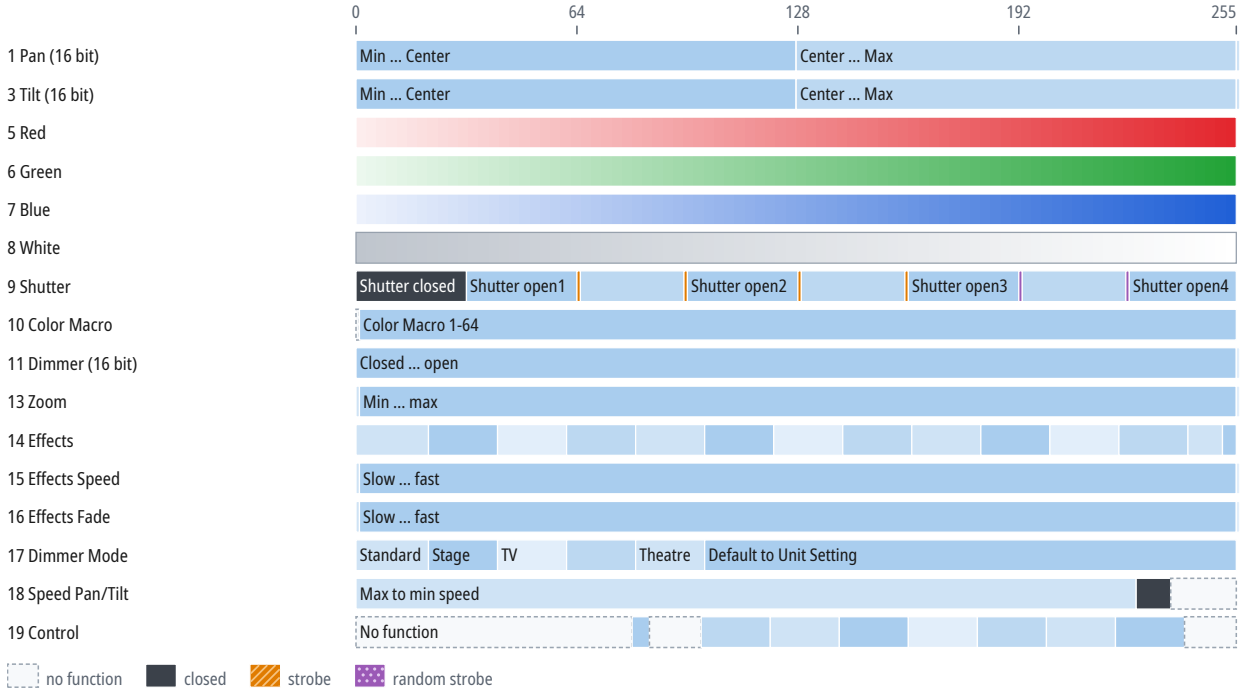

CH	Function	DMX	Description
1	Pan	0–127	Min ... Center
		128–255	Center ... Max
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Min ... Center
		128–255	Center ... Max
		255	Max
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Red	0–255	
6	Green	0–255	
7	Blue	0–255	
8	White	0–255	
9	Shutter	0–31	Shutter closed
		32–63	Shutter open1
		64	Min strobe
		65–94	Min strobe ... max strobe
		95	Max strobe
		96–127	Shutter open2
		128	Min pulse

CH	Function	DMX	Description
9	Shutter (continued)	129–158	Min pulse ... max pulse
		159	Max pulse
		160–191	Shutter open3
		192	Min random
		193–222	Min random ... max random
		223	Max random
		224–255	Shutter open4
10	Color Macro	0	No function
		1–255	Color Macro 1-64
11	Dimmer	0–255	Closed ... open
		255	Open
12	Dimmer Fine	0–255	Fine adjustment of CH 11
13	Zoom	0	Min
		1–254	Min ... max
		255	Max
14	Effects	0–20	Auto program1
		21–40	Auto program2
		41–60	Auto program3
		61–80	Auto program4
		81–100	Auto program5
		101–120	Auto program6
		121–140	Auto program7
		141–160	Auto program8
		161–180	Auto program9
		181–200	Auto program10
		201–220	Auto program11
		221–240	Auto program12
		241–250	Auto program13
		251–255	Gradient effect
15	Effects Speed	0	Slow
		1–254	Slow ... fast
		255	Fast
16	Effects Fade	0	Slow
		1–254	Slow ... fast
		255	Fast
17	Dimmer Mode	0–20	Standard
		21–40	Stage
		41–60	TV
		61–80	Architectural
		81–100	Theatre
		101–255	Default to Unit Setting
18	Speed Pan/Tilt	0–225	Max to min speed

CH	Function	DMX	Description
18	Speed Pan/Tilt (continued)	226–235	Blackout by movement
		236–255	No function
19	Control	0–79	No function
		80–84	All Motor Reset
		85–99	No function
		100–119	Internal program 1
		120–139	Internal program 2
		140–159	Internal program 3
		160–179	Internal program 4
		180–199	Internal program 5
		200–219	Internal program 6
		220–239	Internal program 7
		240–255	No function

Mode 17CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 9 Dimmer above 0.

Channel functions at a glance

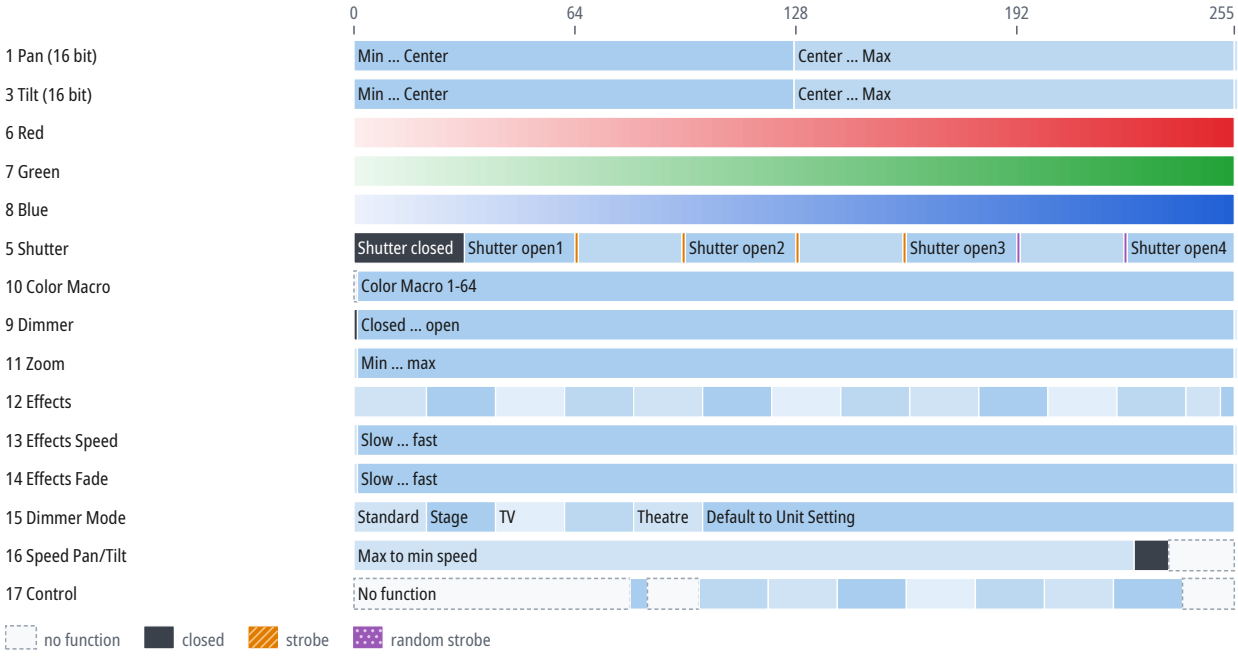

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19CH” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “19CH” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Shutter		Same as CH 9 in the mode “19CH” (p. 10)
6	Red	0–255	

CH	Function	DMX	Description
7	Green	0–255	
8	Blue	0–255	
9	Dimmer	0	Closed
		1–254	Closed … open
		255	Open
10	Color Macro		Same as CH 10 in the mode “19CH” (p. 11)
11	Zoom		Same as CH 13 in the mode “19CH” (p. 11)
12	Effects		Same as CH 14 in the mode “19CH” (p. 11)
13	Effects Speed		Same as CH 15 in the mode “19CH” (p. 11)
14	Effects Fade		Same as CH 16 in the mode “19CH” (p. 11)
15	Dimmer Mode		Same as CH 17 in the mode “19CH” (p. 11)
16	Speed Pan/Tilt		Same as CH 18 in the mode “19CH” (p. 11)
17	Control		Same as CH 19 in the mode “19CH” (p. 12)

Mode 16CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

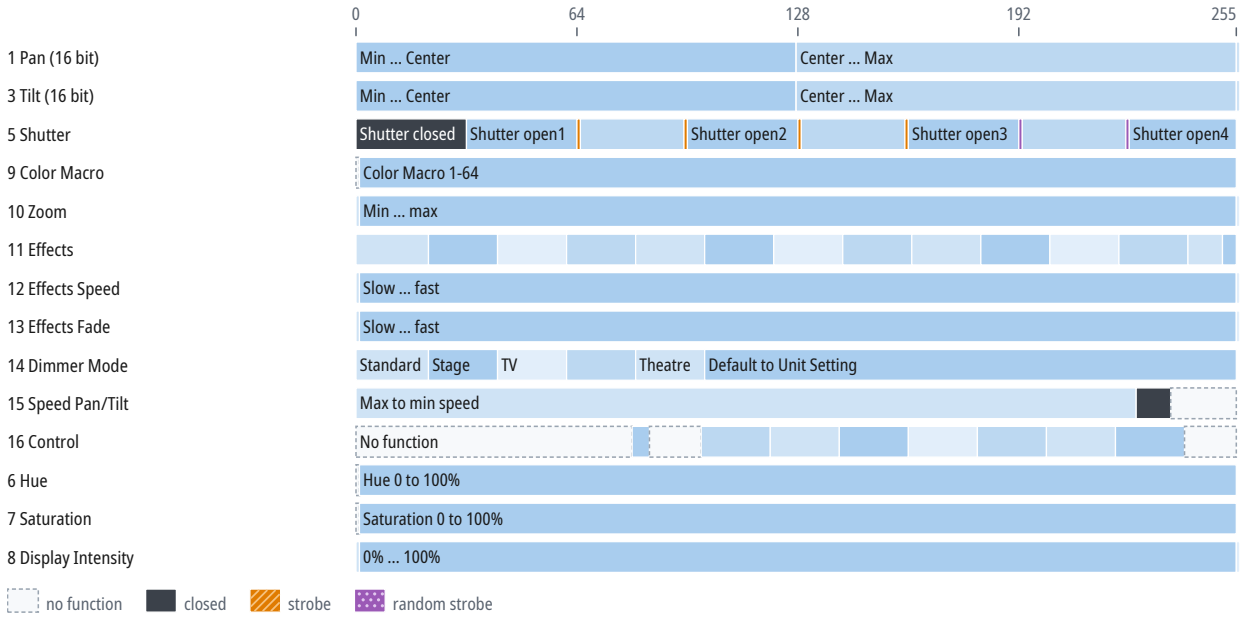

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19CH” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “19CH” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Shutter		Same as CH 9 in the mode “19CH” (p. 10)
6	Hue	0	No function
		1–255	Hue 0 to 100%
7	Saturation	0	No function

CH	Function	DMX	Description
7	Saturation (continued)	1–255	Saturation 0 to 100%
8	Display Intensity		Intensity 1
		0	0%
		1–254	0% … 100%
		255	100%
9	Color Macro		Same as CH 10 in the mode “19CH” (p. 11)
10	Zoom		Same as CH 13 in the mode “19CH” (p. 11)
11	Effects		Same as CH 14 in the mode “19CH” (p. 11)
12	Effects Speed		Same as CH 15 in the mode “19CH” (p. 11)
13	Effects Fade		Same as CH 16 in the mode “19CH” (p. 11)
14	Dimmer Mode		Same as CH 17 in the mode “19CH” (p. 11)
15	Speed Pan/Tilt		Same as CH 18 in the mode “19CH” (p. 11)
16	Control		Same as CH 19 in the mode “19CH” (p. 12)

Mode 15CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 10 Dimmer above 0.

Channel functions at a glance

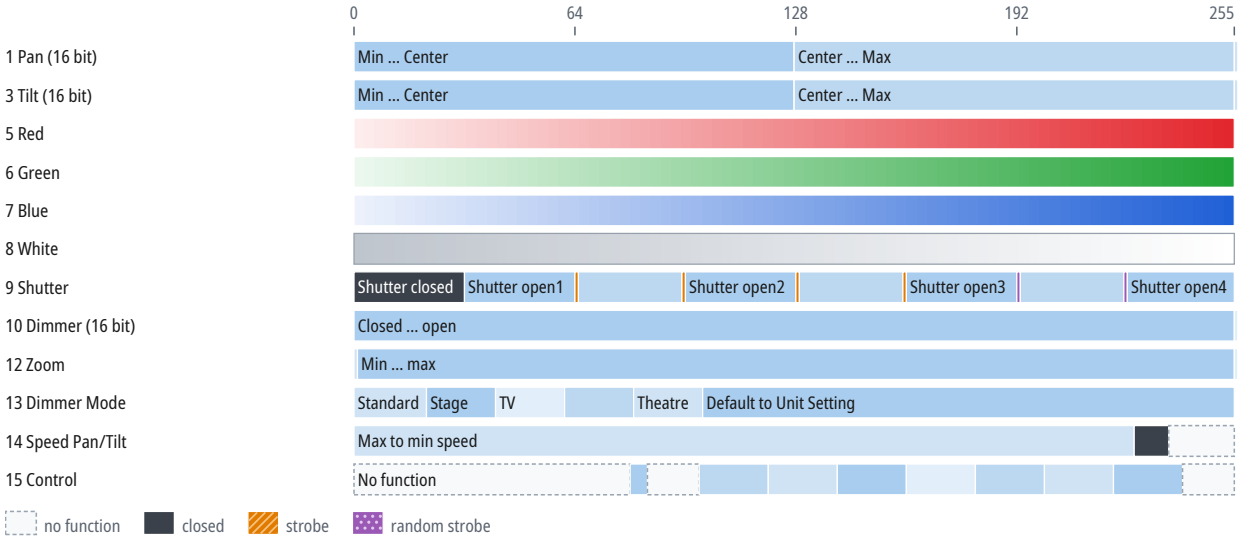

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19CH” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “19CH” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Red	0–255	
6	Green	0–255	
7	Blue	0–255	
8	White	0–255	

CH	Function	DMX	Description
9	Shutter		Same as CH 9 in the mode “19CH” (p. 10)
10	Dimmer		Same as CH 11 in the mode “19CH” (p. 11)
11	Dimmer Fine	0–255	Fine adjustment of CH 10
12	Zoom		Same as CH 13 in the mode “19CH” (p. 11)
13	Dimmer Mode		Same as CH 17 in the mode “19CH” (p. 11)
14	Speed Pan/Tilt		Same as CH 18 in the mode “19CH” (p. 11)
15	Control		Same as CH 19 in the mode “19CH” (p. 12)

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	350 W
Luminous flux	10,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	70
Optics	
Zoom	19–57°
Movement	
Pan	540°
Tilt	270°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
Electrical	
Power supply	90–240 V, 50/60 Hz
Power consumption	425 W
Power connectors	powerCON TRUE1 IN
Dimensions and construction	
Weight	17.7 kg
Operating environment	
Operating temperature	-20 to 45 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0.5–10 Hz

Spot diameter

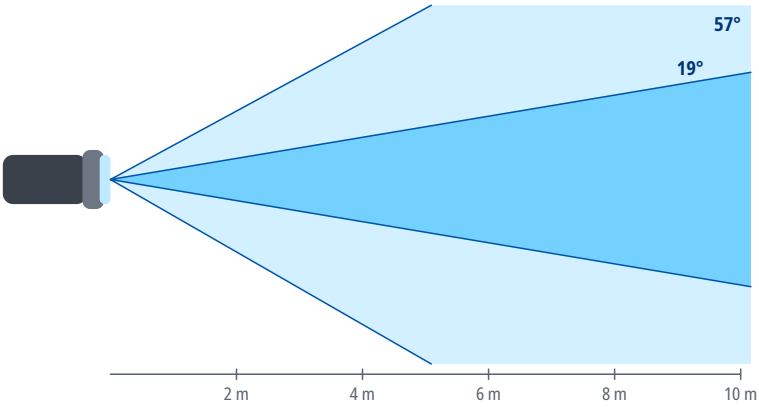

Distance	Ø 19°	Ø 57°
2 m	0.67 m	2.2 m
4 m	1.3 m	4.3 m
6 m	2 m	6.5 m
8 m	2.7 m	8.7 m
10 m	3.3 m	10.9 m
15 m	5 m	16.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.