DMX REFERENCE

MYRA

CLF MYRA

CLF Lighting



Manufacturer	CLF Lighting
GDTF file	CLF_Lighting_MYRA_169669.gdtf
GDTF revision	Rev 1 · 2026-11-17
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 7
Mode 5CH RGBW 7
Mode 4CH CTC 8
Mode 4CH HSV 9
Mode 5CH Basic 10
Mode 5CH RGBL 10
9 Technical specifications 11
10 Maintenance and cleaning 12
11 Troubleshooting 12
12 Disposal 12

1 About this manual

This document describes the CLF MYRA by CLF Lighting. It was compiled from the GDTF file CLF_Lighting_MYRA_169669.gdtf from the GDTF-Share library.

File revision: “Rev 1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by CLF Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	150 W

DMX modes

Mode	Channels	Units in one universe	First start addresses
5CH RGBW	5	102	1, 6, 11, 16, ...
4CH CTC	4	128	1, 5, 9, 13, ...
4CH HSV	4	128	1, 5, 9, 13, ...
5CH Basic	5	102	1, 6, 11, 16, ...
5CH RGBL	5	102	1, 6, 11, 16, ...

No light? Check these channels

- 4CH CTC: CH 1 Dimmer above 0
- 5CH Basic: CH 2 Dimmer Curve above 90; CH 5 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

4 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

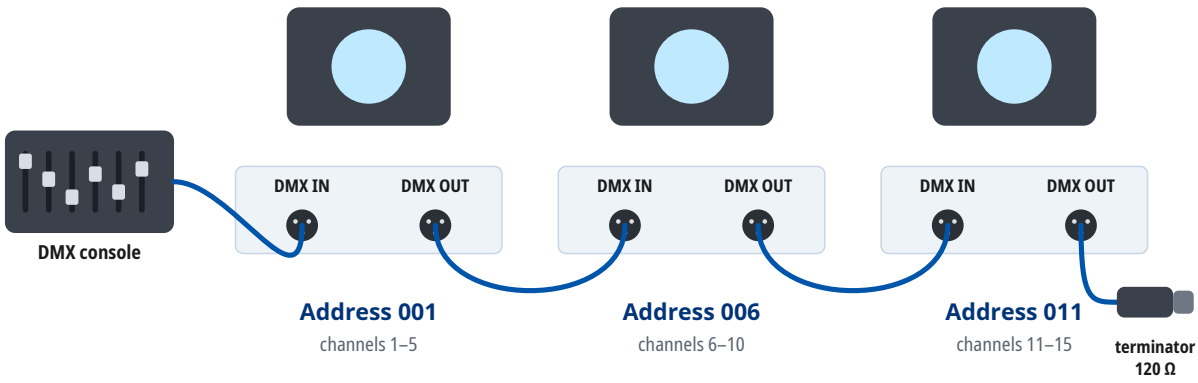

Mode 5CH RGBW: every unit occupies 5 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “5CH RGBW”: 5.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “5CH RGBW”, you can use, for example, the start addresses 1, 6, 11, 16.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	5CH RGBW 5 channels	4CH CTC 4 channels	4CH HSV 4 channels	5CH Basic 5 channels	5CH RGBL 5 channels
Pan / Tilt	✓				✓
Dimmer	✓	1	✓	5	✓
Color mixing	2–5				2–5
Color temperature		3			
Zoom	1	2	1	4	1

8 DMX channels

Units in one DMX universe

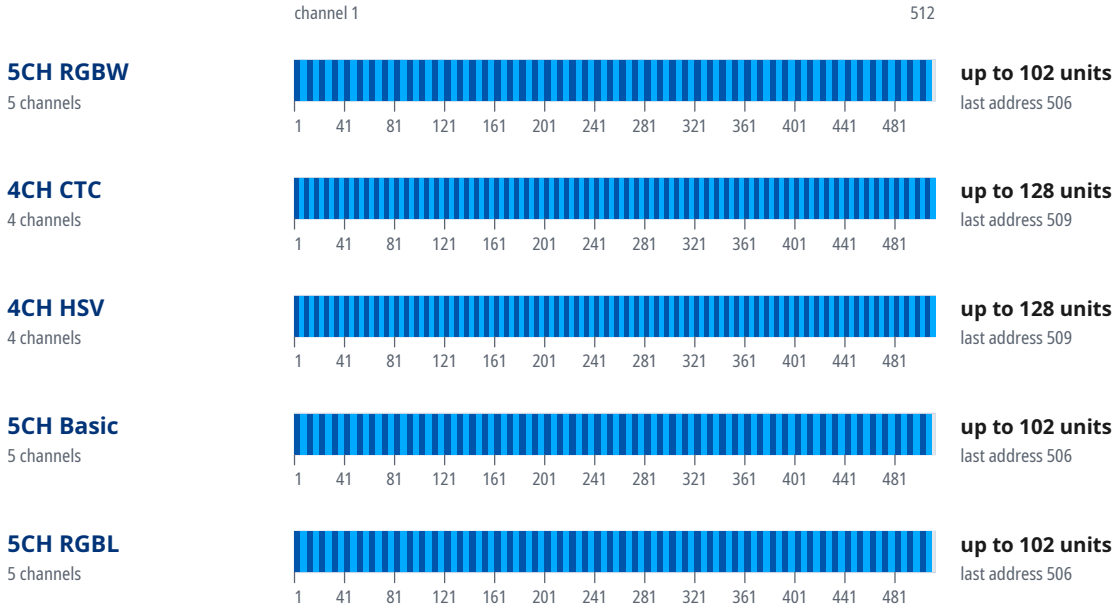

Start addresses of 20 units in the mode “5CH RGBW”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	26	11	51	16	76
2	6	7	31	12	56	17	81
3	11	8	36	13	61	18	86
4	16	9	41	14	66	19	91
5	21	10	46	15	71	20	96

Mode 5CH RGBW

The GDTF file gives these values for a console's Highlight function: CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255, CH 5 Cool White 255.

Channel functions at a glance

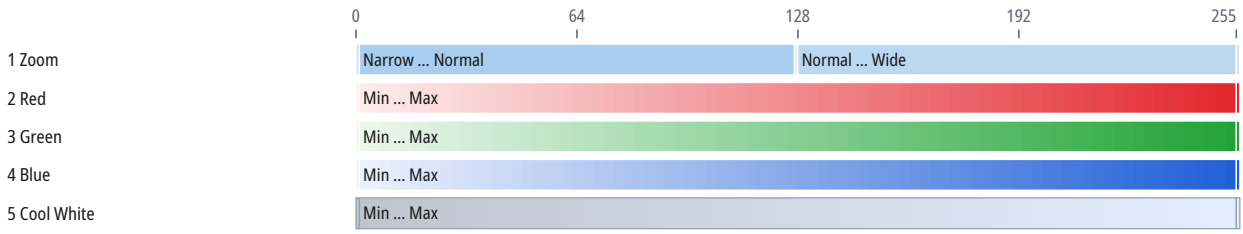

CH	Function	DMX	Description
1	Zoom	0	Narrow
		1–126	Narrow ... Normal
		127	Normal
		128–254	Normal ... Wide
		255	Wide

CH	Function	DMX	Description
2	Red	0	Min
		1–254	Min ... Max
		255	Max
3	Green	0	Min
		1–254	Min ... Max
		255	Max
4	Blue	0	Min
		1–254	Min ... Max
		255	Max
5	Cool White	0	Min
		1–254	Min ... Max
		255	Max

Mode 4CH CTC

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

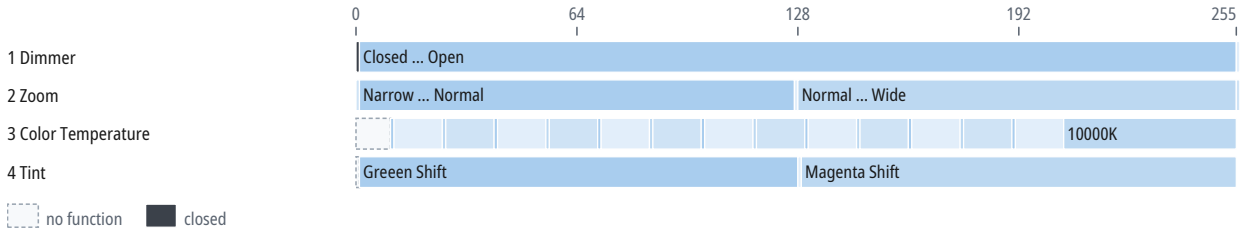

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Zoom		Same as CH 1 in the mode “5CH RGBW” (p. 7)
3	Color Temperature	0–9	No Function
		10	1800K
		11–24	1800K ... 2200 K (1801–2199 K)
		25	2200 K
		26–39	2200 K ... 2700K (2201–2699 K)
		40	2700K
		41–54	2700K ... 3000K (2701–2999 K)
		55	3000K
		56–69	3000K ... 3200K (3001–31999 K)
		70	3200K
		71–84	3200K ... 4000K (3201–3999 K)
		85	4000K
		86–99	4000K ... 4500K (4001–4499 K)

CH	Function	DMX	Description
3	Color Temperature (continued)	100	4500K
		101–114	4500K … 5000K (4501–4999 K)
		115	5000K
		116–129	5000K … 5600K (5001–5599 K)
		130	5600K
		131–144	5600K … 6000K (5601–5999 K)
		145	6000K
		146–159	6000K … 6500K (6001–6499 K)
		160	6500K
		161–174	6500K … 7000K (6501–6999 K)
		175	7000K
		176–189	7000K … 8000K (7001–7999 K)
		190	8000K
		191–204	8000K … 10000K (8001–9999 K)
		205–255	10000K
4	Tint	0	No Function
		1–127	Greeen Shift
		128	Neutral
		129–255	Magenta Shift

Mode 4CH HSV

Channel functions at a glance

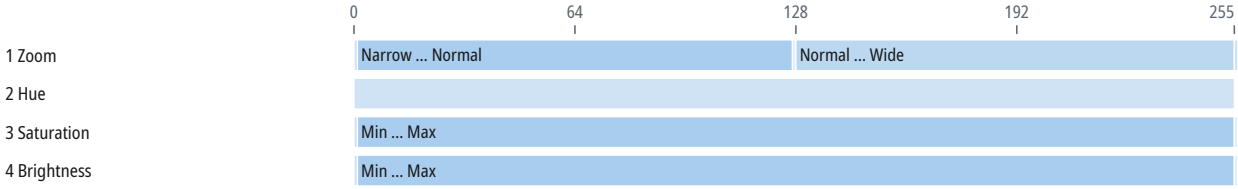

CH	Function	DMX	Description
1	Zoom		Same as CH 1 in the mode “5CH RGBW” (p. 7)
2	Hue	0–255	
3	Saturation	0	Min
		1–254	Min … Max
		255	Max
4	Brightness	0	Min
		1–254	Min … Max
		255	Max

Mode 5CH Basic

If the device receives DMX in this mode but gives no light, check these channels: CH 2 Dimmer Curve above 90; CH 5 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Color Model Mode 0, CH 5 Dimmer 255.

Channel functions at a glance

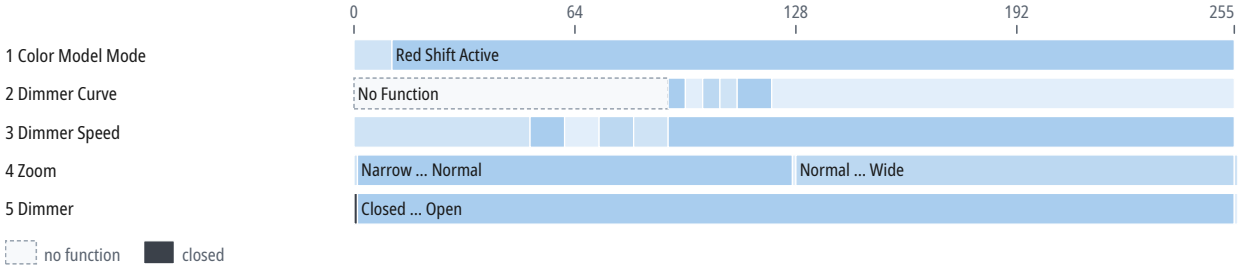

CH	Function	DMX	Description
1	Color Model Mode	0–10	Normal
		11–255	Red Shift Active
2	Dimmer Curve	0–90	No Function
		91–95	Linear
		96–100	Square Law
		101–105	INV Square Law
		106–110	S-Curve
		111–120	Special
		121–255	Dimmer Curve 1
3	Dimmer Speed	0–50	Intensity MSpeed 1
		51–60	Normal
		61–70	Smooth 1
		71–80	Smooth 2
		81–90	Halogen
		91–255	Intensity MSpeed 1
4	Zoom		Same as CH 1 in the mode “5CH RGBW” (p. 7)
5	Dimmer		Same as CH 1 in the mode “4CH CTC” (p. 8)

Mode 5CH RGBL

The GDTF file gives these values for a console's Highlight function: CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255, CH 5 Lime 255.

Channel functions at a glance

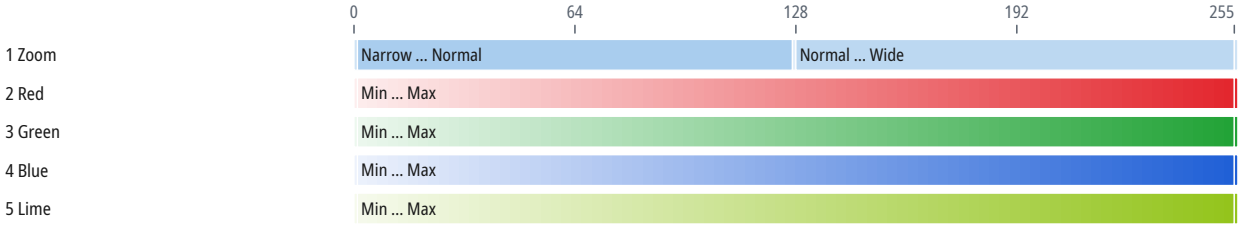

CH	Function	DMX	Description
1	Zoom		Same as CH 1 in the mode “5CH RGBW” (p. 7)
2	Red		Same as CH 2 in the mode “5CH RGBW” (p. 8)
3	Green		Same as CH 3 in the mode “5CH RGBW” (p. 8)
4	Blue		Same as CH 4 in the mode “5CH RGBW” (p. 8)
5	Lime	0	Min
		1–254	Min ... Max
		255	Max

9 Technical specifications

Parameter	Value
Light	
Light source	tungsten lamp
Lamp power	150 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	95
Optics	
Zoom	16–45°
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	150 W
Power connectors	powerCON TRUE1 IN
Operating environment	
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Color temperature range	1800–10000 K

Spot diameter

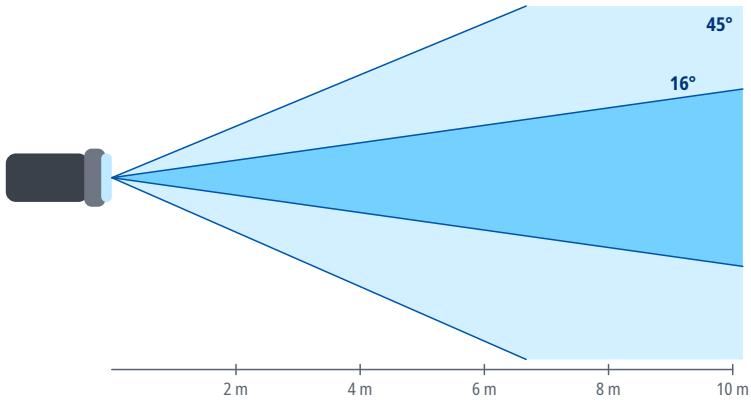

Distance	Ø 16°	Ø 45°
2 m	0.56 m	1.7 m
4 m	1.1 m	3.3 m
6 m	1.7 m	5 m
8 m	2.2 m	6.6 m
10 m	2.8 m	8.3 m
15 m	4.2 m	12.4 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.