DMX REFERENCE

TRIBAR 400

TRIBAR 400 IR

Cameo



Manufacturer	Cameo
GDTF file	Cameo_TRIBAR_400_16467.gdtf
GDTF revision	Firmware v104 GDTF V01 · 2021-08-19
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 2-CHANNEL-MODE 8
Mode 9 CH Direkt 9
Mode 3 CH Direkt (2) 10
Mode 3 CH Program (1) 10
Mode 12 CH 11
9 Technical specifications 12
10 Maintenance and cleaning 12
11 Troubleshooting 13
12 Disposal 13

1 About this manual

This document describes the TRIBAR 400 IR by Cameo. It was compiled from the GDTF file Cameo_TRIBAR_400_16467.gdtf from the GDTF-Share library.

File revision: “Firmware v104 GDTF V01”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Cameo; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	2.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
2-CHANNEL-MODE	2	256	1, 3, 5, 7, ...
9 CH Direkt	9	56	1, 10, 19, 28, ...
3 CH Direkt (2)	3	170	1, 4, 7, 10, ...
3 CH Program (1)	3	170	1, 4, 7, 10, ...
12 CH	12	42	1, 13, 25, 37, ...

No light? Check these channels

- 2-CHANNEL-MODE: CH 1 Dimmer above 0
- 3 CH Program (1): CH 3 Shutter at 0–10 “No function”
- 12 CH: CH 3 Shutter at 0–10 “No function”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 2.8 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

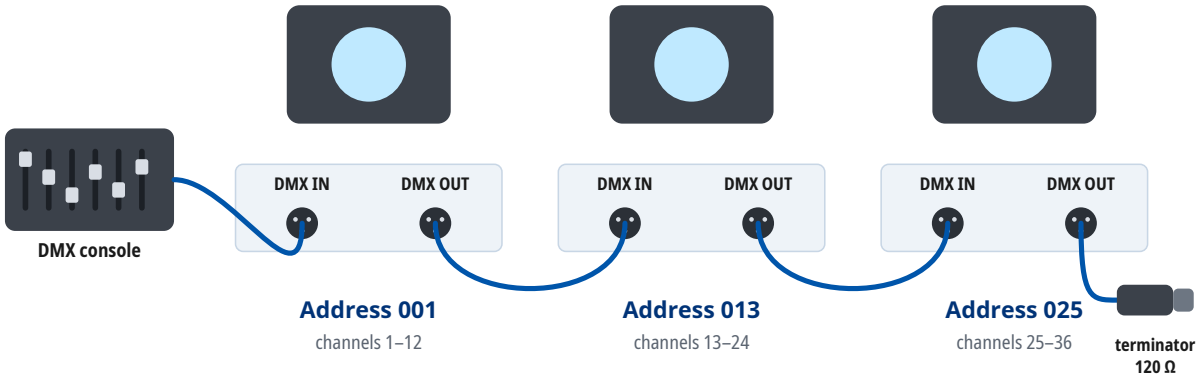

Mode 12 CH: every unit occupies 12 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “12 CH”: 12.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “12 CH”, you can use, for example, the start addresses 1, 13, 25, 37.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	2-CHANNEL-MODE 2 channels	9 CH Direkt 9 channels	3 CH Direkt (2) 3 channels	3 CH Program (1) 3 channels	12 CH 12 channels
Dimmer	1	✓	✓	✓	✓
Shutter / strobe				3	3
Color mixing		1–9	1–3		4–12
Color wheel	2			2 *	2 *
Effects / macros				1, 2	1, 2
Pixel control					✓

* The function works only when another channel switches it on; see the DMX table.

Color wheel

1 Red
DMX 36–71

2 Green
DMX 72–107

3 Blue
DMX 108–143

4 Yellow
DMX 144–179

5 Magenta
DMX 180–215

6 Cyan
DMX 216–251

7 White
DMX 252

8 Black Out
DMX 0–35

LED colors and the colors they mix

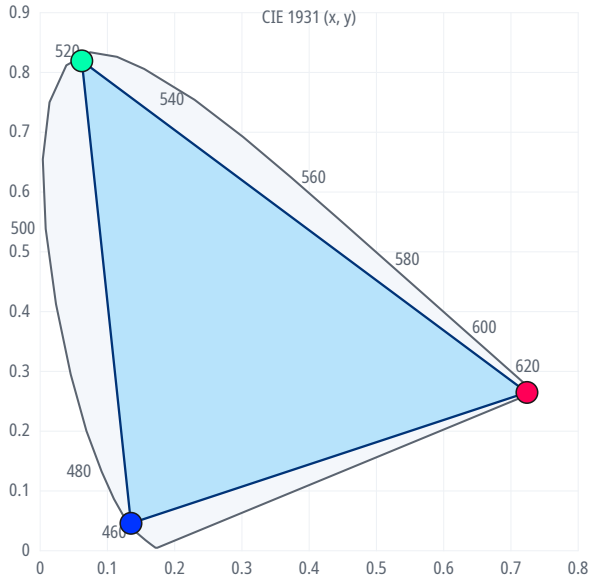

LED	x	y
Red	0.724	0.265
Green	0.062	0.819
Blue	0.135	0.046

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

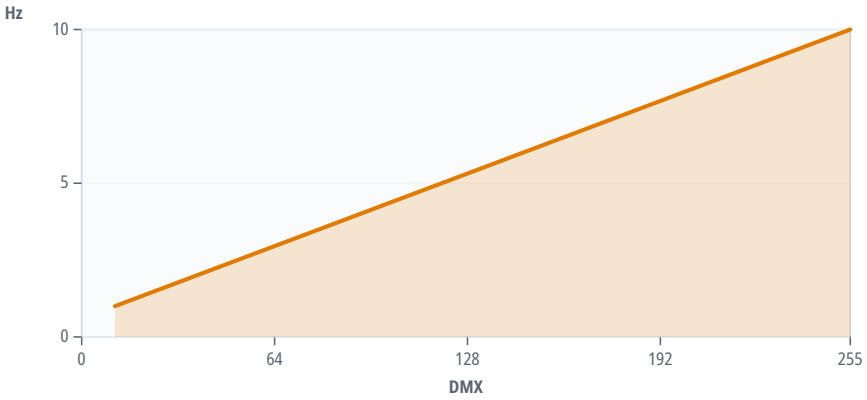

CH 3 · 12 CH

11–255: 1–10 Hz
Strobe (slow - fast)

Cells (pixels)



24 cells in one row, left to right as the GDTF file places them (seen from above), wrapped after 12; the mode “12 CH” drives them together.

8 DMX channels

Units in one DMX universe

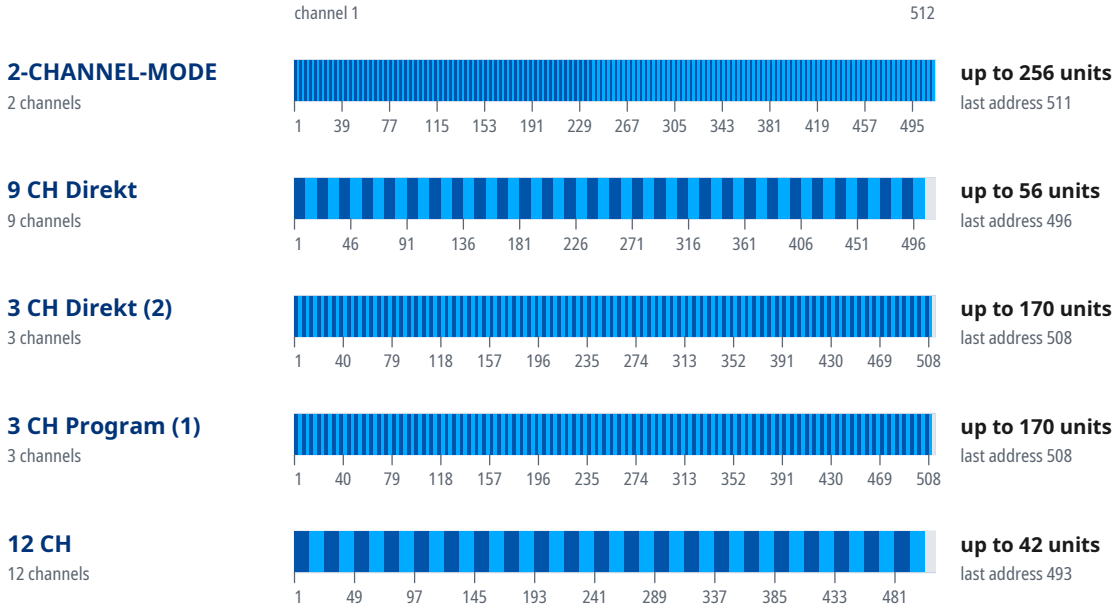

Start addresses of 20 units in the mode “12 CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	61	11	121	16	181
2	13	7	73	12	133	17	193
3	25	8	85	13	145	18	205
4	37	9	97	14	157	19	217
5	49	10	109	15	169	20	229

Mode 2-CHANNEL-MODE

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Colors 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Dimmer	0	Close
		1–254	Close ... open
		255	Open
2	Colors	0–36	Red
		37–73	Green
		74–110	Blue
		111–147	Yellow
		148–184	Magenta
		185–221	Cyan
		222–255	White

Mode 9 CH Direkt

The GDTF file gives these values for a console's Highlight function: CH 1 Red 1 255, CH 2 Green 1 255, CH 3 Blue 1 255, CH 4 Red 2 255, CH 5 Green 2 255, CH 6 Blue 2 255, CH 7 Red 3 255, CH 8 Green 3 255, CH 9 Blue 3 255.

Channel functions at a glance

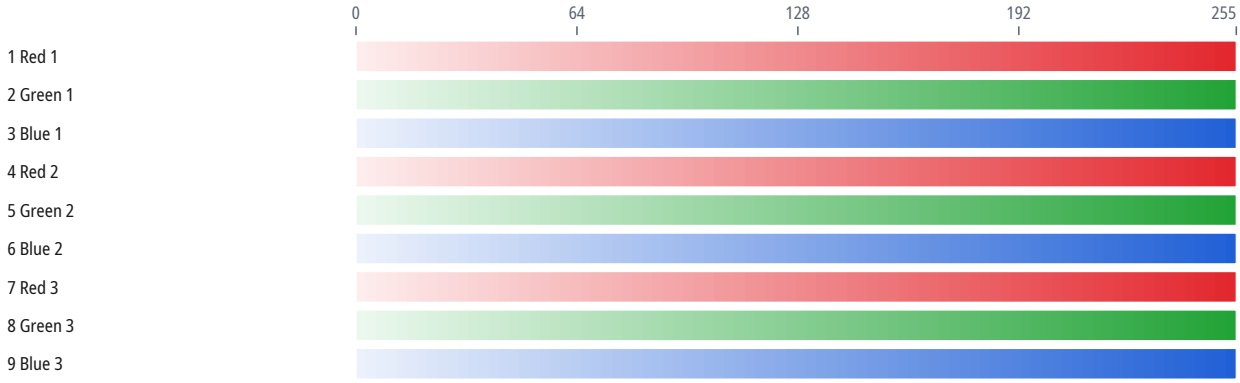

CH	Function	DMX	Description
1	Red 1	0–255	
2	Green 1	0–255	
3	Blue 1	0–255	
4	Red 2	0–255	
5	Green 2	0–255	
6	Blue 2	0–255	
7	Red 3	0–255	
8	Green 3	0–255	
9	Blue 3	0–255	

Mode 3 CH Direkt (2)

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255, CH 2 Green 255, CH 3 Blue 255.

Channel functions at a glance

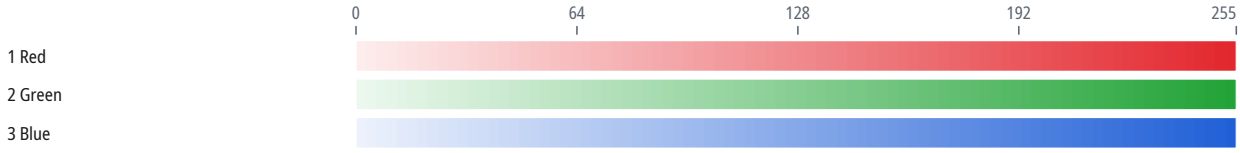

CH	Function	DMX	Description
1	Red	0–255	
2	Green	0–255	
3	Blue	0–255	

Mode 3 CH Program (1)

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Shutter at 0–10 “No function”. The GDTF file gives these values for a console's Highlight function: CH 1 Color Macro 0, CH 2 Color Macro Speed 255, CH 3 Shutter 0.

Channel functions at a glance



CH	Function	DMX	Description
1	Color Macro	0–17	Color Macro
		18–35	PG01
		36–53	PG02
		54–71	PG03
		72–89	PG04
		90–107	PG05
		108–125	PG06
		126–143	PG07
		144–161	PG08
		162–179	PG09
		180–197	PG10
		198–215	PG11
		216–233	PG12
		234–255	Sound Colntrol
2	Color Macro Speed		When CH 1 is 0–17:
		0–35	Black Out
		36–71	Red

CH	Function	DMX	Description
2	Color Macro Speed (continued)	72–107	Green
		108–143	Blue
		144–179	Yellow
		180–215	Magenta
		216–251	Cyan
		252–255	White
3	Shutter	0–10	No function
		11	Strobe (slow - fast): slow
		12–254	Strobe (slow - fast): slow ... fast
		255	Strobe (slow - fast): fast

Mode 12 CH

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Shutter at 0–10 “No function”. The GDTF file gives these values for a console's Highlight function: CH 1 Color Macro 0, CH 2 Color Macro Speed 255, CH 3 Shutter 0, CH 4 Red 1 255, CH 5 Green 1 255, CH 6 Blue 1 255, CH 7 Red 2 255, CH 8 Green 2 255, CH 9 Blue 2 255, CH 10 Red 3 255, CH 11 Green 3 255, CH 12 Blue 3 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Color Macro		Same as CH 1 in the mode “3 CH Program (1)” (p. 10)
2	Color Macro Speed		Same as CH 2 in the mode “3 CH Program (1)” (p. 10)
3	Shutter		Same as CH 3 in the mode “3 CH Program (1)” (p. 11)
4	Red 1	0–255	
5	Green 1	0–255	
6	Blue 1	0–255	
7	Red 2	0–255	
8	Green 2	0–255	
9	Blue 2	0–255	

CH	Function	DMX	Description
10	Red 3	0–255	
11	Green 3	0–255	
12	Blue 3	0–255	

9 Technical specifications

Parameter	Value
Light source	LED
DMX connection	3-pin XLR IN/OUT
Power connectors	IEC 60320-C13/14 IN/OUT
Weight	2.8 kg
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–10 Hz

Spot diameter

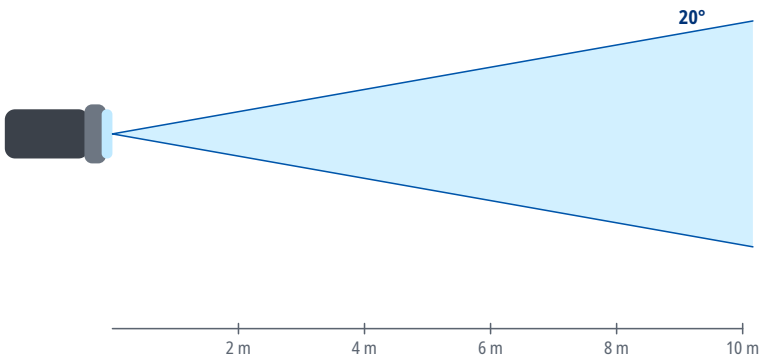

Distance	Ø 20°
2 m	0.71 m
4 m	1.4 m
6 m	2.1 m
8 m	2.8 m
10 m	3.5 m
15 m	5.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.