DMX REFERENCE

FOCUS SOLO ZOOM HO

FOCUSSZHO

DTS Lighting



Manufacturer	DTS Lighting
GDTF file	DTS_Lighting_FOCUS_SOLO_ZOOM_HO_149933.gdtf
GDTF revision	REV2 · 2026-07-07
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 8
Mode 4 ch 8
Mode 11 CH 9
10 Technical specifications 10
11 Maintenance and cleaning 11
12 Troubleshooting 11
13 Disposal 12

1 About this manual

This document describes the FOCUSSZHO by DTS Lighting. It was compiled from the GDTF file DTS_Lighting_FOCUS_SOLO_ZOOM_HO_149933.gdtf from the GDTF-Share library.

File revision: “REV2”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by DTS Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	30 W
Weight	2.7 kg
Ingress protection	IP66

DMX modes

Mode	Channels	Units in one universe	First start addresses
4 ch	4	128	1, 5, 9, 13, ...
11 CH	11	46	1, 12, 23, 34, ...

No light? Check these channels

- 11 CH: CH 9 Dimmer above 0



Read the manual before use



Risk of electric shock



Do not stare into the light

3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ CAUTION

- The device is rated IP66 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ **CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

4 Product description

Description in the GDTF file

“Focus Solo Zoom HO IP66 is a 40W, 1500-lumen anticorodal aluminum projector designed for professional architectural lighting and highlighting details in outdoor areas. Featuring the Mag magnetic system, it quickly integrates 4-blade shutters, filters, and Soft Shadow masks for dynamic lighting effects and soft shadows. The 5.5° to 52° manual zoom and 48Vdc DMX/RDM control ensure pinpoint aiming and remote diagnostics. Available in Anodized Black, White, or Silver finishes, it offers IK08 robustness and IP66 protection to enhance facades, monuments, and parks with maximum aesthetic precision.”

5 Installation

⚠ **WARNING**


- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 2.7 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX

splitter or booster.

DMX line

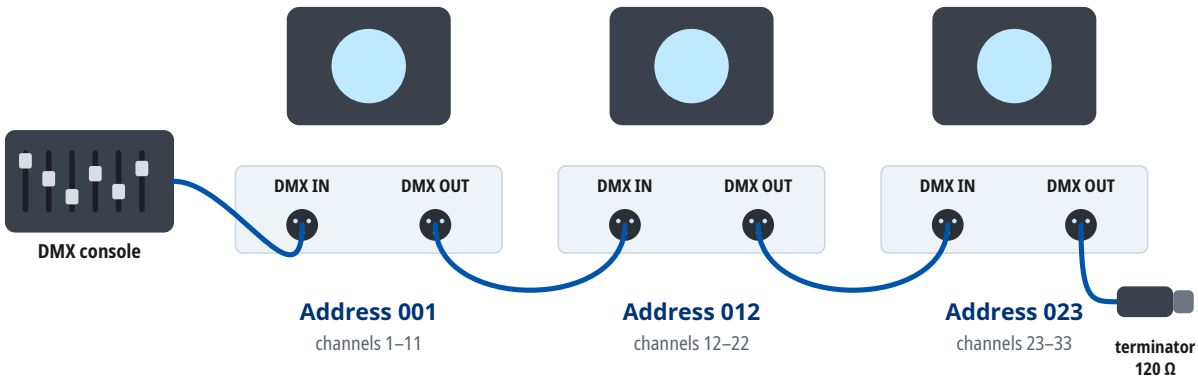

Mode 11 CH: every unit occupies 11 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “11 CH”: 11.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “11 CH”, you can use, for example, the start addresses 1, 12, 23, 34.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	4 ch 4 channels	11 CH 11 channels
Dimmer		9
Color mixing	1–4	4× (1–7)

LED colors and the colors they mix

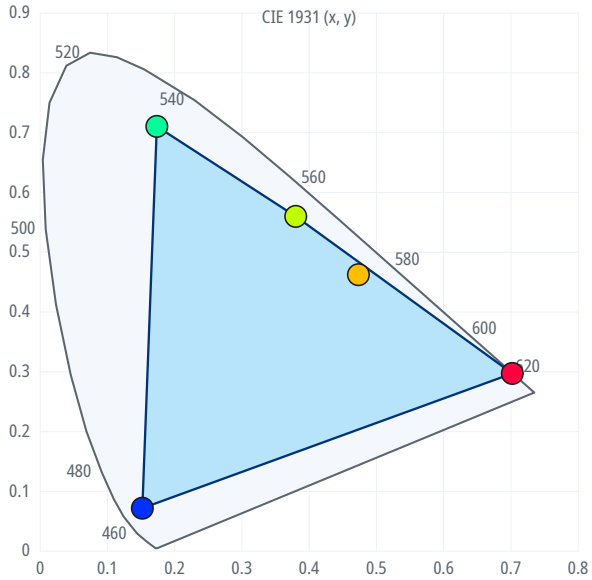


LED	x	y	nm
Red	0.702	0.297	626
Green	0.173	0.711	527
Blue	0.152	0.072	452
Lime	0.380	0.560	
Amber	0.473	0.463	

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

9 DMX channels

Units in one DMX universe

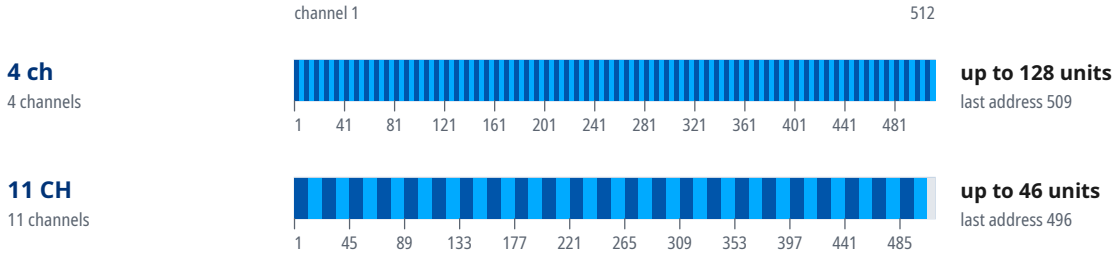


Start addresses of 20 units in the mode “11 CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	56	11	111	16	166
2	12	7	67	12	122	17	177
3	23	8	78	13	133	18	188
4	34	9	89	14	144	19	199
5	45	10	100	15	155	20	210

Mode 4 ch

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255, CH 2 Green 255, CH 3 Blue 255.

Channel functions at a glance

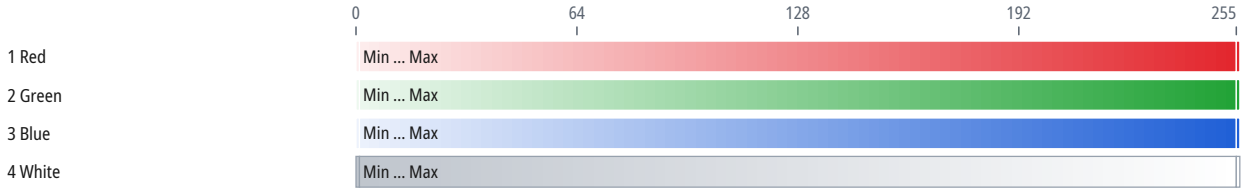


CH	Function	DMX	Description
1	Red	0	Min
		1–254	Min ... Max
		255	Max
2	Green	0	Min
		1–254	Min ... Max
		255	Max
3	Blue	0	Min
		1–254	Min ... Max
		255	Max
4	White	0	Min
		1–254	Min ... Max
		255	Max

Mode 11 CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 9 Dimmer above 0.

Channel functions at a glance

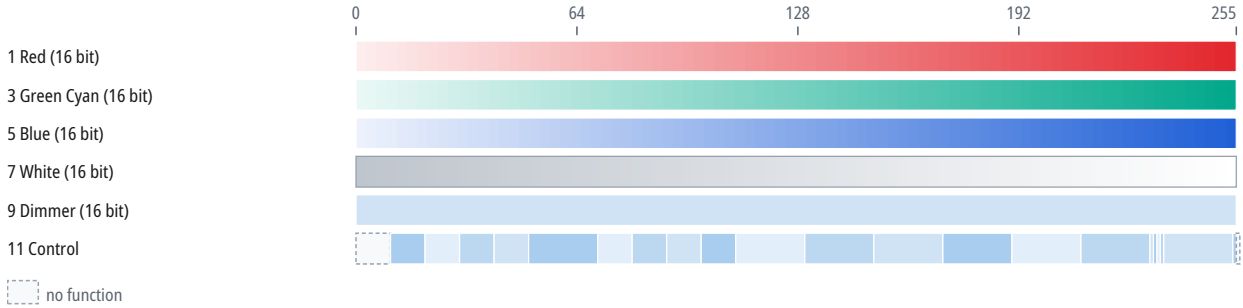


CH	Function	DMX	Description
1	Red	0–255	
2	Red Fine	0–255	Fine adjustment of CH 1
3	Green Cyan	0–255	
4	Green Cyan Fine	0–255	Fine adjustment of CH 3
5	Blue	0–255	
6	Blue Fine	0–255	Fine adjustment of CH 5
7	White	0–255	
8	White Fine	0–255	Fine adjustment of CH 7
9	Dimmer	0–255	
10	Dimmer Fine	0–255	Fine adjustment of CH 9
11	Control	0–9	No Function
		10–19	NO DMX ACTION KEEP LAST DMX
		20–29	NO DMX ACTION BLACK OUT
		30–39	NO DMX ACTION RGB@100
		40–49	NO DMX ACTION RGB 60
		50–69	RESERVED (20 FREE STEPS)
		70–79	NO DMX ACTION CUSTOM
		80–89	NO DMX ACTION CUSTOM 2
		90–99	NO DMX ACTION CUSTOM 3
		100–109	NO DMX ACTION CUSTOM 4
		110–129	RESERVED (20 FREE STEPS)
		130–149	VIEW CUSTOM
		150–169	VIEW CUSTOM 2
		170–189	VIEW CUSTOM 3
		190–209	VIEW CUSTOM 4-
		210–229	RESERVED (20 FREE STEPS)
		230	CREATE AND STORE CUSTOM
		231	CREATE AND STORE CUSTOM 2

CH	Function	DMX	Description
11	Control (continued)	232	CREATE AND STORE CUSTOM 3
		233	CREATE AND STORE CUSTOM 4
		234–253	RESERVED
		254	SET DEFAULT FOR ALL PROM CHANNEL PARAMETERS
		255	No Function

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	40 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	95
Optics	
Beam angle	25°
Control	
DMX connection	5-pin XLR IN/OUT
RDM	yes (manufacturer ID 0x0710, device model ID 0x0DA4)
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	30 W
Power connectors	powerCON TRUE1 IN
Dimensions and construction	
Weight	2.7 kg
Operating environment	
Ingress protection	IP66
Meaning of the IP code (IEC 60529)	Dust-tight; protected against powerful water jets
Operating temperature	-20 to 45 °C

Spot diameter

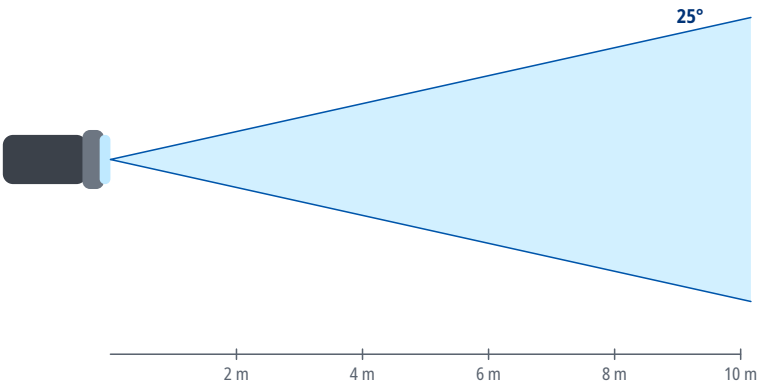

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.