DMX REFERENCE

Desisti F6VWC

Desisti



Manufacturer	Desisti
GDTF file	Desisti_Desisti_F6VWC_57380.gdtf
GDTF revision	rev 3.1, Uploaded to GDTF Share. · 2024-02-09
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Installation 4
5 Connections 4
6 Operation 5
7 Functions at a glance 5
8 DMX channels 6
Mode Vari White color mode 8bit 6
9 Technical specifications 9
10 Maintenance and cleaning 9
11 Troubleshooting 9
12 Disposal 10

1 About this manual

This document describes the Desisti F6VW+C by Desisti. It was compiled from the GDTF file Desisti_Desisti_F6VWC_57380.gdtf from the GDTF-Share library.

File revision: “rev 3.1, Uploaded to GDTF Share.”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Desisti; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

DMX modes

Mode	Channels	Units in one universe	First start addresses
Vari White color mode 8bit	9	56	1, 10, 19, 28, ...

No light? Check these channels

- Vari White color mode 8bit: CH 1 Dimmer above 0



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

4 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

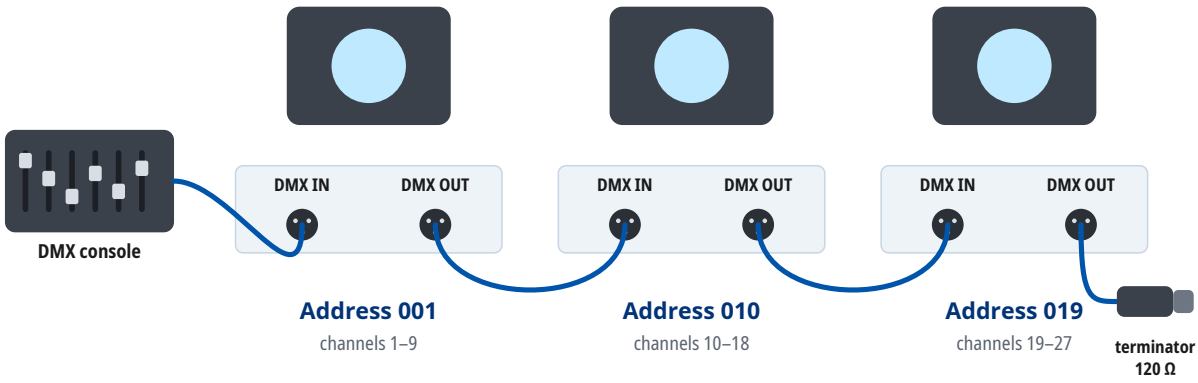

Mode Vari White color mode 8bit: every unit occupies 9 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Vari White color mode 8bit”: 9.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Vari White color mode 8bit”, you can use, for example, the start addresses 1, 10, 19, 28.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	Vari White color mode 8bit 9 channels
Dimmer	1
Color mixing	4–7
Color temperature	3

8 DMX channels

Units in one DMX universe

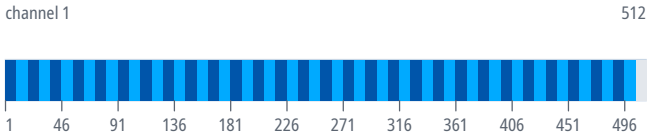

Vari White color mode 8bit
9 channels

up to 56 units
last address 496

Start addresses of 20 units in the mode “Vari White color mode 8bit”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	46	11	91	16	136
2	10	7	55	12	100	17	145
3	19	8	64	13	109	18	154
4	28	9	73	14	118	19	163
5	37	10	82	15	127	20	172

Mode Vari White color mode 8bit

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

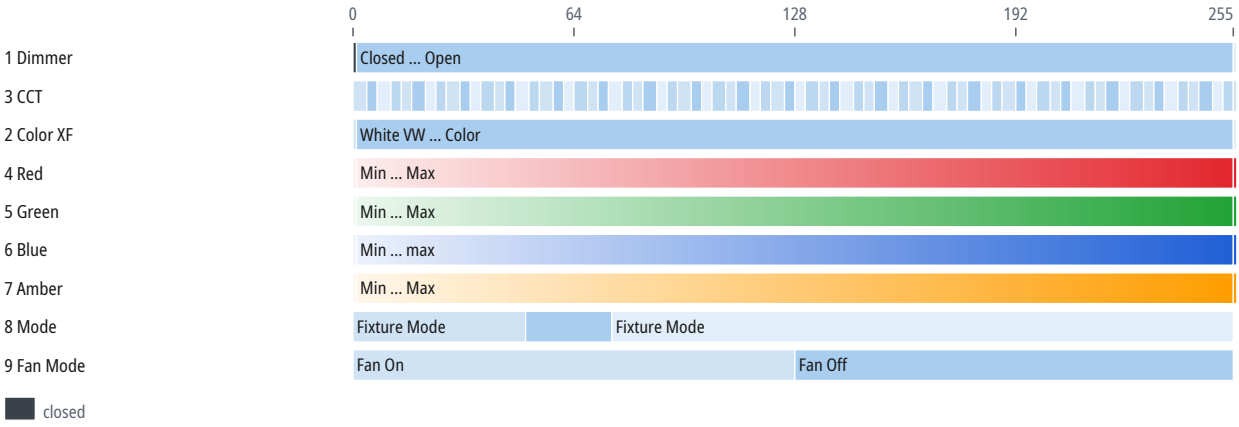

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Color XF		White/Color XF
		0	White VW
		1–254	White VW ... Color
		255	Color
3	CCT	0–3	2700 k
		4–6	2750 k
		7–10	2800 k
		11–13	2850 k

CH	Function	DMX	Description
3	CCT (continued)	14–16	2900 k
		17–20	2950 k
		21–23	3000 k
		24–26	3050 k
		27–30	3100 k
		31–33	3150 k
		34–36	3200 k
		37–40	3250 k
		41–43	3300 k
		44–46	3350 k
		47–50	3400 k
		51–53	3450 k
		54–57	3500 k
		58–60	3550 k
		61–63	3600 k
		64–67	3650 k
		68–70	3700 k
		71–73	3750 k
		74–77	3800 k
		78–80	3850 k
		81–83	3900 k
		84–87	3950 k
		88–90	4000 k
		91–93	4050 k
		94–97	4100 k
		98–100	4150 k
		101–103	4200 k
		104–107	4250 k
		108–110	4300 k
		111–114	4350 k
		115–117	4400 k
		118–120	4450 k
		121–124	4500 k
		125–127	4550 k
		128–130	4600 k
		131–134	4650 k
		135–137	4700 k
		138–140	4750 k
		141–144	4800 k
		145–147	4850 k
		148–150	4900 k
		151–154	4950 k

CH	Function	DMX	Description
3	CCT (continued)	155–157	5000 k
		158–160	5050 k
		161–164	5100 k
		165–167	5150 k
		168–171	5200 k
		172–174	5250 k
		175–177	5300 k
		178–181	5350 k
		182–184	5400 k
		185–187	5450 k
		188–191	5500 k
		192–194	5550 k
		195–197	5600 k
		198–201	5650 k
		202–204	5700 k
		205–207	5750 k
		208–211	5800 k
		212–214	5850 k
		215–217	5900 k
		218–221	5950 k
		222–224	6000 k
		225–228	6050 k
		229–231	6100 k
		232–234	6150 k
		235–238	6200 k
		239–241	6250 k
		242–244	6300 k
		245–248	6350 k
		249–251	6400 k
		252–254	6450 k
		255	6500 k
4	Red	0	Min
		1–254	Min … Max
		255	Max
5	Green	0	Min
		1–254	Min … Max
		255	Max
6	Blue	0	Min
		1–254	Min … max
		255	Max
7	Amber	0	Min
		1–254	Min … Max

CH	Function	DMX	Description
7	Amber (continued)	255	Max
8	Mode		When CH 1 is 50–74:
		0–49	Fixture Mode
		50–74	Vari White color mode 8bit
		75–255	Fixture Mode
9	Fan Mode	0–127	Fan On
		128–255	Fan Off

9 Technical specifications

Parameter	Value
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Color temperature range	2800–10000 K

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.