GDTF Fixture Reference · by SOH

DMX REFERENCE

EFRESNEL VW 500

EK Lights



Manufacturer	EK Lights
GDTF file	EK_Lights_EFRESNEL_VW_500_124742.gdtf
GDTF revision	V1-01 · 2026-01-14
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 7
Mode 2CH 7
Mode 5CH 8
Mode 7CH 9
Mode 9CH 10
Mode 13CH 11
Mode 16CH 12
Mode 19CH 13
10 Technical specifications 15
11 Maintenance and cleaning 15
12 Troubleshooting 16
13 Disposal 16

1 About this manual

This document describes the EFRESNEL VW 500 by EK Lights. It was compiled from the GDTF file EK_Lights_EFRESNEL_VW_500_124742.gdtf from the GDTF-Share library.

File revision: “V1-01”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by EK Lights; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	15.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
2CH	2	256	1, 3, 5, 7, ...
5CH	5	102	1, 6, 11, 16, ...
7CH	7	73	1, 8, 15, 22, ...
9CH	9	56	1, 10, 19, 28, ...
13CH	13	39	1, 14, 27, 40, ...
16CH	16	32	1, 17, 33, 49, ...
19CH	19	26	1, 20, 39, 58, ...

No light? Check these channels

- 2CH: CH 1 Dimmer above 0
- 5CH: CH 1 Dimmer above 0
- 9CH: CH 1 Dimmer above 0; CH 8 Shutter at 0–10 “No Function”
- 16CH: CH 1 Dimmer above 0; CH 15 Shutter at 0–10 “No Function”
- 19CH: CH 1 Dimmer above 0; CH 15 Shutter at 0–10 “No Function”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“400W LED光源 色温: 2800~10000K 高显色指数, CRI≥90 16°~ 74°手动调焦 + / - 绿光比例调节, 独立控制离散光源颜色 调光曲线颜色温度一致 静音操作, 无闪烁输出 可调PWM频率, 适合所有摄像机 性能优越, 操作简易,使用寿命长, 维护成本低 DMX, RDM控制”

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 15.8 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

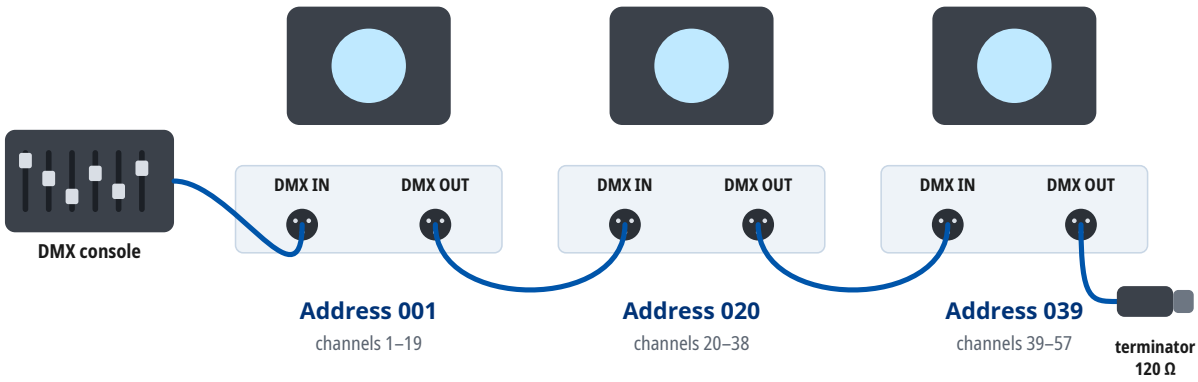

Mode 19CH: every unit occupies 19 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “19CH”: 19.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “19CH”, you can use, for example, the start addresses 1, 20, 39, 58.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	2CH 2 channels	5CH 5 channels	7CH 7 channels	9CH 9 channels	13CH 13 channels	16CH 16 channels	19CH 19 channels
Dimmer	1	1	✓	1	✓	1	1
Dimmer resolution	8 bit	8 bit		8 bit		16 bit	16 bit
Shutter / strobe				8		15	15
Color mixing			1, 3, 5	2, 4, 6	1, 5, 9	3, 7, 11	3, 7, 11
Color temperature		2					16
Effects / macros		4					18

Strobe rate

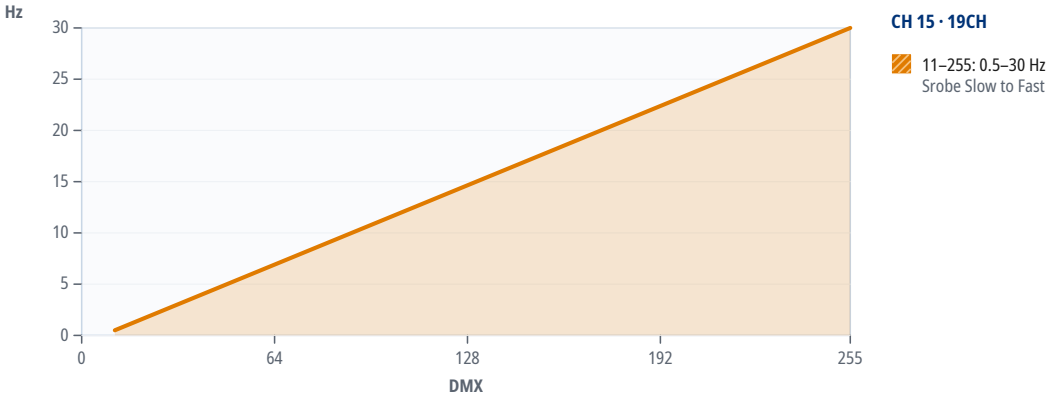

9 DMX channels

Units in one DMX universe

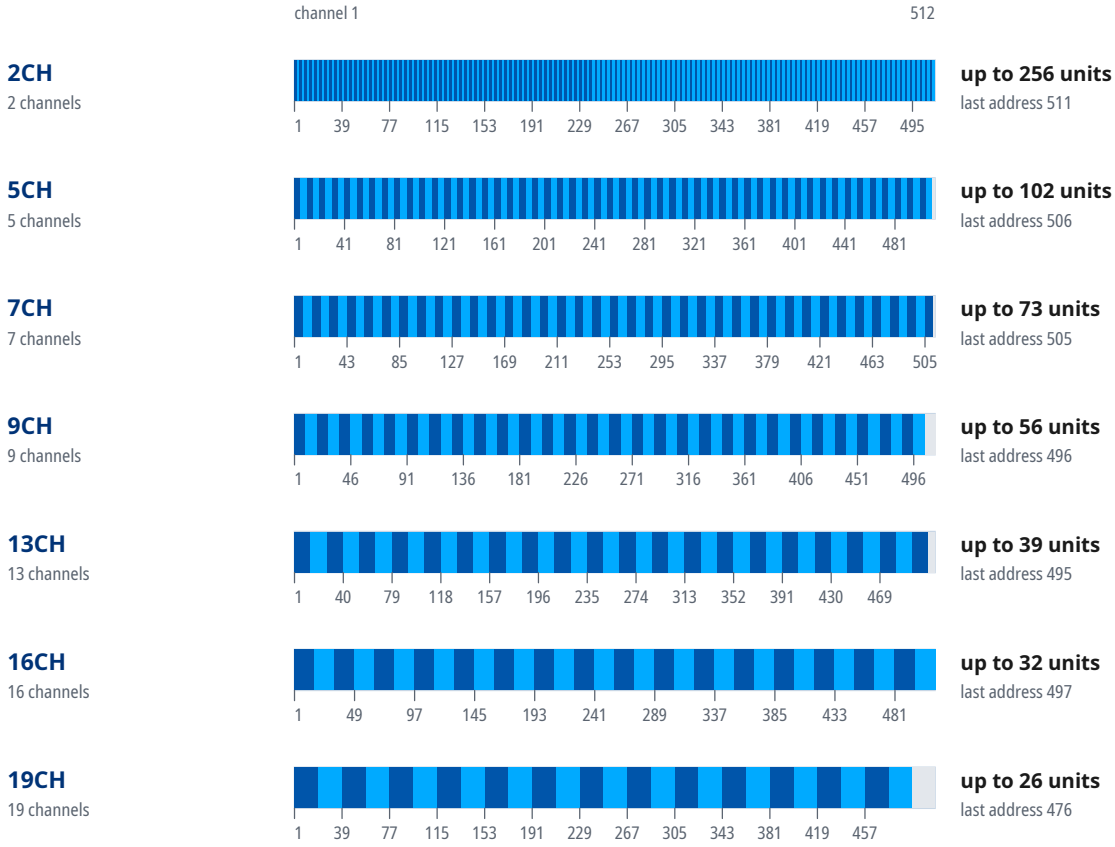

Start addresses of 20 units in the mode “19CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	96	11	191	16	286
2	20	7	115	12	210	17	305
3	39	8	134	13	229	18	324
4	58	9	153	14	248	19	343
5	77	10	172	15	267	20	362

Mode 2CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

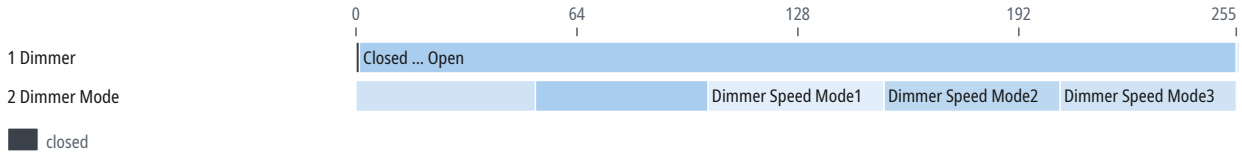

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Dimmer Mode	0–51	Preset dimmer speed from display menu
		52–101	Dimmer Speed Mode Off
		102–152	Dimmer Speed Mode1
		153–203	Dimmer Speed Mode2
		204–255	Dimmer Speed Mode3

Mode 5CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

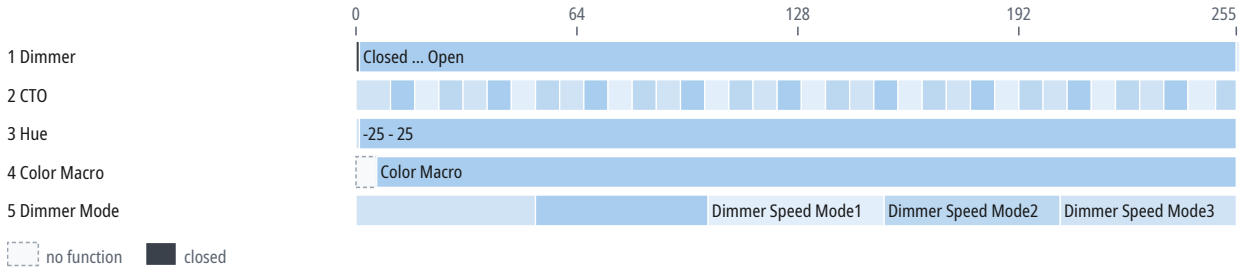

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “2CH” (p. 8)
2	CTO	0–9	2800K-3000K (2800–3000 K)
		10–16	3000K-3200K (3000–3200 K)
		17–23	3200K-3400K (3200–3400 K)
		24–30	3400K-3600K (3400–3600 K)
		31–37	3600K-3800K (3600–3800 K)
		38–44	3800K-4000K (3800–4000 K)
		45–51	4000K-4200K (4000–4200 K)
		52–58	4200K-4400K (4200–4400 K)
		59–65	4400K-4600K (4400–4600 K)
		66–72	4600K-4800K (4600–4800 K)
		73–79	4800K-5000K (4800–5000 K)
		80–86	5000K-5200K (5000–5200 K)
		87–93	5200K-5400K (5200–5400 K)
		94–100	5400K-5600K (5400–5600 K)
		101–107	5600K-5800K (5600–5800 K)
		108–114	5800K-6000K (5800–6000 K)
		115–121	6000K-6200K (6000–6200 K)
		122–128	6200K-6400K (6200–6400 K)

CH	Function	DMX	Description
2	CTO (continued)	129–135	6400K-6600K (6400–6600 K)
		136–142	6600K-6800K (6600–6800 K)
		143–149	6800K-7000K (6800–7000 K)
		150–156	7000K-7200K (7000–7200 K)
		157–163	7200K-7400K (7200–7400 K)
		164–170	7400K-7600K (7400–7600 K)
		171–177	7600K-7800K (7600–7800 K)
		178–184	7800K-8000K (7800–8000 K)
		185–191	8000K-8200K (8000–8200 K)
		192–198	8200K-8400K (8200–8400 K)
		199–205	8400K-8600K (8400–8600 K)
		206–212	8600K-8800K (8600–8800 K)
		213–219	8800K-9000K (8800–9000 K)
		220–226	9000K-9200K (9000–9200 K)
		227–233	9200K-9400K (9200–9400 K)
		234–240	9400K-9600K (9400–9600 K)
		241–248	9600K-9800K (9600–9800 K)
		249–255	9800K-10000K (9800–10000 K)
3	Hue		HUE 1
		0	0
		1–255	-25 - 25
4	Color Macro	0–5	No Function
		6–255	Color Macro
5	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

Mode 7CH

Channel functions at a glance

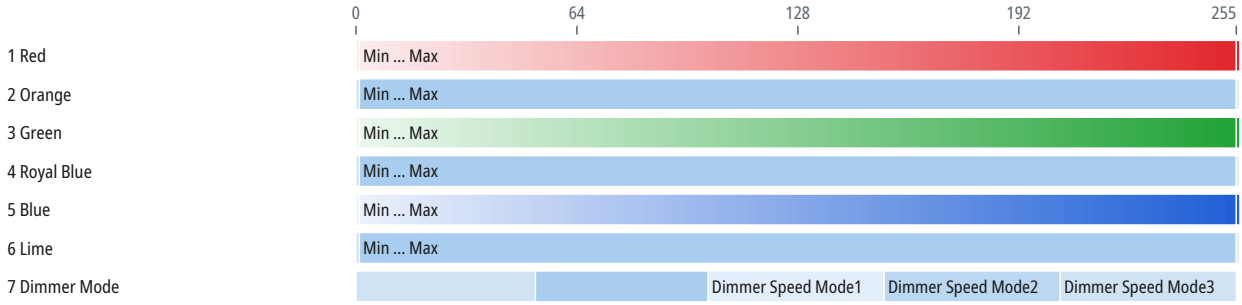

CH	Function	DMX	Description
1	Red	0	Min
		1–254	Min ... Max
		255	Max
2	Orange	0	Min
		1–254	Min ... Max

CH	Function	DMX	Description
2	Orange (continued)	255	Max
3	Green	0	Min
		1–254	Min ... Max
		255	Max
4	Royal Blue	0	Min
		1–254	Min ... Max
		255	Max
5	Blue	0	Min
		1–254	Min ... Max
		255	Max
6	Lime	0	Min
		1–254	Min ... Max
		255	Max
7	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

Mode 9CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 8 Shutter at 0–10 “No Function”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

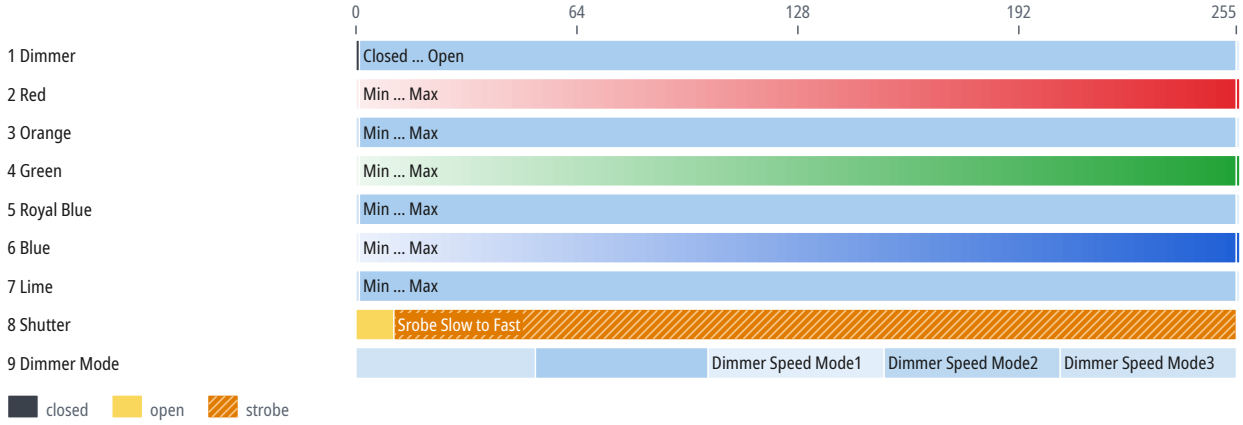

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “2CH” (p. 8)
2	Red		Same as CH 1 in the mode “7CH” (p. 9)
3	Orange		Same as CH 2 in the mode “7CH” (p. 9)
4	Green		Same as CH 3 in the mode “7CH” (p. 10)
5	Royal Blue		Same as CH 4 in the mode “7CH” (p. 10)
6	Blue		Same as CH 5 in the mode “7CH” (p. 10)
7	Lime		Same as CH 6 in the mode “7CH” (p. 10)

CH	Function	DMX	Description
8	Shutter	0–10	No Function
		11–255	Srobe Slow to Fast (0.5–30 Hz)
9	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

Mode 13CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

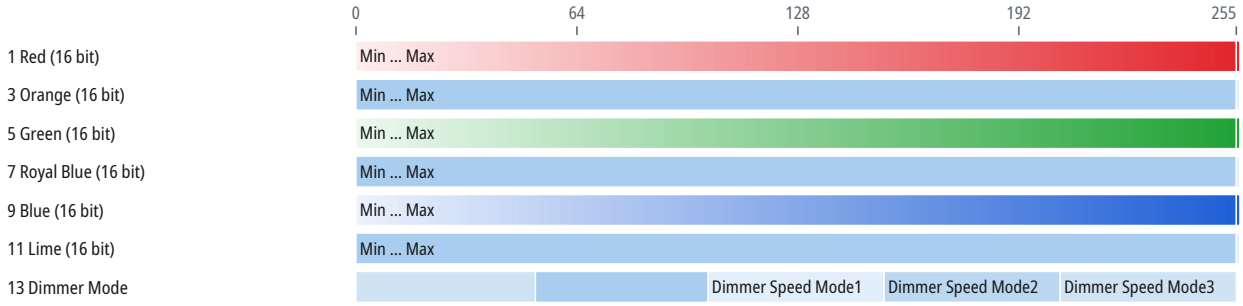

CH	Function	DMX	Description
1	Red	0–255	Min ... Max
		255	Max
2	Red Fine	0–255	Fine adjustment of CH 1
3	Orange	0–255	Min ... Max
		255	Max
4	Orange Fine	0–255	Fine adjustment of CH 3
5	Green	0–255	Min ... Max
		255	Max
6	Green Fine	0–255	Fine adjustment of CH 5
7	Royal Blue	0–255	Min ... Max
		255	Max
8	Royal Blue Fine	0–255	Fine adjustment of CH 7
9	Blue	0–255	Min ... Max
		255	Max
10	Blue Fine	0–255	Fine adjustment of CH 9
11	Lime	0–255	Min ... Max
		255	Max
12	Lime Fine	0–255	Fine adjustment of CH 11
13	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

Mode 16CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 15 Shutter at 0–10 “No Function”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

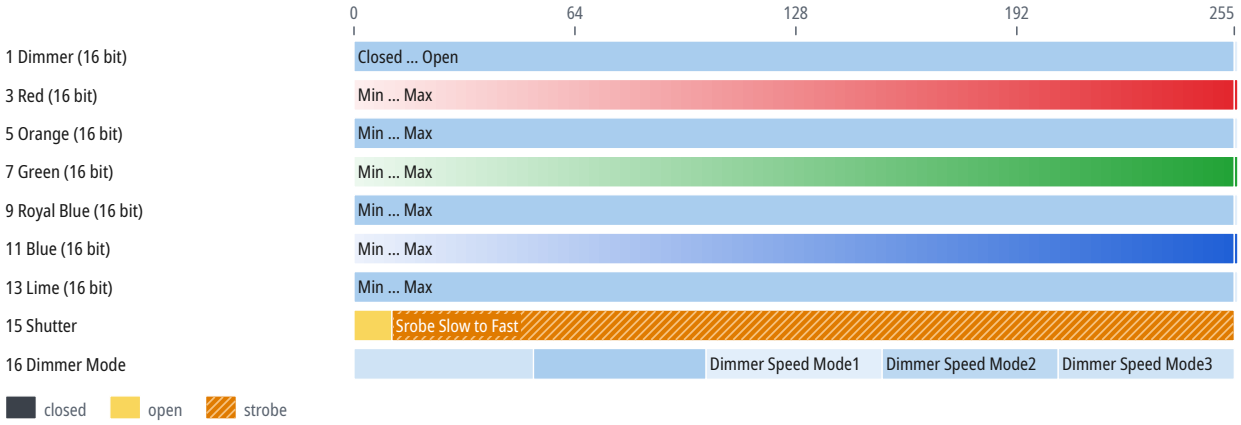

CH	Function	DMX	Description
1	Dimmer	0–255	Closed ... Open
		255	Open
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Red		Same as CH 1 in the mode “13CH” (p. 11)
4	Red Fine	0–255	Fine adjustment of CH 3
5	Orange		Same as CH 3 in the mode “13CH” (p. 11)
6	Orange Fine	0–255	Fine adjustment of CH 5
7	Green		Same as CH 5 in the mode “13CH” (p. 11)
8	Green Fine	0–255	Fine adjustment of CH 7
9	Royal Blue		Same as CH 7 in the mode “13CH” (p. 11)
10	Royal Blue Fine	0–255	Fine adjustment of CH 9
11	Blue		Same as CH 9 in the mode “13CH” (p. 11)
12	Blue Fine	0–255	Fine adjustment of CH 11
13	Lime		Same as CH 11 in the mode “13CH” (p. 11)
14	Lime Fine	0–255	Fine adjustment of CH 13
15	Shutter		Same as CH 8 in the mode “9CH” (p. 11)
16	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

Mode 19CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 15 Shutter at 0–10 “No Function”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

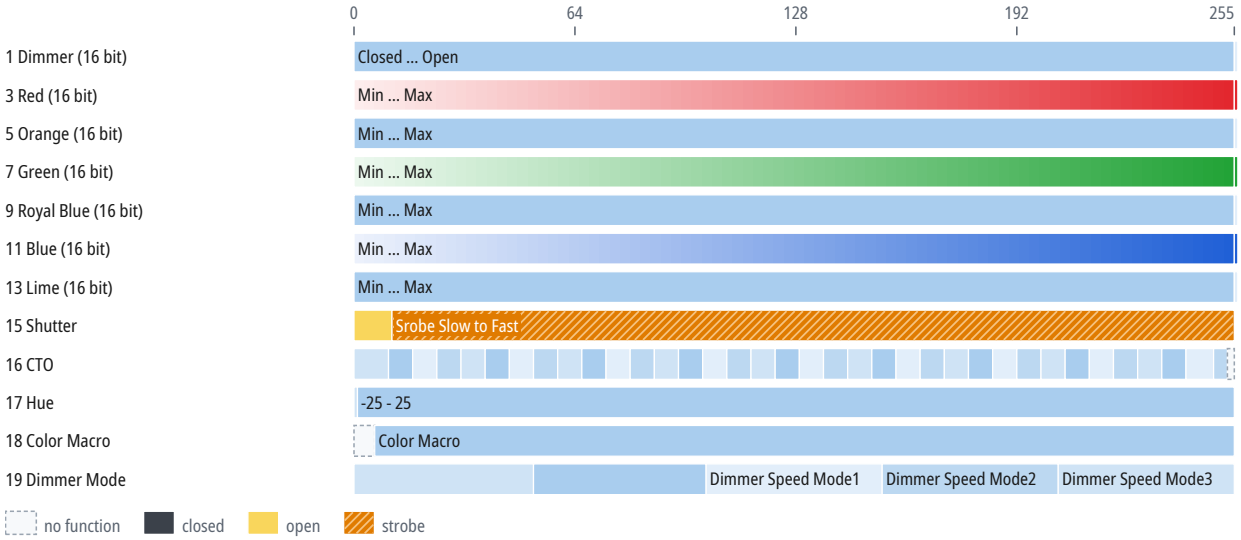

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “16CH” (p. 12)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Red		Same as CH 1 in the mode “13CH” (p. 11)
4	Red Fine	0–255	Fine adjustment of CH 3
5	Orange		Same as CH 3 in the mode “13CH” (p. 11)
6	Orange Fine	0–255	Fine adjustment of CH 5
7	Green		Same as CH 5 in the mode “13CH” (p. 11)
8	Green Fine	0–255	Fine adjustment of CH 7
9	Royal Blue		Same as CH 7 in the mode “13CH” (p. 11)
10	Royal Blue Fine	0–255	Fine adjustment of CH 9
11	Blue		Same as CH 9 in the mode “13CH” (p. 11)
12	Blue Fine	0–255	Fine adjustment of CH 11
13	Lime		Same as CH 11 in the mode “13CH” (p. 11)
14	Lime Fine	0–255	Fine adjustment of CH 13
15	Shutter		Same as CH 8 in the mode “9CH” (p. 11)
16	CTO	0–9	2800K-3000K (2800–3000 K)
		10–16	3000K-3200K (3000–3200 K)
		17–23	3200K-3400K (3200–3400 K)
		24–30	3400K-3600K (3400–3600 K)
		31–37	3600K-3800K (3600–3800 K)
		38–44	3800K-4000K (3800–4000 K)

CH	Function	DMX	Description
16	CTO (continued)	45–51	4000K-4200K (4000–4200 K)
		52–58	4200K-4400K (4200–4400 K)
		59–65	4400K-4600K (4400–4600 K)
		66–72	4600K-4800K (4600–4800 K)
		73–79	4800K-5000K (4800–5000 K)
		80–86	5000K-5200K (5000–5200 K)
		87–93	5200K-5400K (5200–5400 K)
		94–100	5400K-5600K (5400–5600 K)
		101–107	5600K-5800K (5600–5800 K)
		108–114	5800K-6000K (5800–6000 K)
		115–121	6000K-6200K (6000–6200 K)
		122–128	6200K-6400K (6200–6400 K)
		129–135	6400K-6600K (6400–6600 K)
		136–142	6600K-6800K (6600–6800 K)
		143–149	6800K-7000K (6800–7000 K)
		150–156	7000K-7200K (7000–7200 K)
		157–163	7200K-7400K (7200–7400 K)
		164–170	7400K-7600K (7400–7600 K)
		171–177	7600K-7800K (7600–7800 K)
		178–184	7800K-8000K (7800–8000 K)
		185–191	8000K-8200K (8000–8200 K)
		192–198	8200K-8400K (8200–8400 K)
		199–205	8400K-8600K (8400–8600 K)
		206–212	8600K-8800K (8600–8800 K)
		213–219	8800K-9000K (8800–9000 K)
		220–226	9000K-9200K (9000–9200 K)
		227–233	9200K-9400K (9200–9400 K)
		234–240	9400K-9600K (9400–9600 K)
		241–248	9600K-9800K (9600–9800 K)
		249–252	9800K-10000K (9800–10000 K)
		253–255	No Function
17	Hue		Same as CH 3 in the mode “5CH” (p. 9)
18	Color Macro		Same as CH 4 in the mode “5CH” (p. 9)
19	Dimmer Mode		Same as CH 2 in the mode “2CH” (p. 8)

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	400 W
Luminous flux	14,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	100
Optics	
Beam angle	34°
Dimensions and construction	
Weight	15.8 kg
Operating environment	
Operating temperature	-10 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	2800–10000 K
Strobe frequency	0.5–30 Hz

Spot diameter

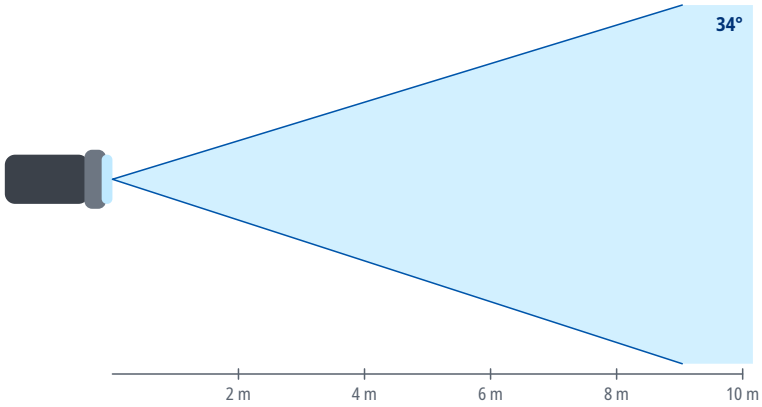

Distance	Ø 34°
2 m	1.2 m
4 m	2.4 m
6 m	3.7 m
8 m	4.9 m
10 m	6.1 m
15 m	9.2 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much

faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.