DMX REFERENCE

MC10X

EK Lights



Manufacturer	EK Lights
GDTF file	EK_Lights_MC10X_146472.gdtf
GDTF revision	260129 · 2026-06-11
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 9
Mode RGBCAM 51CH 10
Mode CMY 45CH 18
Mode XY 43CH 21
10 Technical specifications 23
11 Maintenance and cleaning 24
12 Troubleshooting 24
13 Disposal 25

1 About this manual

This document describes the MC10X by EK Lights. It was compiled from the GDTF file EK_Lights_MC10X_146472.gdtf from the GDTF-Share library.

File revision: “260129”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by EK Lights; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	47 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
RGBCAM 51CH	51	10	1, 52, 103, 154, ...
CMY 45CH	45	11	1, 46, 91, 136, ...
XY 43CH	43	11	1, 44, 87, 130, ...

No light? Check these channels

- RGBCAM 51CH: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”
- CMY 45CH: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”
- XY 43CH: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

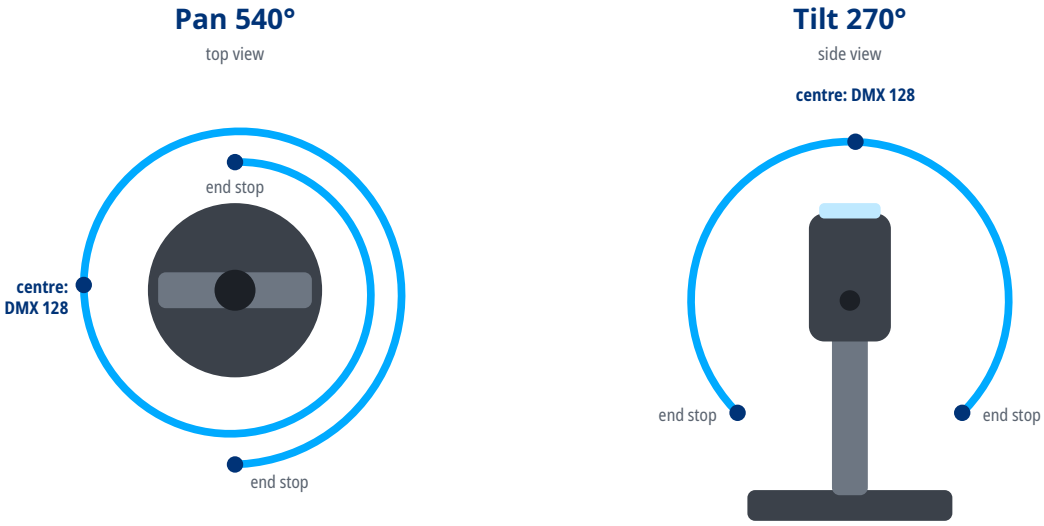

5 Installation

> ⚠ **WARNING**
>
> - Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
> - The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
> - Weight of the device: 47 kg.
> - Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
> - Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
> - During installation and removal, keep people out of the area below the work position.
> - Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

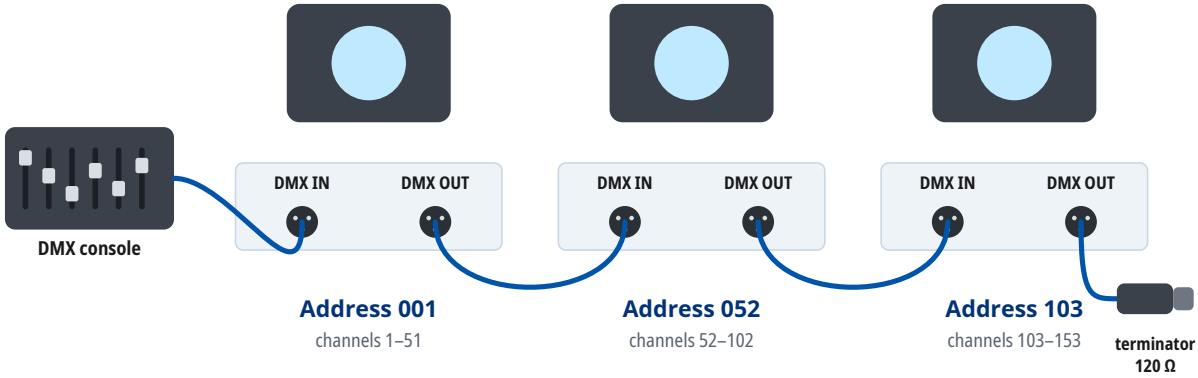

Mode RGBCAM 51CH: every unit occupies 51 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “RGBCAM 51CH”: 51.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “RGBCAM 51CH”, you can use, for example, the start addresses 1, 52, 103, 154.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	RGBCAM 51CH 51 channels	CMY 45CH 45 channels	XY 43CH 43 channels
Pan / Tilt	1, 3	1, 3	1, 3
Dimmer	6	6	6
Shutter / strobe	5	5	5
Color mixing	6× (11–21)	11, 13, 15	
Color temperature	8	8	8
Color wheel	23	17	15
Gobo wheel	24, 26	18, 20	16, 18
Gobo rotation	25, 27	19, 21	17, 19
Prism	28–31	22–25	20–23
Frost	32, 33	26, 27	24, 25
Zoom	39	33	31
Focus	37, 41	31, 35	29, 33
Iris	36	30	28
Animation wheel	34, 35	28, 29	26, 27

Color wheel

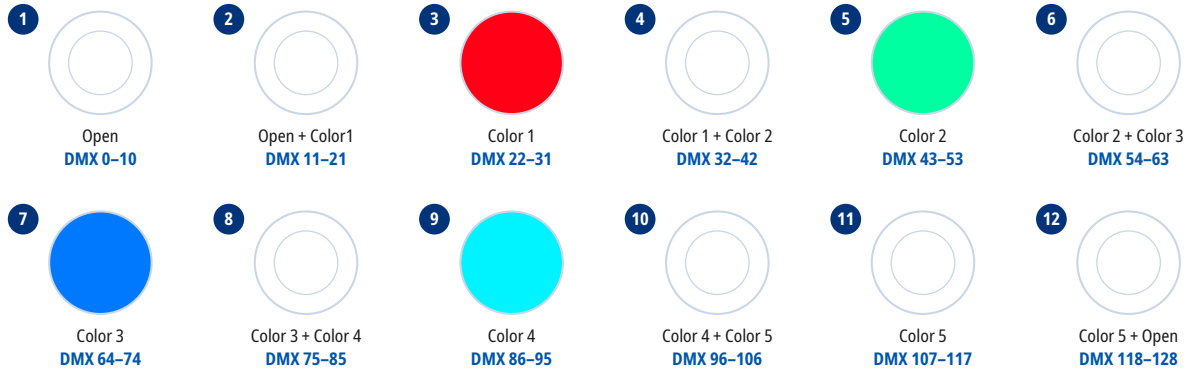

Gobo wheel 1

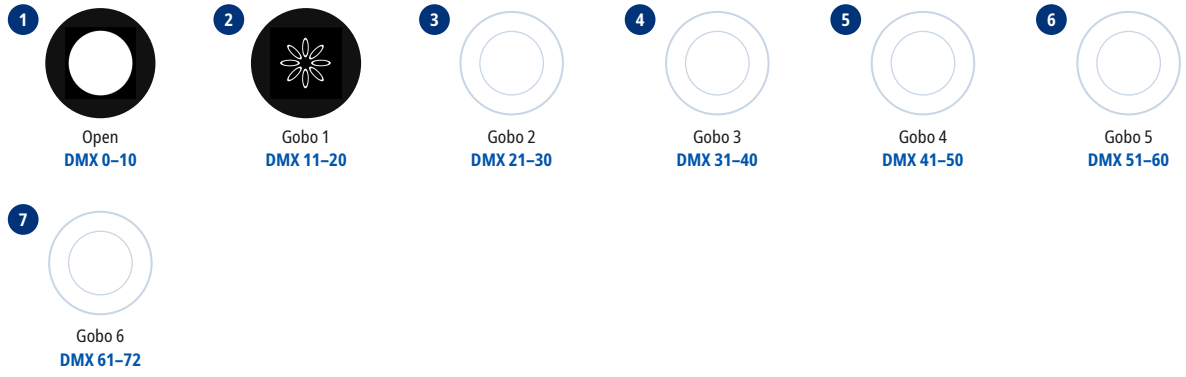

Gobo wheel 2

1 
Open
DMX 0–10

2 
Gobo 1
DMX 11–20

3
Gobo 2
DMX 21–30

4
Gobo 3
DMX 31–40

5
Gobo 4
DMX 41–50

6
Gobo 5
DMX 51–60

7
Gobo 6
DMX 61–72

Prism 1

1
Open
DMX 0–127

2 
4 facets
Prism
DMX 128–255

Prism 2

1
Open
DMX 0–127

2 
6 facets
Prism
DMX 128–255

LED colors and the colors they mix

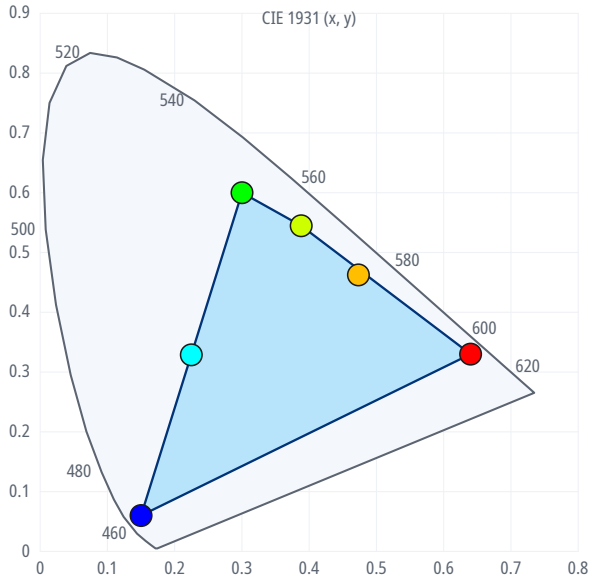

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Cyan	0.225	0.329
Blue	0.150	0.060
Amber	0.473	0.463
Mint	0.388	0.545

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

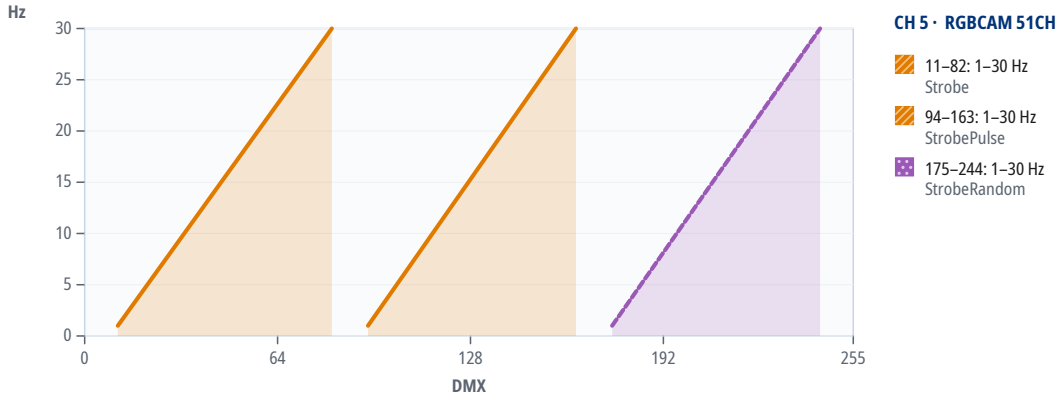

9 DMX channels

Units in one DMX universe

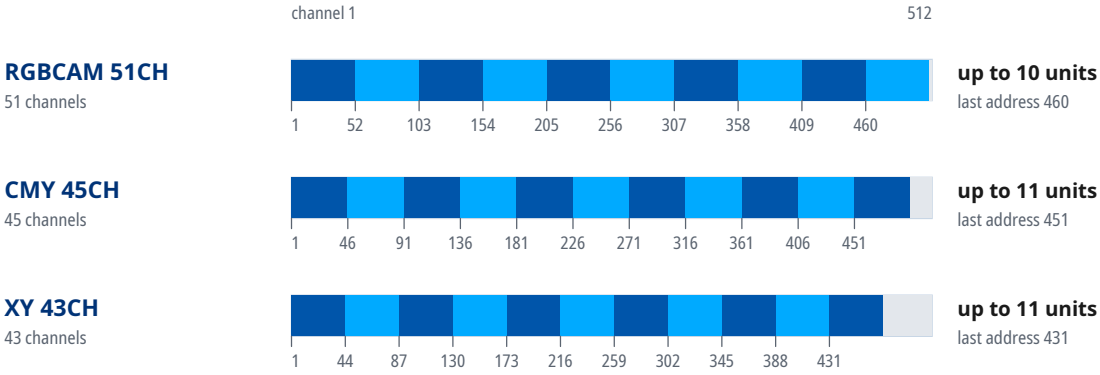

Start addresses of 20 units in the mode “RGBCAM 51CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	256	11	U2 · 1	16	U2 · 256
2	52	7	307	12	U2 · 52	17	U2 · 307
3	103	8	358	13	U2 · 103	18	U2 · 358
4	154	9	409	14	U2 · 154	19	U2 · 409
5	205	10	460	15	U2 · 205	20	U2 · 460

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode RGBCAM 51CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 6 Dimmer 255, CH 11 Red 255, CH 13 Green 255, CH 15 Blue 255, CH 17 Cyan 255, CH 19 Amber 255, CH 21 Lime 255.

Channel functions at a glance

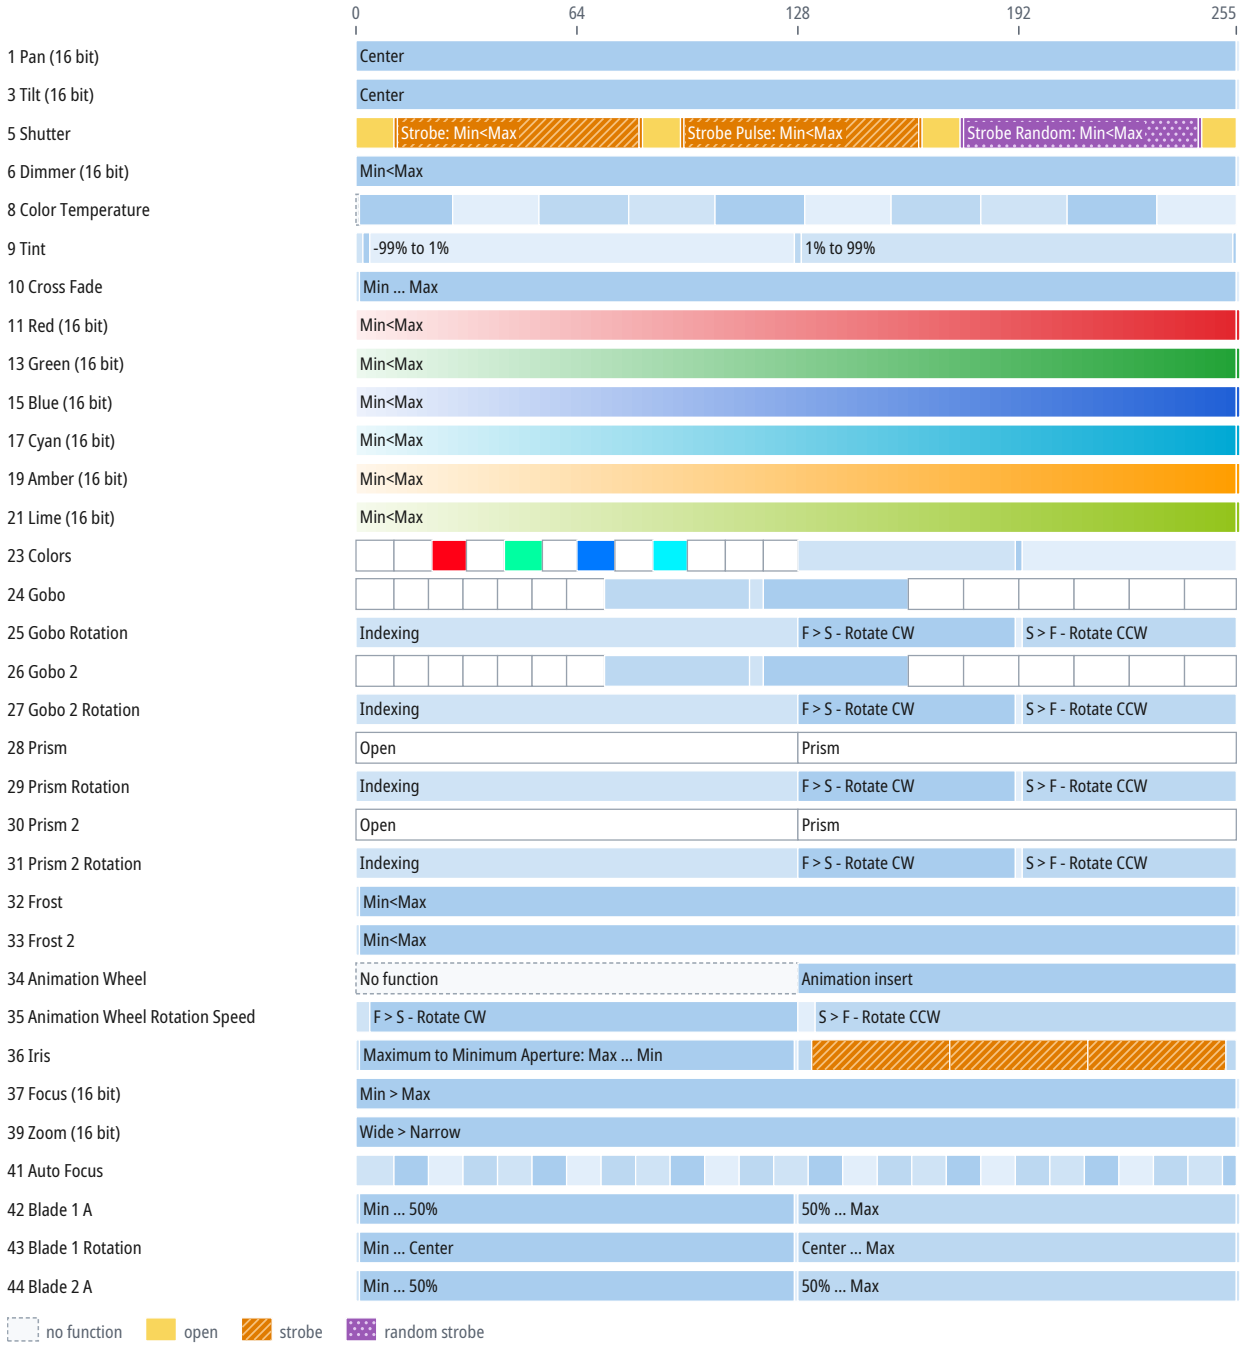

Channel functions at a glance

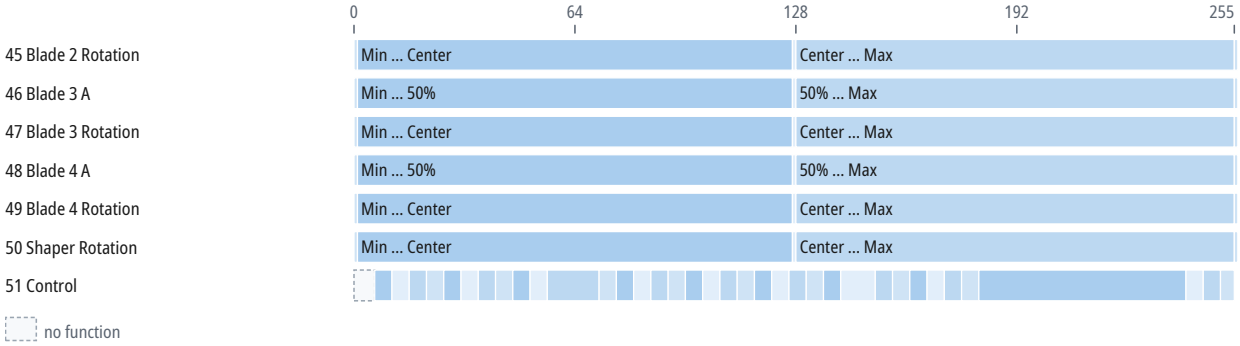

CH	Function	DMX	Description
1	Pan	0	Min
		0–255	Center
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0	Min
		0–255	Center
		255	Max
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Shutter	0–10	Open
		11	Strobe: Min
		12–81	Strobe: Min<Max
		82	Strobe: Max
		83–93	Open
		94	Strobe Pulse: Min
		95–162	Strobe Pulse: Min<Max
		163	Strobe Pulse: Max
		164–174	Open
		175	Strobe Random: Min
		176–243	Strobe Random: Min<Max
		244	Strobe Random: Max
		245–255	Open
6	Dimmer	0	Min
		0–255	Min<Max
		255	Max
7	Dimmer Fine	0–255	Fine adjustment of CH 6
8	Color Temperature	0	No Function
		1–27	1800K - 2200K
		28–52	2200K - 2600K (1098–2039 K)
		53–78	2600K - 2800K (2078–3059 K)
		79–103	2800K - 3200K (3098–4039 K)
		104–129	3200K - 4000K (4078–5059 K)

CH	Function	DMX	Description
8	Color Temperature (continued)	130–154	4000K - 5600K (5098–6039 K)
		155–180	5600K - 6500K (6078–7059 K)
		181–205	6500K - 7500K (7098–8039 K)
		206–231	7500K - 8500K (8078–9059 K)
		232–255	8500K - 10000K (9098–10000 K)
9	Tint	0–1	No Effect
		2–3	Full Minus Green
		4–126	-99% to 1%
		127–128	No Effect
		129–253	1% to 99%
		254–255	Full Plus Green
10	Cross Fade	0	Min
		1–254	Min ... Max
		255	Max
11	Red	0	Min
		0–255	Min<Max
		255	Max
12	Red Fine	0–255	Fine adjustment of CH 11
13	Green	0	Min
		0–255	Min<Max
		255	Max
14	Green Fine	0–255	Fine adjustment of CH 13
15	Blue	0	Min
		0–255	Min<Max
		255	Max
16	Blue Fine	0–255	Fine adjustment of CH 15
17	Cyan	0	Min
		0–255	Min<Max
		255	Max
18	Cyan Fine	0–255	Fine adjustment of CH 17
19	Amber	0	Min
		0–255	Min<Max
		255	Max
20	Amber Fine	0–255	Fine adjustment of CH 19
21	Lime	0	Min
		0–255	Min<Max
		255	Max
22	Lime Fine	0–255	Fine adjustment of CH 21
23	Colors	0–10	Color Wheel: Open
		11–21	Open + Color1
		22–31	Color 1
		32–42	Color 1 + Color 2

CH	Function	DMX	Description
23	Colors (continued)	43–53	Color 2
		54–63	Color 2 + Color 3
		64–74	Color 3
		75–85	Color 3 + Color 4
		86–95	Color 4
		96–106	Color 4 + Color 5
		107–117	Color 5
		118–127	Color + Open
		128–190	Color Wheel Spin: Fast to Slow(Forward Spin) (720–0.1 °/s)
		191–192	Color Wheel Spin: Stop (Stop Rotation)
		193–255	Color Wheel Spin: Slow to Fast(Revers Spin) (0.1–720 °/s)
24	Gobo	0–10	Gobo: Open
		11–20	Gobo 1
		21–30	Gobo 2
		31–40	Gobo 3
		41–50	Gobo 4
		51–60	Gobo 5
		61–71	Gobo 6
		72–113	Gobo 1 Wheel Spin: Fast to Slow(Revers Spin) (720–0.1 °/s)
		114–117	Gobo 1 Wheel Spin: Stop (Stop Rotation)
		118–159	Gobo 1 Wheel Spin: Slow to Fast(Forward Spin) (0.1–720 °/s)
		160–175	Gobo1 Shak (0.1–10 Hz)
		176–191	Gobo2 Shak (0.1–10 Hz)
		192–207	Gobo3 Shak (0.1–10 Hz)
		208–223	Gobo4 Shak (0.1–10 Hz)
		224–239	Gobo5 Shak (0.1–10 Hz)
		240–255	Gobo6 Shak (0.1–10 Hz)
25	Gobo Rotation	0–127	Indexing (540°)
		128–190	F > S - Rotate CW (720–0.1 °/s)
		191–192	Gobo 1 Pos Rotate: Stop
		193–255	S > F - Rotate CCW (0.1–720 °/s)
26	Gobo 2	0–10	Gobo: Open
		11–20	Gobo 1
		21–30	Gobo 2
		31–40	Gobo 3
		41–50	Gobo 4
		51–60	Gobo 5
		61–71	Gobo 6
		72–113	Gobo 2 Wheel Spin: Fast to Slow(Revers Spin) (720–0.1 °/s)
		114–117	Gobo 2 Wheel Spin: Stop (Stop Rotation)
		118–159	Gobo 2 Wheel Spin: Slow to Fast(Forward Spin) (0.1–720 °/s)
		160–175	Gobo1 Shak (0.1–10 Hz)

CH	Function	DMX	Description
26	Gobo 2 (continued)	176–191	Gobo2 Shak (0.1–10 Hz)
		192–207	Gobo3 Shak (0.1–10 Hz)
		208–223	Gobo4 Shak (0.1–10 Hz)
		224–239	Gobo5 Shak (0.1–10 Hz)
		240–255	Gobo6 Shak (0.1–10 Hz)
27	Gobo 2 Rotation	0–127	Indexing (540°)
		128–190	F > S - Rotate CW (720–0.1 °/s)
		191–192	Gobo 2 Pos Rotate: Stop
		193–255	S > F - Rotate CCW (0.1–720 °/s)
28	Prism	0–127	Open
		128–255	Prism
29	Prism Rotation	0–127	Indexing (540°)
		128–190	F > S - Rotate CW (270–0.1 °/s)
		191–192	Prism 1 Pos Rotate: Stop
		193–255	S > F - Rotate CCW (0.1–270 °/s)
30	Prism 2	0–127	Open
		128–255	Prism
31	Prism 2 Rotation	0–127	Indexing (540°)
		128–190	F > S - Rotate CW (270–0.1 °/s)
		191–192	Prism 2 Pos Rotate: Stop
		193–255	S > F - Rotate CCW (0.1–270 °/s)
32	Frost	0	Min
		1–254	Min<Max
		255	Max
33	Frost 2	0	Min
		1–254	Min<Max
		255	Max
34	Animation Wheel	0–127	No function
		128–255	Animation insert
35	Animation Wheel Rotation Speed		Animation Wheel Pos
		0–3	Open
		4–127	F > S - Rotate CW (655–0.1 °/s)
		128–132	Stop
		133–255	S > F - Rotate CCW (0.1–655 °/s)
36	Iris	0	Maximum to Minimum Aperture: Max
		1–126	Maximum to Minimum Aperture: Max ... Min
		127	Maximum to Minimum Aperture: Min
		128–131	Maximum Aperture
		132–171	Slow to Fast Pulsation
		172–211	Slow to Fast Pulsation Fast Opening
		212–251	Slow to Fast Pulsation Fast Closing
		252–255	Maximum Aperture

CH	Function	DMX	Description
37	Focus	0	Min
		0–255	Min > Max
		255	Max
38	Focus Fine	0–255	Fine adjustment of CH 37
39	Zoom	0	Wide
		0–255	Wide > Narrow
		255	Narrow
40	Zoom Fine	0–255	Fine adjustment of CH 39
41	Auto Focus	0–10	Auto Focus OFF
		11–20	Hole: 4 metres
		21–30	Hole: 6 metres
		31–40	Hole: 8 metres
		41–50	Hole: 10 metres
		51–60	Hole: 12 metres
		61–70	Hole: 14 metres
		71–80	Hole: 16 metres
		81–90	Hole: 18 metres
		91–100	RGobo: 4 metres
		101–110	RGobo: 6 metres
		111–120	RGobo: 8 metres
		121–130	RGobo: 10 metres
		131–140	RGobo: 12 metres
		141–150	RGobo: 14 metres
		151–160	RGobo: 16 metres
		161–170	RGobo: 18 metres
		171–180	RGobo: 4 metres
		181–190	RGobo: 6 metres
		191–200	RGobo: 8 metres
		201–210	RGobo: 10 metres
		211–220	RGobo: 12 metres
		221–230	RGobo: 14 metres
		231–240	RGobo: 16 metres
		241–250	RGobo: 18 metres
		251–255	Auto Focus OFF
42	Blade 1 A	0	Min
		1–126	Min ... 50%
		127	50%
		128–254	50% ... Max
		255	Max
43	Blade 1 Rotation	0	Min
		1–126	Min ... Center
		127	Center

CH	Function	DMX	Description
43	Blade 1 Rotation (continued)	128–254	Center … Max
		255	Max
44	Blade 2 A	0	Min
		1–126	Min … 50%
		127	50%
		128–254	50% … Max
		255	Max
45	Blade 2 Rotation	0	Min
		1–126	Min … Center
		127	Center
		128–254	Center … Max
		255	Max
46	Blade 3 A	0	Min
		1–126	Min … 50%
		127	50%
		128–254	50% … Max
		255	Max
47	Blade 3 Rotation	0	Min
		1–126	Min … Center
		127	Center
		128–254	Center … Max
		255	Max
48	Blade 4 A	0	Min
		1–126	Min … 50%
		127	50%
		128–254	50% … Max
		255	Max
49	Blade 4 Rotation	0	Min
		1–126	Min … Center
		127	Center
		128–254	Center … Max
		255	Max
50	Shaper Rotation	0	Min
		1–126	Min … Center
		127	Center
		128–254	Center … Max
		255	Max
51	Control	0–5	No Function
		6–10	Dimmer Mode Off
		11–15	Dimmer Mode 1
		16–20	Dimmer Mode 2
		21–25	Dimmer Mode 3

CH	Function	DMX	Description
51	Control (continued)	26–30	Linear
		31–35	Square
		36–40	Inverse Square
		41–45	S Curve
		46–50	Reserve
		51–55	1200 Hz
		56–70	Reserve
		71–75	25kHz
		76–80	Pan Inverse Off
		81–85	Pan Inverse On
		86–90	Tilt Inverse Off
		91–95	Tilt Inverse On
		96–100	Swap Pan Tilt Off
		101–105	Swap Pan Tilt On
		106–110	Fan Auto
		111–115	Fan On
		116–120	Fan Off
		121–125	Fan Silent
		126–130	Color Calibration Off
		131–135	Color Calibration Adjust
		136–140	Factory Calibration
		141–150	Reserve
		151–155	Red Shift ON
		156–160	Red Shift OFF
		161–165	Framing Shutter Independent Mode
		166–170	Framing Shutter Mixed Mode
		171–175	FrostIndependent Mode
		176–180	Frost Mixed Mode
		181–240	Reserve
		241–245	Head Reset
		246–250	Pan/Tilt Reset
		251–255	Complete Reset

Mode CMY 45CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 6 Dimmer 255, CH 11 Cyan 0, CH 13 Magenta 0, CH 15 Yellow 0.

Channel functions at a glance



Channel functions at a glance

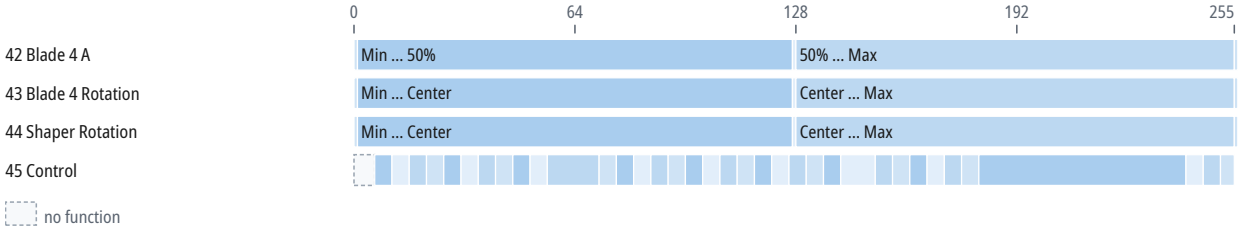

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “RGBCAM 51CH” (p. 11)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “RGBCAM 51CH” (p. 11)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Shutter		Same as CH 5 in the mode “RGBCAM 51CH” (p. 11)
6	Dimmer		Same as CH 6 in the mode “RGBCAM 51CH” (p. 11)
7	Dimmer Fine	0–255	Fine adjustment of CH 6
8	Color Temperature		Same as CH 8 in the mode “RGBCAM 51CH” (p. 11)
9	Tint		Same as CH 9 in the mode “RGBCAM 51CH” (p. 12)
10	Cross Fade		Same as CH 10 in the mode “RGBCAM 51CH” (p. 12)
11	Cyan	0	Min
		0–255	Min<Max
		255	Max
12	Cyan Fine	0–255	Fine adjustment of CH 11
13	Magenta	0	Min
		0–255	Min<Max
		255	Max
14	Magenta Fine	0–255	Fine adjustment of CH 13
15	Yellow	0	Min
		0–255	Min<Max
		255	Max
16	Yellow Fine	0–255	Fine adjustment of CH 15
17	Colors		Same as CH 23 in the mode “RGBCAM 51CH” (p. 12)
18	Gobo		Same as CH 24 in the mode “RGBCAM 51CH” (p. 13)
19	Gobo Rotation		Same as CH 25 in the mode “RGBCAM 51CH” (p. 13)
20	Gobo 2		Same as CH 26 in the mode “RGBCAM 51CH” (p. 13)
21	Gobo 2 Rotation		Same as CH 27 in the mode “RGBCAM 51CH” (p. 14)
22	Prism		Same as CH 28 in the mode “RGBCAM 51CH” (p. 14)
23	Prism Rotation		Same as CH 29 in the mode “RGBCAM 51CH” (p. 14)
24	Prism 2		Same as CH 30 in the mode “RGBCAM 51CH” (p. 14)
25	Prism 2 Rotation		Same as CH 31 in the mode “RGBCAM 51CH” (p. 14)
26	Frost		Same as CH 32 in the mode “RGBCAM 51CH” (p. 14)
27	Frost 2		Same as CH 33 in the mode “RGBCAM 51CH” (p. 14)
28	Animation Wheel		Same as CH 34 in the mode “RGBCAM 51CH” (p. 14)

CH	Function	DMX	Description
29	Animation Wheel Rotation Speed		Same as CH 35 in the mode “RGBCAM 51CH” (p. 14)
30	Iris		Same as CH 36 in the mode “RGBCAM 51CH” (p. 14)
31	Focus		Same as CH 37 in the mode “RGBCAM 51CH” (p. 15)
32	Focus Fine	0–255	Fine adjustment of CH 31
33	Zoom		Same as CH 39 in the mode “RGBCAM 51CH” (p. 15)
34	Zoom Fine	0–255	Fine adjustment of CH 33
35	Auto Focus		Same as CH 41 in the mode “RGBCAM 51CH” (p. 15)
36	Blade 1 A		Same as CH 42 in the mode “RGBCAM 51CH” (p. 15)
37	Blade 1 Rotation		Same as CH 43 in the mode “RGBCAM 51CH” (p. 15)
38	Blade 2 A		Same as CH 44 in the mode “RGBCAM 51CH” (p. 16)
39	Blade 2 Rotation		Same as CH 45 in the mode “RGBCAM 51CH” (p. 16)
40	Blade 3 A		Same as CH 46 in the mode “RGBCAM 51CH” (p. 16)
41	Blade 3 Rotation		Same as CH 47 in the mode “RGBCAM 51CH” (p. 16)
42	Blade 4 A		Same as CH 48 in the mode “RGBCAM 51CH” (p. 16)
43	Blade 4 Rotation		Same as CH 49 in the mode “RGBCAM 51CH” (p. 16)
44	Shaper Rotation		Same as CH 50 in the mode “RGBCAM 51CH” (p. 16)
45	Control		Same as CH 51 in the mode “RGBCAM 51CH” (p. 16)

Mode XY 43CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Shutter at 0–10, 83–93, 164–174 or 245–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 6 Dimmer 255.

Channel functions at a glance

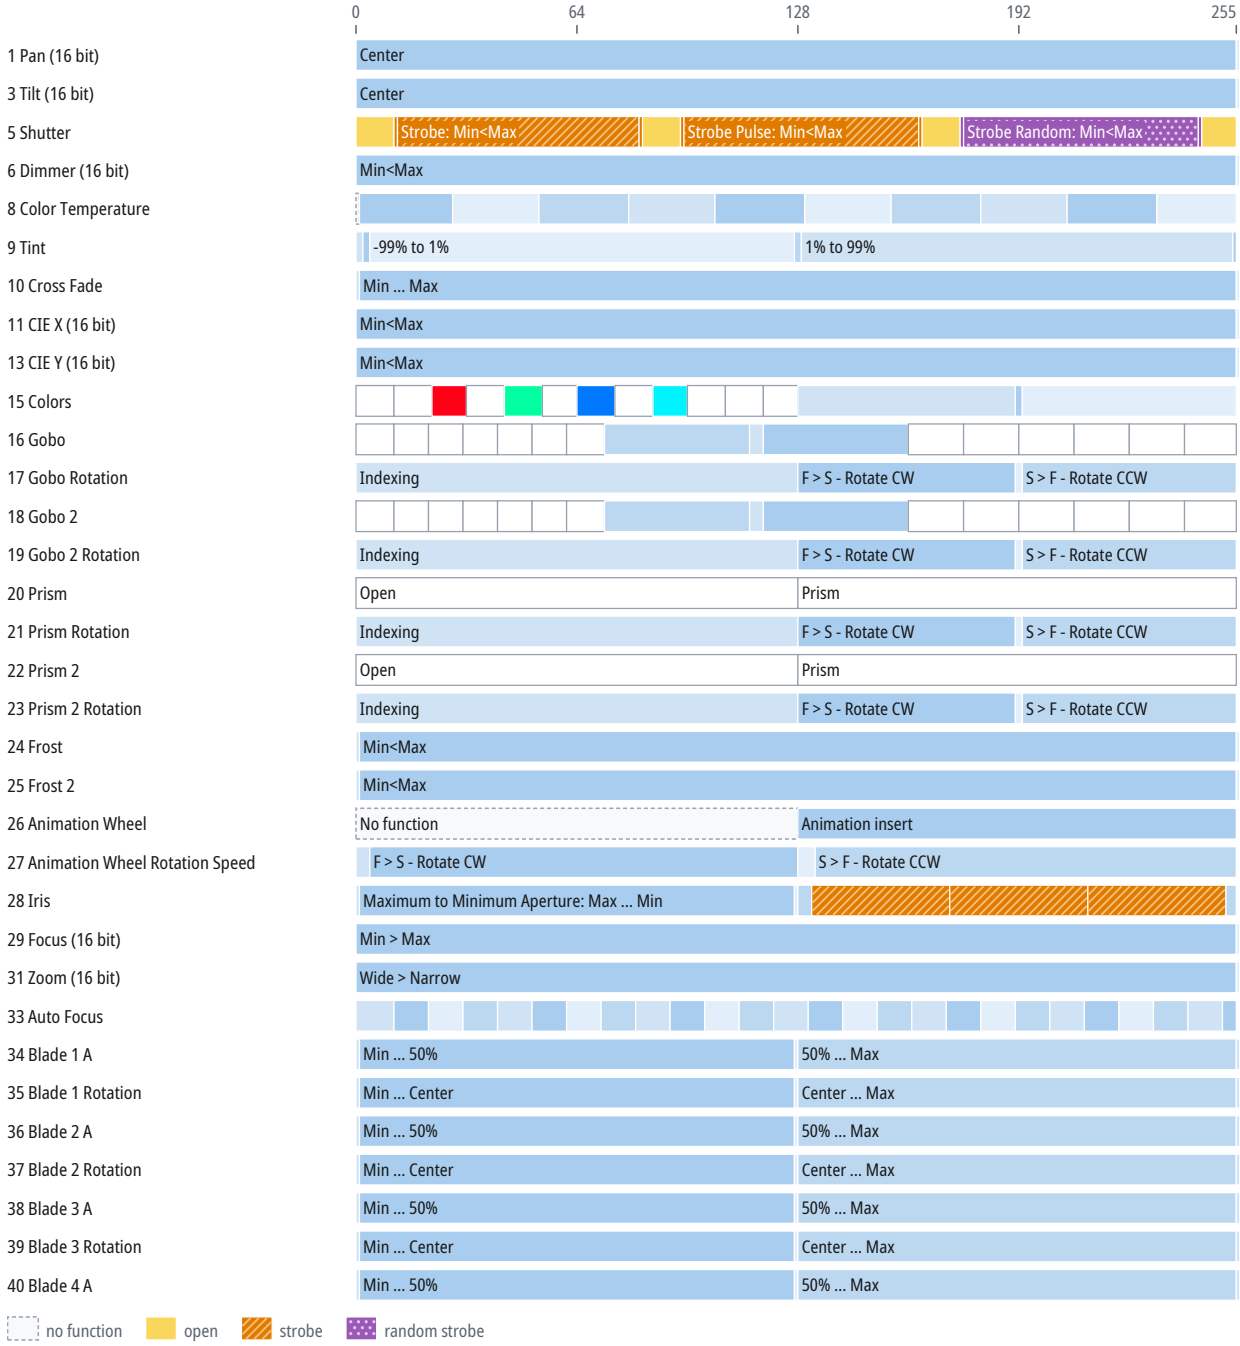

Channel functions at a glance

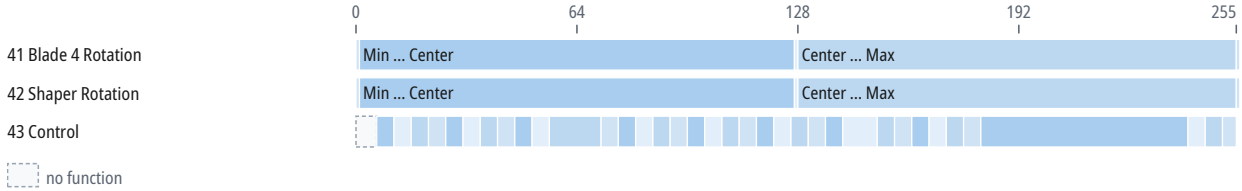

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “RGBCAM 51CH” (p. 11)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “RGBCAM 51CH” (p. 11)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Shutter		Same as CH 5 in the mode “RGBCAM 51CH” (p. 11)
6	Dimmer		Same as CH 6 in the mode “RGBCAM 51CH” (p. 11)
7	Dimmer Fine	0–255	Fine adjustment of CH 6
8	Color Temperature		Same as CH 8 in the mode “RGBCAM 51CH” (p. 11)
9	Tint		Same as CH 9 in the mode “RGBCAM 51CH” (p. 12)
10	Cross Fade		Same as CH 10 in the mode “RGBCAM 51CH” (p. 12)
11	CIE X	0	Min
		0–255	Min<Max
		255	Max
12	CIE X Fine	0–255	Fine adjustment of CH 11
13	CIE Y	0	Min
		0–255	Min<Max
		255	Max
14	CIE Y Fine	0–255	Fine adjustment of CH 13
15	Colors		Same as CH 23 in the mode “RGBCAM 51CH” (p. 12)
16	Gobo		Same as CH 24 in the mode “RGBCAM 51CH” (p. 13)
17	Gobo Rotation		Same as CH 25 in the mode “RGBCAM 51CH” (p. 13)
18	Gobo 2		Same as CH 26 in the mode “RGBCAM 51CH” (p. 13)
19	Gobo 2 Rotation		Same as CH 27 in the mode “RGBCAM 51CH” (p. 14)
20	Prism		Same as CH 28 in the mode “RGBCAM 51CH” (p. 14)
21	Prism Rotation		Same as CH 29 in the mode “RGBCAM 51CH” (p. 14)
22	Prism 2		Same as CH 30 in the mode “RGBCAM 51CH” (p. 14)
23	Prism 2 Rotation		Same as CH 31 in the mode “RGBCAM 51CH” (p. 14)
24	Frost		Same as CH 32 in the mode “RGBCAM 51CH” (p. 14)
25	Frost 2		Same as CH 33 in the mode “RGBCAM 51CH” (p. 14)
26	Animation Wheel		Same as CH 34 in the mode “RGBCAM 51CH” (p. 14)
27	Animation Wheel Rotation Speed		Same as CH 35 in the mode “RGBCAM 51CH” (p. 14)
28	Iris		Same as CH 36 in the mode “RGBCAM 51CH” (p. 14)
29	Focus		Same as CH 37 in the mode “RGBCAM 51CH” (p. 15)
30	Focus Fine	0–255	Fine adjustment of CH 29
31	Zoom		Same as CH 39 in the mode “RGBCAM 51CH” (p. 15)

CH	Function	DMX	Description
32	Zoom Fine	0–255	Fine adjustment of CH 31
33	Auto Focus		Same as CH 41 in the mode “RGBCAM 51CH” (p. 15)
34	Blade 1 A		Same as CH 42 in the mode “RGBCAM 51CH” (p. 15)
35	Blade 1 Rotation		Same as CH 43 in the mode “RGBCAM 51CH” (p. 15)
36	Blade 2 A		Same as CH 44 in the mode “RGBCAM 51CH” (p. 16)
37	Blade 2 Rotation		Same as CH 45 in the mode “RGBCAM 51CH” (p. 16)
38	Blade 3 A		Same as CH 46 in the mode “RGBCAM 51CH” (p. 16)
39	Blade 3 Rotation		Same as CH 47 in the mode “RGBCAM 51CH” (p. 16)
40	Blade 4 A		Same as CH 48 in the mode “RGBCAM 51CH” (p. 16)
41	Blade 4 Rotation		Same as CH 49 in the mode “RGBCAM 51CH” (p. 16)
42	Shaper Rotation		Same as CH 50 in the mode “RGBCAM 51CH” (p. 16)
43	Control		Same as CH 51 in the mode “RGBCAM 51CH” (p. 16)

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	2,100 W
Luminous flux	34,664 lm
Color temperature	8,000 K
Color rendering index (CRI)	98
Optics	
Zoom	4.4–52°
Movement	
Pan	540°
Tilt	270°
Dimensions and construction	
Weight	47 kg
Operating environment	
Operating temperature	-10 to 45 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–30 Hz
Color wheel rotation	up to 720 °/s (120 rpm)
Gobo wheel 1 rotation	up to 720 °/s (120 rpm)
Gobo wheel 2 rotation	up to 720 °/s (120 rpm)
Gobo 1 rotation	up to 720 °/s (120 rpm)
Gobo 2 rotation	up to 720 °/s (120 rpm)

Parameter	Value
Prism 1 rotation	up to 270 °/s (45 rpm)
Prism 2 rotation	up to 270 °/s (45 rpm)
Animation wheel rotation	up to 655 °/s (109 rpm)

Spot diameter

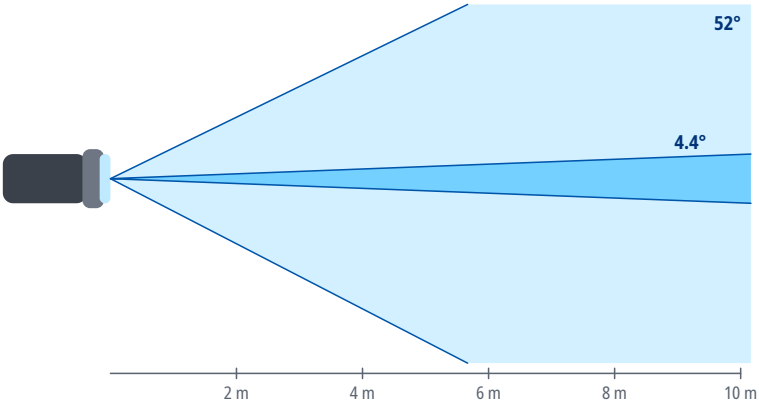

Distance	Ø 4.4°	Ø 52°
2 m	0.15 m	2 m
4 m	0.31 m	3.9 m
6 m	0.46 m	5.9 m
8 m	0.61 m	7.8 m
10 m	0.77 m	9.8 m
15 m	1.2 m	14.6 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.

Problem	Remedy
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.