DMX REFERENCE

Virtual Moving Head

easio

Manufacturer	easio
GDTF file	Easio_Virtual_Moving_Head_133094.gdtf
GDTF revision	V2_05 · 2026-03-11
Generated	2026-11-23

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 4
6 Connections 4
7 Operation 5
8 Functions at a glance 5
9 DMX channels 7
Mode Standard mode 7
10 Technical specifications 11
11 Maintenance and cleaning 11
12 Troubleshooting 12
13 Disposal 12

1 About this manual

This document describes the Virtual Moving Head by easio. It was compiled from the GDTF file Easio_Virtual_Moving_Head_133094.gdtf from the GDTF-Share library.

File revision: “V2_05”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by easio; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

DMX modes

Mode	Channels	Units in one universe	First start addresses
Standard mode	22	23	1, 23, 45, 67, ...

No light? Check these channels

- Standard mode: CH 5 Dimmer above 0



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

Pan 65535°

top view

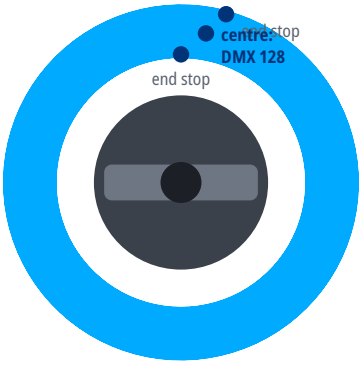

Tilt 65535°

side view

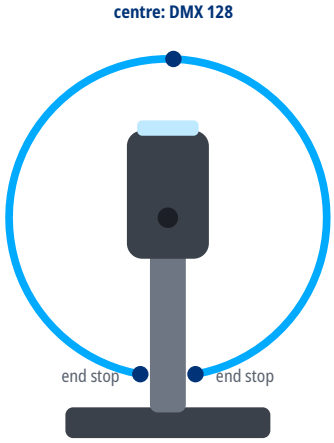

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX

splitter or booster.

DMX line

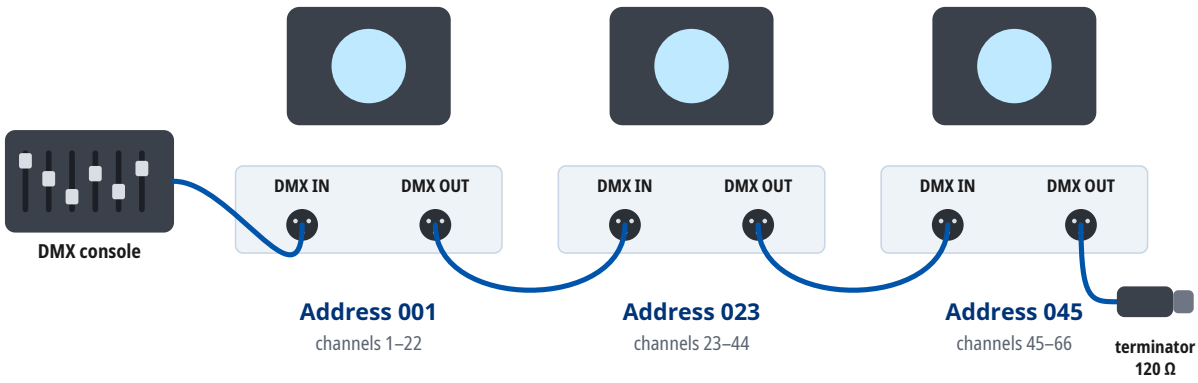

Mode Standard mode: every unit occupies 22 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Standard mode”: 22.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Standard mode”, you can use, for example, the start addresses 1, 23, 45, 67.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	Standard mode 22 channels
Pan / Tilt	1, 3
Dimmer	5, 15
Shutter / strobe	15
Color mixing	7–10
Gobo wheel	19
Gobo rotation	20
Zoom	13
Focus	14
Effects / macros	15–17

Gobo wheel

1	Point	DMX 1	2 Line	DMX 2	3 Polygon	DMX 3

LED colors and the colors they mix

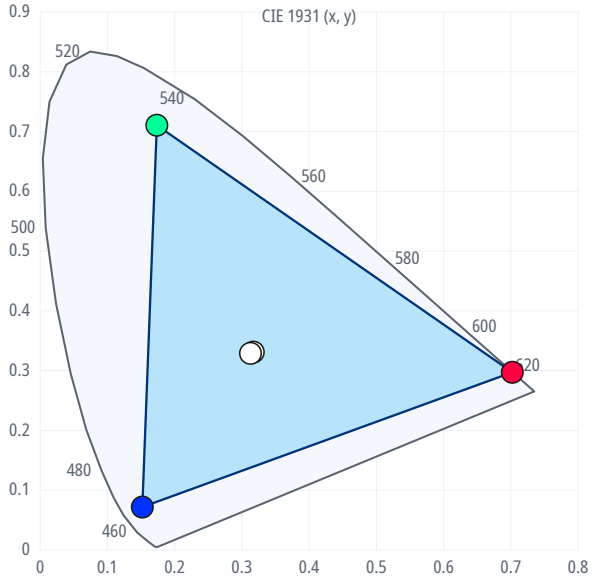

LED	x	y	nm
Red	0.702	0.297	626
Green	0.173	0.711	527
Blue	0.152	0.072	452
White	0.317	0.331	
Vibrator	0.313	0.329	

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

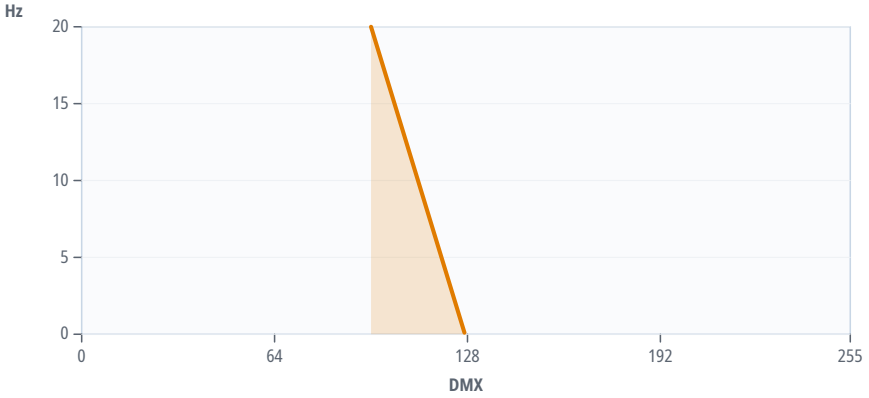

CH 15 · Standard mode

96–127: 20–0.1 Hz
Sparlke

9 DMX channels

Units in one DMX universe

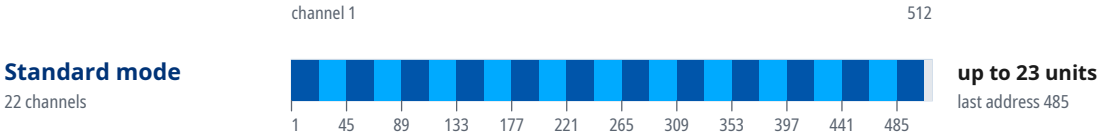

Start addresses of 20 units in the mode “Standard mode”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	111	11	221	16	331
2	23	7	133	12	243	17	353
3	45	8	155	13	265	18	375
4	67	9	177	14	287	19	397
5	89	10	199	15	309	20	419

Mode Standard mode

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 5 Dimmer 255.

Channel functions at a glance

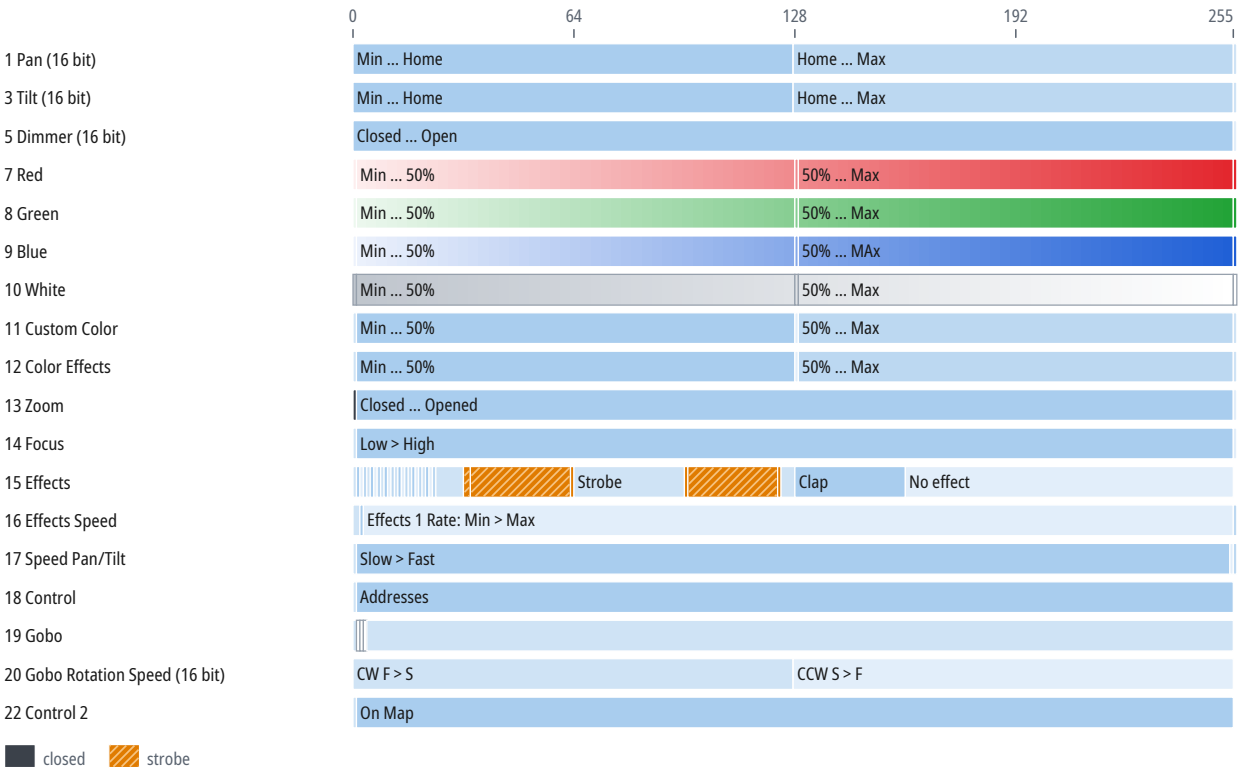

CH	Function	DMX	Description
1	Pan	0–127	Min … Home
		128–255	Home … Max
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Min … Home
		128–255	Home … Max
		255	Max
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Dimmer	0–255	Closed … Open
		255	Open
6	Dimmer Fine	0–255	Fine adjustment of CH 5
7	Red	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … Max
		255	Max
8	Green	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … Max
		255	Max
9	Blue	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … MAx
		255	MAx
10	White	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … Max
		255	Max
11	Custom Color	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … Max
		255	Max
12	Color Effects	0	Min
		1–127	Min … 50%
		128	50%
		129–254	50% … Max

CH	Function	DMX	Description
12	Color Effects (continued)	255	Max
13	Zoom	0	Closed
		1–254	Closed ... Opened
		255	Opened
14	Focus	0	Min
		1–254	Low > High
		255	Max
15	Effects	0	No effect 1
		1	Wave
		2	RND Wave 1
		3	Blind
		4	Holo
		5	Position X Magnitude
		6	Position Y Magnitude
		7	Position Z Magnitude
		8	Position X Positive
		9	Position X Negative
		10	Position Y Positive
		11	Position Y Negative
		12	Position Z Positive
		13	Position Z Negative
		14	MVT XYZ Magnitude
		15	MVT X Magnitude
		16	MVT Y Magnitude
		17	MVT Z Magnitude
		18	MVT X Positive
		19	MVT X Negative
		20	MVT Y Positive
		21	MVT Y Negative
		22	MVT Z Positive
		23	MVT Z Negative
		24–31	Reserved (no effects)
		32–33	Strobe: Slow
		34–62	Strobe: Slow > Fast
		63	Strobe: Fast
		64–95	Strobe
		96	Sparlke: Fast
		97–122	Sparlke: Fast > Slow
		123	Sparlke: Slow
		124–127	Sparlke
		128–159	Clap

CH	Function	DMX	Description
15	Effects (continued)	160–255	No effect
16	Effects Speed	0–1	Trigger
		2	Effects 1 Rate: Min
		3–254	Effects 1 Rate: Min > Max
		255	Effects 1 Rate: Max
17	Speed Pan/Tilt		FX Position transition speed
		0	Slow
		1–253	Slow > Fast
		254	Fast
		255	Instant
18	Control		Mask adress
		0	Broadcast
		1–255	Addresses
19	Gobo	0	Full Audience
		1	Point
		2	Line
		3	Polygon
		4–255	Gobo 1
20	Gobo Rotation Speed	0–127	CW F > S
		128	Stop
		128–255	CCW S > F
21	Gobo Rotation Speed Fine	0–255	Fine adjustment of CH 20
22	Control 2	0	Anywhere
		1–255	On Map

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	1,000 W
Luminous flux	10,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	100
Optics	
Beam angle	25°
Movement	
Pan	65,535°
Tilt	65,535°
Operating environment	
Operating temperature	0 to 40 °C

Spot diameter

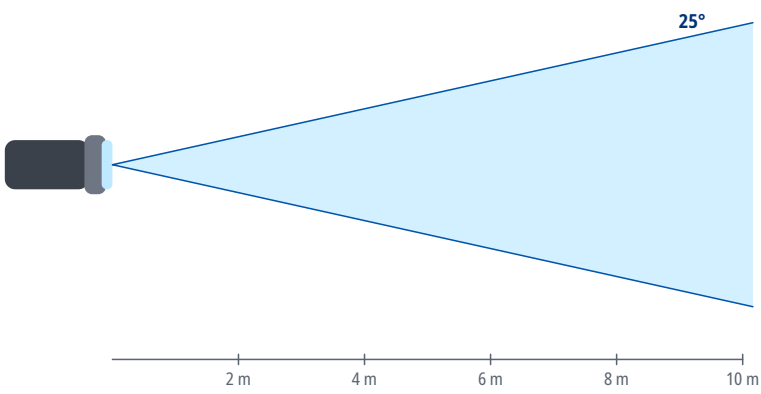

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.