DMX REFERENCE

Tour-LED

Expolite Tour-LED

Expolite



Manufacturer	Expolite
GDTF file	Expolite_Tour-LED_18445.gdtf
GDTF revision	A001 · 2021-10-28
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 7
Mode AR1D 7
Mode AR1S 8
Mode Tour 9
10 Technical specifications 11
11 Maintenance and cleaning 12
12 Troubleshooting 12
13 Disposal 12

1 About this manual

This document describes the Expolite Tour-LED by Expolite. It was compiled from the GDTF file Expolite_Tour-LED_18445.gdtf from the GDTF-Share library.

File revision: “A001”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Expolite; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	4.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
AR1D	4	128	1, 5, 9, 13, ...
AR1S	5	102	1, 6, 11, 16, ...
Tour	9	56	1, 10, 19, 28, ...

No light? Check these channels

- AR1D: CH 1 Dimmer above 0
- AR1S: CH 1 Dimmer above 0; CH 5 Strobe at 0 “Strobe Off” or 1–9 “No Function”
- Tour: CH 1 Dimmer above 0; CH 6 Strobe at 0 “Strobe Off” or 1–9 “No Function”; CH 9 Dimmer Mode above 29



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“RGB PAR with Dimmer and Strobe_visible beam”

5 Installation


⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 4.8 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

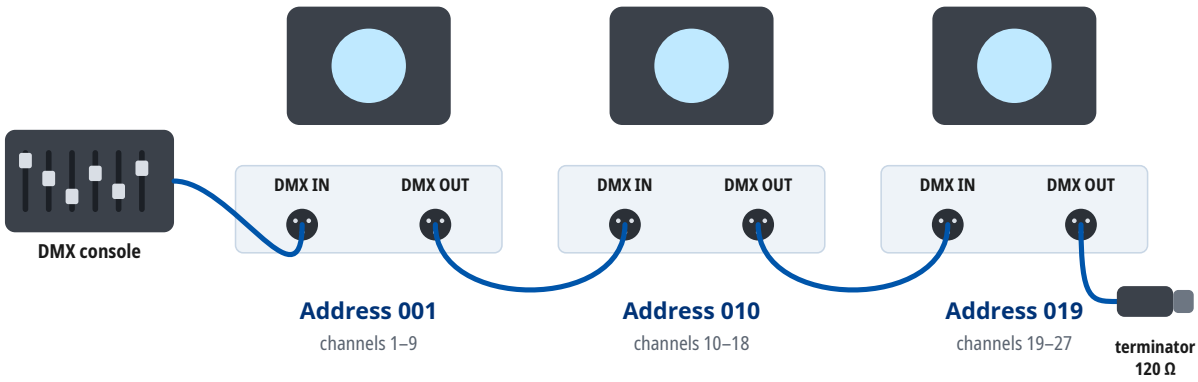

Mode Tour: every unit occupies 9 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Tour”: 9.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Tour”, you can use, for example, the start addresses 1, 10, 19, 28.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode


	AR1D 4 channels	AR1S 5 channels	Tour 9 channels
Dimmer	1	1	1
Shutter / strobe		5	6
Color mixing	2–4	2–4	2–4
Effects / macros			5, 7, 8

Strobe rate

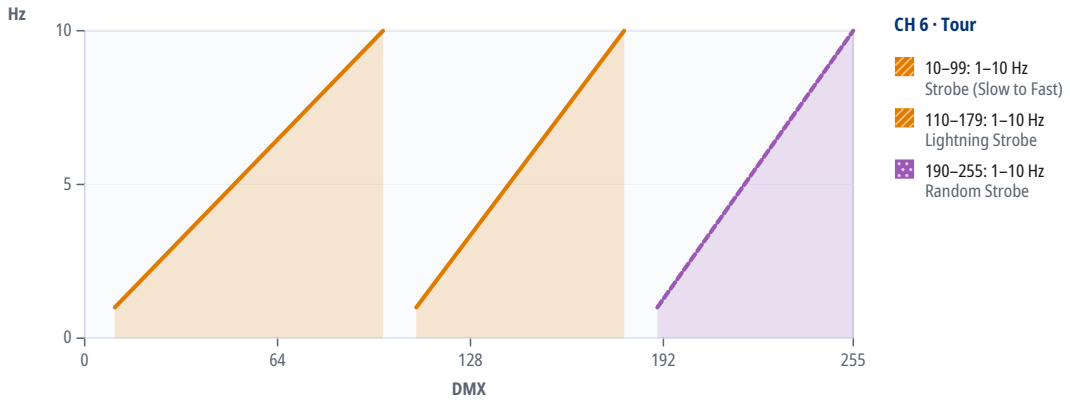

9 DMX channels

Units in one DMX universe

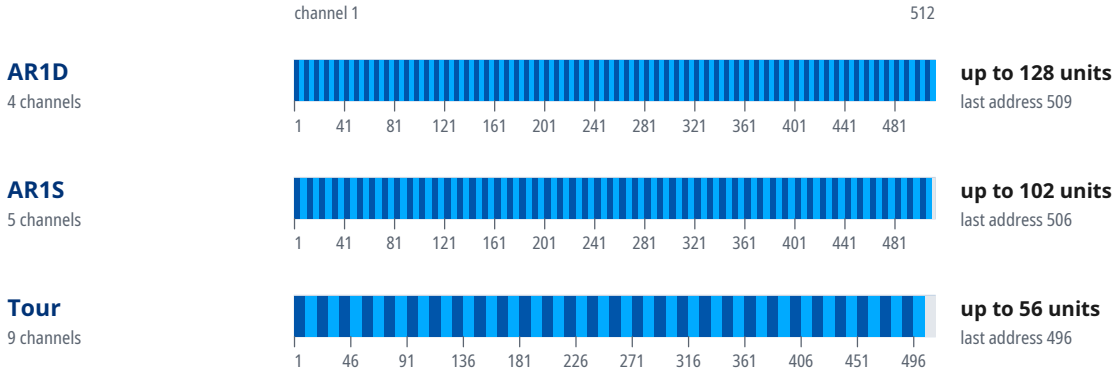


Start addresses of 20 units in the mode “Tour”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	46	11	91	16	136
2	10	7	55	12	100	17	145
3	19	8	64	13	109	18	154
4	28	9	73	14	118	19	163
5	37	10	82	15	127	20	172

Mode AR1D

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255.

Channel functions at a glance

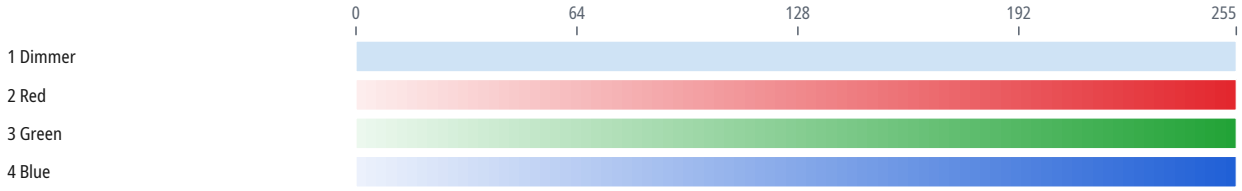


CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red	0–255	
3	Green	0–255	
4	Blue	0–255	

Mode AR1S

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 5 Strobe at 0 “Strobe Off” or 1–9 “No Function”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255.

Channel functions at a glance

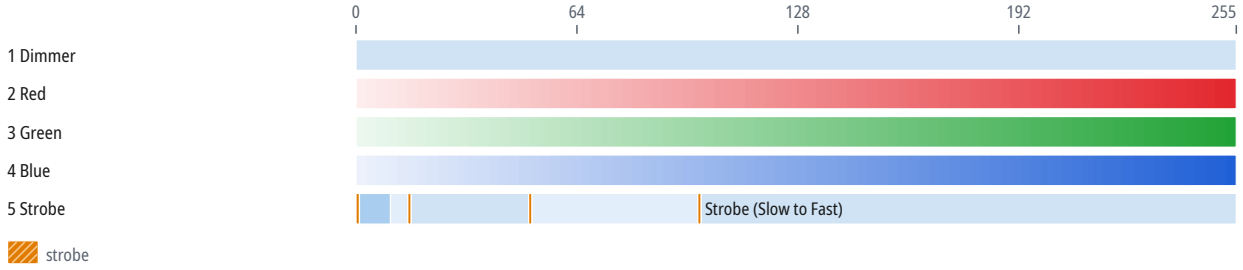


CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red	0–255	
3	Green	0–255	
4	Blue	0–255	
5	Strobe	0	Strobe Off
		1–9	No Function
		10–14	Strobe (Slow to Fast)
		15	Strobe Slow
		16–49	Strobe Slow ... Strobe Mid
		50	Strobe Mid
		51–98	Strobe Mid ... Strobe Fast
		99	Strobe Fast
		100–255	Strobe (Slow to Fast)

Mode Tour

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 6 Strobe at 0 “Strobe Off” or 1–9 “No Function”; CH 9 Dimmer Mode above 29. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255, CH 5 Color Macro 0, CH 7 Color Macro 2 0, CH 8 Color Macro 2 Speed 0, CH 9 Dimmer Mode 0.

Channel functions at a glance

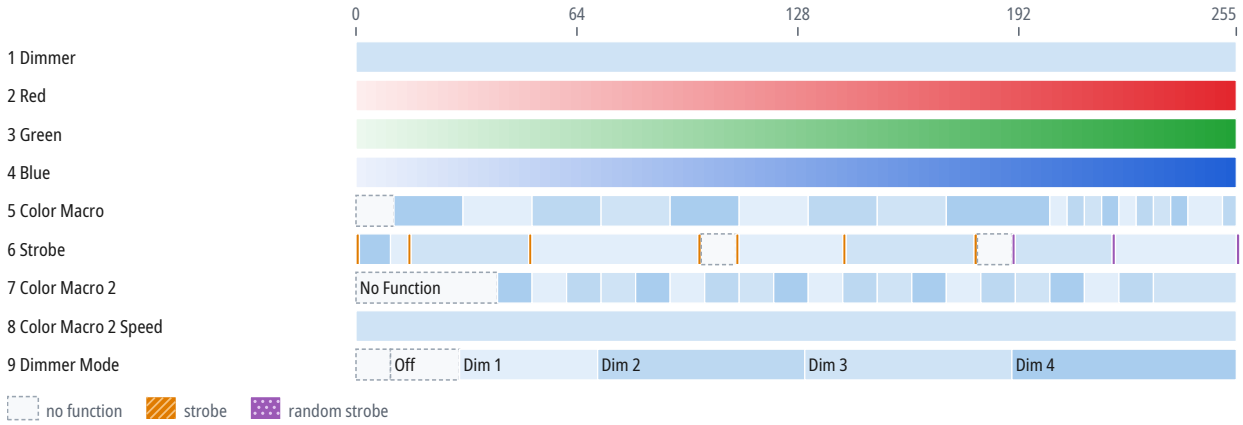

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red	0–255	
3	Green	0–255	
4	Blue	0–255	
5	Color Macro	0–10	No Function
		11–30	Red 100 % / Green Up / Blue 0%
		31–50	Red Down / Green 100% / Blue 0%
		51–70	Red 0% / Green 100% / Blue Up
		71–90	Red 0% / Green Down / Blue 100%
		91–110	Red Up / Green 0% / Blue 100%
		111–130	Red 100% / Green 0% / Blue Down
		131–170	Red Down / Green Down / Blue 100%
		171–200	All LED at Full Output
		201–205	3200 K
		206–210	3400 K
		211–215	4200 K
		216–220	4900 K
		221–225	5600 K
		226–230	5900 K
		231–235	7200 K
		236–240	8000 K
		241–250	8500 K
		251–255	10000 K
6	Strobe	0	Strobe Off

CH	Function	DMX	Description
6	Strobe (continued)	1–9	No Function
		10–14	Strobe (Slow to Fast)
		15	Strobe Slow
		16–49	Strobe Slow ... Strobe Mid
		50	Strobe Mid
		51–98	Strobe Mid ... Strobe Fast
		99	Strobe Fast
		100–109	No Function 2
		110	Lightning Slow
		111–140	Lightning Slow ... Lightning Mid
		141	Lightning Mid
		142–178	Lightning Mid ... Lightning Fast
		179	Lightning Fast
		180–189	No Function 3
		190	Str Rnd Slow
		191–218	Str Rnd Slow ... Str Rnd Mid
		219	Str Rnd Mid
		220–254	Str Rnd Mid ... Str Rnd Fast
		255	Str Rnd Fast
7	Color Macro 2		Color Auto/Programms
		0–40	No Function
		41–50	Auto 1
		51–60	Auto 2
		61–70	Auto 3
		71–80	Auto 4
		81–90	Auto 5
		91–100	Auto 6
		101–110	Auto 7
		111–120	Auto 8
		121–130	Auto 9
		131–140	Auto 10
		141–150	Programm 1
		151–160	Programm 2
		161–170	Programm 3
		171–180	Programm 4
		181–190	Programm 5
		191–200	Programm 6
		201–210	Programm 7
		211–220	Programm 8
		221–230	Programm 9
		231–255	Programm 10
8	Color Macro 2 Speed	0–255	

CH	Function	DMX	Description
9	Dimmer Mode	0–9	No Function
		10–29	Off
		30–69	Dim 1
		70–129	Dim 2
		130–189	Dim 3
		190–255	Dim 4


10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	65 W
Luminous flux	1,500 lm
Color temperature	5,600 K
Color rendering index (CRI)	80
Optics	
Beam angle	16°
Control	
DMX connection	3-pin XLR IN/OUT
Dimensions and construction	
Weight	4.8 kg
Operating environment	
Operating temperature	-20 to 45 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–20 Hz

Spot diameter

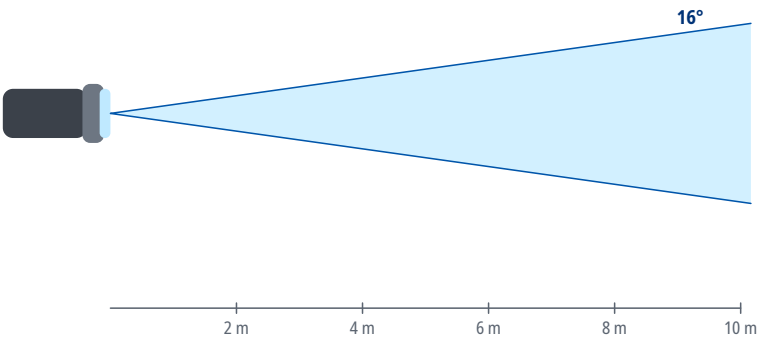

Distance	Ø 16°
2 m	0.56 m
4 m	1.1 m
6 m	1.7 m
8 m	2.2 m
10 m	2.8 m
15 m	4.2 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.