DMX REFERENCE

IQ 2812 Wash

FOS IQ 2812 Wash

FOS Technologies



Manufacturer	FOS Technologies
GDTF file	FOS_Technologies_IQ_2812_Wash_142498.gdtf
GDTF revision	R011 · 2026-05-13
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 8
Mode 19ch 9
Mode 35ch 12
10 Technical specifications 14
11 Maintenance and cleaning 14
12 Troubleshooting 15
13 Disposal 15

1 About this manual

This document describes the FOS IQ 2812 Wash by FOS Technologies. It was compiled from the GDTF file FOS_Technologies_IQ_2812_Wash_142498.gdtf from the GDTF-Share library.

File revision: “R011”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by FOS Technologies; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	6.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
19ch	19	26	1, 20, 39, 58, ...
35ch	35	14	1, 36, 71, 106, ...

No light? Check these channels

- 19ch: CH 1 Dimmer above 0; CH 2 Strobe at 32–63 or 224–255 “Open”
- 35ch: CH 1 Dimmer above 0; CH 2 Strobe at 32–63 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

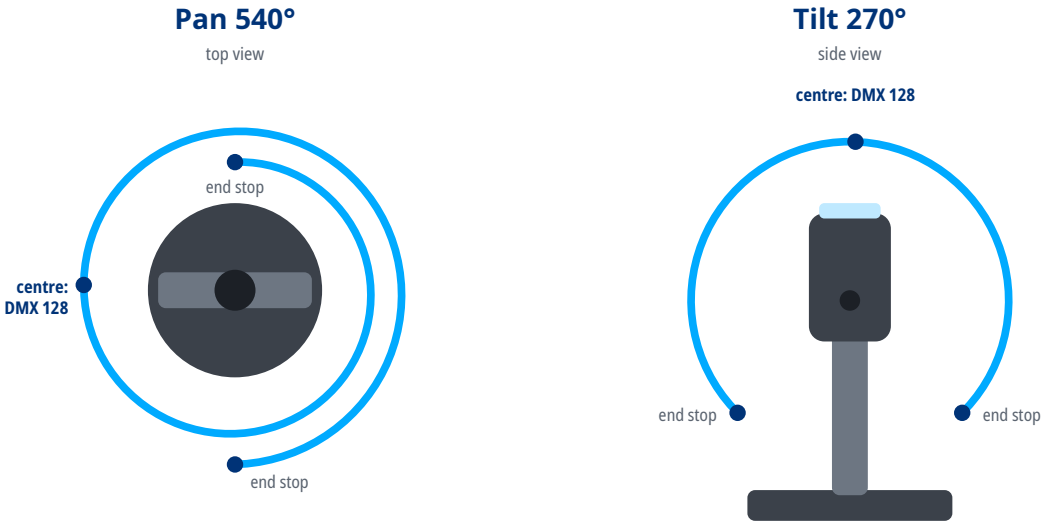

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 6.84 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

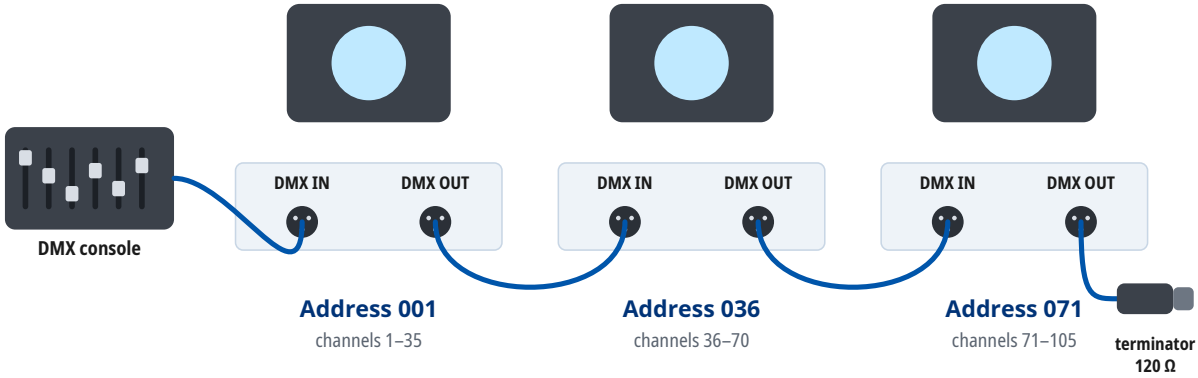

Mode 35ch: every unit occupies 35 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “35ch”: 35.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “35ch”, you can use, for example, the start addresses 1, 36, 71, 106.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	19ch 19 channels	35ch 35 channels
Pan / Tilt	3, 5	3, 5
Dimmer	1	1
Shutter / strobe	2	2
Color mixing	8–11	8–11, 13–28
Color temperature	14	30
Zoom	12	12
Effects / macros	13, 17	29, 33
Pixel control		✓

Strobe rate

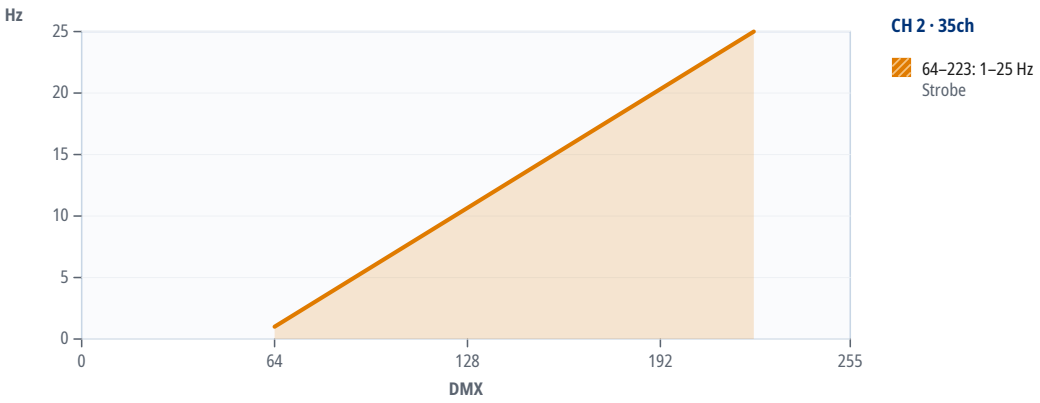

9 DMX channels

Units in one DMX universe

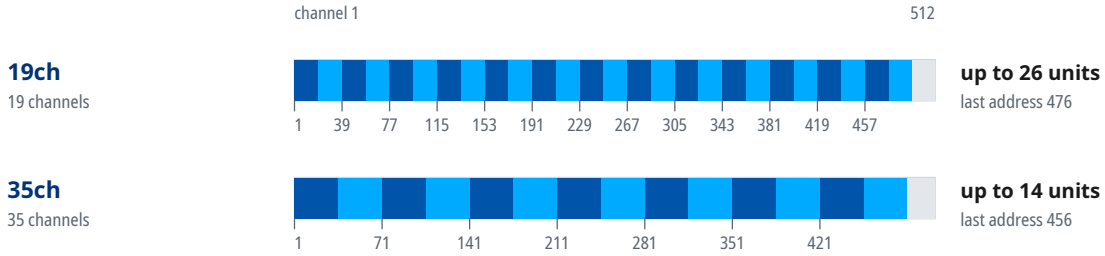

Start addresses of 20 units in the mode “35ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	176	11	351	16	U2 · 36
2	36	7	211	12	386	17	U2 · 71
3	71	8	246	13	421	18	U2 · 106
4	106	9	281	14	456	19	U2 · 141
5	141	10	316	15	U2 · 1	20	U2 · 176

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 19ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 2 Strobe at 32–63 or 224–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 11 White 255.

Channel functions at a glance

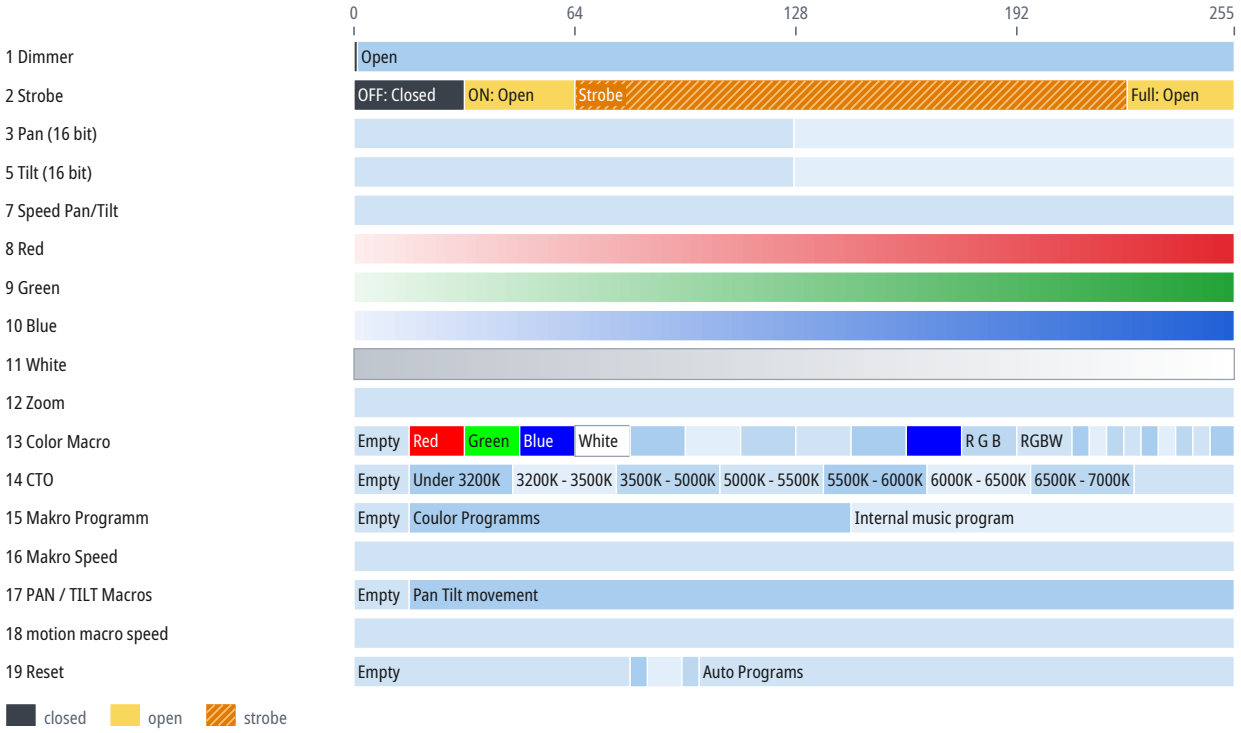

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–255	Open
2	Strobe	0–31	OFF: Closed
		32–63	ON: Open
		64–223	Strobe (1–25 Hz)
		224–255	Full: Open
3	Pan	0–127	Pan 1
		128	Home
		128–255	Pan 1
4	Pan Fine	0–255	Fine adjustment of CH 3
5	Tilt	0–127	Tilt 1
		128	Home
		128–255	Tilt 1
6	Tilt Fine	0–255	Fine adjustment of CH 5
7	Speed Pan/Tilt	0–255	
8	Red	0–255	
9	Green	0–255	

CH	Function	DMX	Description
10	Blue	0–255	
11	White	0–255	
12	Zoom	0–255	60–12°
13	Color Macro	0–15	Empty
		16–31	Red
		32–47	Green
		48–63	Blue
		64–79	White
		80–95	Red and green
		96–111	Red and blue
		112–127	Red and white
		128–143	Green and blue
		144–159	Green white
		160–175	Blue Wtihe
		176–191	R G B
		192–207	RGBW
		208–212	2700K
		213–217	3200K
		218–222	3500K
		223–227	5000K
		228–232	5500K
		233–237	6000K
		238–242	6500K
		243–247	7000K
		248–255	8000K
14	CTO	0–15	Empty
		16–45	Under 3200K
		46–75	3200K - 3500K
		76–105	3500K - 5000K
		106–135	5000K - 5500K
		136–165	5500K - 6000K
		166–195	6000K - 6500K
		196–225	6500K - 7000K
		226–255	7000K - 8000K
15	Makro Programm	0–15	Empty
		16–143	Coulor Programms
		144–255	Internal music program
16	Makro Speed	0–255	
17	PAN / TILT Macros	0–15	Empty
		16–255	Pan Tilt movement
18	motion macro speed	0–255	
19	Reset	0–79	Empty

CH	Function	DMX	Description
19	Reset (continued)	80–84	Global engine reset
		85–94	Scan engine reset
		95–99	Zoom engine reset
		100–255	Auto Programs

Mode 35ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 2 Strobe at 32–63 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 11 White 1 255.

Channel functions at a glance

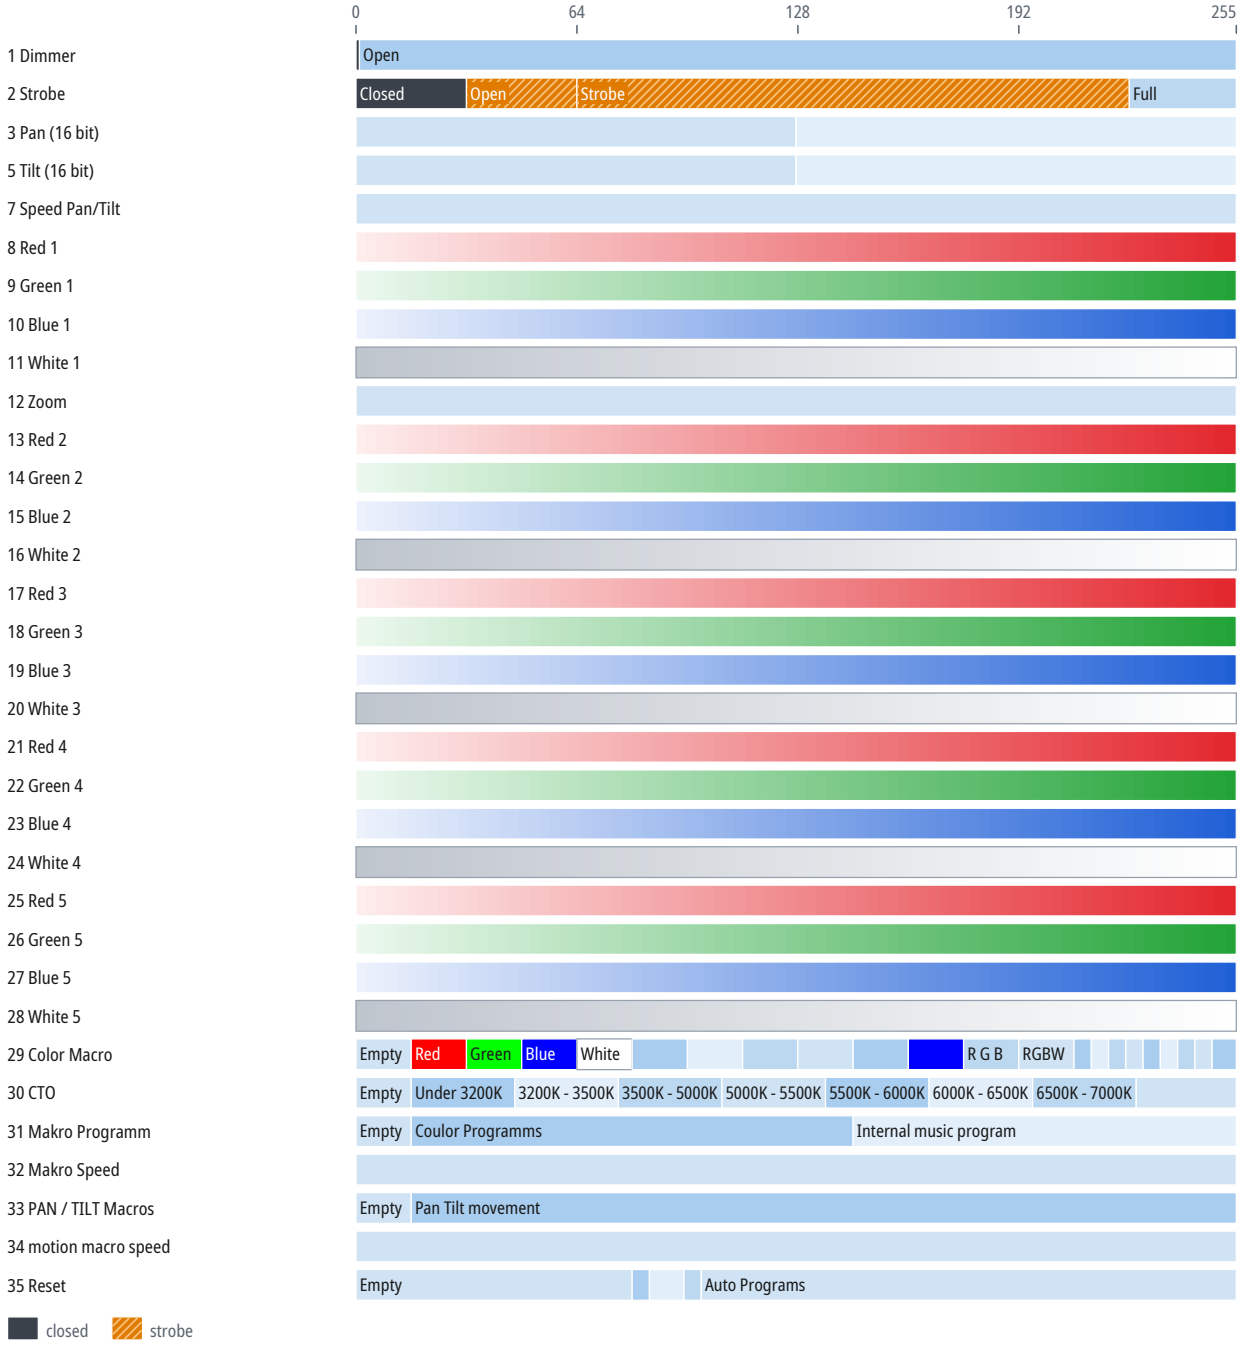

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “19ch” (p. 9)
2	Strobe	0–31	Closed
		32–63	Open

CH	Function	DMX	Description
2	Strobe (continued)	64–223	Strobe (1–25 Hz)
		224–255	Full
3	Pan		Same as CH 3 in the mode “19ch” (p. 9)
4	Pan Fine	0–255	Fine adjustment of CH 3
5	Tilt		Same as CH 5 in the mode “19ch” (p. 9)
6	Tilt Fine	0–255	Fine adjustment of CH 5
7	Speed Pan/Tilt	0–255	
8	Red 1	0–255	
9	Green 1	0–255	
10	Blue 1	0–255	
11	White 1	0–255	
12	Zoom	0–255	60–12°
13	Red 2	0–255	
14	Green 2	0–255	
15	Blue 2	0–255	
16	White 2	0–255	
17	Red 3	0–255	
18	Green 3	0–255	
19	Blue 3	0–255	
20	White 3	0–255	
21	Red 4	0–255	
22	Green 4	0–255	
23	Blue 4	0–255	
24	White 4	0–255	
25	Red 5	0–255	
26	Green 5	0–255	
27	Blue 5	0–255	
28	White 5	0–255	
29	Color Macro		Same as CH 13 in the mode “19ch” (p. 10)
30	CTO		Same as CH 14 in the mode “19ch” (p. 10)
31	Makro Programm		Same as CH 15 in the mode “19ch” (p. 10)
32	Makro Speed	0–255	
33	PAN / TILT Macros		Same as CH 17 in the mode “19ch” (p. 10)
34	motion macro speed	0–255	
35	Reset		Same as CH 19 in the mode “19ch” (p. 10)

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	280 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	100
Optics	
Zoom	12–60°
Movement	
Pan	540°
Tilt	270°
Dimensions and construction	
Weight	6.8 kg
Operating environment	
Operating temperature	0 to 45 °C

Spot diameter

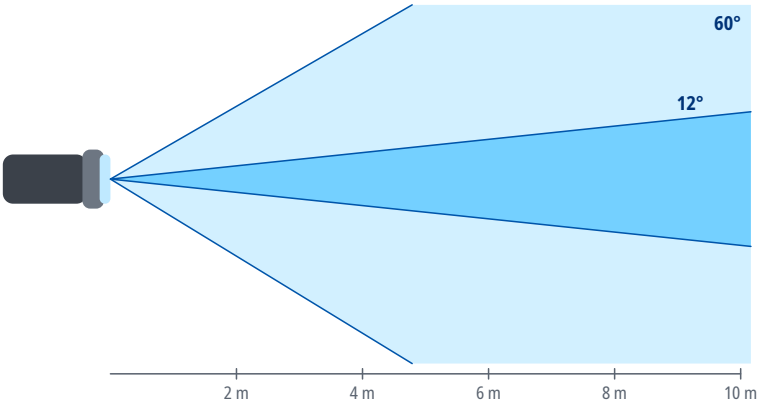

Distance	Ø 12°	Ø 60°
2 m	0.42 m	2.3 m
4 m	0.84 m	4.6 m
6 m	1.3 m	6.9 m
8 m	1.7 m	9.2 m
10 m	2.1 m	11.5 m
15 m	3.2 m	17.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.