DMX REFERENCE

STROBE-S-2000

HuayanLight

Manufacturer	HuayanLight
GDTF file	HuayanLight_STROBE-S-2000_94787.gdtf
GDTF revision	wip v7 · 2025-04-26
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 18ch main 9
10 Technical specifications 12
11 Maintenance and cleaning 12
12 Troubleshooting 13
13 Disposal 13

1 About this manual

This document describes the Strobe-S-2000 by HuayanLight. It was compiled from the GDTF file HuayanLight_STROBE-S-2000_94787.gdtf from the GDTF-Share library.

File revision: “wip v7”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by HuayanLight; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	20 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
18ch main	18	28	1, 19, 37, 55, ...

No light? Check these channels

- 18ch main: CH 2 Dimmer 1 above 0; CH 3 Dimmer 2 above 0; CH 4 Strobe Effect 1 at 11–36 or 252–255 “Open”; CH 8 Dimmer 3 above 0; CH 12 Strobe Effect 2 at 11–36 or 252–255 “Open”


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING


- This device produces very intense flashes of light.
- Flash rates of about 3 to 30 flashes per second carry the highest risk for people with photosensitive epilepsy.
- Do not aim the device into the eyes of the audience or performers at close range.
- At public events, always give clear advance notice that strobe effects will be used.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

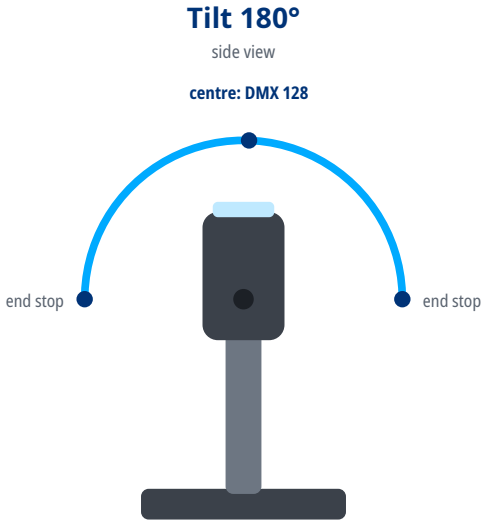

5 Installation


⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 20 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

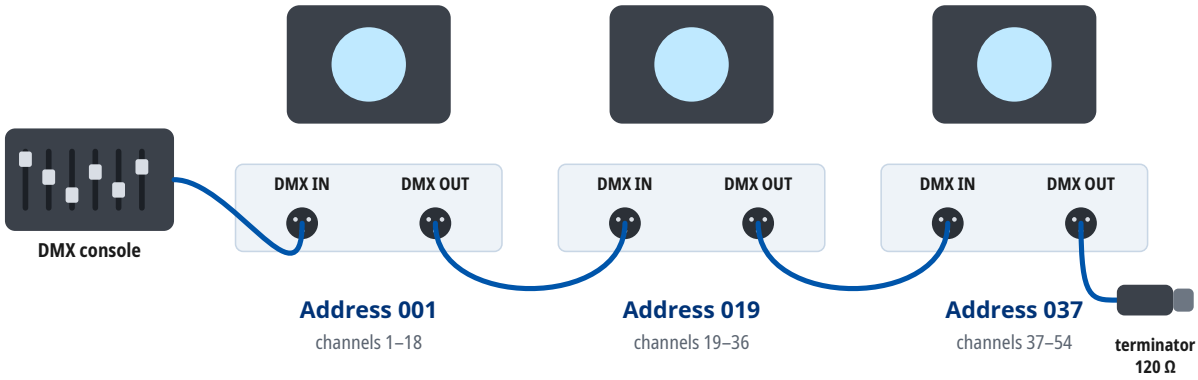

Mode 18ch main: every unit occupies 18 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “18ch main”: 18.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “18ch main”, you can use, for example, the start addresses 1, 19, 37, 55.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	18ch main 18 channels
Pan / Tilt	1
Dimmer	2, 3, 8
Shutter / strobe	4, 5, 12, 13
Color mixing	9–11
Effects / macros	6, 7, 14–17

LED colors

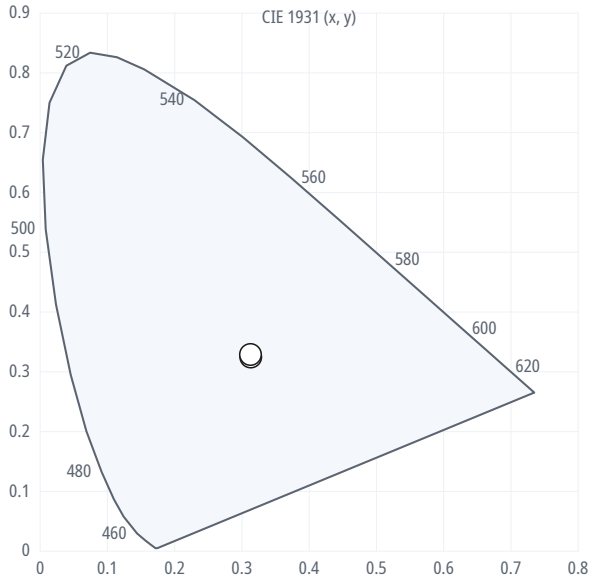


LED	x	y
Tube	0.313	0.325
RGB	0.313	0.329

The dots are the LED colors the GDTF file states.

9 DMX channels

Units in one DMX universe

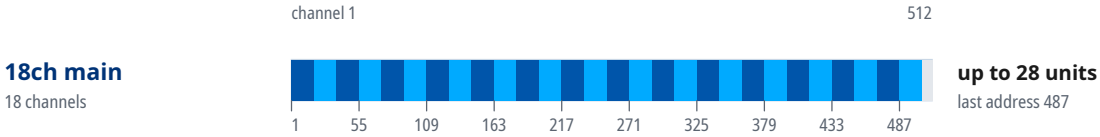


Start addresses of 20 units in the mode “18ch main”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	91	11	181	16	271
2	19	7	109	12	199	17	289
3	37	8	127	13	217	18	307
4	55	9	145	14	235	19	325
5	73	10	163	15	253	20	343

Mode 18ch main

If the device receives DMX in this mode but gives no light, check these channels: CH 2 Dimmer 1 above 0; CH 3 Dimmer 2 above 0; CH 4 Strobe Effect 1 at 11–36 or 252–255 “Open”; CH 8 Dimmer 3 above 0; CH 12 Strobe Effect 2 at 11–36 or 252–255 “Open”.

Channel functions at a glance

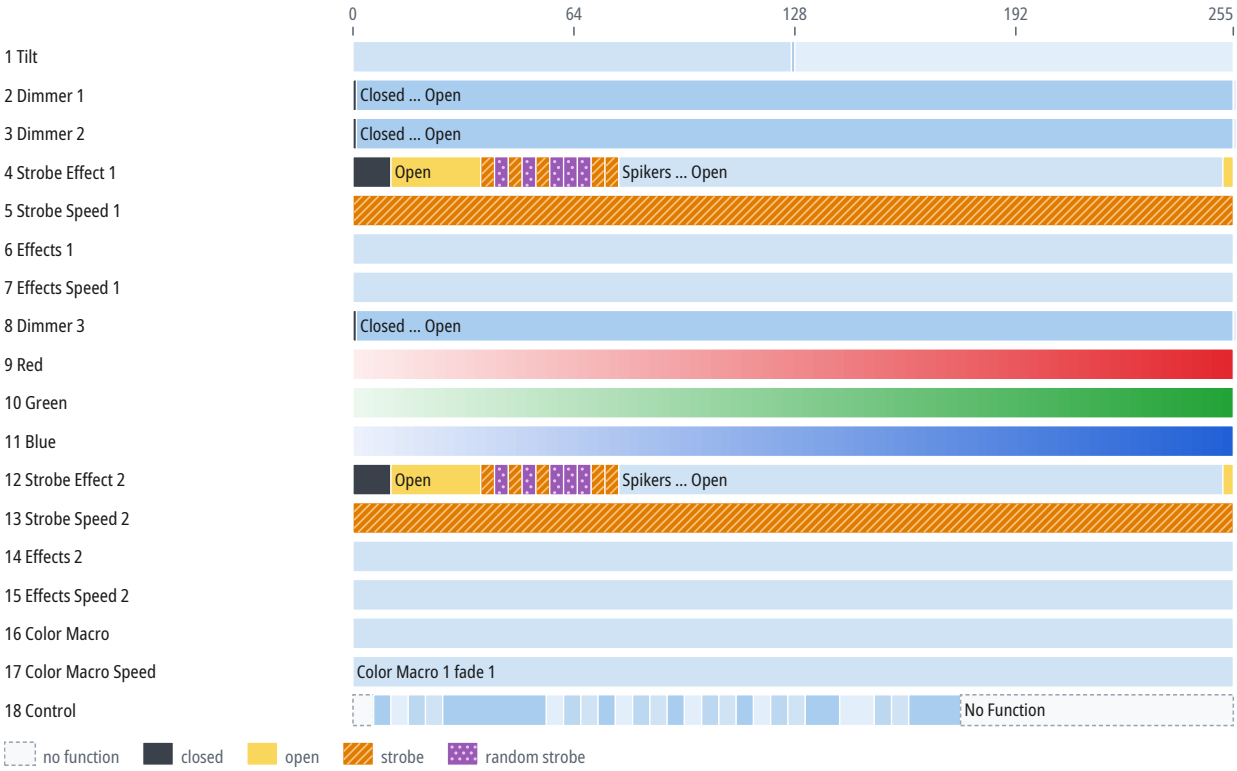


CH	Function	DMX	Description
1	Tilt	0–126	Tilt 1
		127	Center
		128–255	Tilt 1
2	Dimmer 1	0	Closed
		1–254	Closed ... Open
		255	Open
3	Dimmer 2	0	Closed
		1–254	Closed ... Open
		255	Open
4	Strobe Effect 1	0–10	Closed
		11–36	Open
		37–40	Ramp UP
		41–44	Ramp UP Random
		45–48	Ramp Down
		49–52	Ramp Down Random
		53–56	Ramp Up and Down
		57–60	Ramp Up and Down Random
		61–64	Random White Beam
		65–68	Random Single pixel
		69–72	Lighting
		73–76	Spikers
		77–251	Spikers ... Open
		252–255	Open
5	Strobe Speed 1	0–255	
6	Effects 1	0–255	
7	Effects Speed 1	0–255	
8	Dimmer 3	0	Closed
		1–254	Closed ... Open
		255	Open
9	Red	0–255	
10	Green	0–255	
11	Blue	0–255	
12	Strobe Effect 2	0–10	Closed
		11–36	Open
		37–40	Ramp Up
		41–44	Ramp Up Random
		45–48	Ramp Down
		49–52	Ramp Down Random
		53–56	Ramp Up and Down
		57–60	Ramp Up and Down Random

CH	Function	DMX	Description
12	Strobe Effect 2 (continued)	61–64	Random white beam
		65–68	Random single pixel
		69–72	Lighting
		73–76	Spikers
		77–251	Spikers ... Open
		252–255	Open
13	Strobe Speed 2	0–255	
14	Effects 2	0–255	
15	Effects Speed 2	0–255	
16	Color Macro	0–255	
17	Color Macro Speed		Color Macro 1 fade 1
		0–255	Color Macro 1 fade 1
18	Control	0–5	No Function
		6–10	Dimmer Speed 0
		11–15	Dimmer Speed 1
		16–20	Dimmer Speed 2
		21–25	Dimmer Speed 3
		26–55	Dimmer Speed 3 ... Fan Mode AUTO
		56–60	Fan Mode AUTO
		61–65	Fan Mode HIGH
		66–70	Tilt Reset
		71–75	Plate1 Invert OFF
		76–80	Plate1 Invert ON
		81–85	Plate2 Invert OFF
		86–90	Plate2 Invert ON
		91–95	Beam1 Invert OFF
		96–100	Beam1 Invert On
		101–105	Beam2 Invert OFF
		106–110	Beam2 Invert ON
		111–115	Plate Swap ON
		116–120	Plate Swap OFF
		121–125	Beam Swap ON
		126–130	Beam Swap OFF
		131–140	Display Forever
		141–150	Display 10s
		151–155	Display 60s
		156–160	Factory Reset
		161–175	Factory Reset ... No Function
		176–255	No Function

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	700 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	85
Optics	
Beam angle	25°
Movement	
Tilt	180°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	20 kg
Operating environment	
Operating temperature	0 to 40 °C

Spot diameter

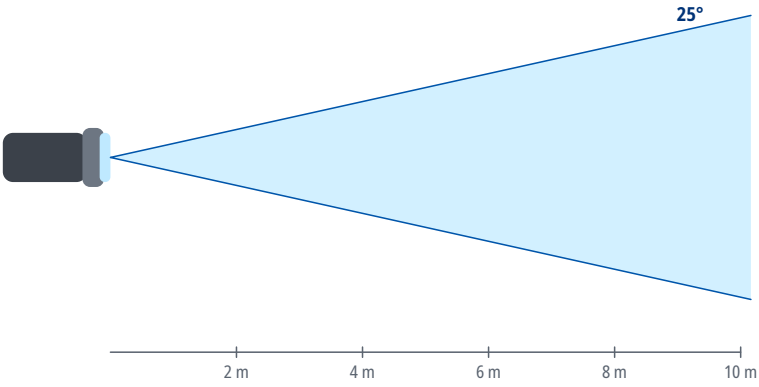

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or

pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.