DMX REFERENCE

NanoPix Cyc (Virtual Dim)

NanoPix Cyc

LDDE



Manufacturer	LDDE
GDTF file	LDDE_NanoPix_Cyc_Virtual_Dim_50638.gdtf
GDTF revision	v0.6 (Only 31ch Mode Tested) · 2023-11-11
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 7
Mode 8bit 5ch 8
Mode 8bit 7ch 8
Mode 8bit 15ch 9
Mode 8bit 16ch 10
Mode 8bit 17ch 11
Mode 16bit 10ch 12
Mode 16bit 11ch 12
Mode 16bit 30ch 13
Mode 16bit 31ch 14
9 Technical specifications 16
10 Maintenance and cleaning 16
11 Troubleshooting 16
12 Disposal 17

1 About this manual

This document describes the NanoPix Cyc by LDDE. It was compiled from the GDTF file LDDE_NanoPix_Cyc_Virtual_Dim_50638.gdtf from the GDTF-Share library.

File revision: “v0.6 (Only 31ch Mode Tested)”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by LDDE; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

DMX modes

Mode	Channels	Units in one universe	First start addresses
8bit 5ch	5	102	1, 6, 11, 16, ...
8bit 7ch	7	73	1, 8, 15, 22, ...
8bit 15ch	15	34	1, 16, 31, 46, ...
8bit 16ch	16	32	1, 17, 33, 49, ...
8bit 17ch	17	30	1, 18, 35, 52, ...
16bit 10ch	10	51	1, 11, 21, 31, ...
16bit 11ch	11	46	1, 12, 23, 34, ...
16bit 30ch	30	17	1, 31, 61, 91, ...
16bit 31ch	31	16	1, 32, 63, 94, ...



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

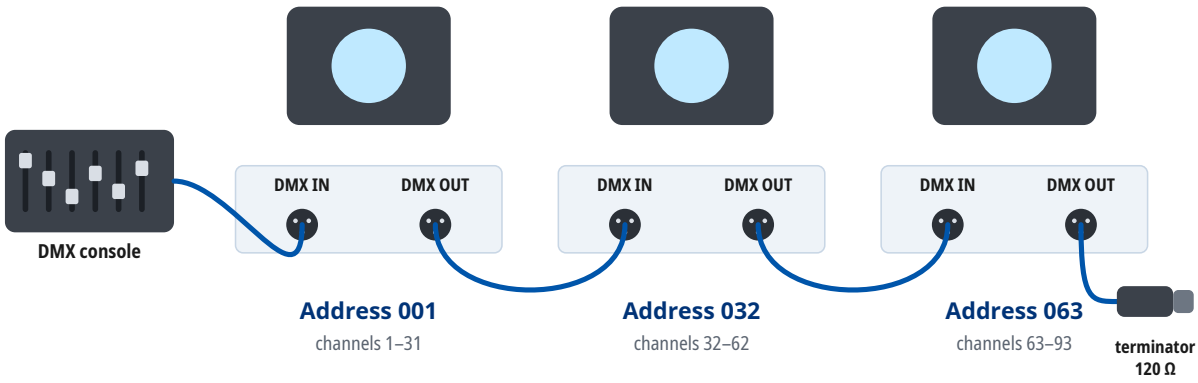

Mode 16bit 31ch: every unit occupies 31 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “16bit 31ch”: 31.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “16bit 31ch”, you can use, for example, the start addresses 1, 32, 63, 94.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	8bit 5ch 5 channels	8bit 7ch 7 channels	8bit 15ch 15 channels	8bit 16ch 16 channels	8bit 17ch 17 channels	16bit 10ch 10 channels	16bit 11ch 11 channels	16bit 30ch 30 channels
Dimmer	✓	1	✓	1	1	✓	✓	✓
Shutter / strobe		7			17		11	
Color mixing	1–5	2–6	1–15	2–16	2–16	5× (1–9)	5× (1–9)	15× (1–29)
Pixel control			✓	✓	✓			✓

LED colors and the colors they mix

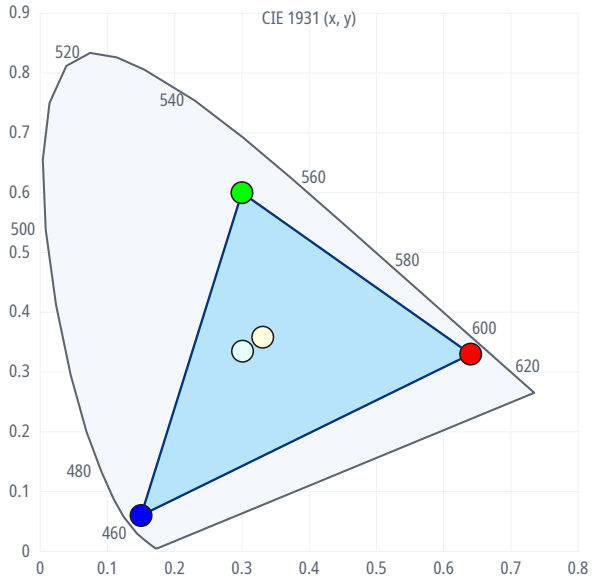

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060
Warm White	0.331	0.358
Cool White	0.301	0.335

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

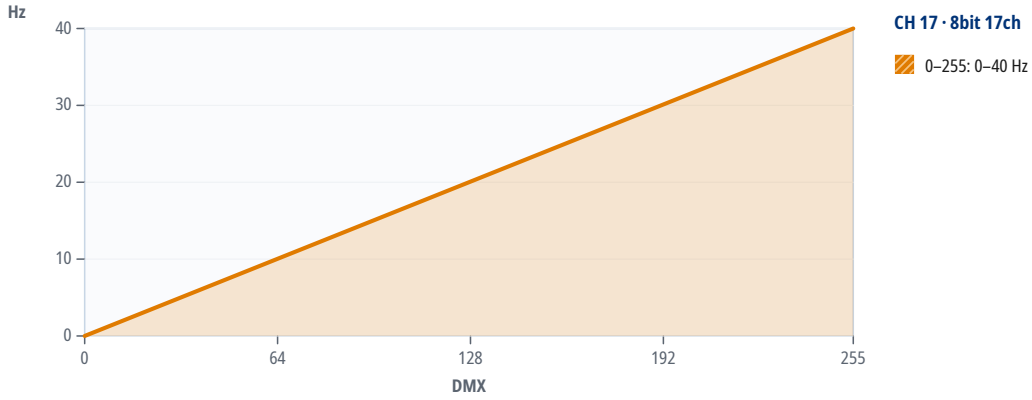

8 DMX channels

Units in one DMX universe

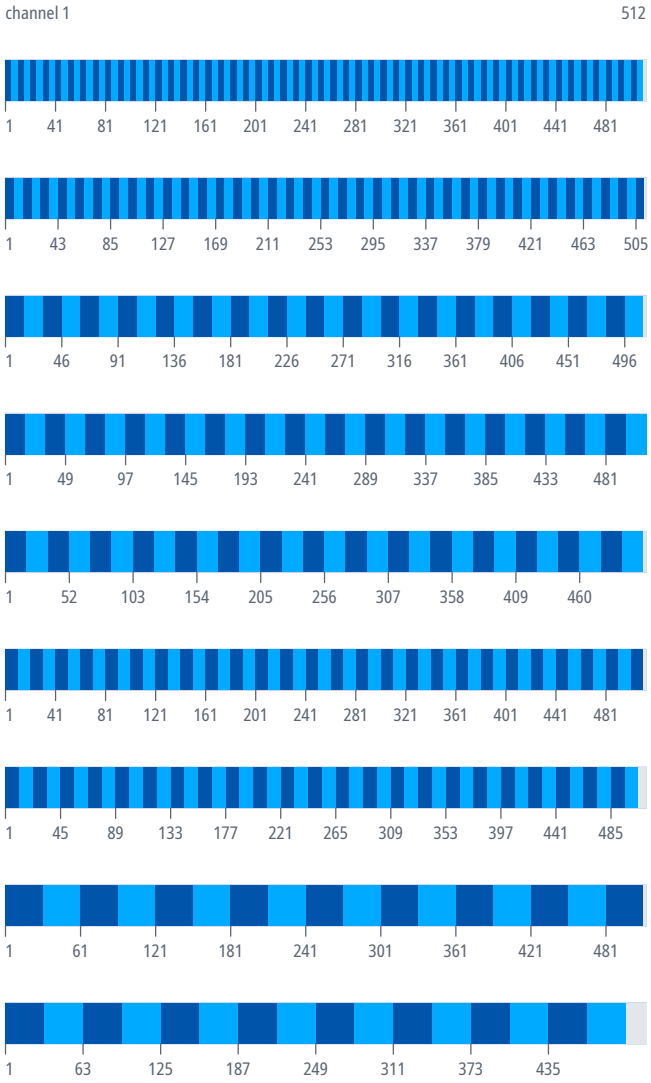

Start addresses of 20 units in the mode “16bit 31ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	156	11	311	16	466
2	32	7	187	12	342	17	U2 · 1
3	63	8	218	13	373	18	U2 · 32
4	94	9	249	14	404	19	U2 · 63
5	125	10	280	15	435	20	U2 · 94

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 8bit 5ch

Channel functions at a glance

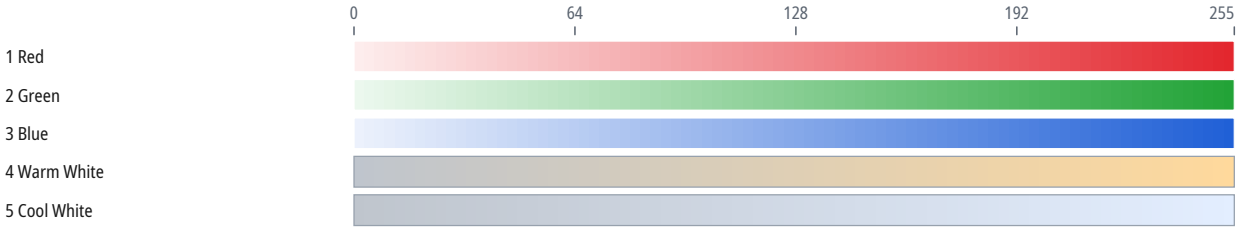

CH	Function	DMX	Description
1	Red	0–255	
2	Green	0–255	
3	Blue	0–255	
4	Warm White	0–255	
5	Cool White	0–255	

Mode 8bit 7ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

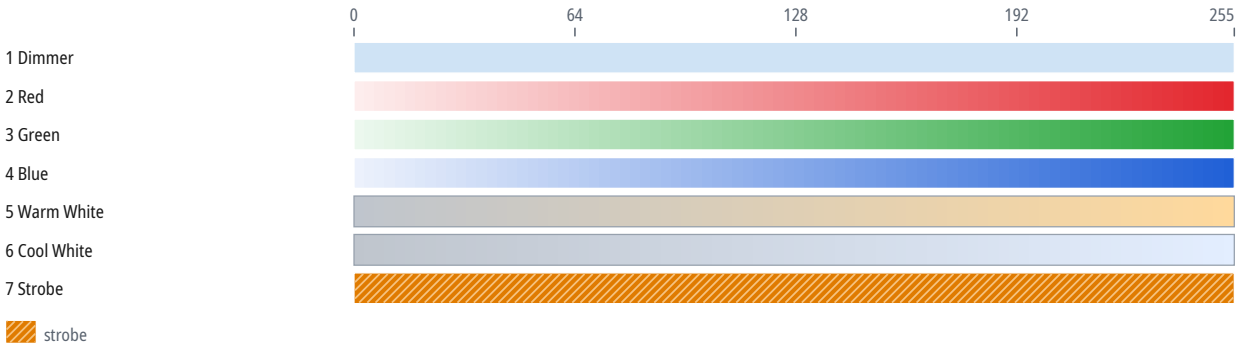

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red	0–255	
3	Green	0–255	
4	Blue	0–255	
5	Warm White	0–255	
6	Cool White	0–255	
7	Strobe	0–255	0–40 Hz

Mode 8bit 15ch

Channel functions at a glance

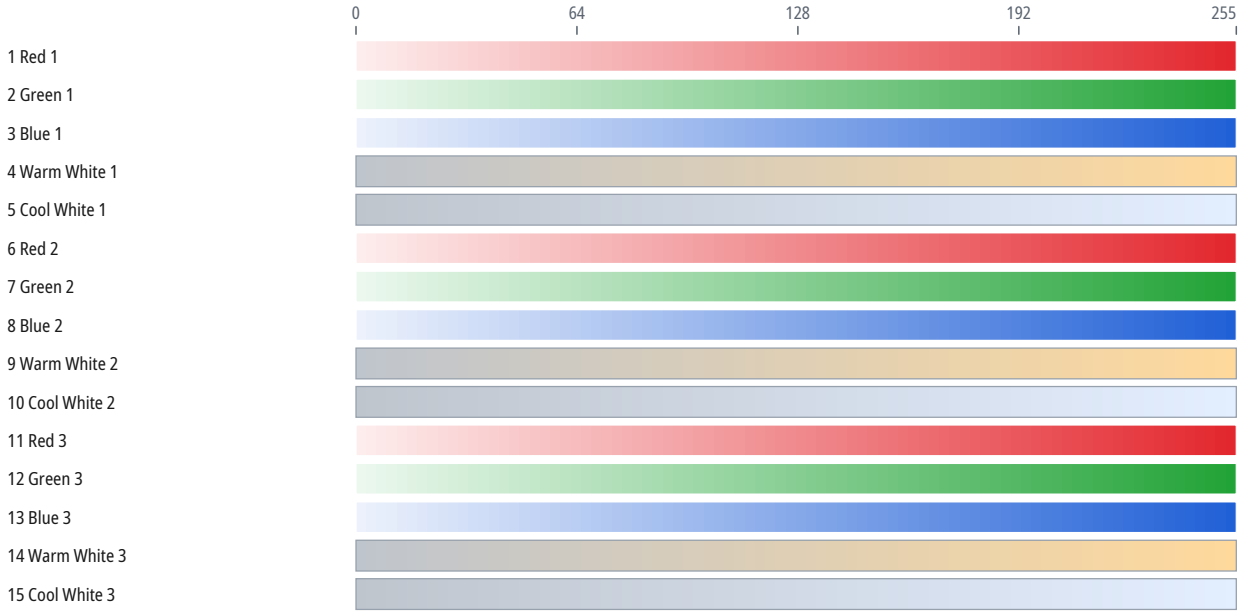

CH	Function	DMX	Description
1	Red 1	0–255	
2	Green 1	0–255	
3	Blue 1	0–255	
4	Warm White 1	0–255	
5	Cool White 1	0–255	
6	Red 2	0–255	
7	Green 2	0–255	
8	Blue 2	0–255	
9	Warm White 2	0–255	
10	Cool White 2	0–255	
11	Red 3	0–255	
12	Green 3	0–255	

CH	Function	DMX	Description
13	Blue 3	0–255	
14	Warm White 3	0–255	
15	Cool White 3	0–255	

Mode 8bit 16ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

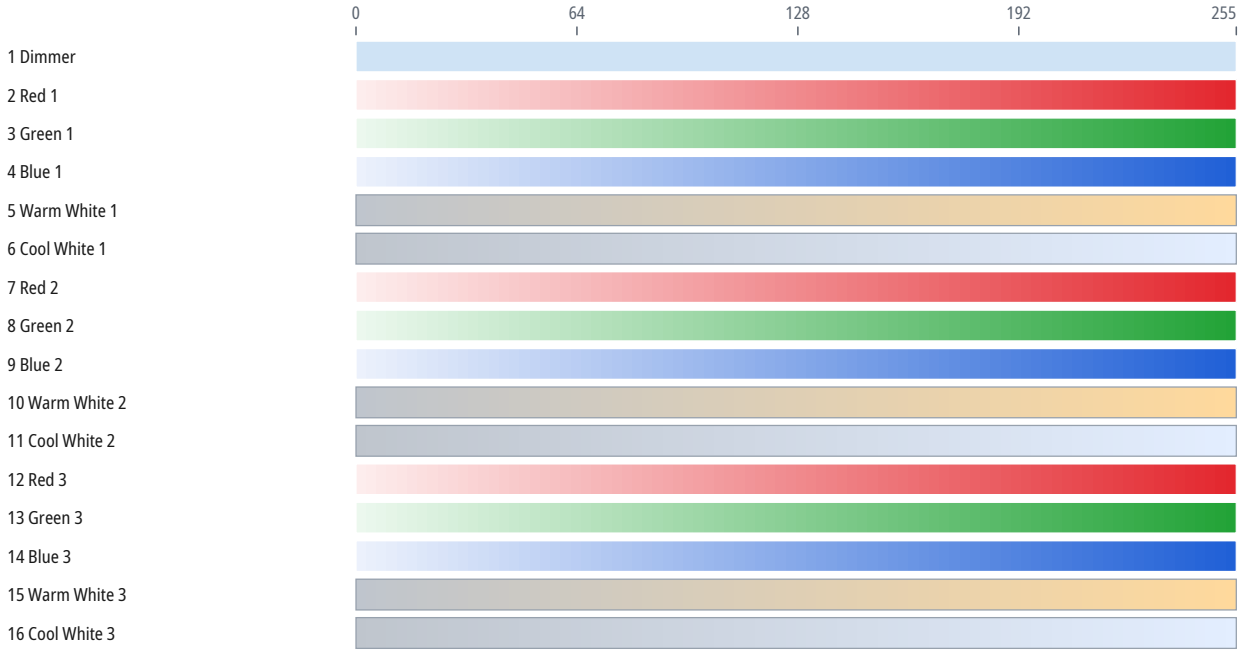

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red 1	0–255	
3	Green 1	0–255	
4	Blue 1	0–255	
5	Warm White 1	0–255	
6	Cool White 1	0–255	
7	Red 2	0–255	
8	Green 2	0–255	
9	Blue 2	0–255	
10	Warm White 2	0–255	
11	Cool White 2	0–255	
12	Red 3	0–255	
13	Green 3	0–255	
14	Blue 3	0–255	
15	Warm White 3	0–255	
16	Cool White 3	0–255	

Mode 8bit 17ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

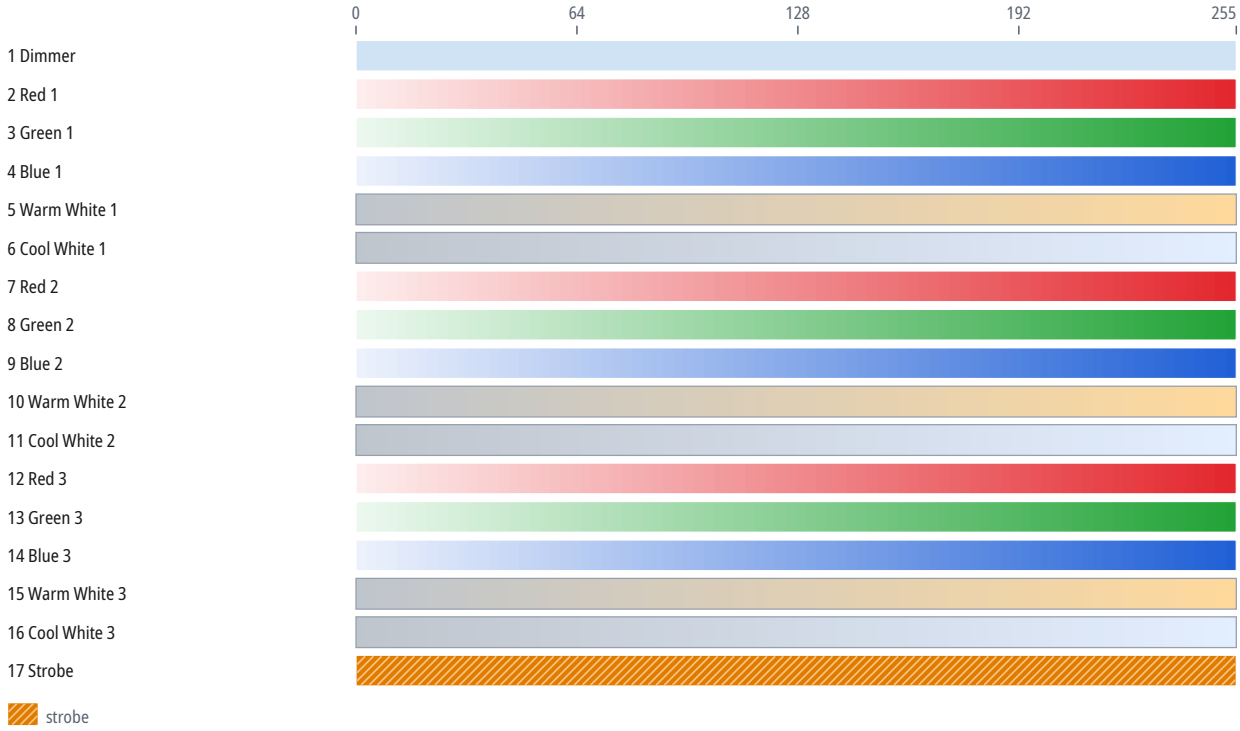

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Red 1	0–255	
3	Green 1	0–255	
4	Blue 1	0–255	
5	Warm White 1	0–255	
6	Cool White 1	0–255	
7	Red 2	0–255	
8	Green 2	0–255	
9	Blue 2	0–255	
10	Warm White 2	0–255	
11	Cool White 2	0–255	
12	Red 3	0–255	
13	Green 3	0–255	
14	Blue 3	0–255	
15	Warm White 3	0–255	
16	Cool White 3	0–255	
17	Strobe	0–255	0–40 Hz

Mode 16bit 10ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

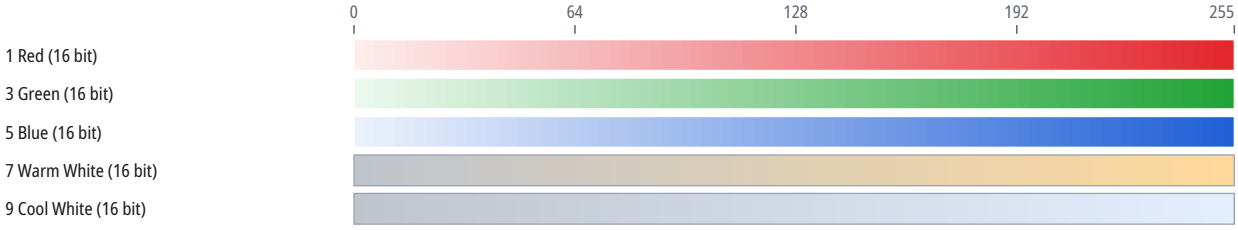

CH	Function	DMX	Description
1	Red	0–255	
2	Red Fine	0–255	Fine adjustment of CH 1
3	Green	0–255	
4	Green Fine	0–255	Fine adjustment of CH 3
5	Blue	0–255	
6	Blue Fine	0–255	Fine adjustment of CH 5
7	Warm White	0–255	
8	Warm White Fine	0–255	Fine adjustment of CH 7
9	Cool White	0–255	
10	Cool White Fine	0–255	Fine adjustment of CH 9

Mode 16bit 11ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

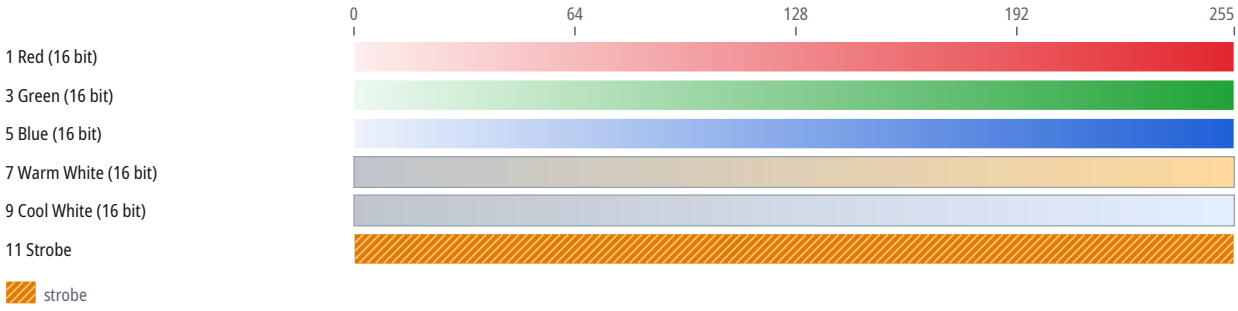

CH	Function	DMX	Description
1	Red	0–255	
2	Red Fine	0–255	Fine adjustment of CH 1
3	Green	0–255	
4	Green Fine	0–255	Fine adjustment of CH 3
5	Blue	0–255	
6	Blue Fine	0–255	Fine adjustment of CH 5
7	Warm White	0–255	
8	Warm White Fine	0–255	Fine adjustment of CH 7

CH	Function	DMX	Description
9	Cool White	0–255	
10	Cool White Fine	0–255	Fine adjustment of CH 9
11	Strobe	0–255	0–40 Hz

Mode 16bit 30ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

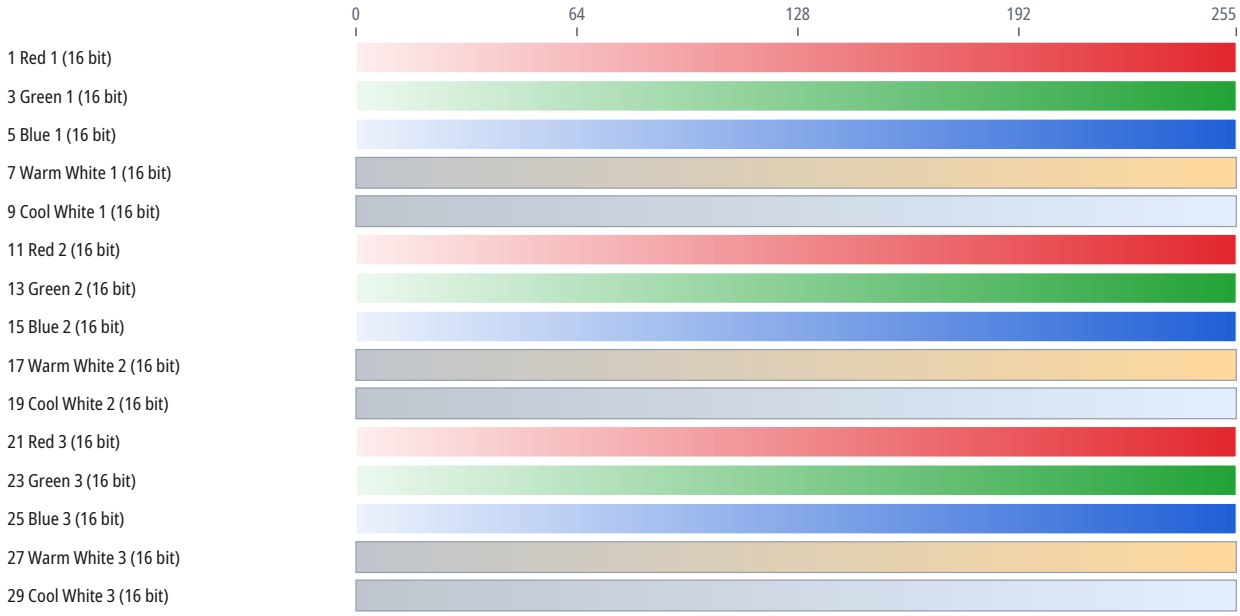

CH	Function	DMX	Description
1	Red 1	0–255	
2	Red 1 Fine	0–255	Fine adjustment of CH 1
3	Green 1	0–255	
4	Green 1 Fine	0–255	Fine adjustment of CH 3
5	Blue 1	0–255	
6	Blue 1 Fine	0–255	Fine adjustment of CH 5
7	Warm White 1	0–255	
8	Warm White 1 Fine	0–255	Fine adjustment of CH 7
9	Cool White 1	0–255	
10	Cool White 1 Fine	0–255	Fine adjustment of CH 9
11	Red 2	0–255	
12	Red 2 Fine	0–255	Fine adjustment of CH 11
13	Green 2	0–255	
14	Green 2 Fine	0–255	Fine adjustment of CH 13
15	Blue 2	0–255	
16	Blue 2 Fine	0–255	Fine adjustment of CH 15
17	Warm White 2	0–255	
18	Warm White 2 Fine	0–255	Fine adjustment of CH 17

CH	Function	DMX	Description
19	Cool White 2	0–255	
20	Cool White 2 Fine	0–255	Fine adjustment of CH 19
21	Red 3	0–255	
22	Red 3 Fine	0–255	Fine adjustment of CH 21
23	Green 3	0–255	
24	Green 3 Fine	0–255	Fine adjustment of CH 23
25	Blue 3	0–255	
26	Blue 3 Fine	0–255	Fine adjustment of CH 25
27	Warm White 3	0–255	
28	Warm White 3 Fine	0–255	Fine adjustment of CH 27
29	Cool White 3	0–255	
30	Cool White 3 Fine	0–255	Fine adjustment of CH 29

Mode 16bit 31ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

Channel functions at a glance

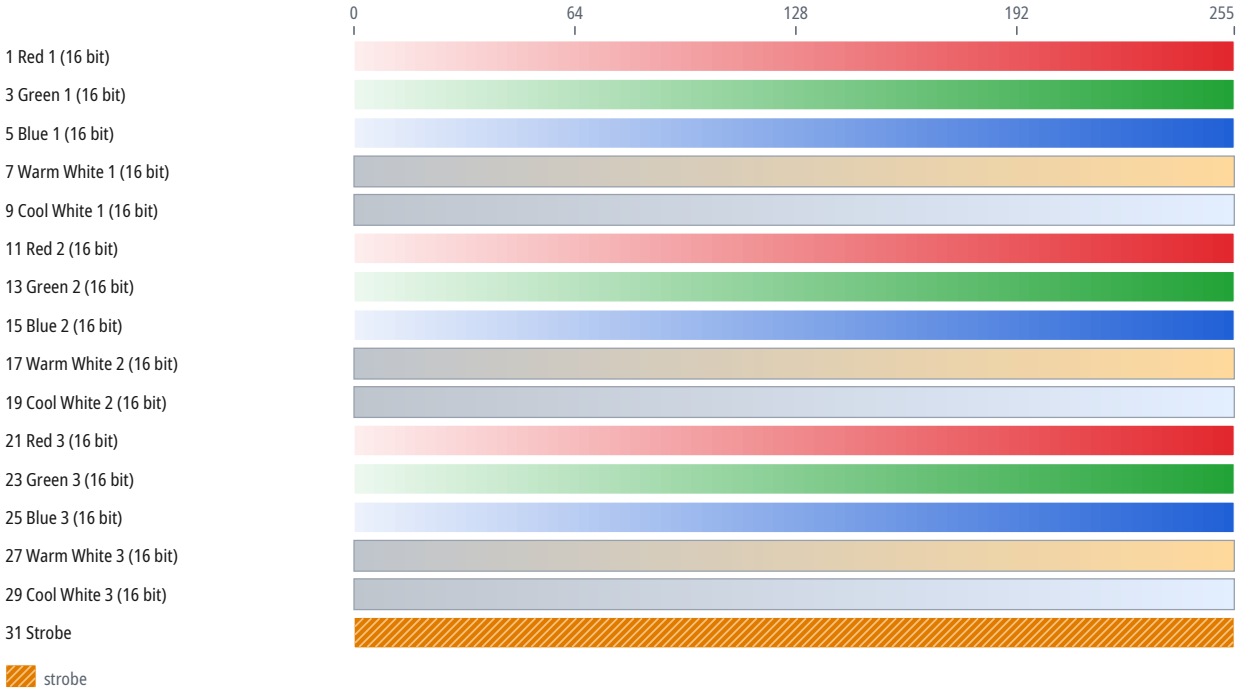

CH	Function	DMX	Description
1	Red 1	0–255	
2	Red 1 Fine	0–255	Fine adjustment of CH 1
3	Green 1	0–255	
4	Green 1 Fine	0–255	Fine adjustment of CH 3
5	Blue 1	0–255	
6	Blue 1 Fine	0–255	Fine adjustment of CH 5
7	Warm White 1	0–255	
8	Warm White 1 Fine	0–255	Fine adjustment of CH 7

CH	Function	DMX	Description
9	Cool White 1	0–255	
10	Cool White 1 Fine	0–255	Fine adjustment of CH 9
11	Red 2	0–255	
12	Red 2 Fine	0–255	Fine adjustment of CH 11
13	Green 2	0–255	
14	Green 2 Fine	0–255	Fine adjustment of CH 13
15	Blue 2	0–255	
16	Blue 2 Fine	0–255	Fine adjustment of CH 15
17	Warm White 2	0–255	
18	Warm White 2 Fine	0–255	Fine adjustment of CH 17
19	Cool White 2	0–255	
20	Cool White 2 Fine	0–255	Fine adjustment of CH 19
21	Red 3	0–255	
22	Red 3 Fine	0–255	Fine adjustment of CH 21
23	Green 3	0–255	
24	Green 3 Fine	0–255	Fine adjustment of CH 23
25	Blue 3	0–255	
26	Blue 3 Fine	0–255	Fine adjustment of CH 25
27	Warm White 3	0–255	
28	Warm White 3 Fine	0–255	Fine adjustment of CH 27
29	Cool White 3	0–255	
30	Cool White 3 Fine	0–255	Fine adjustment of CH 29
31	Strobe	0–255	0–40 Hz

9 Technical specifications

Parameter	Value
Light source	LED
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0–40 Hz

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.