DMX REFERENCE

Hexaprism

Leding

Manufacturer	Leding
GDTF file	Leding_Hexaprism_142233.gdtf
GDTF revision	v001 · 2026-05-11
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 8
Mode 19Ch 9
Mode 67Ch 12
10 Technical specifications 14
11 Maintenance and cleaning 14
12 Troubleshooting 15
13 Disposal 15

1 About this manual

This document describes the Hexaprism by Leding. It was compiled from the GDTF file Leding_Hexaprism_142233.gdtf from the GDTF-Share library.

File revision: “v001”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Leding; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	17 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
19Ch	19	26	1, 20, 39, 58, ...
67Ch	67	7	1, 68, 135, 202, ...

No light? Check these channels

- 19Ch: CH 9 Dimmer above 0; CH 10 Shutter at 0–5 “Open”
- 67Ch: CH 9 Dimmer above 0; CH 16 Shutter at 0–5 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION


- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

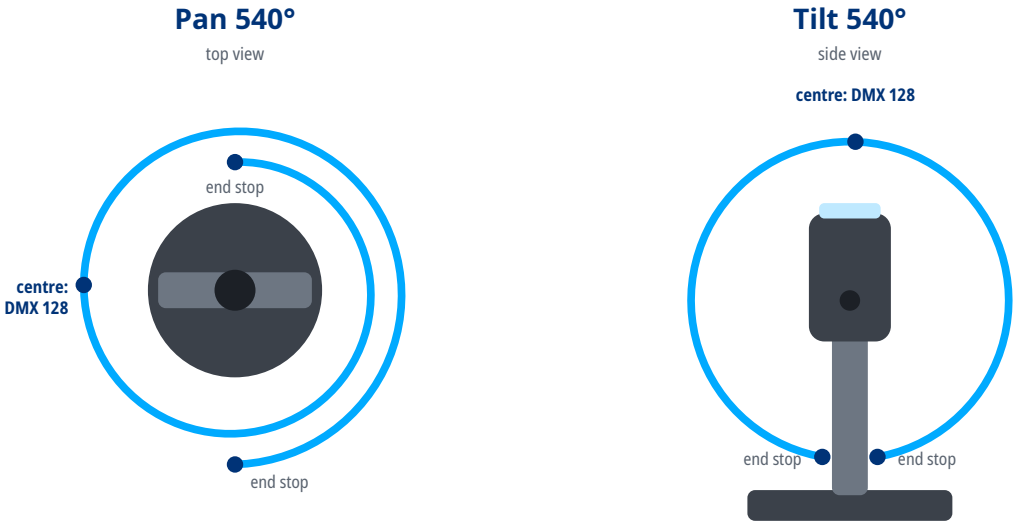

5 Installation

⚠ WARNING


- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 17 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

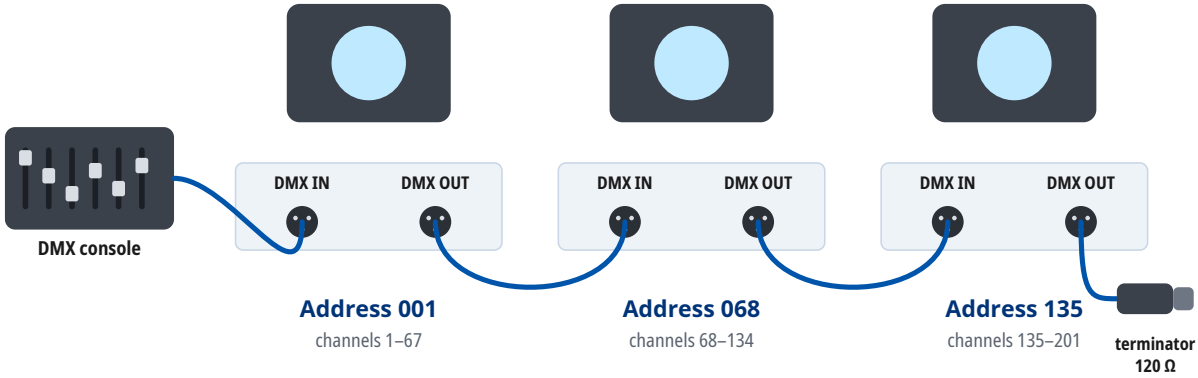

Mode 67Ch: every unit occupies 67 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “67Ch”: 67.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “67Ch”, you can use, for example, the start addresses 1, 68, 135, 202.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	19Ch 19 channels	67Ch 67 channels
Pan / Tilt	1, 3, 4, 6	1, 3, 4, 6
Dimmer	9	9
Shutter / strobe	10	16
Color mixing	11–16	10–15, 19–66
Effects / macros	8, 17, 18	8, 17, 18
Pixel control		16 cells


LED colors and the colors they mix

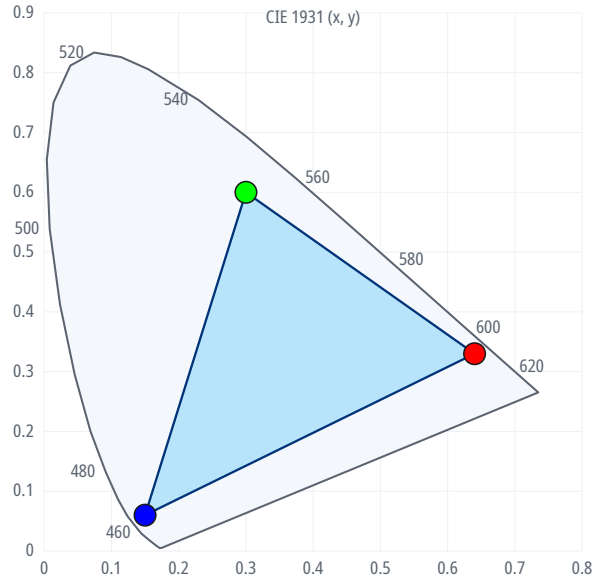

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

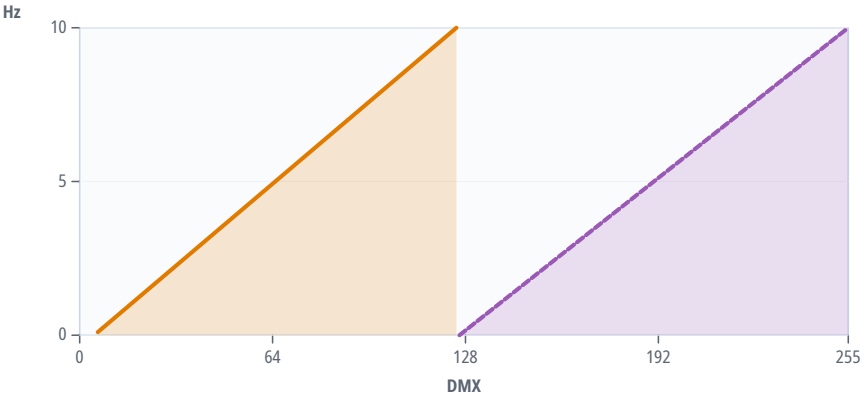


CH 16 · 67Ch

6–125: 0.1–10 Hz
Strobe

126–255: 0–10 Hz
STROBE 3

9 DMX channels

Units in one DMX universe

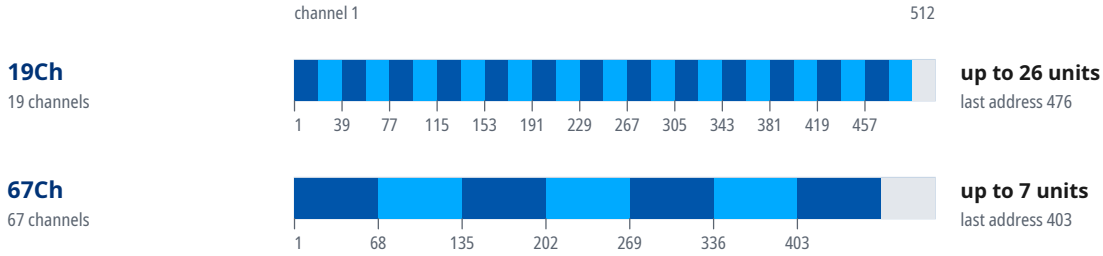

Start addresses of 20 units in the mode “67Ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	336	11	U2 · 202	16	U3 · 68
2	68	7	403	12	U2 · 269	17	U3 · 135
3	135	8	U2 · 1	13	U2 · 336	18	U3 · 202
4	202	9	U2 · 68	14	U2 · 403	19	U3 · 269
5	269	10	U2 · 135	15	U3 · 1	20	U3 · 336


Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 19Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 9 Dimmer above 0; CH 10 Shutter at 0–5 “Open”. The GDTF file gives these values for a console's Highlight function: CH 9 Dimmer 255, CH 11 Red 1 255, CH 12 Green 1 255, CH 13 Blue 1 255, CH 17 Color Macro 0, CH 18 Color Macro Speed 0.

Channel functions at a glance

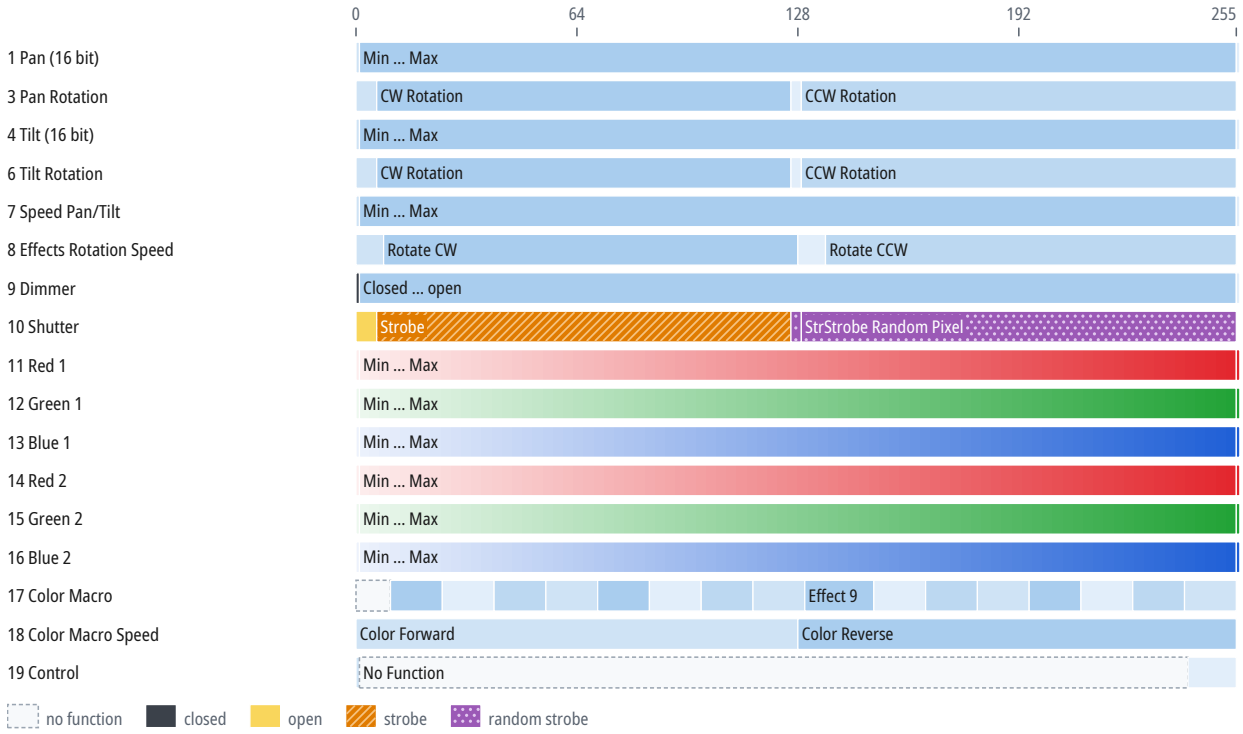

CH	Function	DMX	Description
1	Pan	0–1	Min
		1–255	Min ... Max
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Pan Rotation	0–5	No Rotation
		6–125	CW Rotation
		126–128	Pan CR Speed: Stop
		129–255	CCW Rotation
4	Tilt	0–1	Min
		1–255	Min ... Max
		255	Max
5	Tilt Fine	0–255	Fine adjustment of CH 4
6	Tilt Rotation	0–5	No Rotation
		6–125	CW Rotation
		126–128	Tilt CR Speed: Stop
		129–255	CCW Rotation

CH	Function	DMX	Description
7	Speed Pan/Tilt		P/T SPEED
		0	Min
		1–254	Min ... Max
		255	Max
8	Effects Rotation Speed	0–7	No Rotation (0–57.3 °/s)
		8–127	Rotate CW (655–0.097 °/s)
		128–135	MIRROR BALL ROTATION: Stop
		136–255	Rotate CCW (0.097–655 °/s)
9	Dimmer		RING DIMMER
		0	Closed
		1–254	Closed ... open
		255	Open
10	Shutter	0–5	STROBE: Open
		6–125	Strobe (0.1–10 Hz)
		126–128	Strobe Random
		129–255	StrStrobe Random Pixel (0.1–10 Hz)
11	Red 1		RING RED
		0	Min
		1–254	Min ... Max
		255	Max
12	Green 1		RING GREEN
		0	Min
		1–254	Min ... Max
		255	Max
13	Blue 1		RING BLUE
		0	Min
		1–254	Min ... Max
		255	Max
14	Red 2		RING RED
		0	Min
		1–254	Min ... Max
		255	Max
15	Green 2		RING GREEN
		0	Min
		1–254	Min ... Max
		255	Max
16	Blue 2		RING BLUE
		0	Min
		1–254	Min ... Max
		255	Max
17	Color Macro	0–9	No Function
		10–24	Effect 1


CH	Function	DMX	Description
17	Color Macro (continued)	25–39	Effect 2
		40–54	Effect 3
		55–69	Effect 4
		70–84	Effect 5
		85–99	Effect 6
		100–114	Effect 7
		115–129	Effect 8
		130–149	Effect 9
		150–164	Effect 10
		165–179	Effect 11
		180–194	Effect 12
		195–209	Effect 13
		210–224	Effect 14
		225–239	Effect 15
		240–255	Effect 16
18	Color Macro Speed		RING COLOR EFFECT SPEED
		0–127	Color Forward
		128–255	Color Reverse
19	Control		CONTROL 2
		0	CONTROL 2
		1–240	No Function
		241–255	Reset All

Mode 67Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 9 Dimmer above 0; CH 16 Shutter at 0–5 “Open”. The GDTF file gives these values for a console's Highlight function: CH 9 Dimmer 255, CH 10 Red 1 255, CH 11 Green 1 255, CH 12 Blue 1 255, CH 17 Color Macro 0, CH 18 Color Macro Speed 0.

Channel functions at a glance

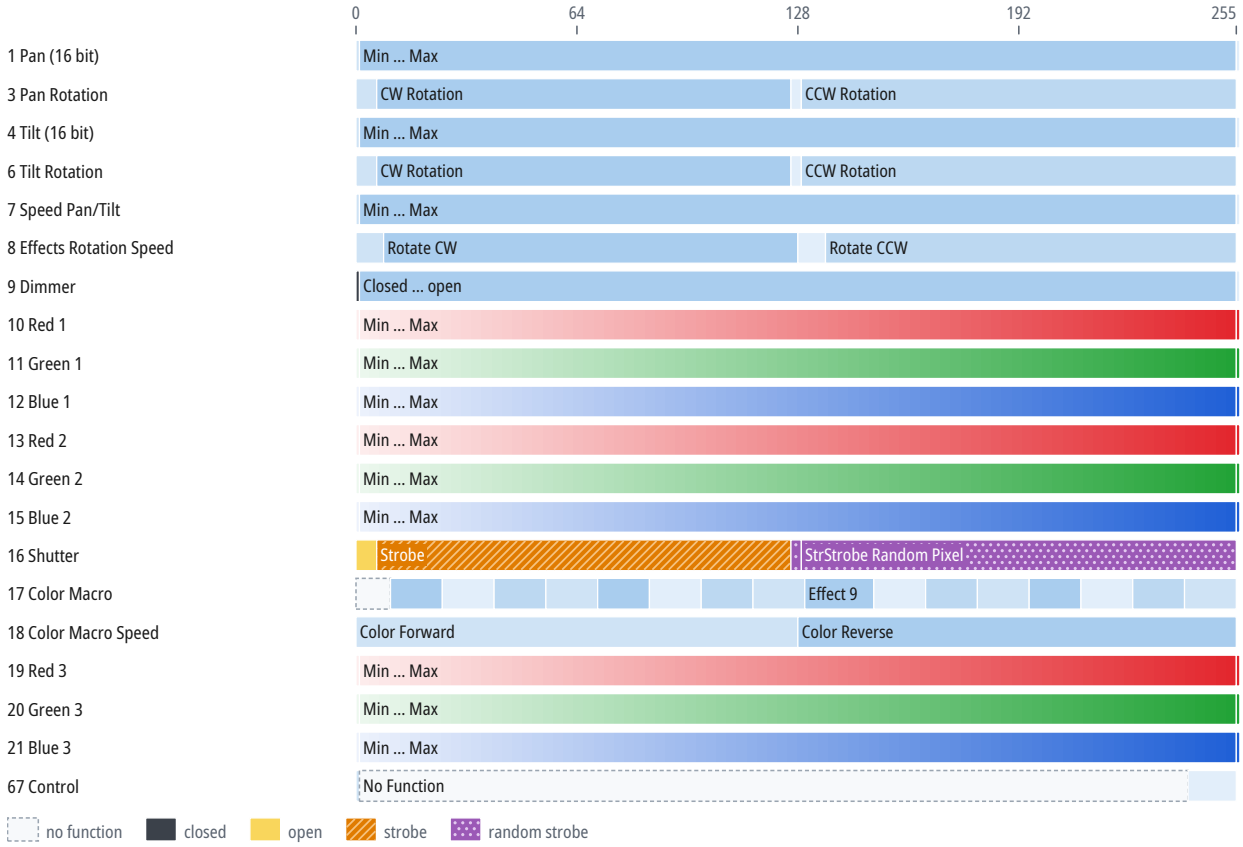

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “19Ch” (p. 9)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Pan Rotation		Same as CH 3 in the mode “19Ch” (p. 9)
4	Tilt		Same as CH 4 in the mode “19Ch” (p. 9)
5	Tilt Fine	0–255	Fine adjustment of CH 4
6	Tilt Rotation		Same as CH 6 in the mode “19Ch” (p. 9)
7	Speed Pan/Tilt		Same as CH 7 in the mode “19Ch” (p. 10)
8	Effects Rotation Speed		Same as CH 8 in the mode “19Ch” (p. 10)
9	Dimmer		Same as CH 9 in the mode “19Ch” (p. 10)
10	Red 1		Same as CH 11 in the mode “19Ch” (p. 10)
11	Green 1		Same as CH 12 in the mode “19Ch” (p. 10)
12	Blue 1		Same as CH 13 in the mode “19Ch” (p. 10)
13	Red 2		Same as CH 14 in the mode “19Ch” (p. 10)

CH	Function	DMX	Description
14	Green 2		Same as CH 15 in the mode “19Ch” (p. 10)
15	Blue 2		Same as CH 16 in the mode “19Ch” (p. 10)
16	Shutter		Same as CH 10 in the mode “19Ch” (p. 10)
17	Color Macro		Same as CH 17 in the mode “19Ch” (p. 10)
18	Color Macro Speed		Same as CH 18 in the mode “19Ch” (p. 11)
19	Red 3		RING SEGMENT RED
		0	Min
		1–254	Min … Max
		255	Max
20	Green 3		RING SEGMENT GREEN
		0	Min
		1–254	Min … Max
		255	Max
21	Blue 3		RING SEGMENT BLUE
		0	Min
		1–254	Min … Max
		255	Max
67	Control		Same as CH 19 in the mode “19Ch” (p. 11)

CH 19–66: 16 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 19–21); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	19	20	21	2	22	23	24	3	25	26	27
4	28	29	30	5	31	32	33	6	34	35	36
7	37	38	39	8	40	41	42	9	43	44	45
10	46	47	48	11	49	50	51	12	52	53	54
13	55	56	57	14	58	59	60	15	61	62	63
16	64	65	66								


10 Technical specifications

Parameter	Value
Light source	LED
Pan	540°
Tilt	540°
RDM	yes (manufacturer ID 0x06CA, device model ID 0x1501)
Weight	17 kg
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0.1–10 Hz
Effect rotation	up to 655 °/s (109 rpm)

Spot diameter

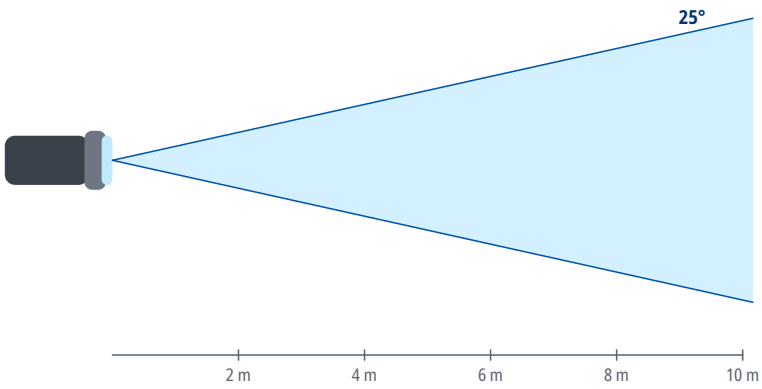

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.