DMX REFERENCE

Rush MH 2

Rush MH 2 Wash

Martin Professional



Manufacturer	Martin Professional
GDTF file	Martin_Professional_Rush_MH_2_70183.gdtf
GDTF revision	Untested Release · 2024-08-07
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 7
9 DMX channels 9
Mode 12 Channel 9
10 Technical specifications 12
11 Maintenance and cleaning 12
12 Troubleshooting 13
13 Disposal 13

1 About this manual

This document describes the Rush MH 2 Wash by Martin Professional. It was compiled from the GDTF file Martin_Professional_Rush_MH_2_70183.gdtf from the GDTF-Share library.

File revision: “Untested Release”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Martin Professional; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	5.7 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
12 Channel	12	42	1, 13, 25, 37, ...

No light? Check these channels

- 12 Channel: CH 1 Shutter at 20–49, 65–69, 85–89, 105–109, 125–129, 145–149, 165–169, 185–189, 205–209, 225–229 or 245–255 “Shutter Open”; CH 2 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement



5 Installation


⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 5.7 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

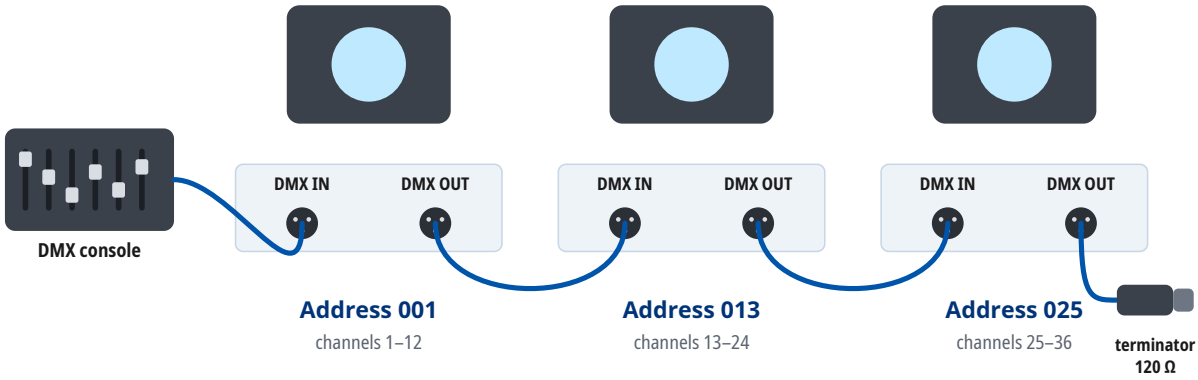

Mode 12 Channel: every unit occupies 12 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “12 Channel”: 12.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “12 Channel”, you can use, for example, the start addresses 1, 13, 25, 37.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	12 Channel 12 channels
Pan / Tilt	3, 5
Dimmer	2
Color mixing	9–12

LED colors and the colors they mix

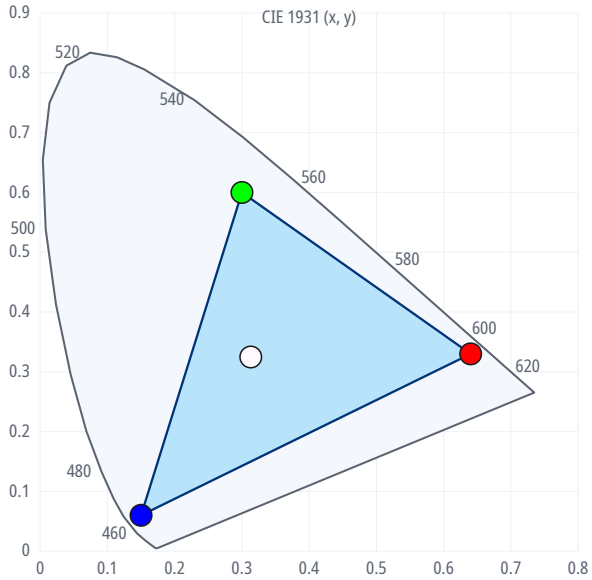


LED	x	y
White	0.313	0.325
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

9 DMX channels

Units in one DMX universe

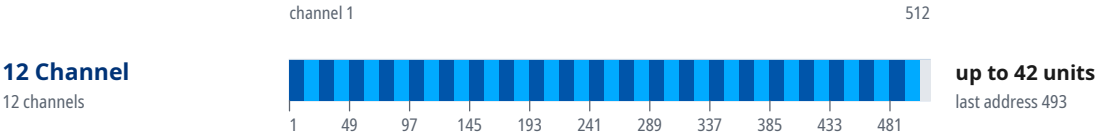

Start addresses of 20 units in the mode “12 Channel”


Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	61	11	121	16	181
2	13	7	73	12	133	17	193
3	25	8	85	13	145	18	205
4	37	9	97	14	157	19	217
5	49	10	109	15	169	20	229

Mode 12 Channel

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 20–49, 65–69, 85–89, 105–109, 125–129, 145–149, 165–169, 185–189, 205–209, 225–229 or 245–255 “Shutter Open”; CH 2 Dimmer above 0.

Channel functions at a glance

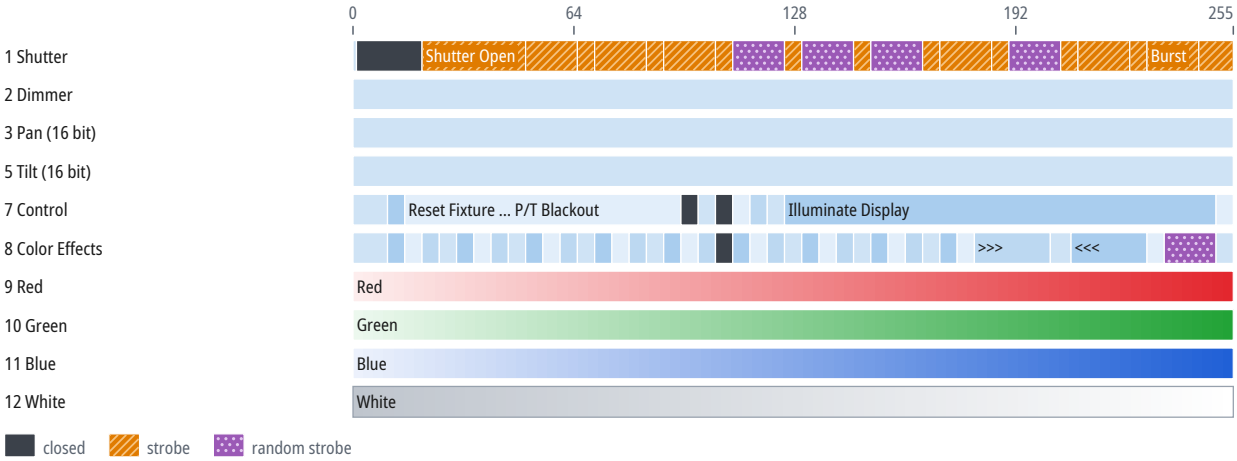

CH	Function	DMX	Description
1	Shutter	0	Strobe Mode Shutter
		1–19	Shutter Closed
		20–49	Shutter Open
		50–64	Strobe
		65–69	Shutter Open
		70–84	Pulse Open
		85–89	Shutter Open
		90–104	Pulse Close


CH	Function	DMX	Description
1	Shutter (continued)	105–109	Shutter Open
		110–124	Random Strobe
		125–129	Shutter Open
		130–144	Random Open Pulse
		145–149	Shutter Open
		150–164	Random Close Pulse
		165–169	Shutter Open
		170–184	Burst Pulse
		185–189	Shutter Open
		190–204	Random Burst Pulse
		205–209	Shutter Open
		210–224	Sine Wave
		225–229	Shutter Open
		230–244	Burst
		245–255	Shutter Open
2	Dimmer	0–255	
3	Pan	0–255	540°
4	Pan Fine	0–255	Fine adjustment of CH 3
5	Tilt	0–255	180°
6	Tilt Fine	0–255	Fine adjustment of CH 5
7	Control		Fixture Control
		0–9	Open
		10–14	Reset Fixture
		15–94	Reset Fixture ... P/T Blackout
		95–99	P/T Blackout
		100–104	P/T Blackout ... Disable P/T Blackout
		105–109	Disable P/T Blackout
		110–114	Fast Dimming
		115–119	Fast Dimming ... Smooth Dimming
		120–124	Smooth Dimming
		125–249	Illuminate Display
		250–255	Stand Alone
8	Color Effects		Color Macros
		0–9	Open
		10–14	Moroccan Pink
		15–19	Pink
		20–24	Special Rose Pink
		25–29	Follies Pink
		30–34	Fuchsia Pink
		35–39	Surprise Pink
		40–44	Congo Blue
		45–49	Tokyo Blue

CH	Function	DMX	Description
8	Color Effects (continued)	50–54	Deep Blue
		55–59	Just Blue
		60–64	Medium Blue
		65–69	Double CT Blue
		70–74	Slate Blue
		75–79	Full CT Blue
		80–84	Half CT Blue
		85–89	Steel Blue
		90–94	Lighter Blue
		95–99	Light Blue
		100–104	Medium Blue Green
		105–109	Dark Green
		110–114	Primary Green
		115–119	Moss Green
		120–124	Fern Green
		125–129	JAS Green
		130–134	Lime Green
		135–139	Spring Yelllow
		140–144	Deep Amber
		145–149	Chrome Orange
		150–154	Orange
		155–159	Gold Amber
		160–164	Millenium Gold
		165–169	Deep Golden Amber
		170–174	Flame Red
		175–179	Open
		180–201	>>>
		202–207	Stop
		208–229	<<<
		230–234	<<< ... Random
		235–249	Random
		250–255	Color Macros
9	Red	0–255	Red
10	Green	0–255	Green
11	Blue	0–255	Blue
12	White	0–255	White

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	700 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	85
Optics	
Beam angle	25°
Movement	
Pan	540°
Tilt	180°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	5.7 kg
Operating environment	
Operating temperature	0 to 40 °C

Spot diameter

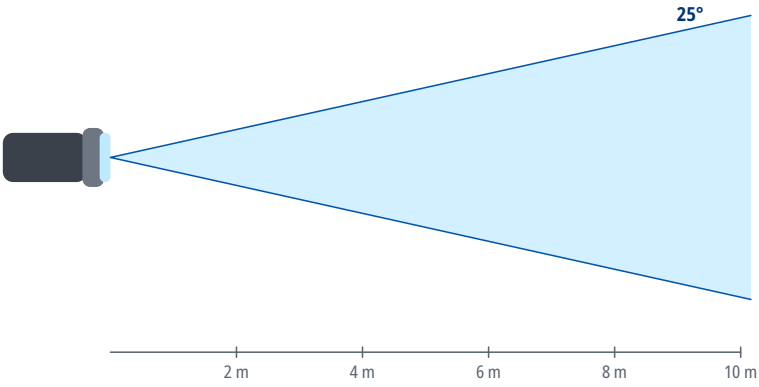

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or

pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.