DMX REFERENCE

LED BAR 424 RGBUV

PRstage



Manufacturer	PRstage
GDTF file	PRstage_LED_BAR_424_RGBUV_109814.gdtf
GDTF revision	Ver 1_6 · 2025-09-05
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 9
Mode1 9
Mode2 11
10 Technical specifications 14
11 Maintenance and cleaning 14
12 Troubleshooting 15
13 Disposal 15

1 About this manual

This document describes the LED BAR 424 RGBUV by PRstage. It was compiled from the GDTF file PRstage_LED_BAR_424_RGBUV_109814.gdtf from the GDTF-Share library.

File revision: “Ver 1_6”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by PRstage; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	3.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode1	8	64	1, 9, 17, 25, ...
Mode2	32	16	1, 33, 65, 97, ...

No light? Check these channels

- Mode1: CH 6 Shutter at 0–15 “Open”
- Mode2: CH 2 Shutter at 0–15 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ WARNING

- This device emits ultraviolet (UV) radiation, which can harm the eyes and skin.
- Do not look directly into the light source and avoid prolonged exposure of the eyes and skin at close range. Install the device so that people are not exposed at close range.
- People with increased sensitivity to light, including those taking medication that increases this sensitivity, should avoid UV exposure.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“PRSTAGE LED BAR 424RGBUV is a high-output linear LED fixture featuring 42 multi-chip 4 W LEDs (Red, Green, Blue, UV at 395 nm) with RGBUV mixing, offering over 16 million color variations and long LED lifespan (~50,000 h).”

“The fixture delivers smooth 0–100% linear dimming, a wide 60° beam angle, and an adjustable electronic strobe ranging from 1 to 20 flashes per second. Cooling is actively managed (the fan can be disabled via the menu), and built-in thermal protection enhances longevity. Its versatile control includes DMX512, sound activation, auto-run programs, and a Master-Slave mode. Available channel modes are 8, and 32 DMX channels. It offers 3-pin XLR DMX In/Out, an LCD display with four navigation buttons, and includes two adjustable barn doors plus a matte plastic diffuser for beam shaping.”

“Powered via PowerCON (input + through output) from AC 90–240 V (50/60 Hz), it consumes up to 200 W. The robust metal housing measures 610 × 88 × 150 mm and weighs just 3.2 kg”

5 Installation


⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 3.45 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

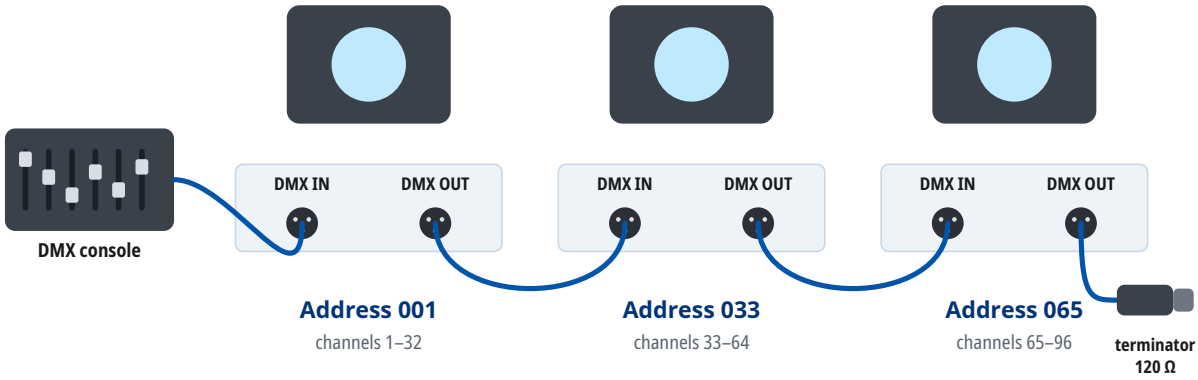

Mode2: every unit occupies 32 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode2”: 32.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode2”, you can use, for example, the start addresses 1, 33, 65, 97.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	Mode1 8 channels	Mode2 32 channels
Dimmer	1	1
Shutter / strobe	6	2
Color mixing	2–5	4–31
Pixel control		✓


Gobo wheel

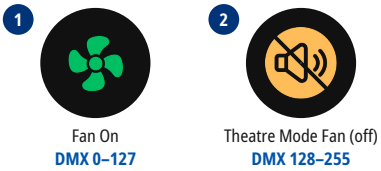

Fan On
DMX 0–127

Theatre Mode Fan (off)
DMX 128–255


LED colors and the colors they mix

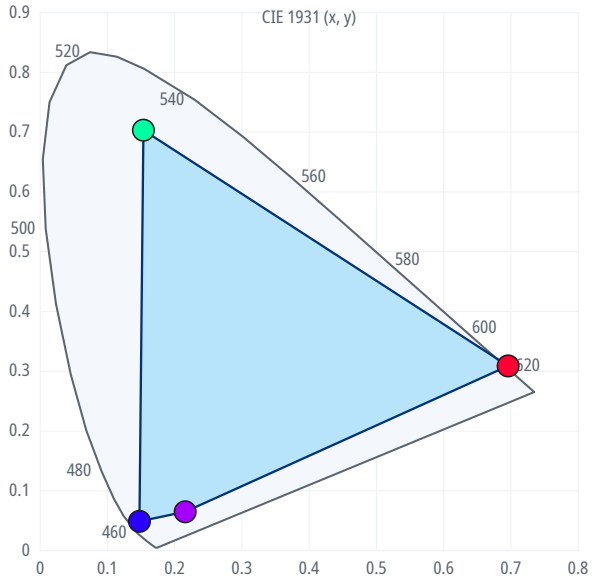

LED	x	y	nm
Red	0.696	0.309	628
Green	0.153	0.703	517
Blue	0.148	0.049	458
UV	0.216	0.065	395


The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Spectra of the light sources

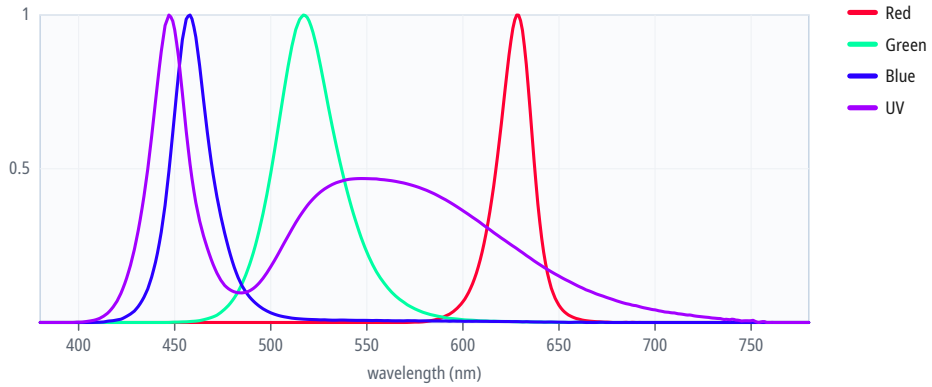

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

Strobe rate

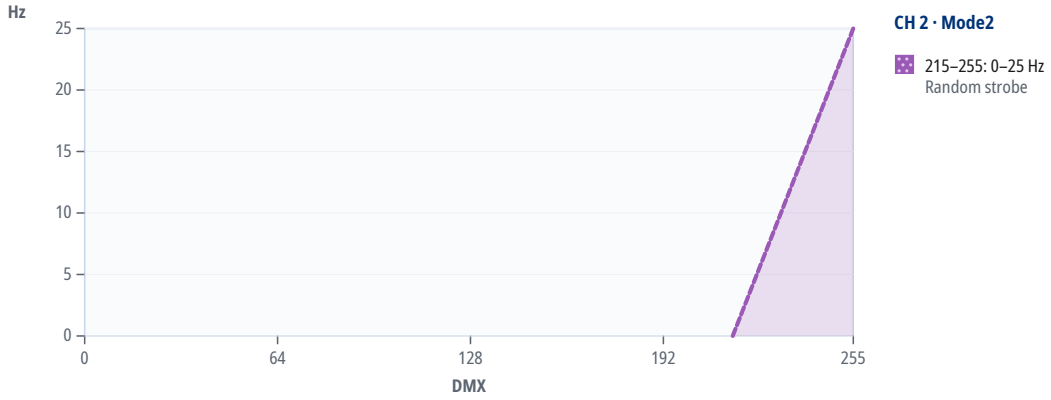


Cells (pixels)



6 cells where the GDTF file places them (seen from above), numbered by their first DMX channel (CH) in the mode “Mode2”.

9 DMX channels

Units in one DMX universe

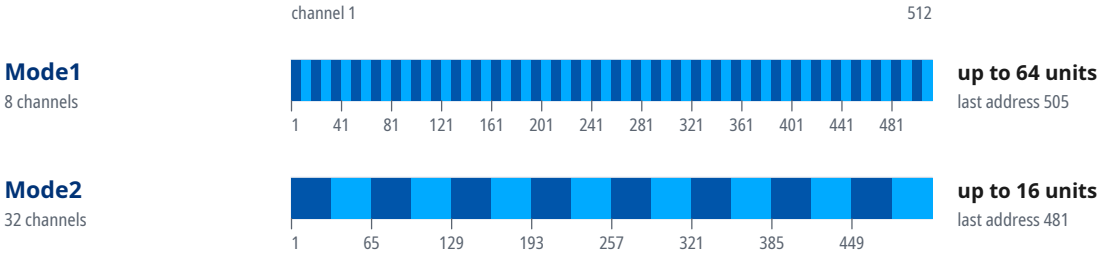

Start addresses of 20 units in the mode “Mode2”


Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	161	11	321	16	481
2	33	7	193	12	353	17	U2 · 1
3	65	8	225	13	385	18	U2 · 33
4	97	9	257	14	417	19	U2 · 65
5	129	10	289	15	449	20	U2 · 97

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode1

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 255, CH 3 Green 255, CH 4 Blue 255.

Channel functions at a glance

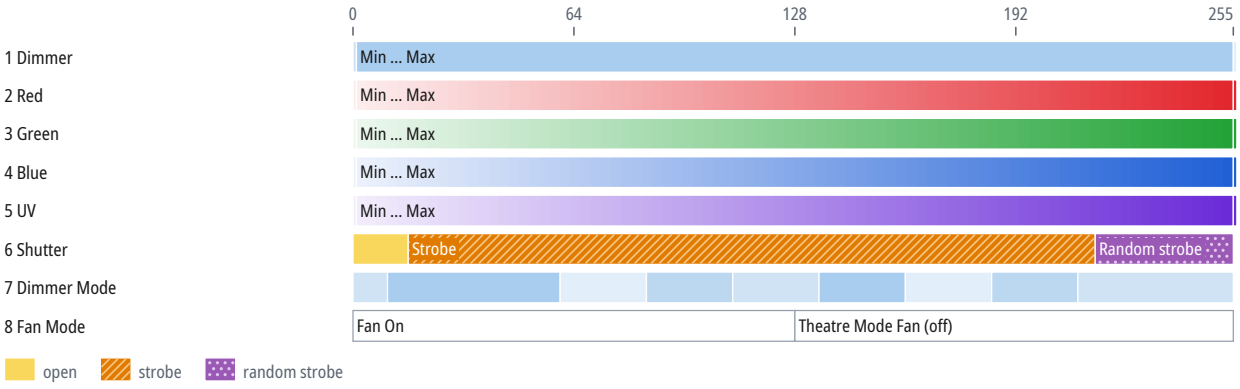


CH	Function	DMX	Description
1	Dimmer	0	Min
		1–254	Min ... Max
		255	Max
2	Red	0	Min
		1–254	Min ... Max
		255	Max

CH	Function	DMX	Description
3	Green	0	Min
		1–254	Min … Max
		255	Max
4	Blue	0	Min
		1–254	Min … Max
		255	Max
5	UV	0	Min
		1–254	Min … Max
		255	Max
6	Shutter	0–15	Shutter: Open
		16–214	Strobe
		215–255	Random strobe (0–25 Hz)
7	Dimmer Mode	0–9	No function
		10–59	Dimmer Mode 1
		60–84	Dimmer Mode 2
		85–109	Dimmer Mode 3
		110–134	Dimmer Mode 4
		135–159	Dimmer Mode 5
		160–184	Dimmer Mode 6
		185–209	Dimmer Mode 7
		210–255	Dimmer Mode 8
8	Fan Mode	0–127	Fan On
		128–255	Theatre Mode Fan (off)

Mode2

If the device receives DMX in this mode but gives no light, check these channels: CH 2 Shutter at 0–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 4 Red 1 255, CH 5 Green 1 255, CH 6 Blue 1 255, CH 8 Red 2 255, CH 9 Green 2 255, CH 10 Blue 2 255, CH 12 Red 3 255, CH 13 Green 3 255, CH 14 Blue 3 255, CH 16 Red 4 255, CH 17 Green 4 255, CH 18 Blue 4 255, CH 20 Red 5 255, CH 21 Green 5 255, CH 22 Blue 5 255, CH 24 Red 6 255, CH 25 Green 6 255, CH 26 Blue 6 255, CH 28 Red 7 255, CH 29 Green 7 255, CH 30 Blue 7 255.

Channel functions at a glance

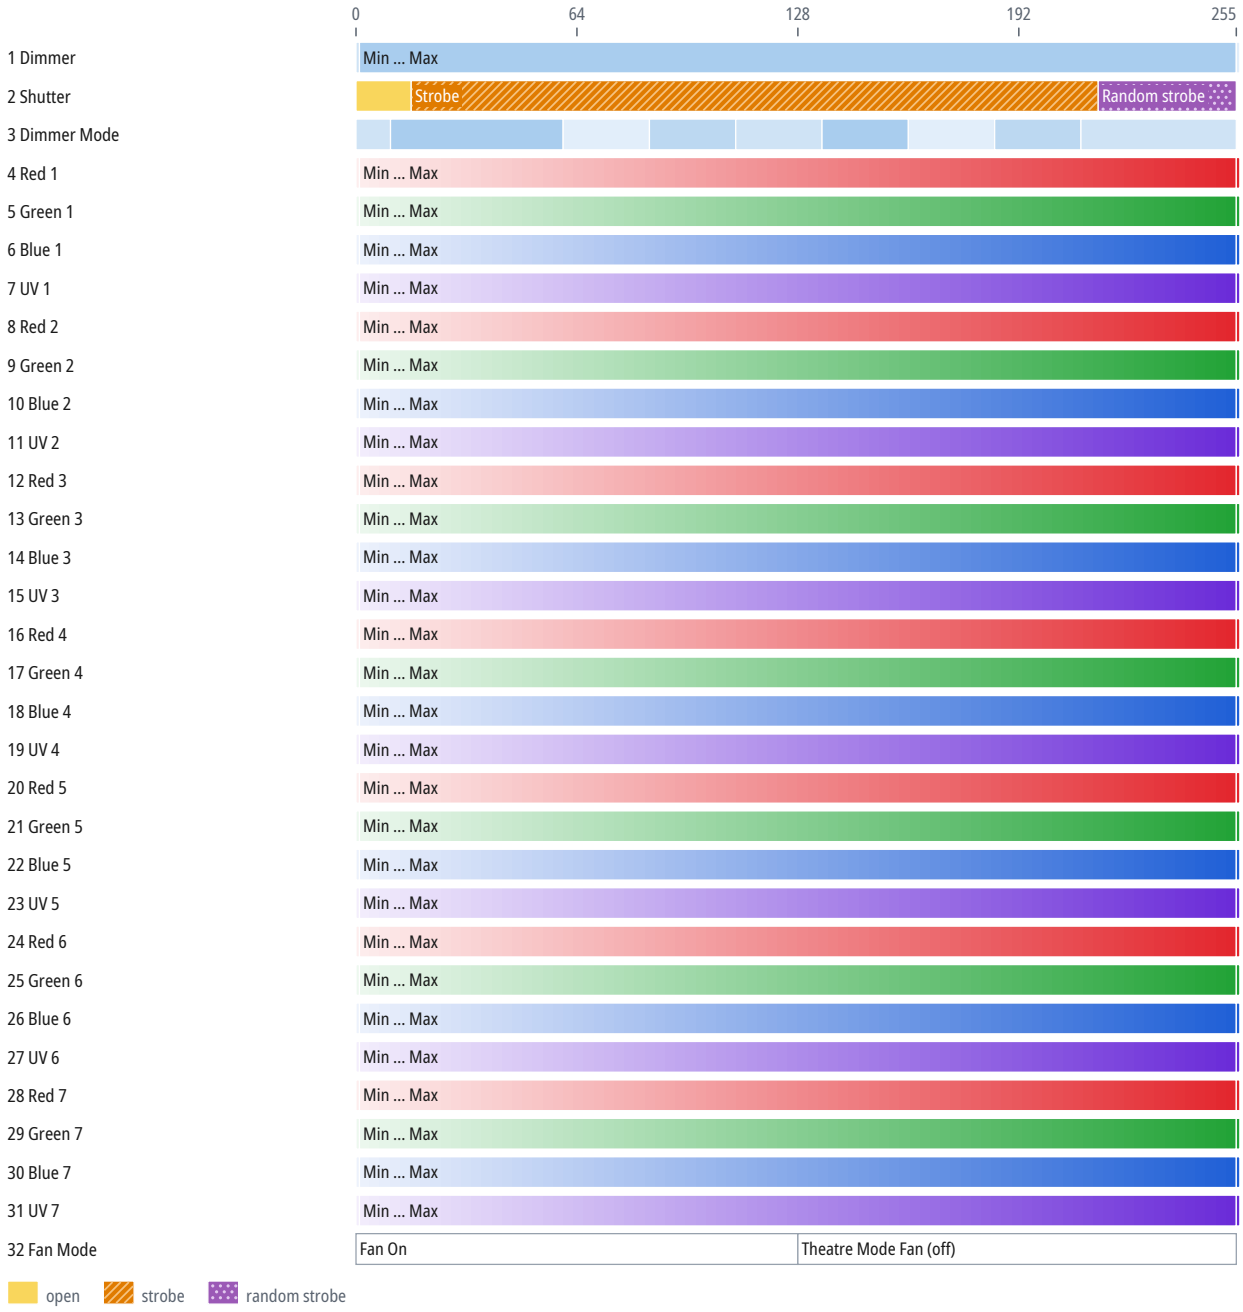

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode1” (p. 9)
2	Shutter		Same as CH 6 in the mode “Mode1” (p. 10)
3	Dimmer Mode		Same as CH 7 in the mode “Mode1” (p. 10)
4	Red 1	0	Min
		1–254	Min … Max
		255	Max
5	Green 1	0	Min
		1–254	Min … Max
		255	Max
6	Blue 1	0	Min
		1–254	Min … Max
		255	Max
7	UV 1	0	Min
		1–254	Min … Max
		255	Max
8	Red 2	0	Min
		1–254	Min … Max
		255	Max
9	Green 2	0	Min
		1–254	Min … Max
		255	Max
10	Blue 2	0	Min
		1–254	Min … Max
		255	Max
11	UV 2	0	Min
		1–254	Min … Max
		255	Max
12	Red 3	0	Min
		1–254	Min … Max
		255	Max
13	Green 3	0	Min
		1–254	Min … Max
		255	Max
14	Blue 3	0	Min
		1–254	Min … Max
		255	Max
15	UV 3	0	Min
		1–254	Min … Max
		255	Max
16	Red 4	0	Min

CH	Function	DMX	Description
16	Red 4 (continued)	1–254	Min … Max
		255	Max
17	Green 4	0	Min
		1–254	Min … Max
		255	Max
18	Blue 4	0	Min
		1–254	Min … Max
		255	Max
19	UV 4	0	Min
		1–254	Min … Max
		255	Max
20	Red 5	0	Min
		1–254	Min … Max
		255	Max
21	Green 5	0	Min
		1–254	Min … Max
		255	Max
22	Blue 5	0	Min
		1–254	Min … Max
		255	Max
23	UV 5	0	Min
		1–254	Min … Max
		255	Max
24	Red 6	0	Min
		1–254	Min … Max
		255	Max
25	Green 6	0	Min
		1–254	Min … Max
		255	Max
26	Blue 6	0	Min
		1–254	Min … Max
		255	Max
27	UV 6	0	Min
		1–254	Min … Max
		255	Max
28	Red 7	0	Min
		1–254	Min … Max
		255	Max
29	Green 7	0	Min
		1–254	Min … Max
		255	Max


CH	Function	DMX	Description
30	Blue 7	0	Min
		1–254	Min ... Max
		255	Max
31	UV 7	0	Min
		1–254	Min ... Max
		255	Max
32	Fan Mode		Same as CH 8 in the mode “Mode1” (p. 10)

10 Technical specifications


Parameter	Value
RDM	yes (manufacturer ID 0x05AC, device model ID 0x8101)
Weight	3.5 kg
Operating temperature	0 to 40 °C

Dimensions

weight 3.5 kg

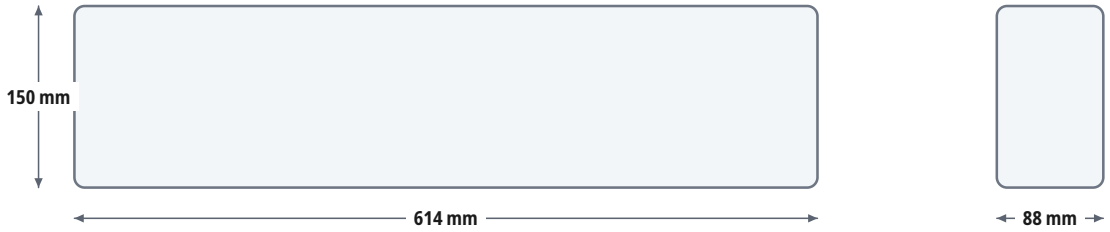

Spot diameter

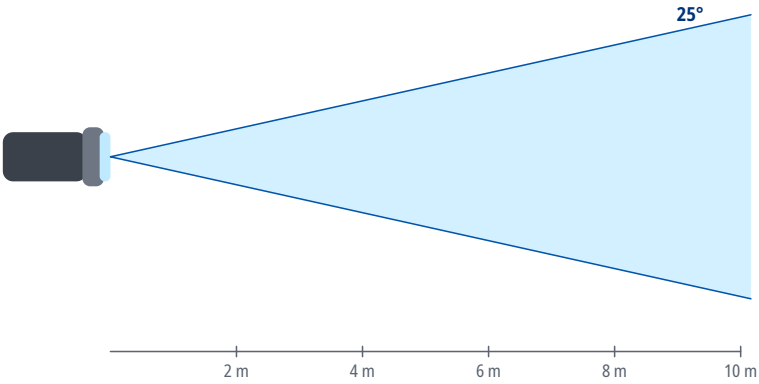

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner

intended for optics or glass.

- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.