DMX REFERENCE

AstraProfile500LTIP

Prolights



Manufacturer	Prolights
GDTF file	Prolights_AstraProfile500LTIP_169532.gdtf
GDTF revision	Rev 030 - Extensive Spectrum Data - Prism Facet fixed, Uploaded to GDTF Share. · 2026-11-16
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 6
6 Connections 6
7 Operation 7
8 Functions at a glance 8
9 DMX channels 11
Mode Standard 12
10 Technical specifications 22
11 Maintenance and cleaning 23
12 Troubleshooting 23
13 Disposal 24

1 About this manual

This document describes the AstraProfile500LTIP by Prolights. It was compiled from the GDTF file Prolights_AstraProfile500LTIP_169532.gdtf from the GDTF-Share library.

File revision: “Rev 030 - Extensive Spectrum Data - Prism Facet fixed, Uploaded to GDTF Share.”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Prolights; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	670 W
Weight	34 kg
Ingress protection	IP65

DMX modes

Mode	Channels	Units in one universe	First start addresses
Standard	43	11	1, 44, 87, 130, ...

No light? Check these channels

- Standard: CH 5 Dimmer above 0; CH 7 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”



Read the manual before use



Risk of electric shock



Do not stare into the light

3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ CAUTION

- The device is rated IP65 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Description in the GDTF file

“The Astra Profile500LTIP is a compact, versatile LT and IP65 LED moving profile, engineered to be bright and offer robust performance under any indoor and outdoor conditions. This unit boasts a stunning 25.000 lumen (fixture output with goniometer), ensuring exceptional brightness.”

Range of movement

Pan 540°

top view

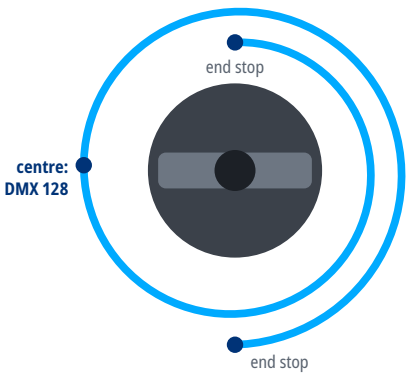

Tilt 260°

side view

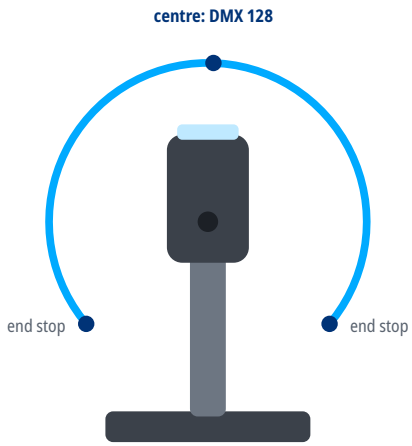

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 34 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

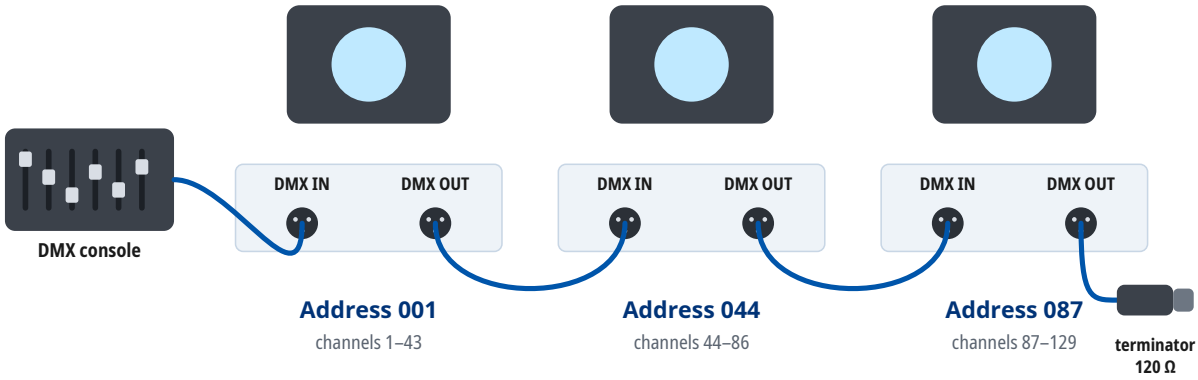

Mode Standard: every unit occupies 43 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Standard”: 43.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Standard”, you can use, for example, the start addresses 1, 44, 87, 130.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	Standard 43 channels
Pan / Tilt	1, 3
Dimmer	5
Shutter / strobe	7
Color mixing	8–10
Color temperature	11
Color wheel	12
Gobo wheel	13, 16
Gobo rotation	14
Prism	17–20
Frost	21, 22
Zoom	25
Focus	27
Iris	23
Animation wheel	29, 30
Effects / macros	40

Color wheel

1. Color 1 Pos: Open
DMX 0–1

2. Deep Red
DMX 23

3. Color 1 Pos: Deep Yellow
DMX 45

4. High CRI
DMX 67

5. Color 1 Pos: Full CTB
DMX 89

6. Color 1 Pos: Forest Green
DMX 111

7. Color 1 Pos: Dark Blue
DMX 133

Gobo wheel 1

1

Gobo 1 Index: Open
DMX 0–11

2

Gobo 1 Index: Gobo 1
DMX 12–19

3

Gobo 1 Index: Gobo 2
DMX 20–27

4

Gobo 1 Index: Gobo 3
DMX 28–35

5

Gobo 1 Index: Gobo 4
DMX 36–43

6

Gobo 1 Index: Gobo 5
DMX 44–51

7

Gobo 1 Index: Gobo 6
DMX 52–59

8

Gobo 7
DMX 60–68

Gobo wheel 2

1

Gobo 2 Index: Open
DMX 0–9

2

Gobo 2 Index: Gobo 1
DMX 10–16

3

Gobo 2 Index: Gobo 2
DMX 17–23

4

Gobo 2 Index: Gobo 3
DMX 24–30

5

Gobo 2 Index: Gobo 4
DMX 31–37

6

Gobo 2 Index: Gobo 5
DMX 38–44

7

Gobo 2 Index: Gobo 6
DMX 45–51

8

Gobo 2 Index: Gobo 7
DMX 52–58

9

Gobo 8
DMX 59–66

Prism 1

1

Prism: Open
DMX 0–29

2

Prism Index
DMX 30–59

Prism 2

1

Prism: Open
DMX 0–29

2

Prism Index
DMX 30–59

Animation wheel

1

Open
DMX 0

2

Animation
DMX 1–255

Spectra of the light sources

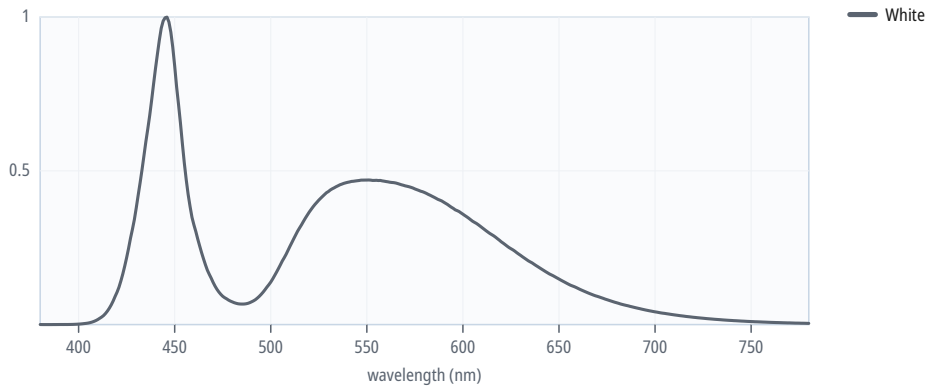

Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

Strobe rate

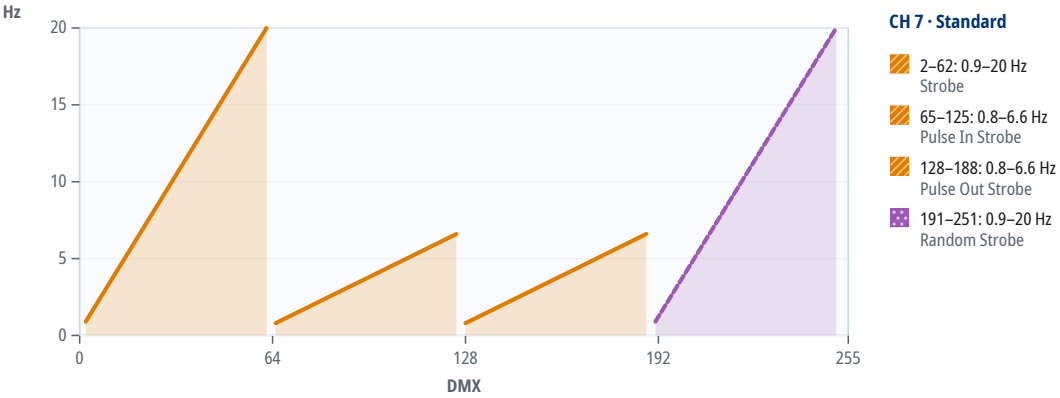

9 DMX channels

Units in one DMX universe

Standard
43 channels

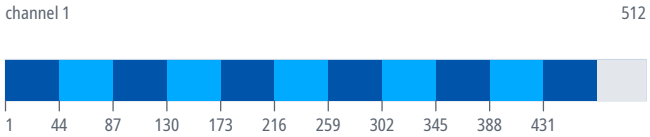

up to 11 units
last address 431

Start addresses of 20 units in the mode “Standard”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	216	11	431	16	U2 · 173
2	44	7	259	12	U2 · 1	17	U2 · 216
3	87	8	302	13	U2 · 44	18	U2 · 259
4	130	9	345	14	U2 · 87	19	U2 · 302
5	173	10	388	15	U2 · 130	20	U2 · 345

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode Standard

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 5 Dimmer above 0; CH 7 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 5 Dimmer 255, CH 7 Shutter 255, CH 8 Cyan 0, CH 9 Magenta 0, CH 10 Yellow 0, CH 11 CTO 0, CH 12 Colors 0.

Channel functions at a glance



Channel functions at a glance

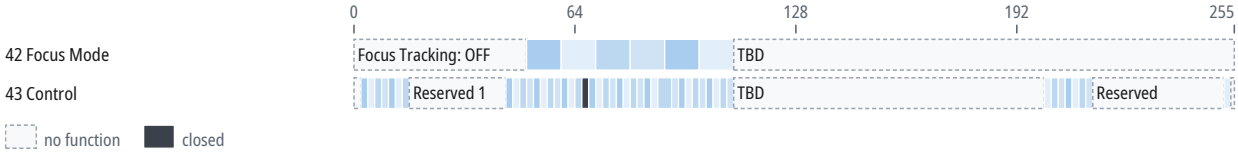

CH	Function	DMX	Description
1	Pan	0–127	Pan
		128	Home
		128–255	Pan
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Tilt
		128	Home
		128–255	Tilt
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Dimmer	0–255	Closed ... Open
		255	Open
6	Dimmer Fine	0–255	Fine adjustment of CH 5
7	Shutter	0–1	Open
		2–62	Strobe (0.9–20 Hz)
		63–64	Open
		65–125	Pulse In Strobe (0.8–6.6 Hz)
		126–127	Closed
		128–188	Pulse Out Strobe (0.8–6.6 Hz)
		189–190	Open
		191–251	Random Strobe (0.9–20 Hz)
		252–255	Open
8	Cyan	0	Min
		1–254	Min ... Max
		255	Max
9	Magenta	0	Min
		1–254	Min ... Max
		255	Max
10	Yellow	0	Min
		1–254	Min ... Max
		255	Max
11	CTO	0	MIn
		1–254	MIn ... Max
		255	Max
12	Colors	0–1	Color 1 Pos: Open
		2–22	Open + Dark Red
		23	Deep Red

CH	Function	DMX	Description
12	Colors (continued)	24–44	Deep Red + Deep Yellow
		45	Color 1 Pos: Deep Yellow
		46–66	Deep Yellow + High CRI
		67	High CRI
		68–88	High CRI + Full CTB
		89	Color 1 Pos: Full CTB
		90–110	Full CTB + Forest Green
		111	Color 1 Pos: Forest Green
		112–132	Forest Green + Dark Blue
		133	Color 1 Pos: Dark Blue
		134–153	Dark Blue + Open
		154–159	Color 1 Pos: Open
		160–164	Color 1 Slot: Open
		165–169	Dark Red
		170–174	Color 1 Slot: Deep Yellow
		175–179	Hi CRI
		180–184	Color 1 Slot: Full CTB
		185–189	Color 1 Slot: Forest Green
		190–194	Color 1 Slot: Dark Blue
		195–199	Color 1 Slot
		200	CW Fast (360–347.2 °/s)
		201–223	CW Fast2Slow (347.1–51.5 °/s)
		224	CW Slow (51.4–38.6 °/s)
		225–230	Color 1 Wheel Spin: Stop
		231	CCW Slow (38.6–51.4 °/s)
		232–254	CCW Slow2Fast (51.5–347.1 °/s)
		255	CCW Fast (347.2–360 °/s)
13	Gobo	0–11	Gobo 1 Index: Open
		12–19	Gobo 1 Index: Gobo 1
		20–27	Gobo 1 Index: Gobo 2
		28–35	Gobo 1 Index: Gobo 3
		36–43	Gobo 1 Index: Gobo 4
		44–51	Gobo 1 Index: Gobo 5
		52–59	Gobo 1 Index: Gobo 6
		60–67	Gobo 1 Index: Gobo 7
		68–75	Gobo 1 Roto: Gobo 1
		76–83	Gobo 1 Roto: Gobo 2
		84–91	Gobo 1 Roto: Gobo 3
		92–99	Gobo 1 Roto: Gobo 4
		100–107	Gobo 1 Roto: Gobo 5
		108–115	Gobo 1 Roto: Gobo 6
		116–123	Gobo 1 Roto: Gobo 7

CH	Function	DMX	Description
13	Gobo (continued)	124–133	Gobo 1 Shake: Gobo 1 (0.4–4 Hz)
		134–143	Gobo 1 Shake: Gobo 2 (0.4–4 Hz)
		144–153	Gobo 1 Shake: Gobo 3 (0.4–4 Hz)
		154–163	Gobo 1 Shake: Gobo 4 (0.4–4 Hz)
		164–173	Gobo 1 Shake: Gobo 5 (0.4–4 Hz)
		174–183	Gobo 1 Shake: Gobo 6 (0.4–4 Hz)
		184–193	Gobo 1 Shake: Gobo 7 (0.4–4 Hz)
		194	CW Fast
		195–222	CW Fast2Slow (351.4–17.1 °/s)
		223	CW Slow
		224–225	Spin Stop
		226	CCW Slow
		227–254	CCW Slow2Fast (17.1–351.4 °/s)
		255	CCW Fast
14	Gobo Rotation		When CH 13 is 0–67:
		0–127	Min 0 degrees
		128	Mid 180 degrees
		128–255	Max 360 degrees
			When CH 13 is 68–123:
		0	No rotation
		1	CW Fast (357.2–354.4 °/s)
		2–126	CW Fast2Slow (354.4–2.82 °/s)
		127	CW Slow (2.81–0.01 °/s)
		128	Stop
		129	CCW Slow (2.82–5.62 °/s)
		130–254	CCW Slow2Fast (5.63–357.2 °/s)
		255	CCW Fast (357.2–360 °/s)
			When CH 13 is 124–193:
		0	No rotation
		1	CW Fast (357.2–354.4 °/s)
		2–126	CW Fast2Slow (354.4–2.82 °/s)
		127	CW Slow (2.81–0.01 °/s)
		128	Stop
		129	CCW Slow (2.82–5.62 °/s)
		130–254	CCW Slow2Fast (5.63–357.2 °/s)
		255	CCW Fast (357.2–360 °/s)
			When CH 13 is 194–255:
		0	No rotation
		1	CW Fast (357.2–354.4 °/s)
		2–126	CW Fast2Slow (354.4–2.82 °/s)
		127	CW Slow (2.81–0.01 °/s)
		128	Stop

CH	Function	DMX	Description
14	Gobo Rotation (continued)	129	CCW Slow (2.82–5.62 °/s)
		130–254	CCW Slow2Fast (5.63–357.2 °/s)
		255	CCW Fast (357.2–360 °/s)
15	Gobo Rotation Fine	0–255	Fine adjustment of CH 14
16	Gobo 2	0–9	Gobo 2 Index: Open
		10–16	Gobo 2 Index: Gobo 1
		17–23	Gobo 2 Index: Gobo 2
		24–30	Gobo 2 Index: Gobo 3
		31–37	Gobo 2 Index: Gobo 4
		38–44	Gobo 2 Index: Gobo 5
		45–51	Gobo 2 Index: Gobo 6
		52–58	Gobo 2 Index: Gobo 7
		59–65	Gobo 2 Index: Gobo 8
		66–81	Gobo 2 Shake: Gobo 1 (0.4–4 Hz)
		82–97	Gobo 2 Shake: Gobo 2 (0.4–4 Hz)
		98–113	Gobo 2 Shake: Gobo 3 (0.4–4 Hz)
		114–129	Gobo 2 Shake: Gobo 4 (0.4–4 Hz)
		130–145	Gobo 2 Shake: Gobo 5 (0.4–4 Hz)
		146–161	Gobo 2 Shake: Gobo 6 (0.4–4 Hz)
		162–177	Gobo 2 Shake: Gobo 7 (0.4–4 Hz)
		178–193	Gobo 2 Shake: Gobo 8 (0.4–4 Hz)
		194	CW Fast
		195–222	CW Fast2Slow (351.4–17.1 °/s)
		223	CW Slow
		224–225	Spin Stop
		226	CCW Slow
		227–254	CCW Slow2Fast (17.1–351.4 °/s)
		255	CCW Fast
17	Prism	0–29	Prism: Open
		30–59	Prism Index
		60–89	Prism Rot
		90–255	Reserved
18	Prism Rotation		When CH 17 is 0–59:
		0–127	Min 0 degrees
		128	Mid 180 degrees
		129–255	Max 360 degrees
			When CH 17 is 60–89:
		0	No rotation
		1	CW Fast (1000–984.4 °/s)
		2–126	CW Fast2Slow (984.4–31.2 °/s)
		127	CW Slow
		128	Stop

CH	Function	DMX	Description
18	Prism Rotation (continued)	129	CCW Slow (15.7–31.2 °/s)
		130–254	CCW Slow2Fast (31.3–984.4 °/s)
		255	CCW Fast (984.4–1000 °/s)
19	Prism 2	0–29	Prism: Open
		30–59	Prism Index
		60–89	Prism Rot
		90–255	Reserved
20	Prism 2 Rotation		When CH 19 is 0–59:
		0–127	Min 0 degrees
		128	Mid 180 degrees
		129–255	Max 360 degrees
			When CH 19 is 60–89:
		0	No rotation
		1	CW Fast (1000–984.4 °/s)
		2–126	CW Fast2Slow (984.4–31.2 °/s)
		127	CW Slow
		128	Stop
		129	CCW Slow (15.7–31.2 °/s)
		130–254	CCW Slow2Fast (31.3–984.4 °/s)
		255	CCW Fast (984.4–1000 °/s)
21	Frost		Light Frost
		0	Min
		1–254	Min ... Max
		255	Max
22	Frost 2		Heavy Frost
		0	Min
		1–254	Min ... Max
		255	Max
23	Iris	0	Iris Open
		1–127	Large ... Small
		127	Small
		128–129	Iris Close
		130–154	Iris Pulse Close: Fast ... Slow
		154	Iris Pulse Close: Slow
		155–179	Iris Pulse Open: Slow ... Fast
		179	Iris Pulse Open: Fast
		180–204	Iris Random Pulse Close: Slow ... Fast
		204	Iris Random Pulse Close: Fast
		205–229	Iris Random Pulse Open: Slow ... Fast
		229	Iris Random Pulse Open: Fast
		230–255	No function
24	Iris Fine	0–255	Fine adjustment of CH 23

CH	Function	DMX	Description
25	Zoom	0–255	Min … Max
		255	Max
26	Zoom Fine	0–255	Fine adjustment of CH 25
27	Focus	0–255	MIn … Max
		255	Max
28	Focus Fine	0–255	Fine adjustment of CH 27
29	Animation System	0	Open
		1–255	Animation
30	Animation System Rotation	0	Min 0 Degrees
		1–62	Min 0 Degrees … Mid 180 Degrees
		63	Mid 180 Degrees
		64–126	Mid 180 Degrees … Max 360 Degrees
		127	Max 360 Degrees
		128	CW Fast
		129–189	CW Fast2Slow (787.4–31.5 °/s)
		190	CW Fast
		191–192	Animation System 1 Pos Rotate: Stop
		193	CCW Slow
		194–254	CCW Slow2Fast (31.5–787.4 °/s)
		255	CCW Fast
31	Blade 1 A	0	Out
		1–254	Out … In
		255	In
32	Blade 1 Rotation	0–127	From -30 degrees to 0
		128	0 degrees
		129–255	From 0 degrees to +30
33	Blade 2 A	0	Out
		1–254	Out … In
		255	In
34	Blade 2 Rotation	0–127	From -30 degrees to 0
		128	0 degrees
		129–255	From 0 degrees to +30
35	Blade 3 A	0	Out
		1–254	Out … In
		255	In
36	Blade 3 Rotation	0–127	From -30 degrees to 0
		128	0 degrees
		129–255	From 0 degrees to +30
37	Blade 4 A	0	Out
		1–254	Out … In
		255	In
38	Blade 4 Rotation	0–127	From -30 degrees to 0

CH	Function	DMX	Description
38	Blade 4 Rotation (continued)	128	0 degrees
		129–255	From 0 degrees to +30
39	Shaper Rotation	0–127	Left to Center
		128	Center
		129–255	Center To Right
40	Shaper Macros	0–3	No function
		4–10	1
		11–17	2
		18–24	3
		25–31	4
		32–38	5
		39–45	6
		46–52	7
		53–59	8
		60–66	9
		67–73	10
		74–80	11
		81–87	12
		88–94	13
		95–101	14
		102–108	15
		109–115	16
		116–122	17
		123–129	18
		130–136	19
		137–143	20
		144–150	21
		151–157	22
		158–164	23
		165–171	24
		172–178	25
		179–185	26
		186–192	27
		193–199	28
		200–206	29
		207–213	30
		214–220	31
		221–227	32
		228–234	33
		235–241	34
		242–248	35
		249–255	36

CH	Function	DMX	Description
41	Shaper Macros Speed	0	Slow
		1–254	Slow ... Fast
		255	Fast
42	Focus Mode	0–49	Focus Tracking: OFF
		50–59	Priority GOBO 1
		60–69	Priority GOBO 2
		70–79	Priority BLADES
		80–89	Priority IRIS
		90–99	Priority ANIMATION
		100–109	Priority OPEN
		110–255	TBD
43	Control	0–1	No function
		2–3	Pan Reverse ON
		4–5	Pan Resverse OFF
		6–7	Tilt Reverse ON
		8–9	Tilt Reverse OFF
		10–11	P/T Mode Fast
		12–13	P/T Mode Mid
		14–15	P/T Mode Slow
		16–43	Reserved 1
		44–45	DISPLAY ON
		46–47	DISPLAY 15S
		48–49	FLIP DISPLAY ON
		50–51	FLIP DISPLAY OFF
		52–53	FLIP DISPLAY AUTO
		54–55	KEY LOCK ON
		56–57	KEY LOCK OFF
		58–59	FAN MODE AUT0
		60–61	FAN MODE SILENT
		62–63	FAN MODE HIGH
		64–65	NO SIGNAL HOLD
		66–67	NO SIGNAL BLACKOUT
		68–69	STATUS LED ON
		70–71	STATUS LED OFF
		72–73	LINEAR
		74–75	S-CURVE
		76–77	SQUARE LAW
		78–79	INVERSE SQUARE LAW
		80–81	AUTO
		82–83	Dimmer Speed: FAST
		84–85	MEDIUM
		86–87	Dimmer Speed: SLOW

CH	Function	DMX	Description
43	Control (continued)	88–91	1000Hz
		92–93	2000Hz
		94–95	4000Hz
		96–97	6000Hz
		98–99	25kHz
		100–101	50kHz
		102–103	INVERT ZOOM OFF
		104–105	INVERT ZOOM ON
		106–107	InvertBlades ON
		108–109	InvertBlades OFF
		110–199	TBD
		200–201	All Reset
		202–203	PanTilt Reset
		204–205	Zoom/Focus Reset
		206–207	Colors Reset
		208–209	Gobos/Animation Reset
		210–211	Effects Resey
		212–213	Blades Reset
		214–251	Reserved
		252–253	FACTORY DEFAULT OF CONTROL FUNCTIONS
		254–255	Reserved 2

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	500 W
Luminous flux	25,769 lm
Color temperature	6,500 K
Color rendering index (CRI)	70
Optics	
Zoom	4.2–50.1°
Movement	
Pan	540°
Tilt	260°
Control	
DMX connection	5-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
RDM	yes (manufacturer ID 0x15D0, device model ID 0xA041)
Electrical	
Power supply	100–240 V, 50 Hz
Power consumption	670 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	34 kg
Operating environment	
Ingress protection	IP65
Meaning of the IP code (IEC 60529)	Dust-tight; protected against water jets
Operating temperature	-20 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	3000–6500 K
Strobe frequency	0.9–20 Hz
LED frequency	1000–50000 Hz
Color wheel rotation	up to 360 °/s (60 rpm)
Gobo wheel 1 rotation	up to 360 °/s (60 rpm)
Gobo wheel 2 rotation	up to 360 °/s (60 rpm)
Gobo 1 rotation	up to 360 °/s (60 rpm)
Prism 1 rotation	up to 1000 °/s (167 rpm)
Prism 2 rotation	up to 1000 °/s (167 rpm)

Spot diameter

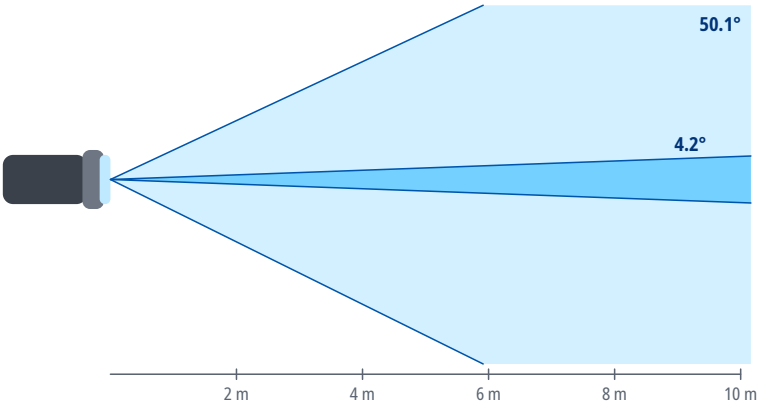

Distance	Ø 4.2°	Ø 50.1°
2 m	0.15 m	1.9 m
4 m	0.29 m	3.7 m
6 m	0.44 m	5.6 m
8 m	0.59 m	7.5 m
10 m	0.73 m	9.3 m
15 m	1.1 m	14 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.