DMX REFERENCE

EclParIPLVW_15

Prolights



Manufacturer	Prolights
GDTF file	Prolights_EclParIPLVW_15_104370.gdtf
GDTF revision	Rev 001 · 2025-07-18
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 8
Mode UNO 8
Mode DUO 9
Mode Basic 9
Mode Basic 16bit 10
Mode Standard 10
Mode Extended 12
Mode Advanced 13
10 Technical specifications 14
11 Maintenance and cleaning 15
12 Troubleshooting 15
13 Disposal 16

1 About this manual

This document describes the EclParIPLVW_15 by Prolights. It was compiled from the GDTF file Prolights_EclParIPLVW_15_104370.gdtf from the GDTF-Share library.

File revision: “Rev 001”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Prolights; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	340 W
Weight	8.3 kg
Ingress protection	IP65

DMX modes

Mode	Channels	Units in one universe	First start addresses
UNO	1	512	1, 2, 3, 4, ...
DUO	2	256	1, 3, 5, 7, ...
Basic	2	256	1, 3, 5, 7, ...
Basic 16bit	4	128	1, 5, 9, 13, ...
Standard	5	102	1, 6, 11, 16, ...
Extended	9	56	1, 10, 19, 28, ...
Advanced	11	46	1, 12, 23, 34, ...

No light? Check these channels

- UNO: CH 1 Dimmer above 0
- DUO: CH 1 Dimmer above 0
- Basic: CH 1 Dimmer above 0
- Basic 16bit: CH 1 Dimmer above 0
- Standard: CH 1 Dimmer above 0; CH 4 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”
- Extended: CH 1 Dimmer above 0; CH 8 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”
- Advanced: CH 1 Dimmer above 0; CH 10 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”



Read the manual before use



Risk of electric shock



Do not stare into the light

3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ CAUTION

- The device is rated IP65 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ **CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ **CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“IP65 single source 300W VariWhite LED spotlight, 15° optics included. The EclPar IPLVW stands as a high-performance, IP-rated single source LED spotlight, tailored for grand-scale events such big shows, large exhibitions, and high-ceiling studio applications. This robust fixture is powered by a 300W Variable White light source, capable of producing up to 15,000 fixture lumens with remarkable efficiency and advanced control.”

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 8.35 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a

3-pin one with a cable adapter.

- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

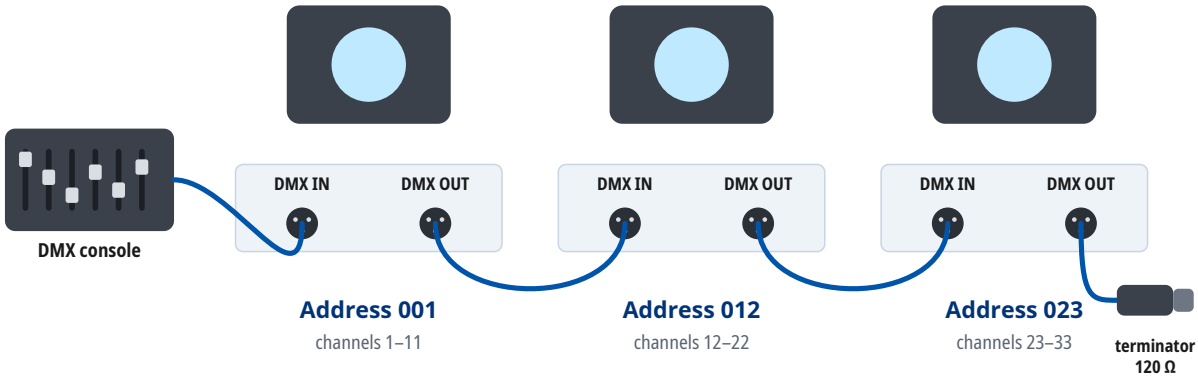

Mode Advanced: every unit occupies 11 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Advanced”: 11.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Advanced”, you can use, for example, the start addresses 1, 12, 23, 34.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	UNO 1 channel	DUO 2 channels	Basic 2 channels	Basic 16bit 4 channels	Standard 5 channels	Extended 9 channels	Advanced 11 channels
Dimmer	1	1	1	1	1	1	1
Dimmer resolution	8 bit	16 bit	8 bit	16 bit	16 bit	16 bit	16 bit
Shutter / strobe					4	8	10
Color mixing						6, 7	6, 8
Color temperature			2	3	3	3	3

LED colors

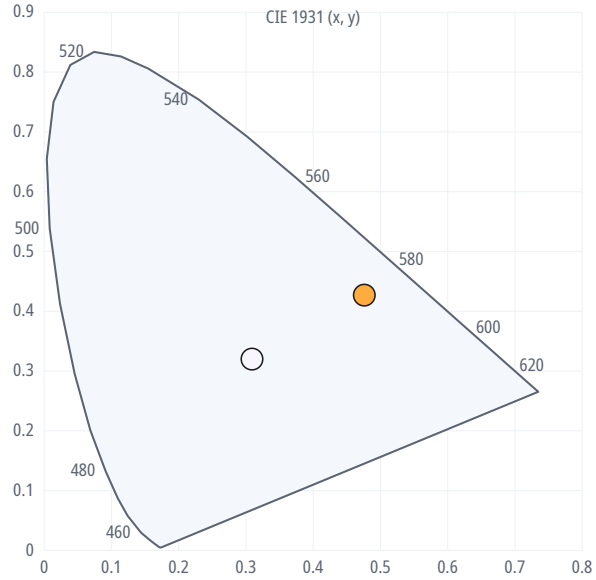

LED	x	y
Warm White	0.476	0.427
Cold White	0.309	0.320

The dots are the LED colors the GDTF file states.

Strobe rate

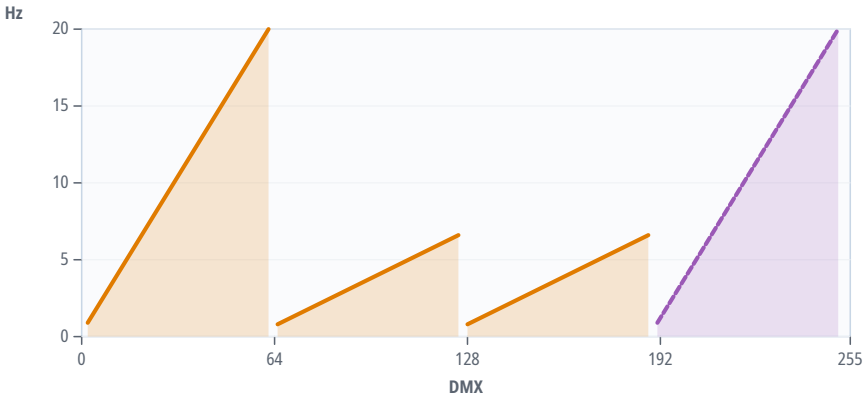

CH 8 · Extended

- 2–62: 0.9–20 Hz Strobe
- 65–125: 0.8–6.6 Hz Pulse In Strobe
- 128–188: 0.8–6.6 Hz Pulse Out Strobe
- 191–251: 0.9–20 Hz Random Strobe

9 DMX channels

Units in one DMX universe

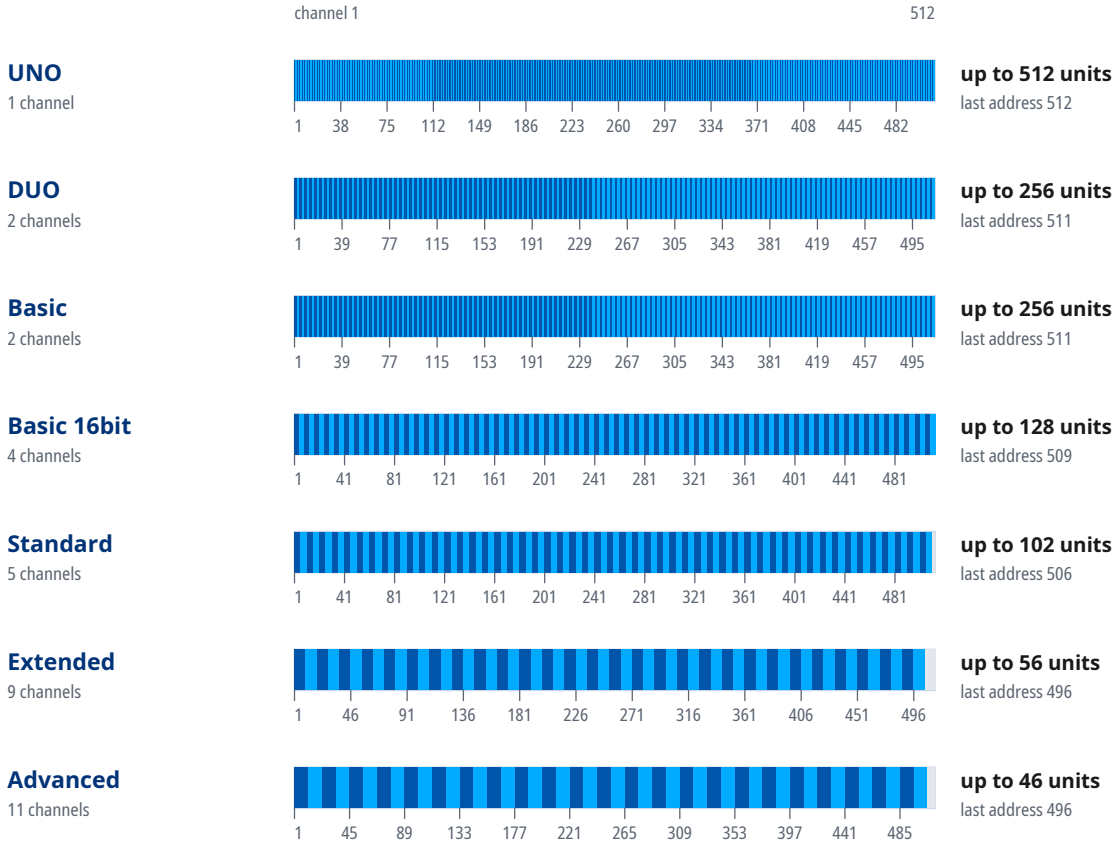

Start addresses of 20 units in the mode “Advanced”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	56	11	111	16	166
2	12	7	67	12	122	17	177
3	23	8	78	13	133	18	188
4	34	9	89	14	144	19	199
5	45	10	100	15	155	20	210

Mode UNO

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed … Open
		255	Open

Mode DUO

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Dimmer	0–255	Closed … Open
		255	Open
2	Dimmer Fine	0–255	Fine adjustment of CH 1

Mode Basic

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

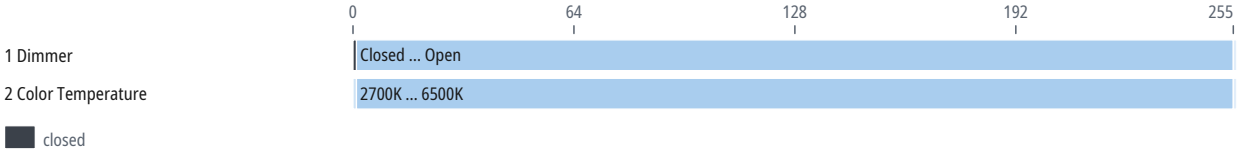

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “UNO” (p. 9)
2	Color Temperature	0	2700K
		1–254	2700K … 6500K
		255	6500K

Mode Basic 16bit

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

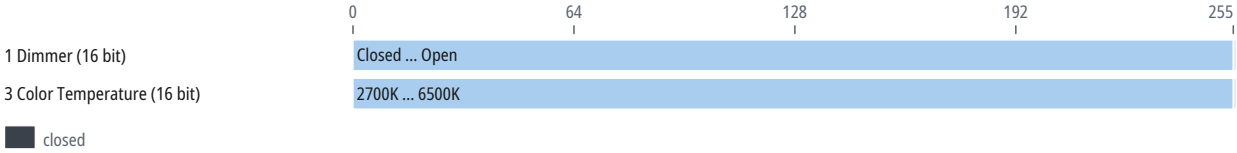

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “DUO” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Color Temperature	0–255	2700K ... 6500K
		255	6500K
4	Color Temperature Fine	0–255	Fine adjustment of CH 3

Mode Standard

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 4 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 4 Shutter 255.

Channel functions at a glance

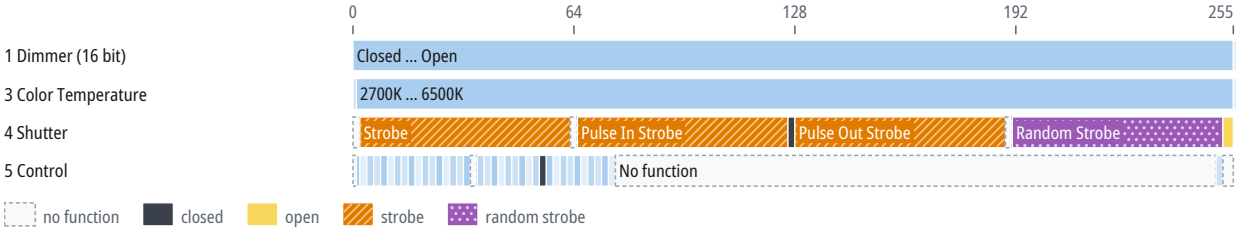

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “DUO” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Color Temperature		Same as CH 2 in the mode “Basic” (p. 9)
4	Shutter	0–1	Open_Nofeature: Open
		2–62	Strobe (0.9–20 Hz)
		63–64	Open_Nofeature: Open
		65–125	Pulse In Strobe (0.8–6.6 Hz)
		126–127	Closed
		128–188	Pulse Out Strobe (0.8–6.6 Hz)
		189–190	Open_Nofeature: Open
		191–251	Random Strobe (0.9–20 Hz)
		252–255	Open

CH	Function	DMX	Description
5	Control	0–1	No function
		2–3	Display ON
		4–5	Display 10s
		6–7	Display 20s
		8–9	Display 30s
		10–11	Flip Display ON
		12–13	Flip Display OFF
		14–15	Key Lock ON
		16–17	Key Lock OFF
		18–19	Linear
		20–21	S-Curve
		22–23	Square Law
		24–25	Inverse Square Law
		26–27	Auto
		28–29	Dimmer Speed: Fast
		30–31	Medium
		32–33	Dimmer Speed: Slow
		34–35	Dimmer Speed: OFF
		36–37	600 Hz
		38–39	1200 Hz
		40–41	2000 Hz
		42–43	4000 Hz
		44–45	6000 Hz
		46–47	25 KHz
		48–49	36 KHz
		50–51	40 KHz
		52–53	Hold
		54–55	BlackOut
		56–57	StandAlone
		58–59	Emergency
		60–61	Constant - Instant Power Limit
		62–63	Dynamic - Max Power according with temperature
		64–65	Master DMX
		66–67	Master NO DMX
		68–69	SLAVE
		70–71	Effects
		72–73	CCT Presets
		74–75	Manual WW / CW
		76–249	No function
		250–251	Factory Default
		252–255	No function

Mode Extended

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 8 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 8 Shutter 255.

Channel functions at a glance

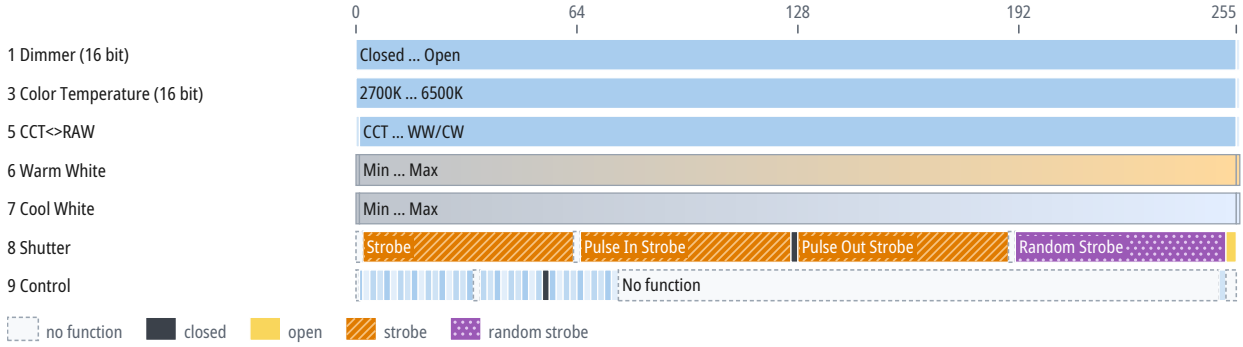

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “DUO” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Color Temperature		Same as CH 3 in the mode “Basic 16bit” (p. 10)
4	Color Temperature Fine	0–255	Fine adjustment of CH 3
5	CCT<>RAW	0	CCT
		1–254	CCT ... WW/CW
		255	WW/CW
6	Warm White	0	Min
		1–254	Min ... Max
		255	Max
7	Cool White	0	Min
		1–254	Min ... Max
		255	Max
8	Shutter		Same as CH 4 in the mode “Standard” (p. 10)
9	Control		Same as CH 5 in the mode “Standard” (p. 11)

Mode Advanced

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 10 Shutter at 0–1, 63–64, 189–190 or 252–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 10 Shutter 255.

Channel functions at a glance

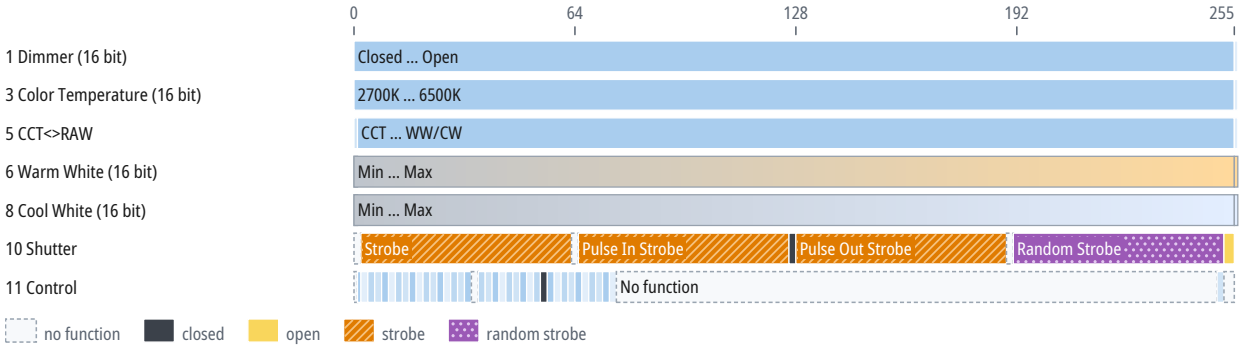

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “DUO” (p. 9)
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Color Temperature		Same as CH 3 in the mode “Basic 16bit” (p. 10)
4	Color Temperature Fine	0–255	Fine adjustment of CH 3
5	CCT<>RAW		Same as CH 5 in the mode “Extended” (p. 12)
6	Warm White	0–255	Min ... Max
		255	Max
7	Warm White Fine	0–255	Fine adjustment of CH 6
8	Cool White	0–255	Min ... Max
		255	Max
9	Cool White Fine	0–255	Fine adjustment of CH 8
10	Shutter		Same as CH 4 in the mode “Standard” (p. 10)
11	Control		Same as CH 5 in the mode “Standard” (p. 11)

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	300 W
Luminous flux	14,118 lm
Color temperature	6,000 K
Color rendering index (CRI)	97
Optics	
Beam angle	15.4°
Control	
DMX connection	5-pin XLR IN/OUT
RDM	yes (manufacturer ID 0x15D0, device model ID 0xD150)
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	340 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	8.3 kg
Operating environment	
Ingress protection	IP65
Meaning of the IP code (IEC 60529)	Dust-tight; protected against water jets
Operating temperature	-20 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	2700–6500 K
Strobe frequency	0.9–20 Hz

Dimensions

weight 8.3 kg

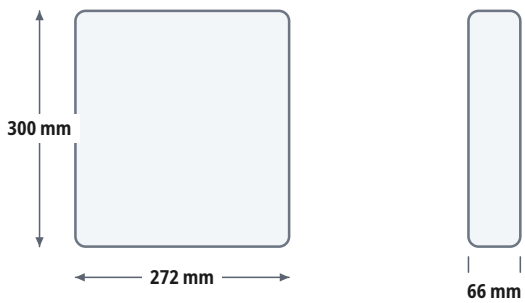

Spot diameter

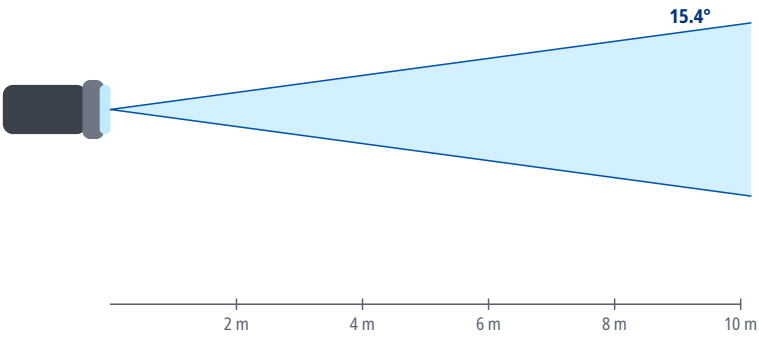

Distance	Ø 15.4°
2 m	0.54 m
4 m	1.1 m
6 m	1.6 m
8 m	2.2 m
10 m	2.7 m
15 m	4.1 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.