DMX REFERENCE

# RA3000Profile

Prolights




| | |
|---|---|
| **Manufacturer** | Prolights |
| **GDTF file** | Prolights_RA3000Profile_88433.gdtf |
| **GDTF revision** | Rev 16 - Added Snap Feature · 2025-03-05 |
| **Generated** | 2026-11-24 |

# Contents

**1 About this manual** 2
**2 Quick reference** 3
**3 Safety instructions** 4
**4 Product description** 5
**5 Installation** 6
**6 Connections** 6
**7 Operation** 7
**8 Functions at a glance** 8
**9 DMX channels** 10
Mode 38ch 11
Mode 39ch 18
Mode 40ch 21
Mode 41ch 24
Mode 42ch 27
**10 Technical specifications** 30
**11 Maintenance and cleaning** 31
**12 Troubleshooting** 31
**13 Disposal** 31

# 1 About this manual

This document describes the RA3000Profile by Prolights. It was compiled from the GDTF file Prolights_RA3000Profile_88433.gdtf from the GDTF-Share library.

File revision: “Rev 16 - Added Snap Feature”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Prolights; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

# 2 Quick reference

| Parameter | Value |
|---|---|
| Weight | 57 kg |

### DMX modes

| Mode | Channels | Units in one universe | First start addresses |
|---|---|---|---|
| 38ch | 38 | 13 | 1, 39, 77, 115, ... |
| 39ch | 39 | 13 | 1, 40, 79, 118, ... |
| 40ch | 40 | 12 | 1, 41, 81, 121, ... |
| 41ch | 41 | 12 | 1, 42, 83, 124, ... |
| 42ch | 42 | 12 | 1, 43, 85, 127, ... |

### No light? Check these channels

- 38ch: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0
- 39ch: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0
- 40ch: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0
- 41ch: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0
- 42ch: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

# 3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

**⚠ WARNING**

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

**⚠ WARNING**

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

**⚠ CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

**⚠ CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.


> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

# 4 Product description

### Description in the GDTF file

“Ra 3000Profile combines solid-state technology in every single detail and it has been specifically engineered to be not only a high-quality bright light but also silent. Ra 3000Profile is able to provide a real 18'576 lumen output with unprecedented beam evenness. The 6.000 K LED engine has been custom designed to make the Ra 3000Profile hit a CRI of 90, TLCI of 92, high R9 and TM30 making all skin tones and colours come to life on stage or in front of a camera.The Ra 3000Profile's CMY system delivers beautiful pastels, stunning saturated colours, powerful primaries, one colour wheel provides split colours, and linear CTO allows the Ra 3000Profile to blend in with traditional sources.”

### Range of movement

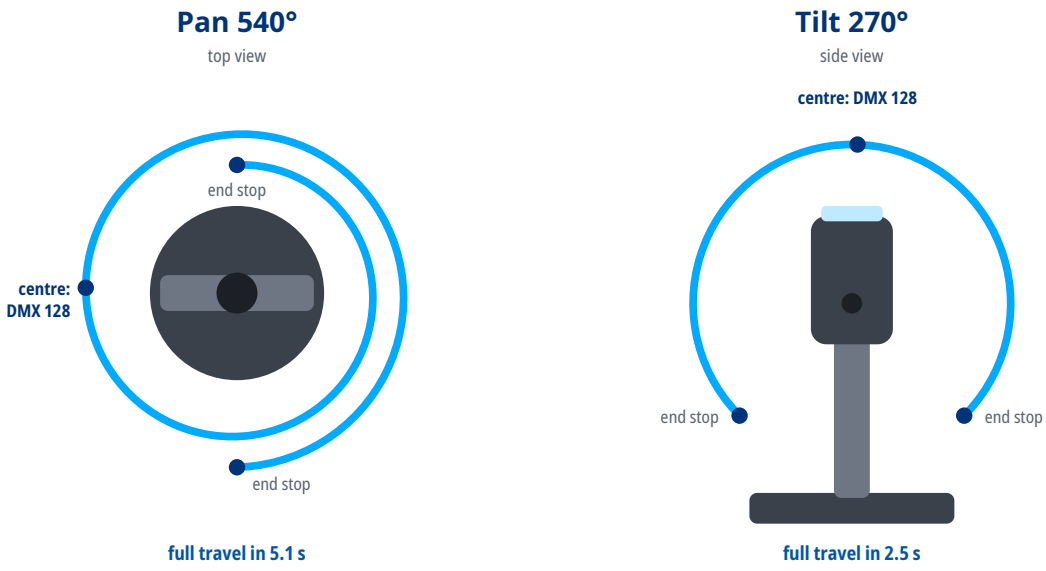


Full-travel times as stated in the GDTF file.

# 5 Installation


⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 57 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

# 6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

### DMX line

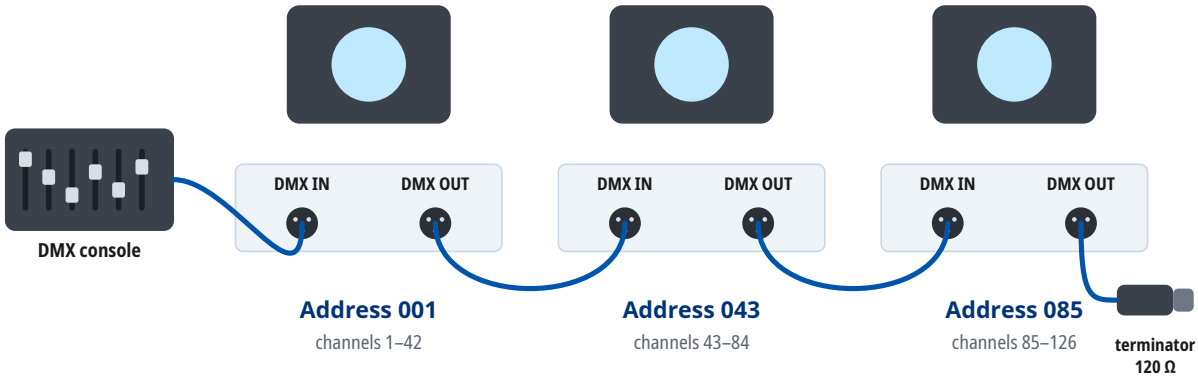


Mode 42ch: every unit occupies 42 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

# 7 Operation

### Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “42ch”: 42.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “42ch”, you can use, for example, the start addresses 1, 43, 85, 127.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

# 8 Functions at a glance

## Functions in each DMX mode

| | 38ch<br>38 channels | 39ch<br>39 channels | 40ch<br>40 channels | 41ch<br>41 channels | 42ch<br>42 channels |
|---|---|---|---|---|---|
| Pan / Tilt | 1, 3 | 1, 3 | 1, 3 | 1, 3 | 1, 3 |
| Dimmer | 7 | 7 | 7 | 7 | 7 |
| Shutter / strobe | 6 | 6 | 6 | 6 | 6 |
| Color mixing | 10–12 | 10–12 | 10–12 | 10–12 | 10–12 |
| Color temperature | 13 | 13 | 13 | 13 | 13 |
| Color wheel | 14 | 14 | 14 | 14 | 14 |
| Gobo wheel | 15 | 15 | 15 | 15 | 15 |
| Gobo rotation | 16 | 16 | 16 | 16 | 16 |
| Prism | 17 | 17 | 18 | 18 | 18 |
| Frost | 18, 19 | 18, 19 | 20, 21 | 20, 21 | 20, 21 |
| Zoom | 22 | 23 | 24 | 25 | 25 |
| Focus | 20 | 20, 21 | 22 | 22, 23 | 22, 23 |
| Iris | 26 | 27 | 28 | 29 | 29 |
| Animation wheel | 24, 25 | 25, 26 | 26, 27 | 27, 28 | 27, 28 |
| Effects / macros | 36 | 37 | 38 | 39 | 39 |

## Color wheel

1. Color: Open — DMX 0–4
2. Deep Red — DMX 10–13
3. Deep Blue — DMX 19–22
4. Primary Green — DMX 28–31
5. Half Minus Green — DMX 37–40
6. Light Orange — DMX 46–49
7. Congo Blue — DMX 55–58

## Gobo wheel

1 
Rotating Gobo: Open
**DMX 0–5**

2 
Rotating Gobo: Gobo 1
**DMX 6–11**

3 
Rotating Gobo: Gobo 2
**DMX 12–17**

4 
Rotating Gobo: Gobo 3
**DMX 18–22**

5 
Rotating Gobo: Gobo 4
**DMX 23–28**

6 
Rotating Gobo: Gobo 5
**DMX 29–34**

7 
Gobo6
**DMX 35–41**

## Prism

1 
Open
**DMX 0–4**


2 
4 facets
0 degrees ... 360 degrees
**DMX 6**

## Animation wheel

1 
Open
**DMX 0**


2 
Animation
**DMX 1–255**

## Spectra of the light sources

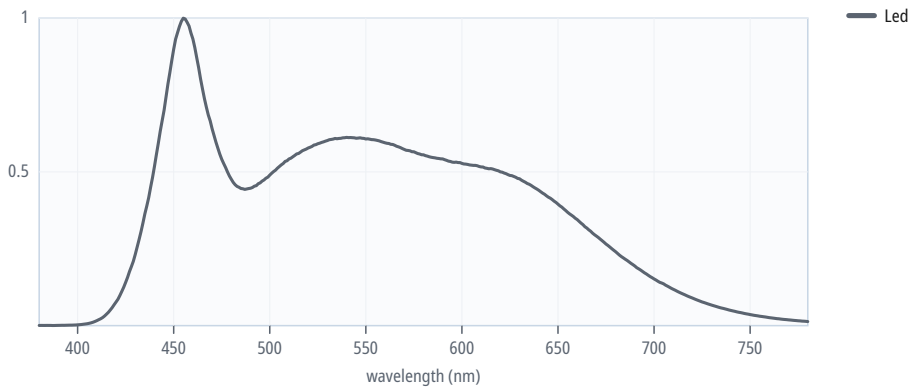



Relative spectrum of each light source as the GDTF file states it; each curve is scaled to its own maximum.

### Strobe rate

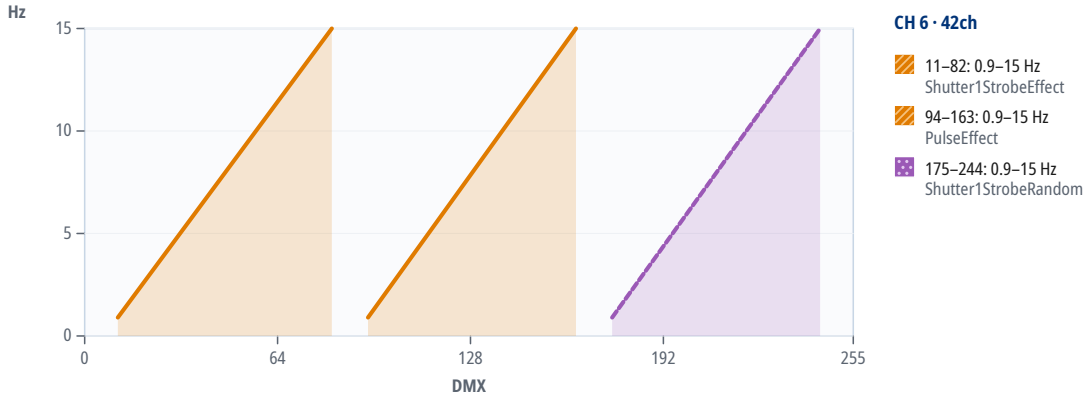


# 9 DMX channels

### Units in one DMX universe

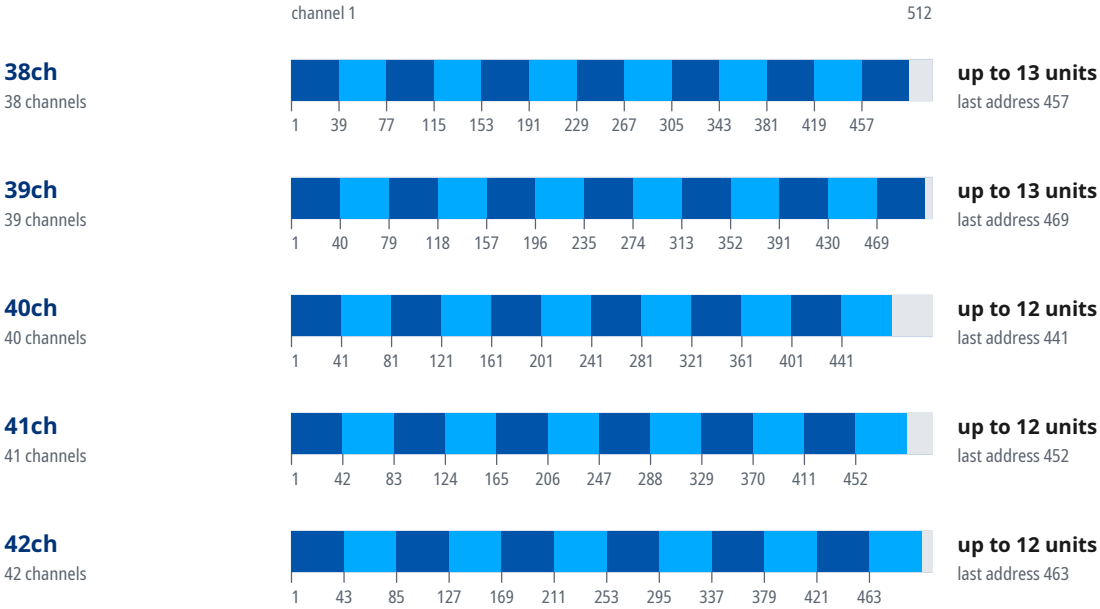


### Start addresses of 20 units in the mode “42ch”

| Unit | Start address | Unit | Start address | Unit | Start address | Unit | Start address |
|---|---|---|---|---|---|---|---|
| 1 | 1 | 6 | 211 | 11 | 421 | 16 | U2 · 127 |
| 2 | 43 | 7 | 253 | 12 | 463 | 17 | U2 · 169 |
| 3 | 85 | 8 | 295 | 13 | U2 · 1 | 18 | U2 · 211 |
| 4 | 127 | 9 | 337 | 14 | U2 · 43 | 19 | U2 · 253 |
| 5 | 169 | 10 | 379 | 15 | U2 · 85 | 20 | U2 · 295 |

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

## Mode 38ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 0, CH 7 Dimmer 255, CH 13 CTO 0, CH 14 Colors 0.

### Channel functions at a glance



| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | 0–127 | Pan 1 |
| | | 128 | Center |
| | | 128–255 | Pan 1 |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | 0–127 | Tilt 1 |
| | | 128 | Center |
| | | 128–255 | Tilt 1 |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | 0–83 | Position Effect: Fast |
| | | 84–167 | Mid |
| | | 168–250 | Position Effect: Slow |
| | | 251–255 | BlackOutMode |
| **6** | Shutter | 0–10 | Open |
| | | 11 | Shutter 1 Strobe Effect: Slow |
| | | 12–45 | Slow ... Mid |
| | | 46 | Mid |
| | | 47–81 | Mid ... Fast |
| | | 82 | Shutter 1 Strobe Effect: Fast |
| | | 83–92 | Open 1 |
| | | 93 | Open |
| | | 94–163 | PulseEffect (0.9–15 Hz) |
| | | 164–173 | Open 2 |
| | | 174 | Open |
| | | 175 | StrobeRandom |
| | | 176–244 | Shutter 1 Strobe Random |
| | | 245–254 | Open 3 |
| | | 255 | Open |
| **7** | Dimmer | 0–255 | Closed ... Open |
| | | 255 | Open |
| **8** | Dimmer Fine | 0–255 | Fine adjustment of CH 7 |
| **9** | Dimmer Mode | 0–51 | As From Menu |
| | | 52–101 | Dimmer Mode: Off |
| | | 102–152 | Dimmer Mode: Fast |
| | | 153–203 | Middle |
| | | 204–255 | Dimmer Mode: Slow |
| **10** | Cyan | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **11** | Magenta | 0 | Min |
| | | 1–254 | Min ... Max |

| CH | Function | DMX | Description |
|---|---|---|---|
| **11** | Magenta (continued) | 255 | Max |
| **12** | Yellow | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **13** | CTO | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **14** | Colors | 0–4 | Color: Open |
| | | 5–9 | Open+Deep Red |
| | | 10–13 | Deep Red |
| | | 14–18 | Deep Red + Deep Blue |
| | | 19–22 | Deep Blue |
| | | 23–27 | Deep Blue + Primary Green |
| | | 28–31 | Primary Green |
| | | 32–36 | Primary Green + Half Minus Green |
| | | 37–40 | Half Minus Green |
| | | 41–45 | Half Minus Green + Light Orange |
| | | 46–49 | Light Orange |
| | | 50–54 | Light Orange + Congo Blue |
| | | 55–58 | Congo Blue |
| | | 59–63 | Congo Blue + Open |
| | | 64 | CW Spin: Stop |
| | | 65–94 | Stop ... CWSpin Fast |
| | | 95 | CWSpin Fast |
| | | 96 | CCWSpin Fast |
| | | 97–126 | CCWSpin Fast ... Stop |
| | | 127 | CCW Spin: Stop |
| | | 128 | 0 degrees |
| | | 129–254 | 0 degrees ... 360 degrees |
| | | 255 | 360 degrees |
| **15** | Gobo | 0–5 | Rotating Gobo: Open |
| | | 6–11 | Rotating Gobo: Gobo 1 |
| | | 12–17 | Rotating Gobo: Gobo 2 |
| | | 18–22 | Rotating Gobo: Gobo 3 |
| | | 23–28 | Rotating Gobo: Gobo 4 |
| | | 29–34 | Rotating Gobo: Gobo 5 |
| | | 35–40 | Rotating Gobo: Gobo 6 |
| | | 41–58 | Rotating Gobo Shake: Gobo 1 (0.9–10 Hz) |
| | | 59–75 | Rotating Gobo Shake: Gobo 2 (0.9–10 Hz) |
| | | 76–93 | Rotating Gobo Shake: Gobo 3 (0.9–10 Hz) |
| | | 94–110 | Rotating Gobo Shake: Gobo 4 (0.9–10 Hz) |

| CH | Function | DMX | Description |
|---|---|---|---|
| **15** | Gobo (continued) | 111–127 | Rotating Gobo Shake: Gobo 5 (0.9–10 Hz) |
| | | 128–145 | Rotating Gobo Shake: Gobo 6 (0.9–10 Hz) |
| | | 146 | Stop |
| | | 147 | CW Slow2Fast 1/8 (1–10 °/s) |
| | | 148–154 | CW Slow2Fast 2/8 (10–20 °/s) |
| | | 155–161 | CW Slow2Fast 3/8 (20–30 °/s) |
| | | 162–169 | CW Slow2Fast 4/8 (30–40 °/s) |
| | | 170–178 | CW Slow2Fast 5/8 (40–50 °/s) |
| | | 179–185 | CW Slow2Fast 6/8 (50–60 °/s) |
| | | 186–192 | CW Slow2Fast 7/8 (60–70 °/s) |
| | | 193–200 | CW Slow2Fast 8/8 |
| | | 201 | NoRotation |
| | | 202–208 | CCW Slow2Fast 1/8 (1–10 °/s) |
| | | 209–215 | CCW Slow2Fast 2/8 (10–20 °/s) |
| | | 216–222 | CCW Slow2Fast 3/8 (20–30 °/s) |
| | | 223–229 | CCW Slow2Fast 4/8 (30–40 °/s) |
| | | 230–236 | CCW Slow2Fast 5/8 (40–50 °/s) |
| | | 237–243 | CCW Slow2Fast 6/8 (50–60 °/s) |
| | | 244–245 | CCW Slow2Fast 6/8 … CCW Slow2Fast 7/8 |
| | | 246–252 | CCW Slow2Fast 7/8 (60–70 °/s) |
| | | 253–255 | CCW Slow2Fast 8/8 |
| **16** | Gobo Rotation | 0–191 | 0-360 (360°) |
| | | 192–221 | CWSpin: Slow2Fast (1–360 °/s) |
| | | 222–225 | Stop |
| | | 226–255 | CCWSpin: Fast2Slow (360–1 °/s) |
| **17** | Prism | 0–5 | Open |
| | | 6 | 0 degrees |
| | | 7–190 | 0 degrees … 360 degrees |
| | | 191 | 360 degrees |
| | | 192 | CWSpin Slow |
| | | 193–222 | CWSpin Slow … CWSpin Fast |
| | | 223 | CWSpin Fast |
| | | 224 | CCWSpin Fast |
| | | 225–254 | CCWSpin Fast … CCWSpin Slow |
| | | 255 | CCWSpin Slow |
| **18** | Frost | 0 | Min |
| | | 1–254 | Min … Max |
| | | 255 | Max |
| **19** | Frost 2 | 0 | MIn |
| | | 1–254 | MIn … Max |
| | | 255 | Max |

| CH | Function | DMX | Description |
|---|---|---|---|
| **20** | Focus | 0–255 | Min … Max |
| | | 255 | Max |
| **21** | Focus Fine | 0–255 | Fine adjustment of CH 20 |
| **22** | Zoom | 0–255 | Min … Max |
| | | 255 | Max |
| **23** | Zoom Fine | 0–255 | Fine adjustment of CH 22 |
| **24** | Animation System | | Linear Insertion |
| | | 0 | Open |
| | | 1–255 | Animation |
| **25** | Animation System Rotation Speed | | When CH 24 is 0: |
| | | 0–255 | Open |
| | | | When CH 24 is 1–255: |
| | | 4 | CWSpin: Stop |
| | | 5–127 | CWSpin |
| | | 128–131 | Stop |
| | | 132 | CCWSpin: Stop |
| | | 133–255 | CCWSpin |
| **26** | Iris | 0 | Large |
| | | 1–62 | Large … Small |
| | | 63 | Small |
| | | 64 | Iris Effect: Slow |
| | | 65–126 | Iris Effect: Slow … Fast |
| | | 127 | Iris Effect: Fast |
| | | 128 | Iris Pulse: Slow |
| | | 129–190 | Iris Pulse: Slow … Fast |
| | | 191 | Iris Pulse: Fast |
| | | 192 | Iris Pulse: Slow |
| | | 193–254 | Iris Pulse: Slow … Fast |
| | | 255 | Iris Pulse: Fast |
| **27** | Blade 3 A | 0 | Out |
| | | 1–254 | Out … In |
| | | 255 | In |
| **28** | Blade 3 Rotation | 0–127 | From -25 degrees to 0 |
| | | 128 | 0 degrees |
| | | 129–255 | From 0 degrees to +25 |
| **29** | Blade 4 A | 0 | Out |
| | | 1–254 | Out … In |
| | | 255 | In |
| **30** | Blade 4 Rotation | 0–127 | From -25 degrees to 0 |
| | | 128 | 0 degrees |
| | | 129–255 | From 0 degrees to +25 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **31** | Blade 1 A | 0 | Out |
| | | 1–254 | Out ... In |
| | | 255 | In |
| **32** | Blade 1 Rotation | 0–127 | From -25 degrees to 0 |
| | | 128 | 0 degrees |
| | | 129–255 | From 0 degrees to +25 |
| **33** | Blade 2 A | 0 | Out |
| | | 1–254 | Out ... In |
| | | 255 | In |
| **34** | Blade 2 Rotation | 0–127 | From -25 degrees to 0 |
| | | 128 | 0 degrees |
| | | 129–255 | From 0 degrees to +25 |
| **35** | Shaper Rotation | 0 | Left to Center |
| | | 1–127 | Left to Center ... Center |
| | | 128 | Center |
| | | 129–254 | Center ... Center To Right |
| | | 255 | Center To Right |
| **36** | Shaper Macros | 0–3 | No Function |
| | | 4–11 | 1 |
| | | 12–18 | 2 |
| | | 19–25 | 3 |
| | | 26–32 | 4 |
| | | 33–39 | 5 |
| | | 40–47 | 6 |
| | | 48–54 | 7 |
| | | 55–61 | 8 |
| | | 62–68 | 9 |
| | | 69–75 | 10 |
| | | 76–82 | 11 |
| | | 83–90 | 12 |
| | | 91–97 | 13 |
| | | 98–104 | 14 |
| | | 105–111 | 15 |
| | | 112–118 | 16 |
| | | 119–125 | 17 |
| | | 126–133 | 18 |
| | | 134–140 | 19 |
| | | 141–147 | 20 |
| | | 148–155 | 21 |
| | | 156–161 | 22 |
| | | 162–168 | 23 |
| | | 169–176 | 24 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **36** | Shaper Macros (continued) | 177–183 | 25 |
| | | 184–190 | 26 |
| | | 191–197 | 27 |
| | | 198–204 | 28 |
| | | 205–211 | 29 |
| | | 212–219 | 30 |
| | | 220–226 | 31 |
| | | 227–233 | 32 |
| | | 234–240 | 33 |
| | | 241–247 | 34 |
| | | 248–255 | 35 |
| **37** | Shaper Macros Speed | 0 | Slow |
| | | 1–254 | Slow ... Fast |
| | | 255 | Fast |
| **38** | Control | 0–7 | No function |
| | | 8–15 | FixtureGlobalReset |
| | | 16–23 | PositionReset |
| | | 24–31 | Animation Reset |
| | | 32–39 | Gobo Wheel Reset |
| | | 40–47 | Frame Reset |
| | | 48–55 | Other Reset |
| | | 56–63 | Color Mix Reset |
| | | 64–255 | TBD |

## Mode 39ch


16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 0, CH 7 Dimmer 255, CH 13 CTO 0, CH 14 Colors 0.

### Channel functions at a glance



## Channel functions at a glance




| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | | Same as CH 1 in the mode “38ch” (p. 12) |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | | Same as CH 3 in the mode “38ch” (p. 12) |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | | Same as CH 5 in the mode “38ch” (p. 12) |
| **6** | Shutter | | Same as CH 6 in the mode “38ch” (p. 12) |
| **7** | Dimmer | | Same as CH 7 in the mode “38ch” (p. 12) |
| **8** | Dimmer Fine | 0–255 | Fine adjustment of CH 7 |
| **9** | Dimmer Mode | | Same as CH 9 in the mode “38ch” (p. 12) |
| **10** | Cyan | | Same as CH 10 in the mode “38ch” (p. 12) |
| **11** | Magenta | | Same as CH 11 in the mode “38ch” (p. 12) |
| **12** | Yellow | | Same as CH 12 in the mode “38ch” (p. 13) |
| **13** | CTO | | Same as CH 13 in the mode “38ch” (p. 13) |
| **14** | Colors | | Same as CH 14 in the mode “38ch” (p. 13) |
| **15** | Gobo | | Same as CH 15 in the mode “38ch” (p. 13) |
| **16** | Gobo Rotation | | Same as CH 16 in the mode “38ch” (p. 14) |
| **17** | Prism | | Same as CH 17 in the mode “38ch” (p. 14) |
| **18** | Frost | | Same as CH 18 in the mode “38ch” (p. 14) |
| **19** | Frost 2 | | Same as CH 19 in the mode “38ch” (p. 14) |
| **20** | Focus Mode | 0 | Auto Focus OFF |
| | | 1–7 | Auto Focus ON: 4 meters |
| | | 8–15 | Auto Focus ON: 6 meters |
| | | 16–23 | Auto Focus ON: 8 meters |
| | | 24–31 | Auto Focus ON: 10 meters |
| | | 32–39 | Auto Focus ON: 12 meters |
| | | 40–47 | Auto Focus ON: 14 meters |
| | | 48–55 | Auto Focus ON: 16 meters |
| | | 56–63 | Auto Focus ON: 18 meters |
| | | 64–71 | Focus On Gobos: 4 meters |
| | | 72–79 | Focus On Gobos: 6 meters |
| | | 80–87 | Focus On Gobos: 8 meters |
| | | 88–95 | Focus On Gobos: 10 meters |
| | | 96–103 | Focus On Gobos: 12 meters |
| | | 104–111 | Focus On Gobos: 14 meters |
| | | 112–119 | Focus On Gobos: 16 meters |
| | | 120–127 | Focus On Gobos: 18 meters |

| CH | Function | DMX | Description |
|---|---|---|---|
| **20** | Focus Mode (continued) | 128–255 | Reserved |
| **21** | Focus | | Same as CH 20 in the mode “38ch” (p. 15) |
| **22** | Focus Fine | 0–255 | Fine adjustment of CH 21 |
| **23** | Zoom | | Same as CH 22 in the mode “38ch” (p. 15) |
| **24** | Zoom Fine | 0–255 | Fine adjustment of CH 23 |
| **25** | Animation System | | Same as CH 24 in the mode “38ch” (p. 15) |
| **26** | Animation System Rotation Speed | | When CH 25 is 0: |
| | | 0–255 | Open |
| | | | When CH 25 is 1–255: |
| | | 4 | CWSpin: Stop |
| | | 5–127 | CWSpin |
| | | 128–131 | Stop |
| | | 132 | CCWSpin: Stop |
| | | 133–255 | CCWSpin |
| **27** | Iris | | Same as CH 26 in the mode “38ch” (p. 15) |
| **28** | Blade 3 A | | Same as CH 27 in the mode “38ch” (p. 15) |
| **29** | Blade 3 Rotation | | Same as CH 28 in the mode “38ch” (p. 15) |
| **30** | Blade 4 A | | Same as CH 29 in the mode “38ch” (p. 15) |
| **31** | Blade 4 Rotation | | Same as CH 30 in the mode “38ch” (p. 15) |
| **32** | Blade 1 A | | Same as CH 31 in the mode “38ch” (p. 16) |
| **33** | Blade 1 Rotation | | Same as CH 32 in the mode “38ch” (p. 16) |
| **34** | Blade 2 A | | Same as CH 33 in the mode “38ch” (p. 16) |
| **35** | Blade 2 Rotation | | Same as CH 34 in the mode “38ch” (p. 16) |
| **36** | Shaper Rotation | | Same as CH 35 in the mode “38ch” (p. 16) |
| **37** | Shaper Macros | | Same as CH 36 in the mode “38ch” (p. 16) |
| **38** | Shaper Macros Speed | | Same as CH 37 in the mode “38ch” (p. 17) |
| **39** | Control | | Same as CH 38 in the mode “38ch” (p. 17) |

## Mode 40ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 0, CH 7 Dimmer 255, CH 13 CTO 0, CH 14 Colors 0.

### Channel functions at a glance



| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | | Same as CH 1 in the mode “38ch” (p. 12) |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | | Same as CH 3 in the mode “38ch” (p. 12) |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | | Same as CH 5 in the mode “38ch” (p. 12) |
| **6** | Shutter | | Same as CH 6 in the mode “38ch” (p. 12) |
| **7** | Dimmer | | Same as CH 7 in the mode “38ch” (p. 12) |
| **8** | Dimmer Fine | 0–255 | Fine adjustment of CH 7 |
| **9** | Dimmer Mode | | Same as CH 9 in the mode “38ch” (p. 12) |
| **10** | Cyan | | Same as CH 10 in the mode “38ch” (p. 12) |
| **11** | Magenta | | Same as CH 11 in the mode “38ch” (p. 12) |
| **12** | Yellow | | Same as CH 12 in the mode “38ch” (p. 13) |
| **13** | CTO | | Same as CH 13 in the mode “38ch” (p. 13) |
| **14** | Colors | | Same as CH 14 in the mode “38ch” (p. 13) |
| **15** | Gobo | | Same as CH 15 in the mode “38ch” (p. 13) |
| **16** | Gobo Rotation | 0–191 | 0-360 (360°) |
| | | 191–222 | CWSpin: Slow2Fast (1–360 °/s) |
| | | 222–226 | Stop |
| | | 226–255 | CCWSpin: Fast2Slow (360–1 °/s) |
| **17** | Gobo Rotation Fine | 0–255 | Fine adjustment of CH 16 |
| **18** | Prism | 0–5 | Open |
| | | 6–190 | 0 degrees ... 360 degrees |
| | | 191 | 360 degrees |
| | | 192–222 | CWSpin Slow ... CWSpin Fast |
| | | 223 | CWSpin Fast |
| | | 224–255 | CCWSpin Fast ... CCWSpin Slow |
| | | 255 | CCWSpin Slow |
| **19** | Prism Fine | 0–255 | Fine adjustment of CH 18 |
| **20** | Frost | | Same as CH 18 in the mode “38ch” (p. 14) |
| **21** | Frost 2 | | Same as CH 19 in the mode “38ch” (p. 14) |
| **22** | Focus | | Same as CH 20 in the mode “38ch” (p. 15) |
| **23** | Focus Fine | 0–255 | Fine adjustment of CH 22 |
| **24** | Zoom | | Same as CH 22 in the mode “38ch” (p. 15) |
| **25** | Zoom Fine | 0–255 | Fine adjustment of CH 24 |
| **26** | Animation System | | Same as CH 24 in the mode “38ch” (p. 15) |
| **27** | Animation System Rotation Speed | | When CH 26 is 0: |
| | | 0–255 | Open |
| | | | When CH 26 is 1–255: |
| | | 4 | CWSpin: Stop |
| | | 5–127 | CWSpin |

| CH | Function | DMX | Description |
|---|---|---|---|
| **27** | Animation System Rotation Speed (continued) | 128–131 | Stop |
| | | 132 | CCWSpin: Stop |
| | | 133–255 | CCWSpin |
| **28** | Iris | | Same as CH 26 in the mode “38ch” (p. 15) |
| **29** | Blade 3 A | | Same as CH 27 in the mode “38ch” (p. 15) |
| **30** | Blade 3 Rotation | | Same as CH 28 in the mode “38ch” (p. 15) |
| **31** | Blade 4 A | | Same as CH 29 in the mode “38ch” (p. 15) |
| **32** | Blade 4 Rotation | | Same as CH 30 in the mode “38ch” (p. 15) |
| **33** | Blade 1 A | | Same as CH 31 in the mode “38ch” (p. 16) |
| **34** | Blade 1 Rotation | | Same as CH 32 in the mode “38ch” (p. 16) |
| **35** | Blade 2 A | | Same as CH 33 in the mode “38ch” (p. 16) |
| **36** | Blade 2 Rotation | | Same as CH 34 in the mode “38ch” (p. 16) |
| **37** | Shaper Rotation | | Same as CH 35 in the mode “38ch” (p. 16) |
| **38** | Shaper Macros | | Same as CH 36 in the mode “38ch” (p. 16) |
| **39** | Shaper Macros Speed | | Same as CH 37 in the mode “38ch” (p. 17) |
| **40** | Control | | Same as CH 38 in the mode “38ch” (p. 17) |

## Mode 41ch


16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 0, CH 7 Dimmer 255, CH 13 CTO 0, CH 14 Colors 0.

### Channel functions at a glance



## Channel functions at a glance




| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | | Same as CH 1 in the mode “38ch” (p. 12) |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | | Same as CH 3 in the mode “38ch” (p. 12) |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | | Same as CH 5 in the mode “38ch” (p. 12) |
| **6** | Shutter | | Same as CH 6 in the mode “38ch” (p. 12) |
| **7** | Dimmer | | Same as CH 7 in the mode “38ch” (p. 12) |
| **8** | Dimmer Fine | 0–255 | Fine adjustment of CH 7 |
| **9** | Dimmer Mode | | Same as CH 9 in the mode “38ch” (p. 12) |
| **10** | Cyan | | Same as CH 10 in the mode “38ch” (p. 12) |
| **11** | Magenta | | Same as CH 11 in the mode “38ch” (p. 12) |
| **12** | Yellow | | Same as CH 12 in the mode “38ch” (p. 13) |
| **13** | CTO | | Same as CH 13 in the mode “38ch” (p. 13) |
| **14** | Colors | | Same as CH 14 in the mode “38ch” (p. 13) |
| **15** | Gobo | | Same as CH 15 in the mode “38ch” (p. 13) |
| **16** | Gobo Rotation | | Same as CH 16 in the mode “40ch” (p. 22) |
| **17** | Gobo Rotation Fine | 0–255 | Fine adjustment of CH 16 |
| **18** | Prism | | Same as CH 18 in the mode “40ch” (p. 22) |
| **19** | Prism Fine | 0–255 | Fine adjustment of CH 18 |
| **20** | Frost | | Same as CH 18 in the mode “38ch” (p. 14) |
| **21** | Frost 2 | | Same as CH 19 in the mode “38ch” (p. 14) |
| **22** | Focus Mode | | Same as CH 20 in the mode “39ch” (p. 19) |
| **23** | Focus | | Same as CH 20 in the mode “38ch” (p. 15) |
| **24** | Focus Fine | 0–255 | Fine adjustment of CH 23 |
| **25** | Zoom | | Same as CH 22 in the mode “38ch” (p. 15) |
| **26** | Zoom Fine | 0–255 | Fine adjustment of CH 25 |
| **27** | Animation System | | Same as CH 24 in the mode “38ch” (p. 15) |
| **28** | Animation System Rotation Speed | | When CH 27 is 0: |
| | | 0–255 | Open |
| | | | When CH 27 is 1–255: |
| | | 4 | CWSpin: Stop |
| | | 5–127 | CWSpin |
| | | 128–131 | Stop |
| | | 132 | CCWSpin: Stop |
| | | 133–255 | CCWSpin |
| **29** | Iris | | Same as CH 26 in the mode “38ch” (p. 15) |

| CH | Function | DMX | Description |
|---|---|---|---|
| **30** | Blade 3 A | | Same as CH 27 in the mode “38ch” (p. 15) |
| **31** | Blade 3 Rotation | | Same as CH 28 in the mode “38ch” (p. 15) |
| **32** | Blade 4 A | | Same as CH 29 in the mode “38ch” (p. 15) |
| **33** | Blade 4 Rotation | | Same as CH 30 in the mode “38ch” (p. 15) |
| **34** | Blade 1 A | | Same as CH 31 in the mode “38ch” (p. 16) |
| **35** | Blade 1 Rotation | | Same as CH 32 in the mode “38ch” (p. 16) |
| **36** | Blade 2 A | | Same as CH 33 in the mode “38ch” (p. 16) |
| **37** | Blade 2 Rotation | | Same as CH 34 in the mode “38ch” (p. 16) |
| **38** | Shaper Rotation | | Same as CH 35 in the mode “38ch” (p. 16) |
| **39** | Shaper Macros | | Same as CH 36 in the mode “38ch” (p. 16) |
| **40** | Shaper Macros Speed | | Same as CH 37 in the mode “38ch” (p. 17) |
| **41** | Control | | Same as CH 38 in the mode “38ch” (p. 17) |

## Mode 42ch


16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 0–10, 93, 174, 255 “Open” or 83–92 or 164–173 or 245–254; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 0, CH 7 Dimmer 255, CH 13 CTO 0, CH 14 Colors 0.

### Channel functions at a glance



## Channel functions at a glance

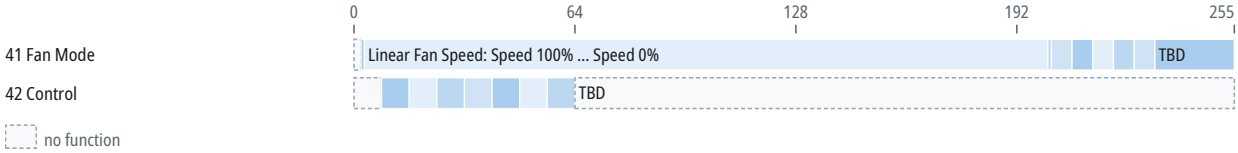


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | | Same as CH 1 in the mode “38ch” (p. 12) |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | | Same as CH 3 in the mode “38ch” (p. 12) |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | | Same as CH 5 in the mode “38ch” (p. 12) |
| **6** | Shutter | | Same as CH 6 in the mode “38ch” (p. 12) |
| **7** | Dimmer | | Same as CH 7 in the mode “38ch” (p. 12) |
| **8** | Dimmer Fine | 0–255 | Fine adjustment of CH 7 |
| **9** | Dimmer Mode | | Same as CH 9 in the mode “38ch” (p. 12) |
| **10** | Cyan | | Same as CH 10 in the mode “38ch” (p. 12) |
| **11** | Magenta | | Same as CH 11 in the mode “38ch” (p. 12) |
| **12** | Yellow | | Same as CH 12 in the mode “38ch” (p. 13) |
| **13** | CTO | | Same as CH 13 in the mode “38ch” (p. 13) |
| **14** | Colors | | Same as CH 14 in the mode “38ch” (p. 13) |
| **15** | Gobo | | Same as CH 15 in the mode “38ch” (p. 13) |
| **16** | Gobo Rotation | | Same as CH 16 in the mode “40ch” (p. 22) |
| **17** | Gobo Rotation Fine | 0–255 | Fine adjustment of CH 16 |
| **18** | Prism | | Same as CH 18 in the mode “40ch” (p. 22) |
| **19** | Prism Fine | 0–255 | Fine adjustment of CH 18 |
| **20** | Frost | | Same as CH 18 in the mode “38ch” (p. 14) |
| **21** | Frost 2 | | Same as CH 19 in the mode “38ch” (p. 14) |
| **22** | Focus Mode | | Same as CH 20 in the mode “39ch” (p. 19) |
| **23** | Focus | | Same as CH 20 in the mode “38ch” (p. 15) |
| **24** | Focus Fine | 0–255 | Fine adjustment of CH 23 |
| **25** | Zoom | | Same as CH 22 in the mode “38ch” (p. 15) |
| **26** | Zoom Fine | 0–255 | Fine adjustment of CH 25 |
| **27** | Animation System | | Same as CH 24 in the mode “38ch” (p. 15) |
| **28** | Animation System Rotation Speed | | Same as CH 28 in the mode “41ch” (p. 25) |
| **29** | Iris | | Same as CH 26 in the mode “38ch” (p. 15) |
| **30** | Blade 3 A | | Same as CH 27 in the mode “38ch” (p. 15) |
| **31** | Blade 3 Rotation | | Same as CH 28 in the mode “38ch” (p. 15) |
| **32** | Blade 4 A | | Same as CH 29 in the mode “38ch” (p. 15) |
| **33** | Blade 4 Rotation | | Same as CH 30 in the mode “38ch” (p. 15) |
| **34** | Blade 1 A | | Same as CH 31 in the mode “38ch” (p. 16) |
| **35** | Blade 1 Rotation | | Same as CH 32 in the mode “38ch” (p. 16) |

| CH | Function | DMX | Description |
|---|---|---|---|
| **36** | Blade 2 A | | Same as CH 33 in the mode “38ch” (p. 16) |
| **37** | Blade 2 Rotation | | Same as CH 34 in the mode “38ch” (p. 16) |
| **38** | Shaper Rotation | | Same as CH 35 in the mode “38ch” (p. 16) |
| **39** | Shaper Macros | | Same as CH 36 in the mode “38ch” (p. 16) |
| **40** | Shaper Macros Speed | | Same as CH 37 in the mode “38ch” (p. 17) |
| **41** | Fan Mode | 0–1 | No function |
| | | 2 | Linear Fan Speed: Speed 100% |
| | | 3–200 | Linear Fan Speed: Speed 100% ... Speed 0% |
| | | 201 | Linear Fan Speed: Speed 0% |
| | | 202–207 | Auto |
| | | 208–213 | Silent |
| | | 214–219 | Studio |
| | | 220–225 | Performance Mode |
| | | 226–231 | Follow Output |
| | | 232–255 | TBD |
| **42** | Control | | Same as CH 38 in the mode “38ch” (p. 17) |


# 10 Technical specifications

| Parameter | Value |
|---|---|
| **Light** | |
| Light source | LED |
| LED power | 1,000 W |
| Luminous flux | 18,576 lm |
| Color temperature | 6,000 K |
| **Optics** | |
| Zoom | 6–50° |
| **Movement** | |
| Pan | 540° |
| Tilt | 270° |
| **Control** | |
| RDM | yes (manufacturer ID 0x15D0, device model ID 0xD037) |
| **Dimensions and construction** | |
| Weight | 57 kg |
| **Operating environment** | |
| Operating temperature | -10 to 45 °C |

## Speeds and ranges

| Parameter | Value |
|---|---|
| Color temperature range | 2700–6000 K |
| Strobe frequency | 0.9–15 Hz |
| Color wheel rotation | up to 360 °/s (60 rpm) |
| Gobo wheel rotation | up to 70 °/s (12 rpm) |
| Gobo rotation | up to 360 °/s (60 rpm) |
| Prism rotation | up to 360 °/s (60 rpm) |

## Spot diameter

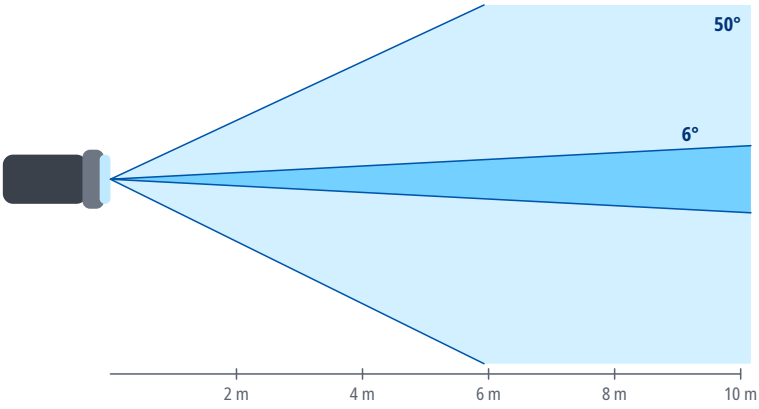


| Distance | Ø 6° | Ø 50° |
|---|---|---|
| 2 m | 0.21 m | 1.9 m |
| 4 m | 0.42 m | 3.7 m |
| 6 m | 0.63 m | 5.6 m |
| 8 m | 0.84 m | 7.5 m |
| 10 m | 1 m | 9.3 m |
| 15 m | 1.6 m | 14 m |

Spot diameter square to the beam axis, calculated from the beam angle.

# 11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

# 12 Troubleshooting

| Problem | Remedy |
|---|---|
| The device does not switch on | Check the supply voltage, the cables and the fuse, if the device has one. |
| The device does not respond to DMX | Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe). |
| The device behaves erratically or flickers | Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter. |
| Only some devices on the line respond | Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on. |
| Devices respond to the wrong channels or affect each other | Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller. |
| The device or the connected load does not light up although it receives DMX | Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open. |
| Movement is reversed | Check whether Pan/Tilt inversion is enabled in the device menu or in the controller. |
| Moving parts do not reach the correct position after power-on or transport | Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center. |
| Movement is jerky | Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal. |

# 13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.