DMX REFERENCE

671SX VW

Bizet 671SX VW

Robert Juliat



Manufacturer	Robert Juliat
GDTF file	Robert_Juliat_671SX_VW_111852.gdtf
GDTF revision	1_02 · 2025-09-24
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 7
Mode Profile 16b CCT 7
Mode Profile 16b 8
Mode Dimmer 8b CCT 9
Mode Dimmer 8b 9
10 Technical specifications 10
11 Maintenance and cleaning 11
12 Troubleshooting 11
13 Disposal 11

1 About this manual

This document describes the Bizet 671SX VW by Robert Juliat. It was compiled from the GDTF file Robert_Juliat_671SX_VW_111852.gdtf from the GDTF-Share library.

File revision: “1_02”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Robert Juliat; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	600 W
Weight	21 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Profile 16b CCT	8	64	1, 9, 17, 25, ...
Profile 16b	6	85	1, 7, 13, 19, ...
Dimmer 8b CCT	2	256	1, 3, 5, 7, ...
Dimmer 8b	1	512	1, 2, 3, 4, ...

No light? Check these channels

- Profile 16b CCT: CH 1 Dimmer above 0; CH 3 Strobe Duration at 1–255 “ON”
- Profile 16b: CH 1 Dimmer above 0; CH 3 Strobe Duration at 1–255 “ON”
- Dimmer 8b CCT: CH 1 Dimmer above 0
- Dimmer 8b: CH 1 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 90–277 V, 47/63 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

> ⚠ **CAUTION**
>
> - Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
> - Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Product description

Description in the GDTF file

“LED 500 W - Variable White Profile spot - 671SX VW Bizet - 11/26°”


5 Installation

> ⚠ **WARNING**
>
> - Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
> - The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
> - Weight of the device: 21 kg.
> - Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
> - Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
> - During installation and removal, keep people out of the area below the work position.
> - Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

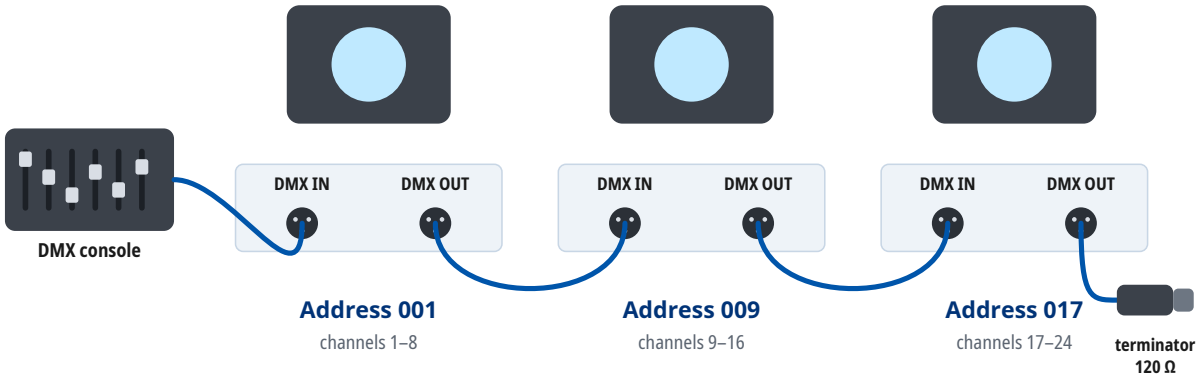

Mode Profile 16b CCT: every unit occupies 8 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Profile 16b CCT”: 8.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Profile 16b CCT”, you can use, for example, the start addresses 1, 9, 17, 25.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.


8 Functions at a glance

Functions in each DMX mode

	Profile 16b CCT 8 channels	Profile 16b 6 channels	Dimmer 8b CCT 2 channels	Dimmer 8b 1 channel
Pan / Tilt	✓	✓	✓	✓
Dimmer	1	1	1	1
Dimmer resolution	16 bit	16 bit	8 bit	8 bit
Shutter / strobe	3, 4	3, 4		
Color temperature	7	✓	2	✓
Zoom	✓	✓	✓	✓
Iris	✓	✓	✓	✓

9 DMX channels

Units in one DMX universe

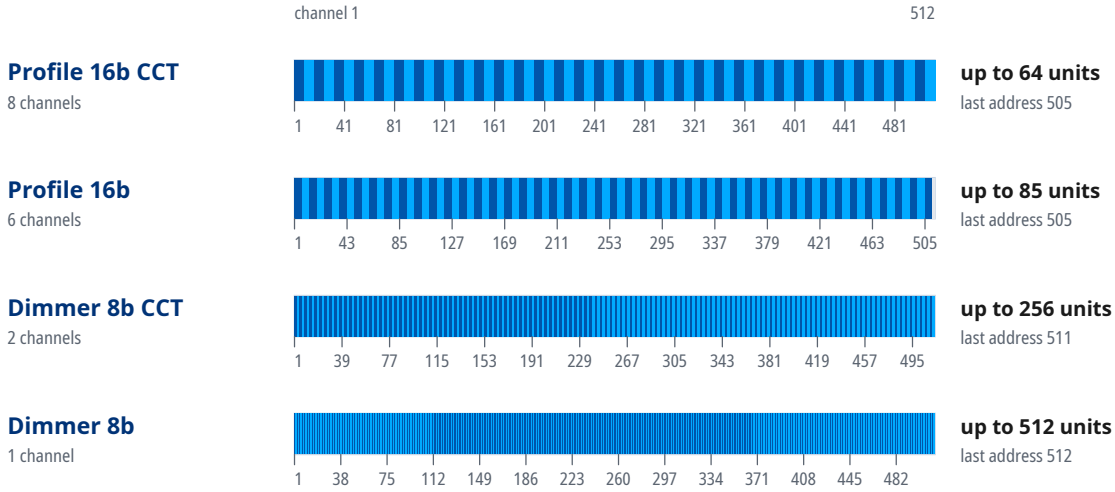

Start addresses of 20 units in the mode “Profile 16b CCT”


Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	41	11	81	16	121
2	9	7	49	12	89	17	129
3	17	8	57	13	97	18	137
4	25	9	65	14	105	19	145
5	33	10	73	15	113	20	153

Mode Profile 16b CCT

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 3 Strobe Duration at 1–255 “ON”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

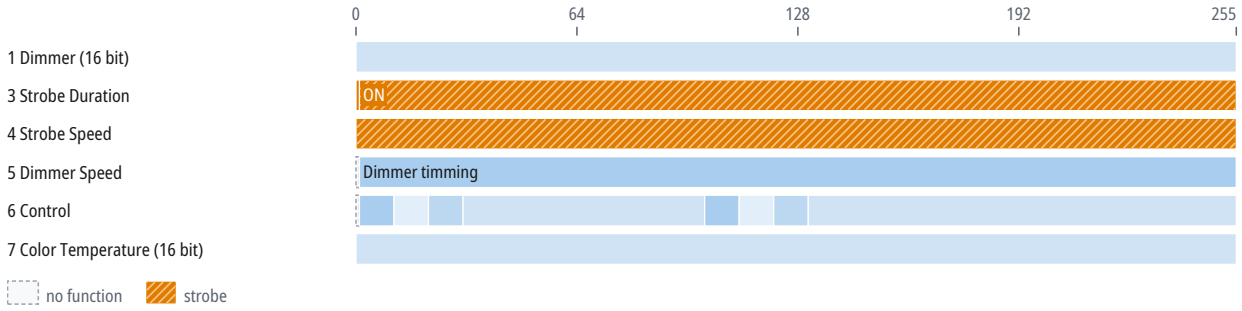

CH	Function	DMX	Description
1	Dimmer	0–255	
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Strobe Duration	0	OFF


CH	Function	DMX	Description
3	Strobe Duration (continued)	1–255	ON (0.001–0.02 s)
4	Strobe Speed	0–255	0.1–10 Hz
5	Dimmer Speed	0	OFF
		1–255	Dimmer timming
6	Control	0	OFF
		1–10	RDM disabled
		11–20	RDM enabled
		21–30	Fixture reset
		31–100	Fixture reset ... Cooling mode: silent
		101–110	Cooling mode: silent
		111–120	Cooling mode: normal
		121–130	Cooling mode: full power
		131–255	Control 1 1
7	Color Temperature	0–255	3000–6300 K
8	Color Temperature Fine	0–255	Fine adjustment of CH 7

Mode Profile 16b

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 3 Strobe Duration at 1–255 “ON”. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance

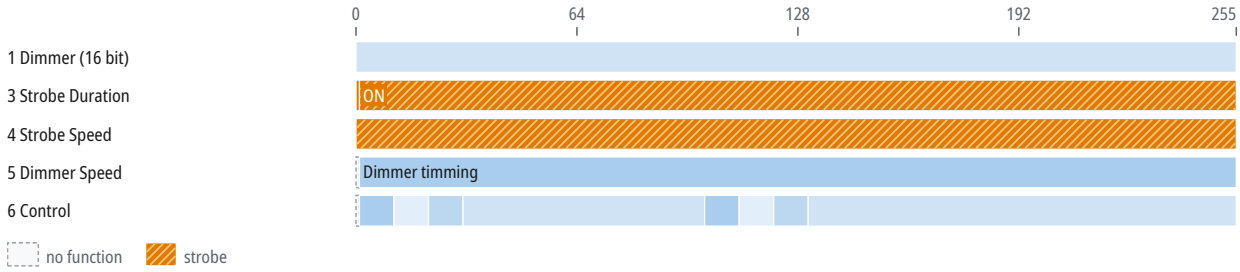


CH	Function	DMX	Description
1	Dimmer	0–255	
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Strobe Duration		Same as CH 3 in the mode “Profile 16b CCT” (p. 7)
4	Strobe Speed	0–255	0.1–10 Hz
5	Dimmer Speed		Same as CH 5 in the mode “Profile 16b CCT” (p. 8)
6	Control		Same as CH 6 in the mode “Profile 16b CCT” (p. 8)

Mode Dimmer 8b CCT

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance




CH	Function	DMX	Description
1	Dimmer	0–255	
2	Color Temperature	0–255	3000–6300 K

Mode Dimmer 8b

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Dimmer	0–255	


10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	500 W
Luminous flux	14,790 lm
Color temperature	3,000 K
Color rendering index (CRI)	98
Optics	
Beam angle	11°
Control	
DMX connection	5-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
RDM	yes (manufacturer ID 0x09AE, device model ID 0x7400)
Electrical	
Power supply	90–277 V, 47/63 Hz
Power consumption	600 W
Power connectors	powerCON TRUE1 IN/OUT, powerCONTRUE1TOP IN/OUT
Dimensions and construction	
Weight	21 kg
Operating environment	
Operating temperature	5 to 40 °C

Speeds and ranges

Parameter	Value
Color temperature range	3000–6300 K
Strobe frequency	0.1–10 Hz
Strobe flash duration	0.001–0.02 s

Spot diameter

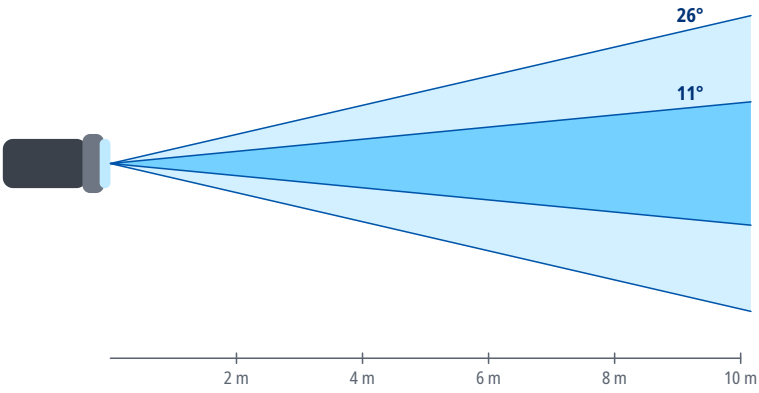

Distance	Ø 11°	Ø 26°
2 m	0.39 m	0.92 m
4 m	0.77 m	1.8 m
6 m	1.2 m	2.8 m
8 m	1.5 m	3.7 m
10 m	1.9 m	4.6 m
15 m	2.9 m	6.9 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.