DMX REFERENCE

Prolights Stark 1000 CC

SC Lighting



Manufacturer	SC Lighting
GDTF file	SC_Lighting_Prolights_Stark_1000_CC_89987.gdtf
GDTF revision	updated timing · 2025-03-17
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 6
9 DMX channels 9
Mode STD 9
10 Technical specifications 13
11 Maintenance and cleaning 13
12 Troubleshooting 14
13 Disposal 14

1 About this manual

This document describes the Prolights Stark 1000 CC by SC Lighting. It was compiled from the GDTF file SC_Lighting_Prolights_Stark_1000_CC_89987.gdtf from the GDTF-Share library.

File revision: “updated timing”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by SC Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	615 W
Weight	18 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
STD	17	30	1, 18, 35, 52, …

No light? Check these channels

- STD: CH 6 Shutter at 83–93, 164–174 or 245–255 “Open”; CH 7 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

Pan 540°

top view

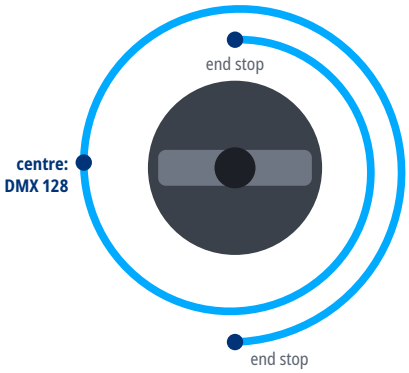

full travel in 2.8 s

Tilt 220°

side view

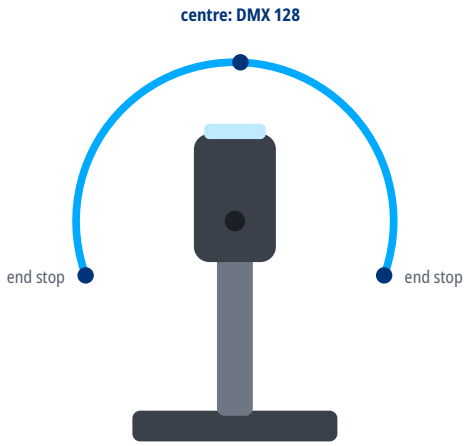

full travel in 1.1 s

Full-travel times as stated in the GDTF file.

5 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 18 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

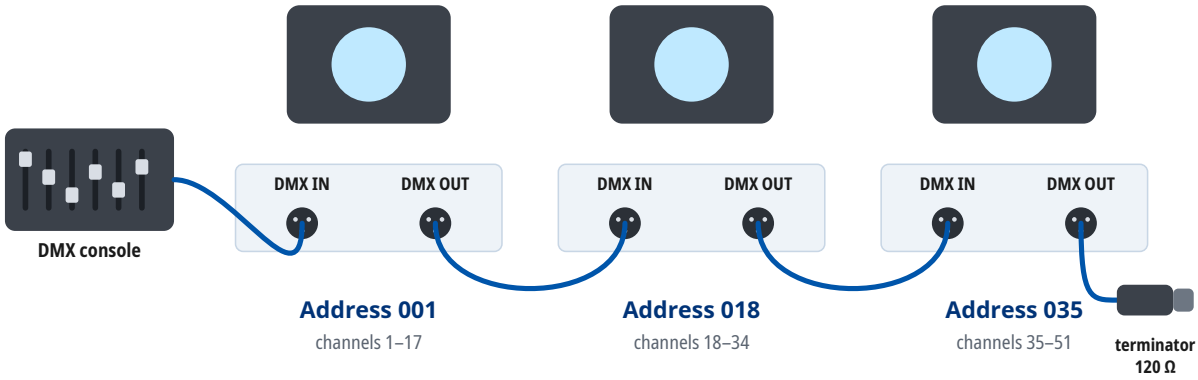

Mode STD: every unit occupies 17 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “STD”: 17.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “STD”, you can use, for example, the start addresses 1, 18, 35, 52.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	STD 17 channels
Pan / Tilt	1, 3
Dimmer	7
Shutter / strobe	6
Color mixing	12–15
Color temperature	10, 11 *
Zoom	16
Effects / macros	9–11

* The function works only when another channel switches it on; see the DMX table.

LED colors and the colors they mix

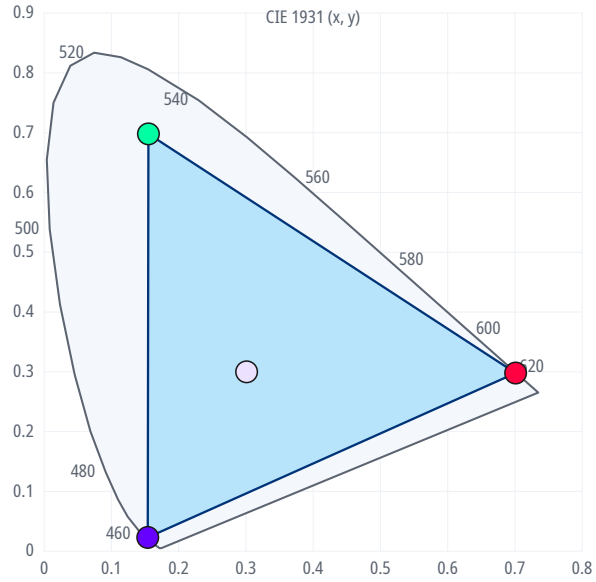

LED	x	y
RED LED	0.701	0.298
GREEN LED	0.155	0.698
BLUE LED	0.154	0.023
WHITE LED	0.301	0.300

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

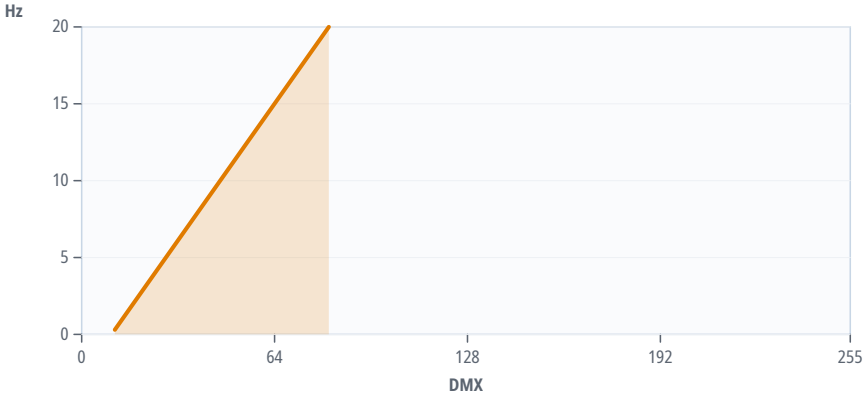

Cells (pixels)

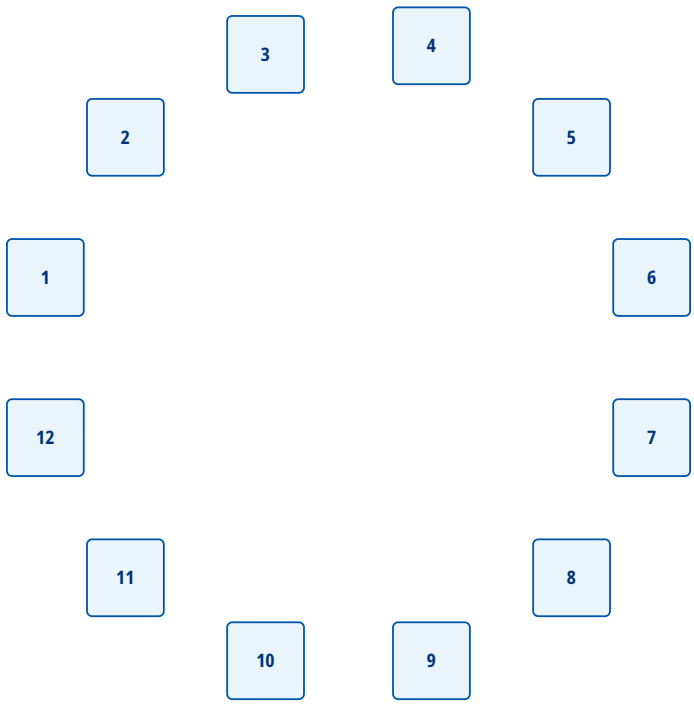

12 cells where the GDTF file places them (seen from above), numbered in the file's order; the mode “STD” drives them together.

9 DMX channels

Units in one DMX universe

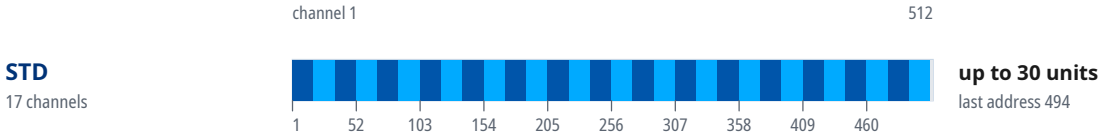

Start addresses of 20 units in the mode “STD”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	86	11	171	16	256
2	18	7	103	12	188	17	273
3	35	8	120	13	205	18	290
4	52	9	137	14	222	19	307
5	69	10	154	15	239	20	324

Mode STD

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 83–93, 164–174 or 245–255 “Open”; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 255, CH 7 Dimmer 255, CH 9 Color Macro 0, CH 10 Color Macro 2 0, CH 11 Color Macro 3 0, CH 12 Red 0, CH 13 Green 0, CH 14 Blue 0, CH 15 White 255.

Channel functions at a glance

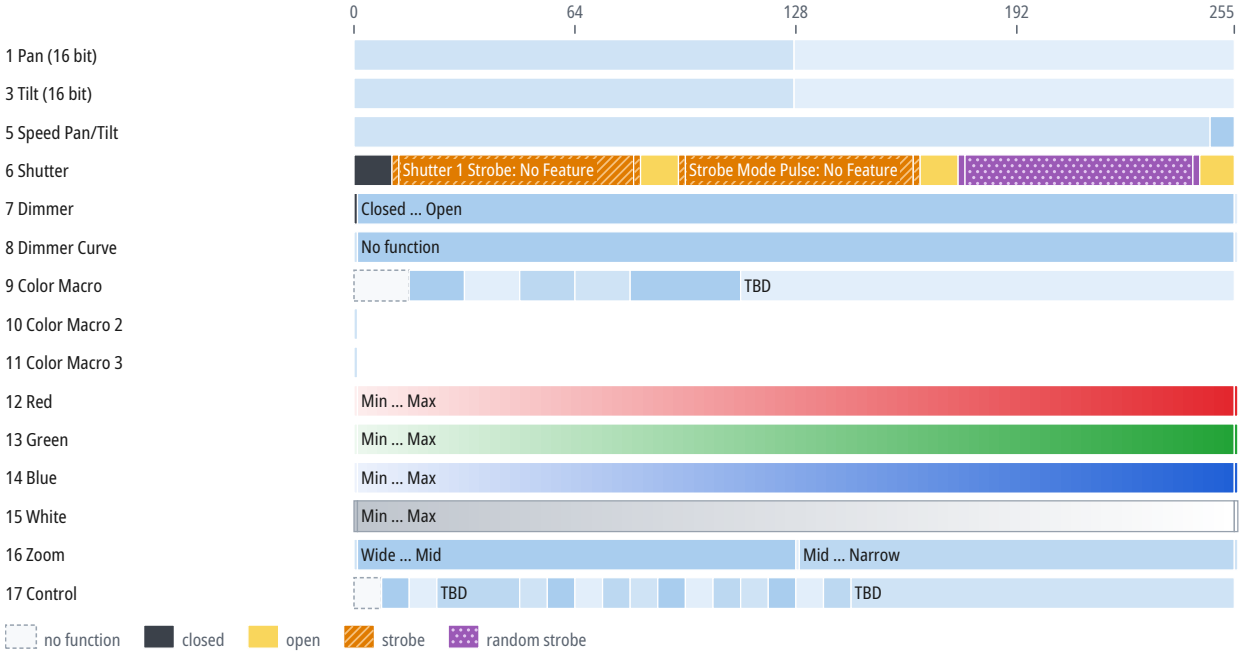

CH	Function	DMX	Description
1	Pan	0–127	Pan 1
		128	Home
		128–255	Pan 1

CH	Function	DMX	Description
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Tilt 1
		128	Home
		128–255	Tilt 1
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0–247	Position MSpeed 1
		248–255	B/O movement
6	Shutter	0–10	Closed
		11–12	Shutter 1 Strobe: Slow
		13–80	Shutter 1 Strobe: No Feature
		81–82	Shutter 1 Strobe: Fast
		83–93	Open
		94–95	Strobe Mode Pulse: Slow
		96–161	Strobe Mode Pulse: No Feature
		162–163	Strobe Mode Pulse: Fast
		164–174	Open
		175–176	Strobe Mode Random: Slow
		177–242	Strobe Mode Random: No Feature
		243–244	Strobe Mode Random: Fast
		245–255	Open
7	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
8	Dimmer Curve	0	Snap
		1–254	No function
		255	Fade Out
9	Color Macro	0–15	No Function
		16–31	White presets function
		32–47	Forward Spin
		48–63	Reverse Spin
		64–79	Continuous
		80–111	Color Bounce Function
		112–255	TBD
10	Color Macro 2		When CH 9 is 16–31:
		0–255	White presets (2000–10000 K)
			When CH 9 is 32–47:
		0–255	Forward Spin
			When CH 9 is 48–63:
		0–255	Reverse Spin
			When CH 9 is 64–111:
		0	Black
		1–13	Red

CH	Function	DMX	Description
10	Color Macro 2 (continued)	14–27	Green
		28–41	Blue
		42–55	White
		56–69	Pastel Red
		70–83	Pastel Green
		84–97	Pastel Blue
		98–111	Cyan
		112–125	Magenta
		126–139	Yellow
		140–153	Light Yellow
		154–167	Light Blue
		168–181	Light Magenta
		182–195	Full White
		196–255	Continuous and Color Bounce
11	Color Macro 3		When CH 9 is 16–31:
		0–255	White presets (2000–10000 K)
			When CH 9 is 32–47:
		0–255	Forward Spin
			When CH 9 is 48–63:
		0–255	Reverse Spin
			When CH 9 is 64–111:
		0	Black
		1–13	Red
		14–27	Green
		28–41	Blue
		42–55	White
		56–69	Pastel Red
		70–83	Pastel Green
		84–97	Pastel Blue
		98–111	Cyan
		112–125	Magenta
		126–139	Yellow
		140–153	Light Yellow
		154–167	Light Blue
		168–181	Light Magenta
		182–195	Full White
		196–255	Continuous and Color Bounce
12	Red	0	Min
		1–254	Min ... Max
		255	Max
13	Green	0	Min
		1–254	Min ... Max

CH	Function	DMX	Description
13	Green (continued)	255	Max
14	Blue	0	Min
		1–254	Min … Max
		255	Max
15	White	0	Min
		1–254	Min … Max
		255	Max
16	Zoom	0	Wide
		1–127	Wide … Mid
		128	Mid
		129–254	Mid … Narrow
		255	Narrow
17	Control	0–7	No function
		8–15	RESET ALL
		16–23	P/T Reset
		24–47	TBD
		48–55	Other Reset
		56–63	Display Off
		64–71	Display On
		72–87	TBD
		88–95	Hibernation
		96–103	Theatre mode Off
		104–111	Theatre mode On
		112–119	Halogen = HB
		120–127	Halogen = 3200K
		128–135	Halogen = 5600K
		136–143	Halogen = 6000K
		144–255	TBD

10 Technical specifications

Parameter	Value
Light	
Light source	LED
Optics	
Zoom	4–38°
Movement	
Pan	540°
Tilt	220°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	615 W
Power connectors	powerCON TRUE1 IN
Dimensions and construction	
Weight	18 kg
Operating environment	
Operating temperature	-10 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	2000–10000 K
Strobe frequency	0.3–20 Hz

Spot diameter

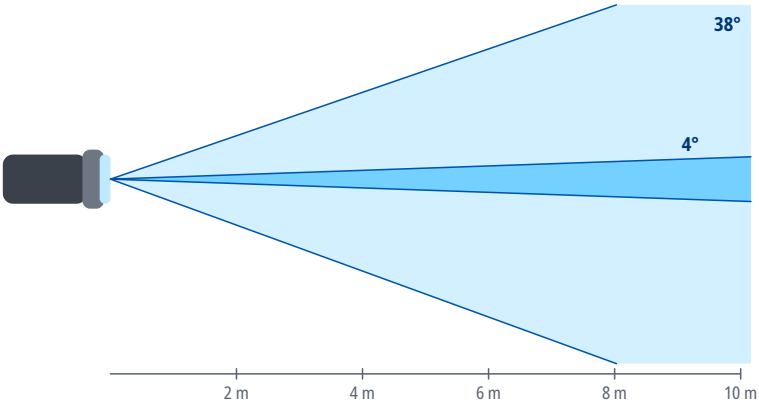

Distance	Ø 4°	Ø 38°
2 m	0.14 m	1.4 m
4 m	0.28 m	2.8 m
6 m	0.42 m	4.1 m
8 m	0.56 m	5.5 m
10 m	0.7 m	6.9 m
15 m	1 m	10.3 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or

pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.