GDTF Fixture Reference · by SOH

DMX REFERENCE

S-8

SLS



Manufacturer	SLS
GDTF file	SLS_S-8_137934.gdtf
GDTF revision	Rel_V_1_3 · 2026-04-09
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 3 Channel CTC 9
Mode 4 Channel RAW 9
Mode 6 Channel D CTC 10
Mode 6 Channel R RAW 11
Mode 8 Channel 16bit RAW 11
Mode 10 Channel 16bit CTC 12
Mode 24 Ch 8xRGB 12
Mode 27 Ch 8xRGB + CTC 13
Mode 35 Ch 8xRGBW RAW 14
Mode 52 Ch 16bit 8xRGBW 15
9 Technical specifications 16
10 Maintenance and cleaning 16
11 Troubleshooting 17
12 Disposal 17

1 About this manual

This document describes the S-8 by SLS. It was compiled from the GDTF file SLS_S-8_137934.gdtf from the GDTF-Share library.

File revision: “Rel_V_1_3”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by SLS; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	480 W
Weight	10.6 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
3 Channel CTC	3	170	1, 4, 7, 10, ...
4 Channel RAW	4	128	1, 5, 9, 13, ...
6 Channel D CTC	6	85	1, 7, 13, 19, ...
6 Channel R RAW	6	85	1, 7, 13, 19, ...
8 Channel 16bit RAW	8	64	1, 9, 17, 25, ...
10 Channel 16bit CTC	10	51	1, 11, 21, 31, ...
24 Ch 8xRGB	24	21	1, 25, 49, 73, ...
27 Ch 8xRGB + CTC	27	18	1, 28, 55, 82, ...
35 Ch 8xRGBW RAW	35	14	1, 36, 71, 106, ...
52 Ch 16bit 8xRGBW	52	9	1, 53, 105, 157, ...


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ **CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 10.6 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

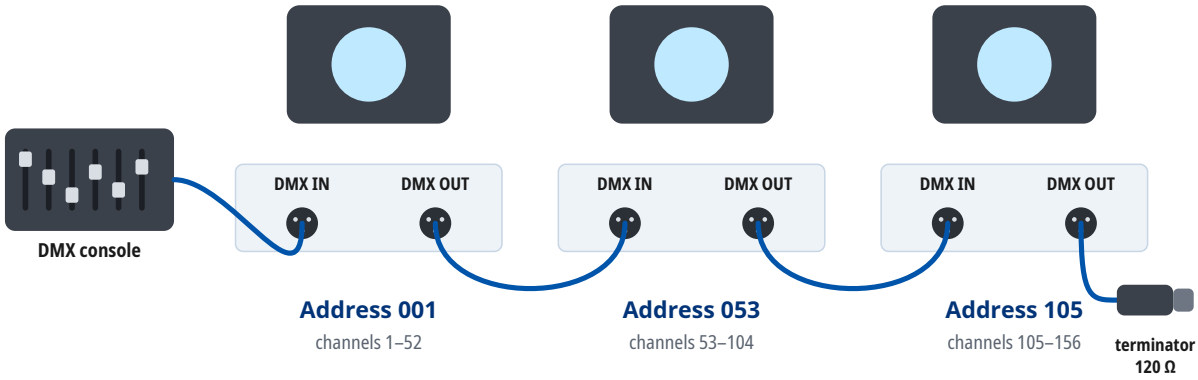

Mode 52 Ch 16bit 8xRGBW: every unit occupies 52 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “52 Ch 16bit 8xRGBW”: 52.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “52 Ch 16bit 8xRGBW”, you can use, for example, the start addresses 1, 53, 105, 157.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	3 Channel CTC 3 channels	4 Channel RAW 4 channels	6 Channel D CTC 6 channels	6 Channel R RAW 6 channels	8 Channel 16bit RAW 8 channels	10 Channel 16bit CTC 10 channels	24 Ch 8xRGB 24 channels	27 Ch 8xRGB + CTC 27 channels
Dimmer	✓	✓	2	2	✓	2	✓	2
Dimmer resolution			8 bit	8 bit		16 bit		8 bit
Shutter / strobe			1	1		1		1
Color mixing	1–3	1–4	4–6	3–6	4× (1–7)	5, 7, 9	1–24	4–27
Color temperature			3			4		3
Pixel control							8 cells	8 cells

LED colors and the colors they mix

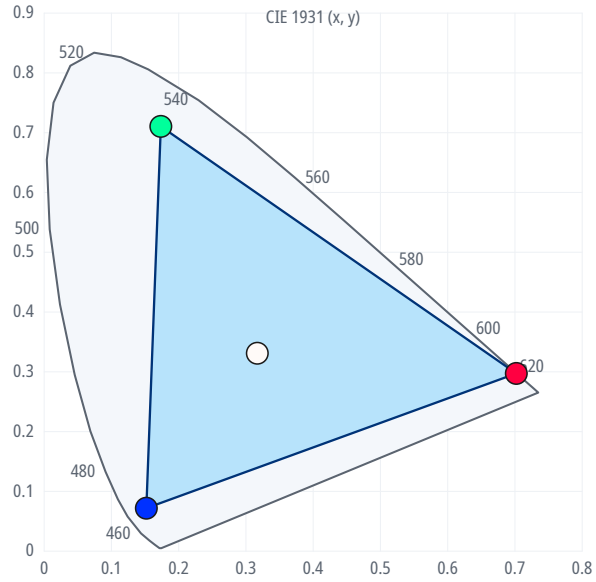

LED	x	y	nm
Red	0.702	0.297	626
Green	0.173	0.711	527
Blue	0.152	0.072	452
White	0.317	0.331	

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Strobe rate

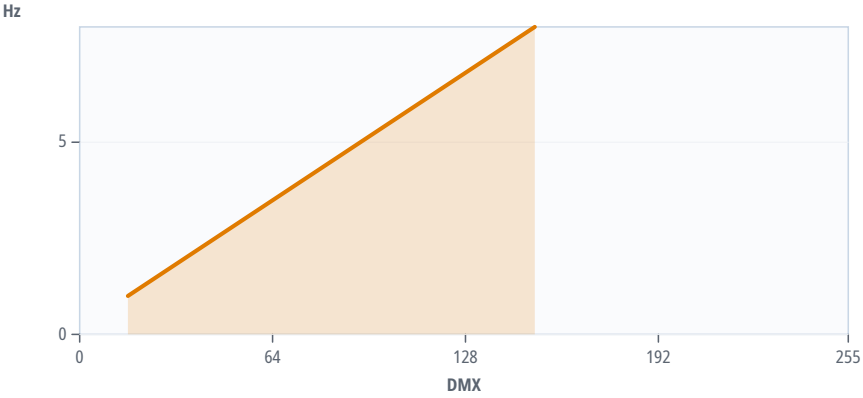

CH 1 · 35 Ch 8xRGBW RAW

16–151: 1–8 Hz
Strobe

Cells (pixels)



8 cells where the GDTF file places them (seen from above), numbered by their first DMX channel (CH) in the mode “35 Ch 8xRGBW RAW”.

8 DMX channels

Units in one DMX universe

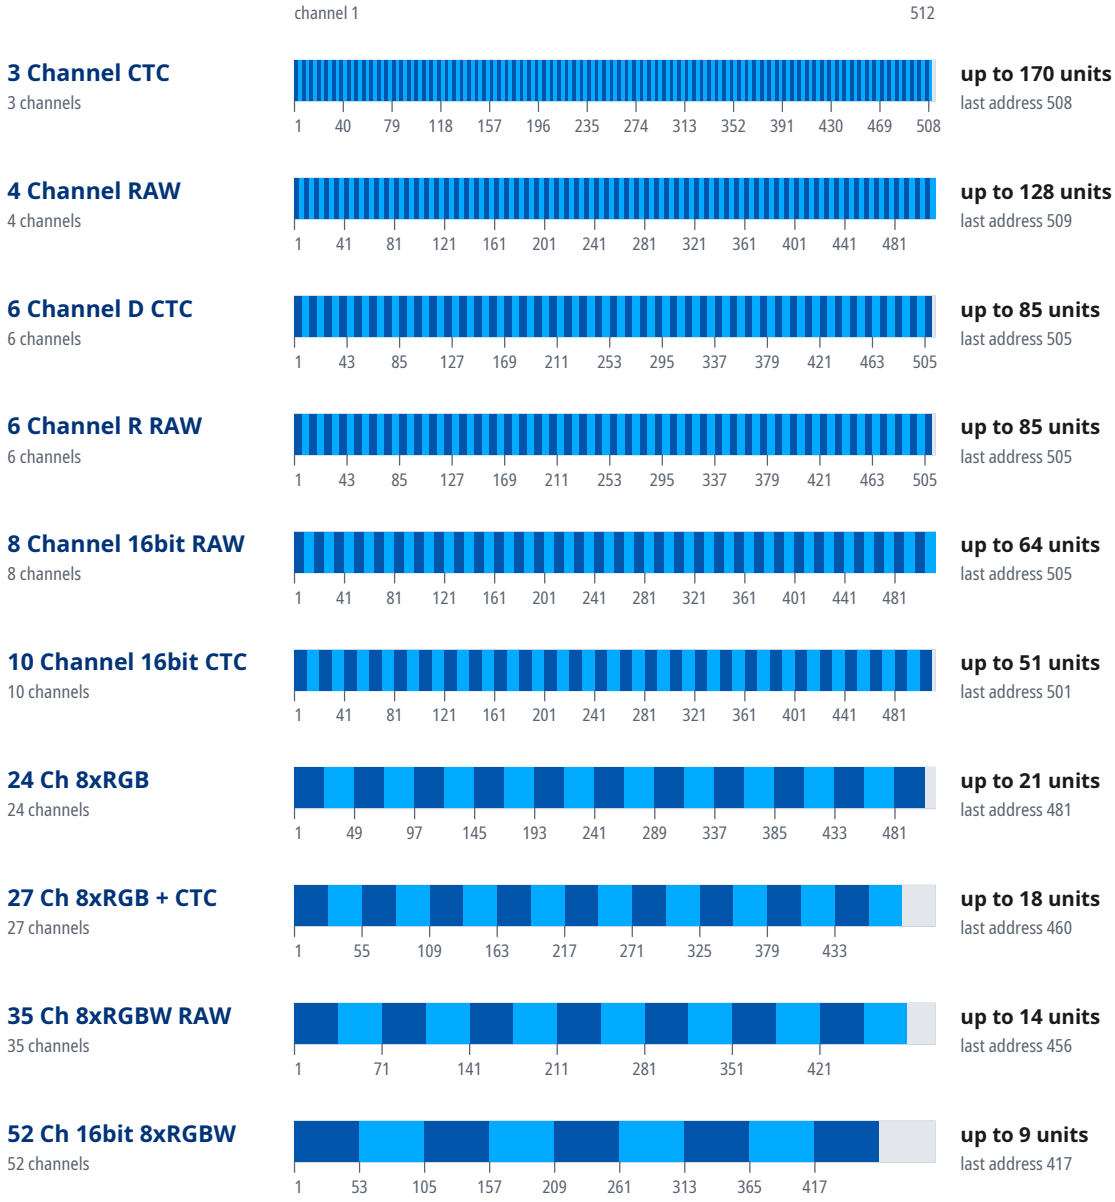

Start addresses of 20 units in the mode “52 Ch 16bit 8xRGBW”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	261	11	U2 · 53	16	U2 · 313
2	53	7	313	12	U2 · 105	17	U2 · 365
3	105	8	365	13	U2 · 157	18	U2 · 417
4	157	9	417	14	U2 · 209	19	U3 · 1
5	209	10	U2 · 1	15	U2 · 261	20	U3 · 53

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 3 Channel CTC

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255, CH 2 Green 255, CH 3 Blue 255.

Channel functions at a glance

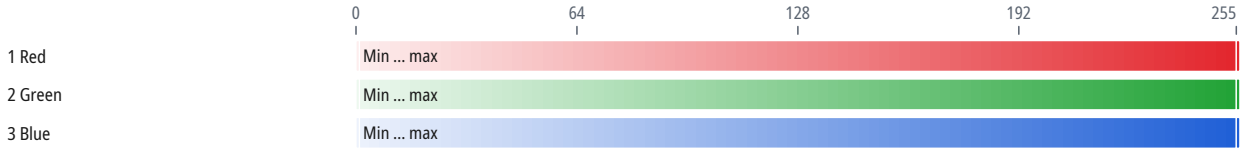

CH	Function	DMX	Description
1	Red	0	Min
		1–254	Min ... max
		255	Max
2	Green	0	Min
		1–254	Min ... max
		255	Max
3	Blue	0	Min
		1–254	Min ... max
		255	Max

Mode 4 Channel RAW

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255, CH 2 Green 255, CH 3 Blue 255, CH 4 White 255.

Channel functions at a glance

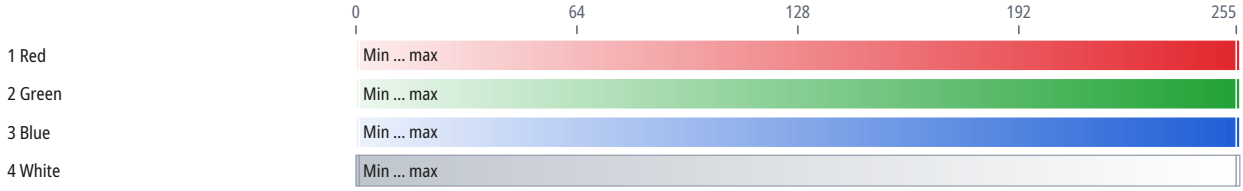

CH	Function	DMX	Description
1	Red		Same as CH 1 in the mode “3 Channel CTC” (p. 9)
2	Green		Same as CH 2 in the mode “3 Channel CTC” (p. 9)
3	Blue		Same as CH 3 in the mode “3 Channel CTC” (p. 9)
4	White	0	Min
		1–254	Min ... max
		255	Max

Mode 6 Channel D CTC

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 2 Dimmer 255, CH 4 Red 255, CH 5 Green 255, CH 6 Blue 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter	0–7	Shutter: Closed
		8–15	Shutter: Open
		16	Strobe: Slow
		17–150	Strobe: Slow ... Fast
		151	Strobe: Fast
		152–255	Non
2	Dimmer	0	Min
		1–254	Min ... max
		255	Max
3	Color Temperature	0	OFF
		1–4	RAW
		5	2000K
		6–254	2000K ... 10000K
		255	10000K
4	Red		Same as CH 1 in the mode “3 Channel CTC” (p. 9)
5	Green		Same as CH 2 in the mode “3 Channel CTC” (p. 9)
6	Blue		Same as CH 3 in the mode “3 Channel CTC” (p. 9)

Mode 6 Channel R RAW

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 2 Dimmer 255, CH 3 Red 255, CH 4 Green 255, CH 5 Blue 255, CH 6 White 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter		Same as CH 1 in the mode “6 Channel D CTC” (p. 10)
2	Dimmer		Same as CH 2 in the mode “6 Channel D CTC” (p. 10)
3	Red		Same as CH 1 in the mode “3 Channel CTC” (p. 9)
4	Green		Same as CH 2 in the mode “3 Channel CTC” (p. 9)
5	Blue		Same as CH 3 in the mode “3 Channel CTC” (p. 9)
6	White		Same as CH 4 in the mode “4 Channel RAW” (p. 9)

Mode 8 Channel 16bit RAW

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255, CH 3 Green 255, CH 5 Blue 255, CH 7 White 255.

Channel functions at a glance

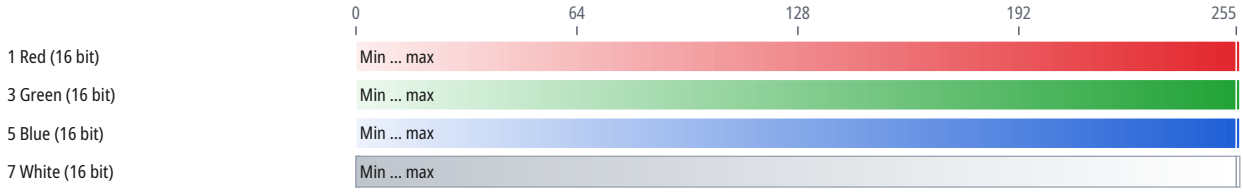

CH	Function	DMX	Description
1	Red	0–255	Min ... max
		255	Max
2	Red Fine	0–255	Fine adjustment of CH 1
3	Green	0–255	Min ... max
		255	Max
4	Green Fine	0–255	Fine adjustment of CH 3
5	Blue	0–255	Min ... max
		255	Max
6	Blue Fine	0–255	Fine adjustment of CH 5

CH	Function	DMX	Description
7	White	0–255	Min ... max
		255	Max
8	White Fine	0–255	Fine adjustment of CH 7

Mode 10 Channel 16bit CTC

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 2 Dimmer 255, CH 5 Red 255, CH 7 Green 255, CH 9 Blue 255.

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter		Same as CH 1 in the mode “6 Channel D CTC” (p. 10)
2	Dimmer	0–255	Min ... max
		255	Max
3	Dimmer Fine	0–255	Fine adjustment of CH 2
4	Color Temperature		Same as CH 3 in the mode “6 Channel D CTC” (p. 10)
5	Red		Same as CH 1 in the mode “8 Channel 16bit RAW” (p. 11)
6	Red Fine	0–255	Fine adjustment of CH 5
7	Green		Same as CH 3 in the mode “8 Channel 16bit RAW” (p. 11)
8	Green Fine	0–255	Fine adjustment of CH 7
9	Blue		Same as CH 5 in the mode “8 Channel 16bit RAW” (p. 11)
10	Blue Fine	0–255	Fine adjustment of CH 9

Mode 24 Ch 8xRGB

The GDTF file gives these values for a console's Highlight function: CH 1 Red 255 (the same in each of the 8 cells), CH 2 Green 255 (the same in each of the 8 cells), CH 3 Blue 255 (the same in each of the 8 cells).

Channel functions at a glance

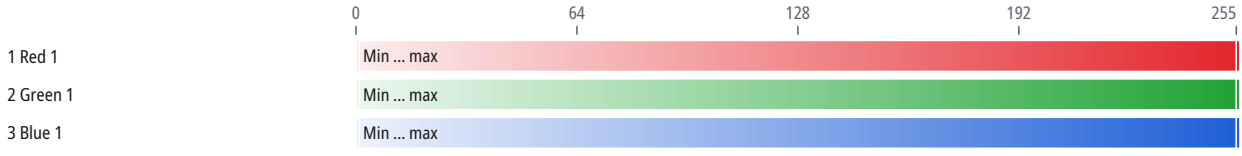

CH	Function	DMX	Description
1	Red 1	0	Min
		1–254	Min ... max
		255	Max
2	Green 1	0	Min
		1–254	Min ... max
		255	Max
3	Blue 1	0	Min
		1–254	Min ... max
		255	Max

CH 1–24: 8 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 1–3); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	1	2	3	2	4	5	6	3	7	8	9
4	10	11	12	5	13	14	15	6	16	17	18
7	19	20	21	8	22	23	24				

Mode 27 Ch 8xRGB + CTC

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 2 Dimmer 255, CH 4 Red 255 (the same in each of the 8 cells), CH 5 Green 255 (the same in each of the 8 cells), CH 6 Blue 255 (the same in each of the 8 cells).

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter		Same as CH 1 in the mode “6 Channel D CTC” (p. 10)
2	Dimmer		Same as CH 2 in the mode “6 Channel D CTC” (p. 10)
3	Color Temperature		Same as CH 3 in the mode “6 Channel D CTC” (p. 10)
4	Red 1	0	Min
		1–254	Min ... max
		255	Max
5	Green 1	0	Min
		1–254	Min ... max
		255	Max

CH	Function	DMX	Description
6	Blue 1	0	Min
		1–254	Min ... max
		255	Max

CH 4–27: 8 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 4–6); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	4	5	6	2	7	8	9	3	10	11	12
4	13	14	15	5	16	17	18	6	19	20	21
7	22	23	24	8	25	26	27				

Mode 35 Ch 8xRGBW RAW

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 4 Red 255 (the same in each of the 8 cells), CH 5 Green 255 (the same in each of the 8 cells), CH 6 Blue 255 (the same in each of the 8 cells), CH 7 White 255 (the same in each of the 8 cells).

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter		Same as CH 1 in the mode “6 Channel D CTC” (p. 10)
2	Strobe Duration	0	Min
		1–254	Min ... max
		255	Max
3	Color Temperature		Same as CH 3 in the mode “6 Channel D CTC” (p. 10)
4	Red 1	0	Min
		1–254	Min ... max
		255	Max
5	Green 1	0	Min
		1–254	Min ... max
		255	Max
6	Blue 1	0	Min
		1–254	Min ... max
		255	Max

CH	Function	DMX	Description
7	White 1	0	Min
		1–254	Min … max
		255	Max

CH 4–35: 8 cells of 4 channels each. Every cell works as cell 1 in the table above (CH 4–7); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	White	Cell	Red	Green	Blue	White
1	4	5	6	7	2	8	9	10	11
3	12	13	14	15	4	16	17	18	19
5	20	21	22	23	6	24	25	26	27
7	28	29	30	31	8	32	33	34	35

Mode 52 Ch 16bit 8xRGBW

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Shutter at 8–15 “Open”. The GDTF file gives these values for a console's Highlight function: CH 1 Shutter 8, CH 2 Dimmer 255, CH 5 Red 255 (the same in each of the 8 cells), CH 7 Green 255 (the same in each of the 8 cells), CH 9 Blue 255 (the same in each of the 8 cells).

Channel functions at a glance



CH	Function	DMX	Description
1	Shutter		Same as CH 1 in the mode “6 Channel D CTC” (p. 10)
2	Dimmer		Same as CH 2 in the mode “10 Channel 16bit CTC” (p. 12)
3	Dimmer Fine	0–255	Fine adjustment of CH 2
4	Color Temperature		Same as CH 3 in the mode “6 Channel D CTC” (p. 10)
5	Red 1	0–255	Min … max
		255	Max
6	Red 1 Fine	0–255	Fine adjustment of CH 5
7	Green 1	0–255	Min … max
		255	Max
8	Green 1 Fine	0–255	Fine adjustment of CH 7
9	Blue 1	0–255	Min … max
		255	Max
10	Blue 1 Fine	0–255	Fine adjustment of CH 9

CH 5–52: 8 cells of 6 channels each. Every cell works as cell 1 in the table above (CH 5–10); the table

below gives each cell's channel numbers.

Cell	Red	Red Fine	Green	Green Fine	Blue	Blue Fine
1	5	6	7	8	9	10
2	11	12	13	14	15	16
3	17	18	19	20	21	22
4	23	24	25	26	27	28
5	29	30	31	32	33	34
6	35	36	37	38	39	40
7	41	42	43	44	45	46
8	47	48	49	50	51	52

9 Technical specifications

Parameter	Value
Light source	discharge lamp
DMX connection	3-pin XLR IN/OUT
Power supply	100–240 V, 50/60 Hz
Power consumption	480 W
Power connectors	powerCON TRUE1 IN/OUT
Weight	10.6 kg
Operating temperature	-10 to 45 °C

Speeds and ranges

Parameter	Value
Color temperature range	2000–10000 K
Strobe frequency	1–8 Hz

Spot diameter

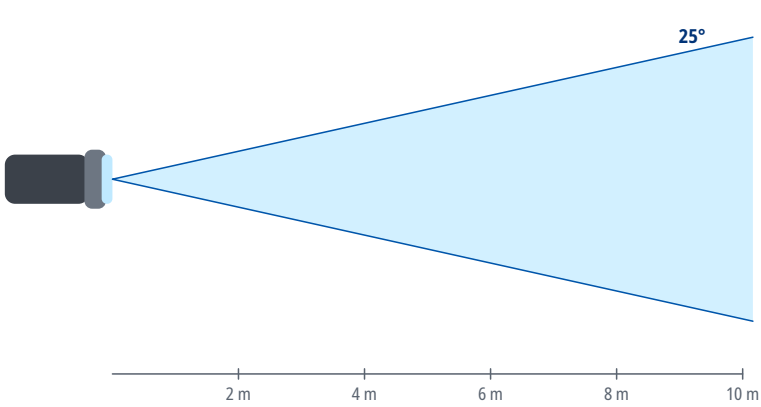

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.