DMX REFERENCE

JBeam 230w

JBeam 230w 7R

Sagitter



Manufacturer	Sagitter
GDTF file	Sagitter_JBeam_230w_137750.gdtf
GDTF revision	08/04/26 · 2026-04-08
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 17 Ch 8
Mode 15 Ch 11
Mode 13 Ch 12
9 Technical specifications 13
10 Maintenance and cleaning 13
11 Troubleshooting 14
12 Disposal 14

1 About this manual

This document describes the JBeam 230w 7R by Sagitter. It was compiled from the GDTF file Sagitter_JBeam_230w_137750.gdtf from the GDTF-Share library.

File revision: “08/04/26”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Sagitter; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	12.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
17 Ch	17	30	1, 18, 35, 52, ...
15 Ch	15	34	1, 16, 31, 46, ...
13 Ch	13	39	1, 14, 27, 40, ...

No light? Check these channels

- 17 Ch: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0
- 15 Ch: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0
- 13 Ch: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Installation


⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 12.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

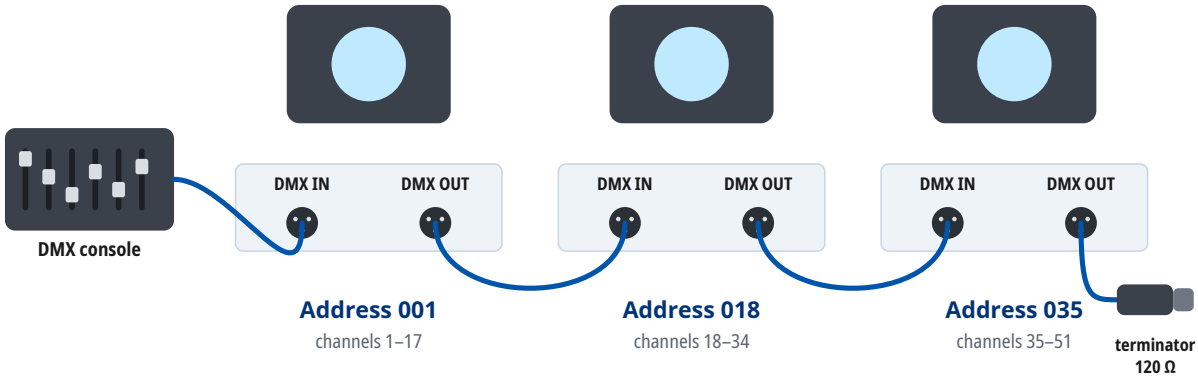

Mode 17 Ch: every unit occupies 17 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “17 Ch”: 17.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “17 Ch”, you can use, for example, the start addresses 1, 18, 35, 52.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	17 Ch 17 channels	15 Ch 15 channels	13 Ch 13 channels
Pan / Tilt	1, 3	1, 3	1, 3
Dimmer	8	8	8
Shutter / strobe	7	7	7
Color wheel	5	5	5
Gobo wheel	6	6	6
Prism	10–12	10–12	10
Frost	13	13	11
Focus	9	9	9


Gobo wheel

1 Gobos	7 Gobos 7	13 Gobos 13
2 Gobos 2	8 Gobos 8	14 Gobos 14
3 Gobos 3	9 Gobos 9	15 Gobos 15
4 Gobos 4	10 Gobos 10	16 Gobos 16
5 Gobos 5	11 Gobos 11	
6 Gobos 6	12 Gobos 12	


Color wheel



Prism 1

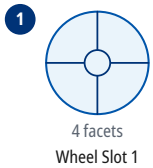


Prism 2

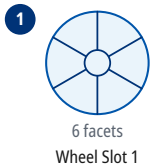

8 DMX channels

Units in one DMX universe

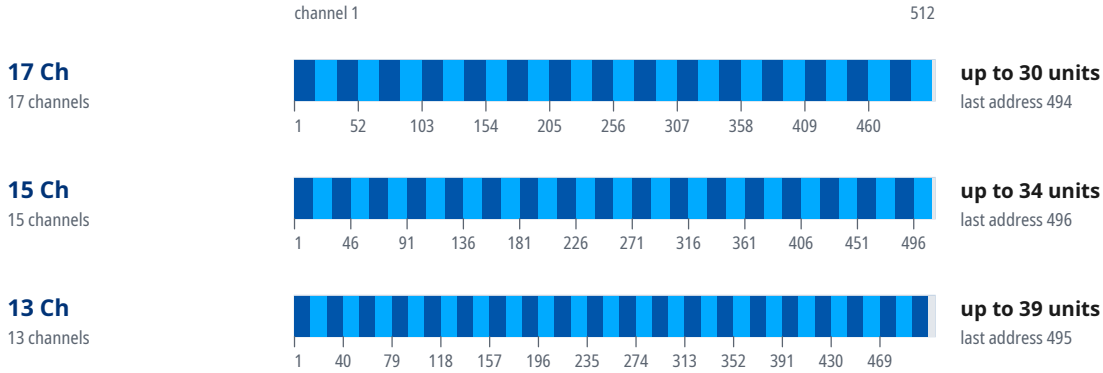

Start addresses of 20 units in the mode “17 Ch”


Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	86	11	171	16	256
2	18	7	103	12	188	17	273
3	35	8	120	13	205	18	290
4	52	9	137	14	222	19	307
5	69	10	154	15	239	20	324

Mode 17 Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0.

Channel functions at a glance

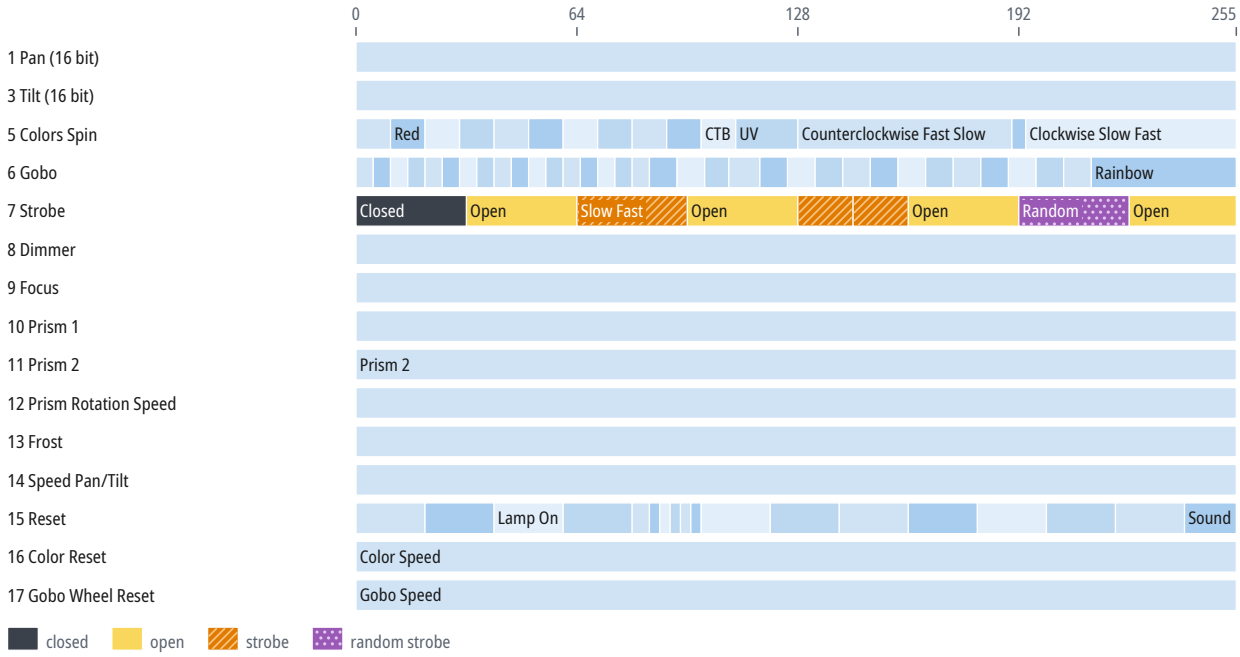

CH	Function	DMX	Description
1	Pan	0–255	
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–255	
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Colors Spin	0–9	Open
		10–19	Red
		20–29	Blue
		30–39	Green
		40–49	Yellow
		50–59	Magneta
		60–69	Cyan
		70–79	Pink
		80–89	Orange
		90–99	CTO
		100–109	CTB
		110–127	UV
		128–189	Counterclockwise Fast Slow
		190–193	Stop
		194–255	Clockwise Slow Fast
6	Gobo	0–4	Gobo 1: Open
		5–9	Gobo 1
		10–14	Gobo 2
		15–19	Gobo 3
		20–24	Gobo 4
		25–29	Gobo 5
		30–34	Gobo 6
		35–39	Gobo 7
		40–44	Gobo 8
		45–49	Gobo 9
		50–54	Gobo 10
		55–59	Gobo 11
		60–64	Gobo 12
		65–69	Gobo 13
		70–74	Gobo 14
		75–79	Gobo 15
		80–84	Gobo 16
		85–92	Gobo Shake 1
		93–100	Gobo Shake 2
		101–107	Gobo Shake 3
		108–116	Gobo Shake 4
		117–124	Gobo Shake 5

CH	Function	DMX	Description
6	Gobo (continued)	125–132	Gobo Shake 6
		133–140	Gobo Shake 7
		141–148	Gobo Shake 8
		149–156	Gobo Shake 9
		157–164	Gobo Shake 10
		165–172	Gobo Shake 11
		173–180	Gobo Shake 12
		181–188	Gobo Shake 13
		189–196	Gobo Shake 14
		197–204	Gobo Shake 15
		205–212	Gobo Shake 16
		213–255	Rainbow
7	Strobe	0–31	Closed
		32–63	Open
		64–95	Slow Fast
		96–127	Open
		128–143	Pulse In Slow Fast
		144–159	Pulse Out Fast Slow
		160–191	Open
		192–223	Random
		224–255	Open
8	Dimmer	0–255	
9	Focus	0–255	
10	Prism 1	0–255	
11	Prism 2	0–255	Prism 2
12	Prism Rotation Speed	0–255	
13	Frost	0–255	
14	Speed Pan/Tilt	0–255	
15	Reset	0–39	No Functions
		40–59	Lamp On
		60–79	Lamo OFF
		80–84	Reset
		85–87	P/T Reset
		88–90	Color Reset
		91–93	Color Reset ... Strobo Reset
		94–96	Strobo Reset
		97–99	Other Reset
		100–119	Program 1
		120–139	Program 2
		140–159	Program 3
		160–179	Program 4
		180–199	Program 5


CH	Function	DMX	Description
15	Reset (continued)	200–219	Program 6
		220–239	Program 7
		240–255	Sound
16	Color Reset		Color Speed
		0–255	Color Speed
17	Gobo Wheel Reset		Gobo Speed
		0–255	Gobo Speed

Mode 15 Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0.

Channel functions at a glance

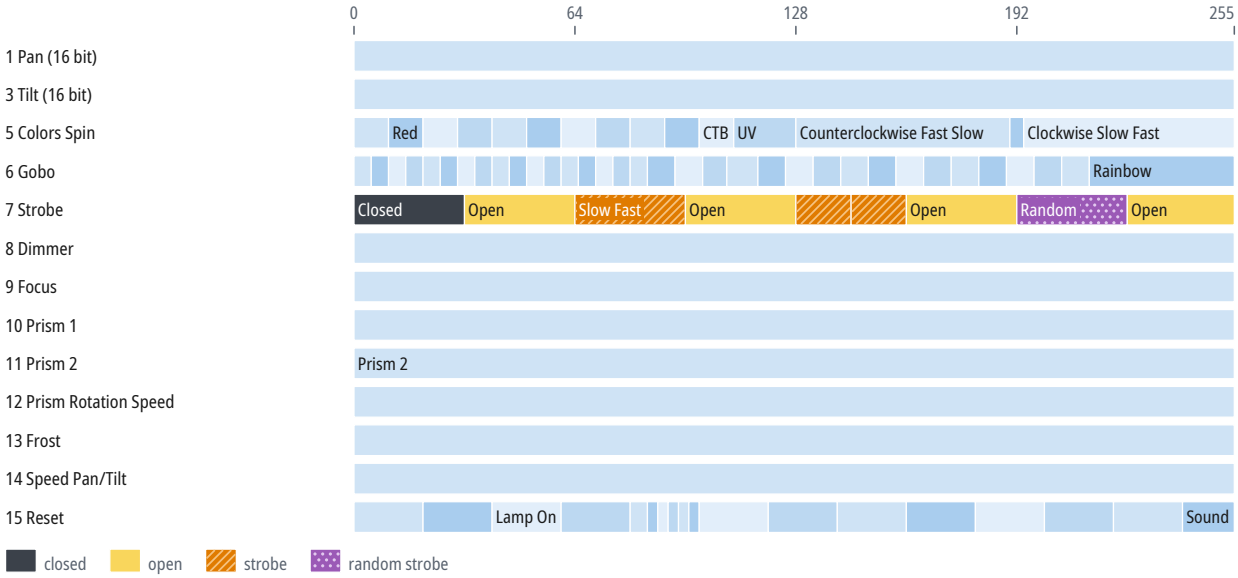

CH	Function	DMX	Description
1	Pan	0–255	
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–255	
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Colors Spin		Same as CH 5 in the mode “17 Ch” (p. 9)
6	Gobo		Same as CH 6 in the mode “17 Ch” (p. 9)
7	Strobe		Same as CH 7 in the mode “17 Ch” (p. 10)
8	Dimmer	0–255	
9	Focus	0–255	
10	Prism 1	0–255	
11	Prism 2	0–255	Prism 2
12	Prism Rotation Speed	0–255	


CH	Function	DMX	Description
13	Frost	0–255	
14	Speed Pan/Tilt	0–255	
15	Reset		Same as CH 15 in the mode “17 Ch” (p. 10)

Mode 13 Ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Strobe at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 8 Dimmer above 0.

Channel functions at a glance

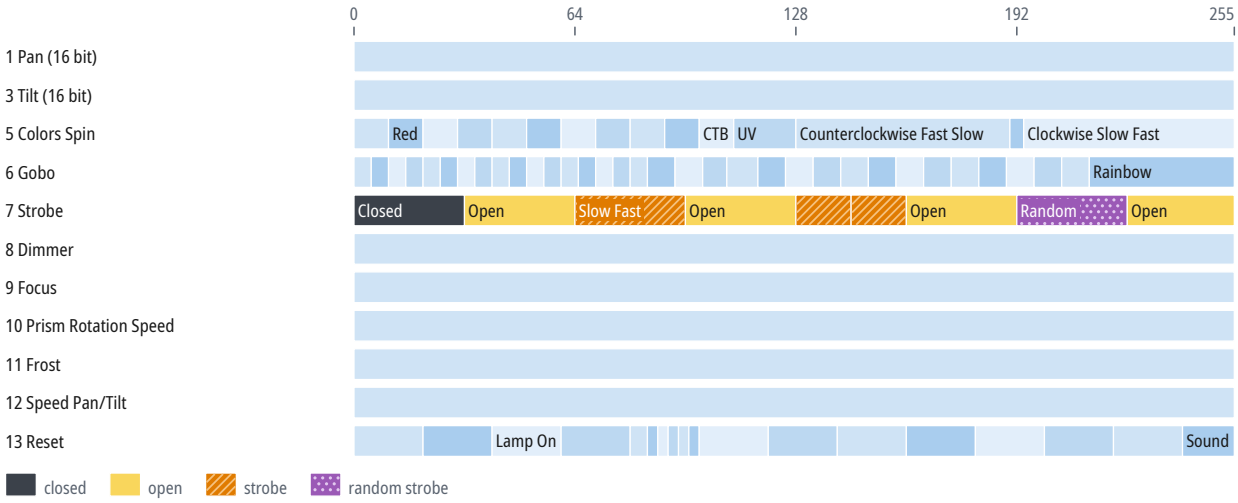


CH	Function	DMX	Description
1	Pan	0–255	
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–255	
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Colors Spin		Same as CH 5 in the mode “17 Ch” (p. 9)
6	Gobo		Same as CH 6 in the mode “17 Ch” (p. 9)
7	Strobe		Same as CH 7 in the mode “17 Ch” (p. 10)
8	Dimmer	0–255	
9	Focus	0–255	
10	Prism Rotation Speed	0–255	
11	Frost	0–255	
12	Speed Pan/Tilt	0–255	
13	Reset		Same as CH 15 in the mode “17 Ch” (p. 10)

9 Technical specifications

Parameter	Value
Light	
Light source	discharge lamp
Lamp power	230 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	85
Optics	
Beam angle	25°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	12.5 kg
Operating environment	
Operating temperature	5 to 40 °C

Spot diameter

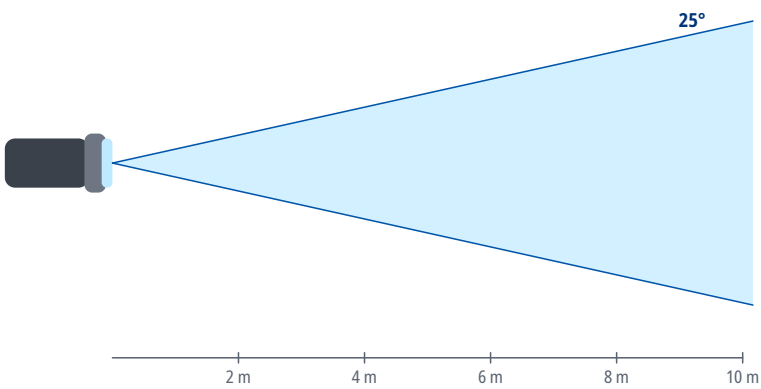

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.

- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.