DMX REFERENCE

# SG HuracanPN

SG HuracanPN RGBW

Sagitter



| | |
|---|---|
| **Manufacturer** | Sagitter |
| **GDTF file** | Sagitter_SG_HuracanPN_135865.gdtf |
| **GDTF revision** | 29/03/2026 · 2026-03-29 |
| **Generated** | 2026-11-24 |

# Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 15 Ch 9
Mode 6 Ch 10
Mode 4 Ch 11
Mode 120 Ch 11
9 Technical specifications 12
10 Maintenance and cleaning 13
11 Troubleshooting 13
12 Disposal 13

# 1 About this manual

This document describes the SG HuracanPN RGBW by Sagitter. It was compiled from the GDTF file Sagitter_SG_HuracanPN_135865.gdtf from the GDTF-Share library.

File revision: “29/03/2026”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Sagitter; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

# 2 Quick reference

| Parameter | Value |
|---|---|
| Power consumption | 30 W |
| Weight | 11.7 kg |
| Ingress protection | IP65 |

### DMX modes

| Mode | Channels | Units in one universe | First start addresses |
|---|---|---|---|
| 15 Ch | 15 | 34 | 1, 16, 31, 46, ... |
| 6 Ch | 6 | 85 | 1, 7, 13, 19, ... |
| 4 Ch | 4 | 128 | 1, 5, 9, 13, ... |
| 120 Ch | 120 | 4 | 1, 121, 241, 361 |

### No light? Check these channels

- 15 Ch: CH 1 Dimmer above 0; CH 3 Shutter at 0–4, 50–54, 100–104, 150–154, 200–204 or 250–255
- 6 Ch: CH 1 Dimmer above 0; CH 2 Shutter at 0–4, 50–54, 100–104, 150–154, 200–204 or 250–255


Read the manual before use


Risk of electric shock


Do not stare into the light

# 3 Safety instructions



Read the manual before use



Risk of electric shock



Do not stare into the light

**⚠ WARNING**

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

**⚠ WARNING**

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

**⚠ CAUTION**

- The device is rated IP65 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ **CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ **CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

# 4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 11.7 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

# 5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

### DMX line

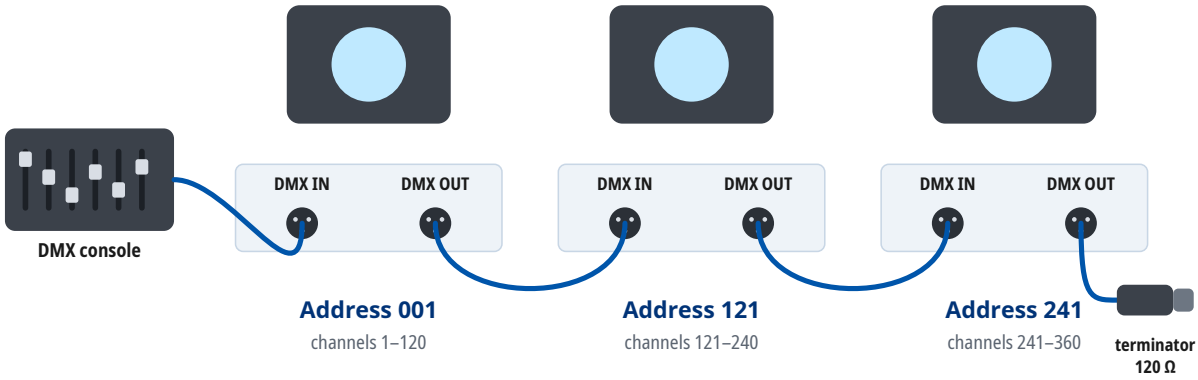


Mode 120 Ch: every unit occupies 120 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

# 6 Operation

### Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “120 Ch”: 120.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “120 Ch”, you can use, for example, the start addresses 1, 121, 241, 361.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

# 7 Functions at a glance

### Functions in each DMX mode

| | 15 Ch<br>15 channels | 6 Ch<br>6 channels | 4 Ch<br>4 channels | 120 Ch<br>120 channels |
|---|---|---|---|---|
| Dimmer | 1 | 1 | ✓ | ✓ |
| Shutter / strobe | 2, 3 | 2 | | |
| Color mixing | 4–7 | 3–6 | 1–4 | 1–120 |
| Color temperature | 9 | | | |
| Effects / macros | 10–14 | | | |
| Pixel control | | | | 30 cells |

## LED colors and the colors they mix

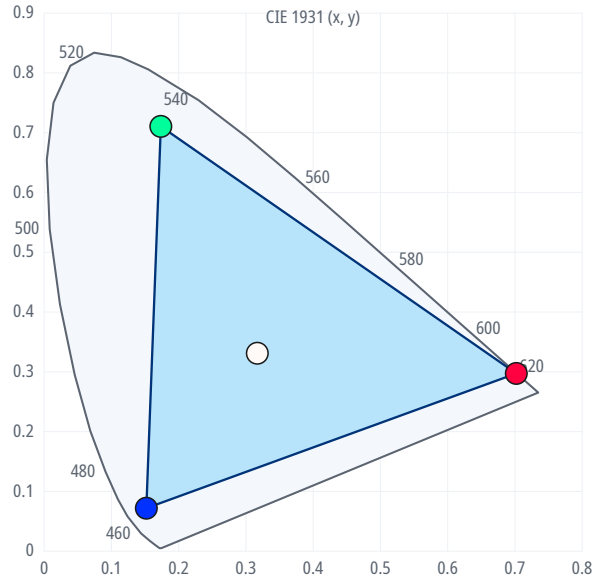


| LED | x | y | nm |
|---|---|---|---|
| Red | 0.702 | 0.297 | 626 |
| Green | 0.173 | 0.711 | 527 |
| Blue | 0.152 | 0.072 | 452 |
| White | 0.317 | 0.331 | |

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

## Cells (pixels)

| | | | | | |
|---|---|---|---|---|---|
| 25 | 26 | 27 | 28 | 29 | 30 |
| 19 | 20 | 21 | 22 | 23 | 24 |
| 13 | 14 | 15 | 16 | 17 | 18 |
| 7 | 8 | 9 | 10 | 11 | 12 |
| 1 | 2 | 3 | 4 | 5 | 6 |

Cells where the GDTF file places them (seen from above), 30 in all; numbered in the order of their first DMX channel in the mode “120 Ch”.

# 8 DMX channels

### Units in one DMX universe

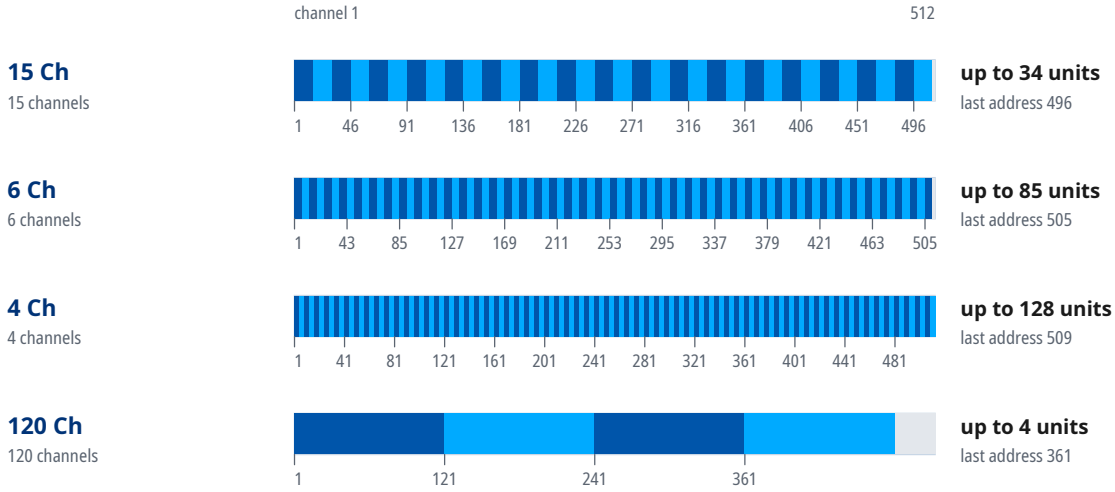


### Start addresses of 20 units in the mode “120 Ch”

| Unit | Start address | Unit | Start address | Unit | Start address | Unit | Start address |
|---|---|---|---|---|---|---|---|
| 1 | 1 | 6 | U2 · 121 | 11 | U3 · 241 | 16 | U4 · 361 |
| 2 | 121 | 7 | U2 · 241 | 12 | U3 · 361 | 17 | U5 · 1 |
| 3 | 241 | 8 | U2 · 361 | 13 | U4 · 1 | 18 | U5 · 121 |
| 4 | 361 | 9 | U3 · 1 | 14 | U4 · 121 | 19 | U5 · 241 |
| 5 | U2 · 1 | 10 | U3 · 121 | 15 | U4 · 241 | 20 | U5 · 361 |

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

## Mode 15 Ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 3 Shutter at 0–4, 50–54, 100–104, 150–154, 200–204 or 250–255.

### Channel functions at a glance

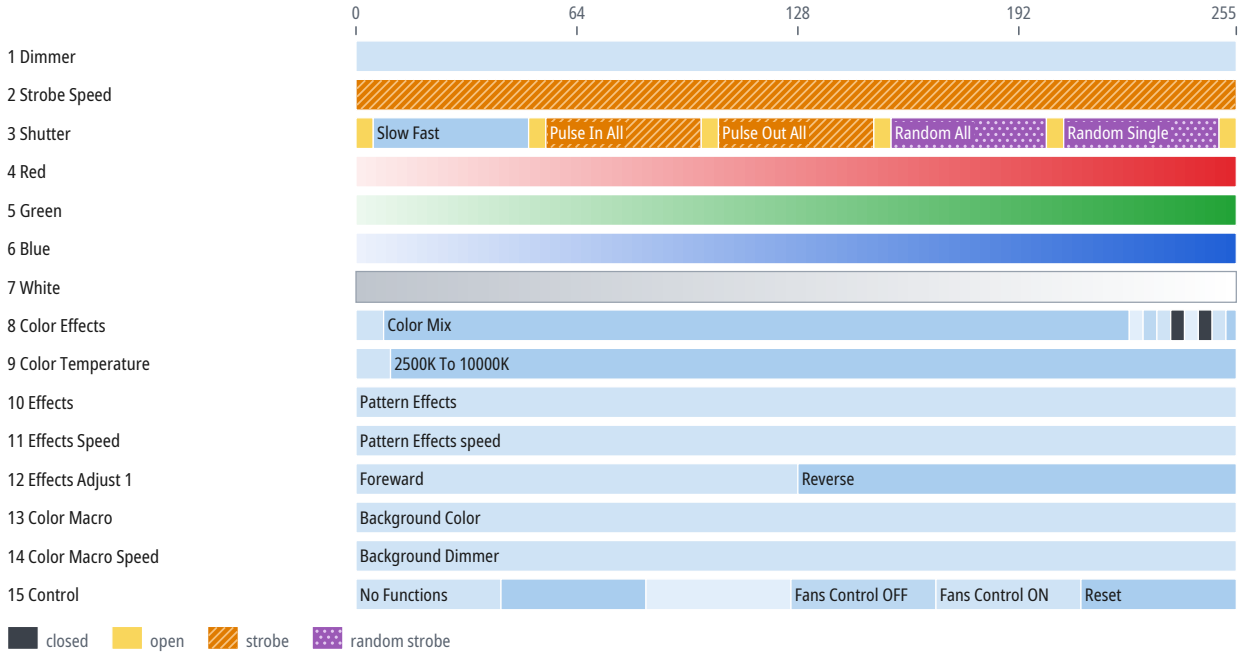


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Dimmer | 0–255 | |
| **2** | Strobe Speed | 0–255 | |
| **3** | Shutter | 0–4 | Led On |
| | | 5–49 | Slow Fast |
| | | 50–54 | Led On |
| | | 55–99 | Pulse In All |
| | | 100–104 | Led On |
| | | 105–149 | Pulse Out All |
| | | 150–154 | Led On |
| | | 155–199 | Random All |
| | | 200–204 | Led On |
| | | 205–249 | Random Single |
| | | 250–255 | Led On |
| **4** | Red | 0–255 | |
| **5** | Green | 0–255 | |
| **6** | Blue | 0–255 | |
| **7** | White | 0–255 | |
| **8** | Color Effects | 0–7 | No Functions |
| | | 8–223 | Color Mix |
| | | 224–227 | Pink |
| | | 228–231 | Rose Red |

| CH | Function | DMX | Description |
|---|---|---|---|
| **8** | Color Effects (continued) | 232–235 | Light Green |
| | | 236–239 | Dark Green |
| | | 240–243 | Light Blue |
| | | 244–247 | Dark Blue |
| | | 248–251 | RGB Full |
| | | 252–255 | RGBW Full |
| **9** | Color Temperature | 0–9 | No Functions |
| | | 10–255 | 2500K To 10000K |
| **10** | Effects | | Pattern Effects |
| | | 0–255 | Pattern Effects |
| **11** | Effects Speed | | Pattern Effects speed |
| | | 0–255 | Pattern Effects speed |
| **12** | Effects Adjust 1 | | Pattern Effects Direct |
| | | 0–127 | Foreward |
| | | 128–255 | Reverse |
| **13** | Color Macro | | Background Color |
| | | 0–255 | Background Color |
| **14** | Color Macro Speed | | Background Dimmer |
| | | 0–255 | Background Dimmer |
| **15** | Control | 0–41 | No Functions |
| | | 42–83 | Default sectors mapping |
| | | 84–125 | Swap sectors mapping |
| | | 126–167 | Fans Control OFF |
| | | 168–209 | Fans Control ON |
| | | 210–255 | Reset |

## Mode 6 Ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0; CH 2 Shutter at 0–4, 50–54, 100–104, 150–154, 200–204 or 250–255.

### Channel functions at a glance

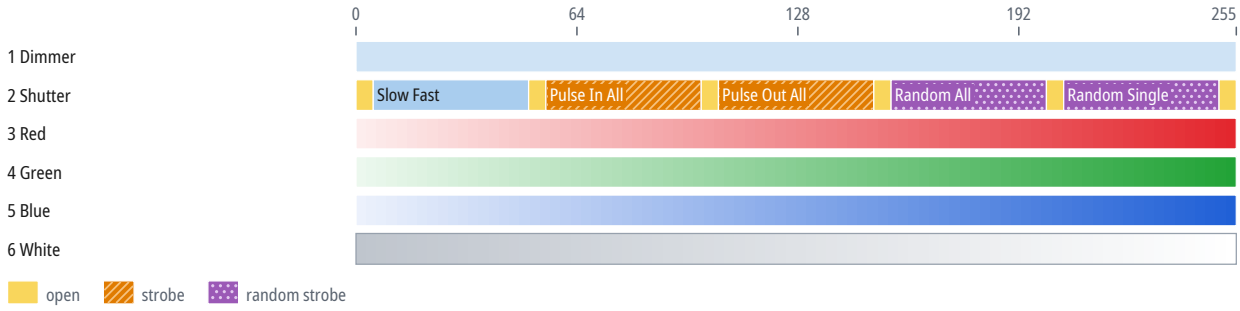

| CH | Function | DMX | Description |
|---|---|---|---|
| 1 | Dimmer | 0–255 | |
| 2 | Shutter | | Same as CH 3 in the mode “15 Ch” (p. 9) |
| 3 | Red | 0–255 | |
| 4 | Green | 0–255 | |
| 5 | Blue | 0–255 | |
| 6 | White | 0–255 | |

## Mode 4 Ch

### Channel functions at a glance

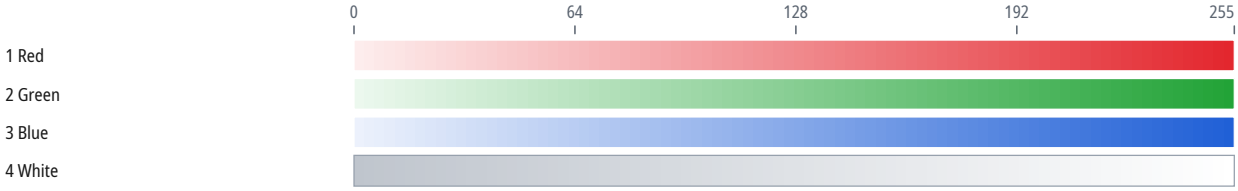


| CH | Function | DMX | Description |
|---|---|---|---|
| 1 | Red | 0–255 | |
| 2 | Green | 0–255 | |
| 3 | Blue | 0–255 | |
| 4 | White | 0–255 | |

## Mode 120 Ch

### Channel functions at a glance

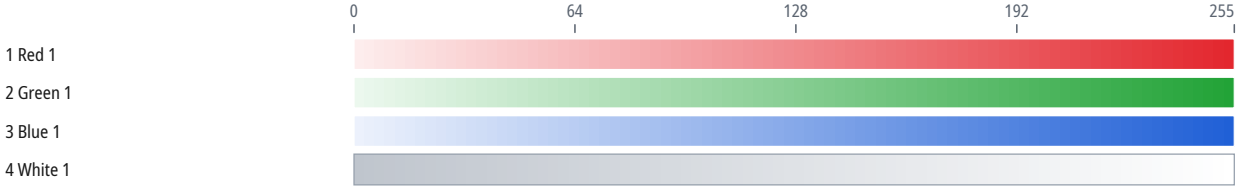


| CH | Function | DMX | Description |
|---|---|---|---|
| 1 | Red 1 | 0–255 | |
| 2 | Green 1 | 0–255 | |
| 3 | Blue 1 | 0–255 | |
| 4 | White 1 | 0–255 | |

CH 1–120: 30 cells of 4 channels each. Every cell works as cell 1 in the table above (CH 1–4); the table below gives each cell's channel numbers.

| Cell | Red | Green | Blue | White | Cell | Red | Green | Blue | White |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 1 | 2 | 3 | 4 | 2 | 5 | 6 | 7 | 8 |
| 3 | 9 | 10 | 11 | 12 | 4 | 13 | 14 | 15 | 16 |
| 5 | 17 | 18 | 19 | 20 | 6 | 21 | 22 | 23 | 24 |
| 7 | 25 | 26 | 27 | 28 | 8 | 29 | 30 | 31 | 32 |

| Cell | Red | Green | Blue | White | Cell | Red | Green | Blue | White |
|---|---|---|---|---|---|---|---|---|---|
| 9 | 33 | 34 | 35 | 36 | 10 | 37 | 38 | 39 | 40 |
| 11 | 41 | 42 | 43 | 44 | 12 | 45 | 46 | 47 | 48 |
| 13 | 49 | 50 | 51 | 52 | 14 | 53 | 54 | 55 | 56 |
| 15 | 57 | 58 | 59 | 60 | 16 | 61 | 62 | 63 | 64 |
| 17 | 65 | 66 | 67 | 68 | 18 | 69 | 70 | 71 | 72 |
| 19 | 73 | 74 | 75 | 76 | 20 | 77 | 78 | 79 | 80 |
| 21 | 81 | 82 | 83 | 84 | 22 | 85 | 86 | 87 | 88 |
| 23 | 89 | 90 | 91 | 92 | 24 | 93 | 94 | 95 | 96 |
| 25 | 97 | 98 | 99 | 100 | 26 | 101 | 102 | 103 | 104 |
| 27 | 105 | 106 | 107 | 108 | 28 | 109 | 110 | 111 | 112 |
| 29 | 113 | 114 | 115 | 116 | 30 | 117 | 118 | 119 | 120 |

# 9 Technical specifications

| Parameter | Value |
|---|---|
| **Control** | |
| DMX connection | 5-pin XLR IN/OUT |
| **Electrical** | |
| Power supply | 100–240 V, 50/60 Hz |
| Power consumption | 30 W |
| Power connectors | powerCON TRUE1 IN |
| **Dimensions and construction** | |
| Weight | 11.7 kg |
| **Operating environment** | |
| Ingress protection | IP65 |
| Meaning of the IP code (IEC 60529) | Dust-tight; protected against water jets |
| Operating temperature | 5 to 40 °C |

### Spot diameter

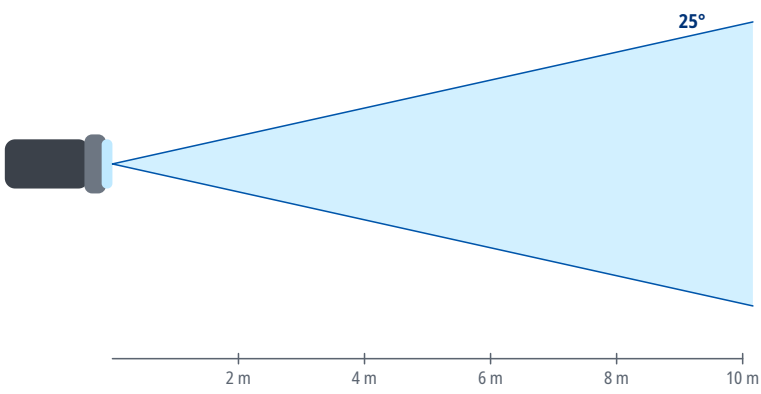


| Distance | Ø 25° |
|---|---|
| 2 m | 0.89 m |
| 4 m | 1.8 m |
| 6 m | 2.7 m |
| 8 m | 3.5 m |
| 10 m | 4.4 m |
| 15 m | 6.7 m |

Spot diameter square to the beam axis, calculated from the beam angle.

# 10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

# 11 Troubleshooting

| Problem | Remedy |
|---|---|
| The device does not switch on | Check the supply voltage, the cables and the fuse, if the device has one. |
| The device does not respond to DMX | Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe). |
| The device behaves erratically or flickers | Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter. |
| Only some devices on the line respond | Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on. |
| Devices respond to the wrong channels or affect each other | Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller. |
| The device or the connected load does not light up although it receives DMX | Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open. |

# 12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.