DMX REFERENCE

Shark Spot Two

Showtec

Manufacturer	Showtec
GDTF file	Showtec_Shark_Spot_Two_118685.gdtf
GDTF revision	def1 · 2025-11-24
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 4
6 Connections 4
7 Operation 5
8 Functions at a glance 6
9 DMX channels 7
Mode 15CH 8
10 Technical specifications 10
11 Maintenance and cleaning 11
12 Troubleshooting 11
13 Disposal 12

1 About this manual

This document describes the Shark Spot Two by Showtec. It was compiled from the GDTF file Showtec_Shark_Spot_Two_118685.gdtf from the GDTF-Share library.

File revision: “def1”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Showtec; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	6 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
15CH	15	34	1, 16, 31, 46, ...

No light? Check these channels

- 15CH: CH 7 Shutter at 0–3 or 250–255 “Shutter Open”


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING

- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

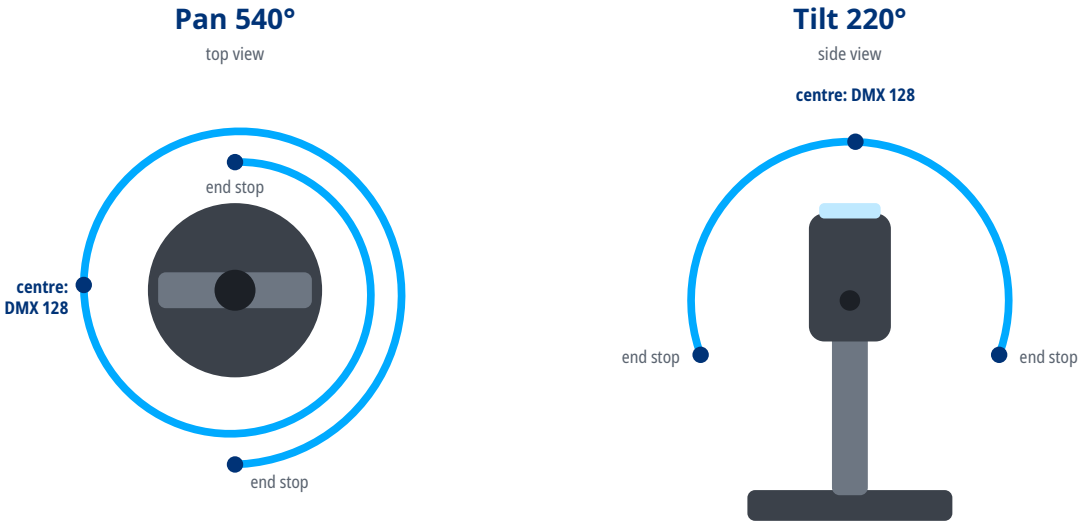

5 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 6 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

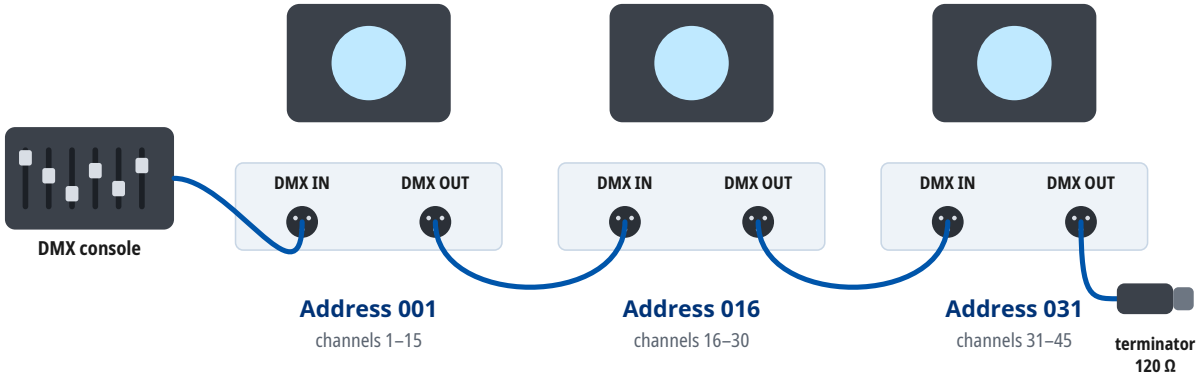

Mode 15CH: every unit occupies 15 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “15CH”: 15.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “15CH”, you can use, for example, the start addresses 1, 16, 31, 46.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	15CH 15 channels	Mode 1 0 channels
Pan / Tilt	1, 3	
Dimmer	6	
Shutter / strobe	7	
Color wheel	8	
Gobo wheel	9	
Gobo rotation	10	
Prism	12, 13	
Focus	11	

Gobo wheel 1

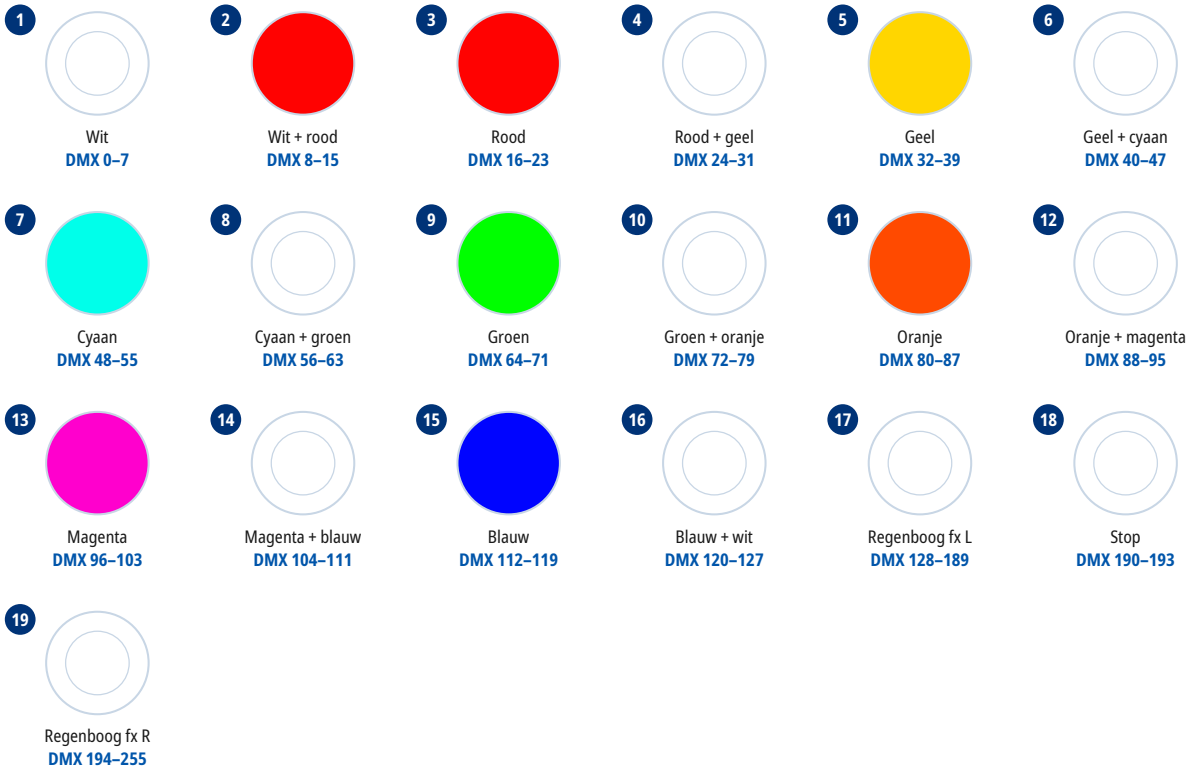

1 Wit DMX 0–7	2 Wit + rood DMX 8–15	3 Rood DMX 16–23	4 Rood + geel DMX 24–31	5 Geel DMX 32–39	6 Geel + cyaan DMX 40–47
7 Cyaan DMX 48–55	8 Cyaan + groen DMX 56–63	9 Groen DMX 64–71	10 Groen + oranje DMX 72–79	11 Oranje DMX 80–87	12 Oranje + magenta DMX 88–95
13 Magenta DMX 96–103	14 Magenta + blauw DMX 104–111	15 Blauw DMX 112–119	16 Blauw + wit DMX 120–127	17 Regenboog fx L DMX 128–189	18 Stop DMX 190–193
19 Regenboog fx R DMX 194–255					

Gobo wheel 2

1 Open	DMX 0–15	7 Gobo 6	DMX 91–105	13 Rot Gobo 6 shake	DMX 176–189
2 Gobo 1	DMX 16–30	8 Rot Gobo 1 shake	DMX 106–119	14 Gobo Stream Right CW	DMX 190–221
3 Gobo 2	DMX 31–45	9 Rot Gobo 2 shake	DMX 120–133	15 Stop	DMX 222–223
4 Gobo 3	DMX 46–60	10 Rot Gobo 3 shake	DMX 134–147	16 Gobo Stream Left CCW	DMX 224–255
5 Gobo 4	DMX 61–75	11 Rot Gobo 4 shake	DMX 148–161		
6 Gobo 5	DMX 76–90	12 Rot Gobo 5 shake	DMX 162–175		

Strobe rate

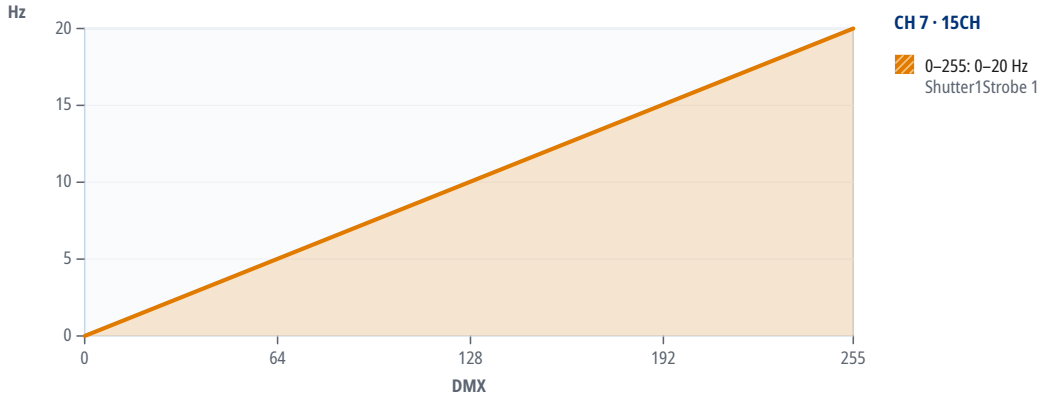

9 DMX channels

Units in one DMX universe

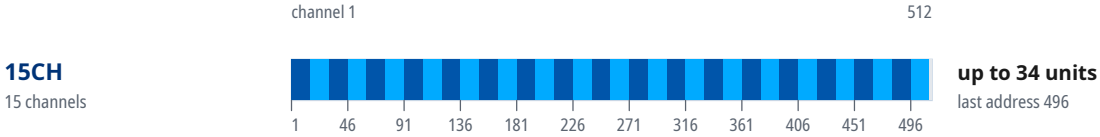

Start addresses of 20 units in the mode “15CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	76	11	151	16	226
2	16	7	91	12	166	17	241
3	31	8	106	13	181	18	256
4	46	9	121	14	196	19	271
5	61	10	136	15	211	20	286

Mode 15CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Shutter at 0–3 or 250–255 “Shutter Open”. The GDTF file gives these values for a console's Highlight function: CH 7 Shutter 0.

Channel functions at a glance

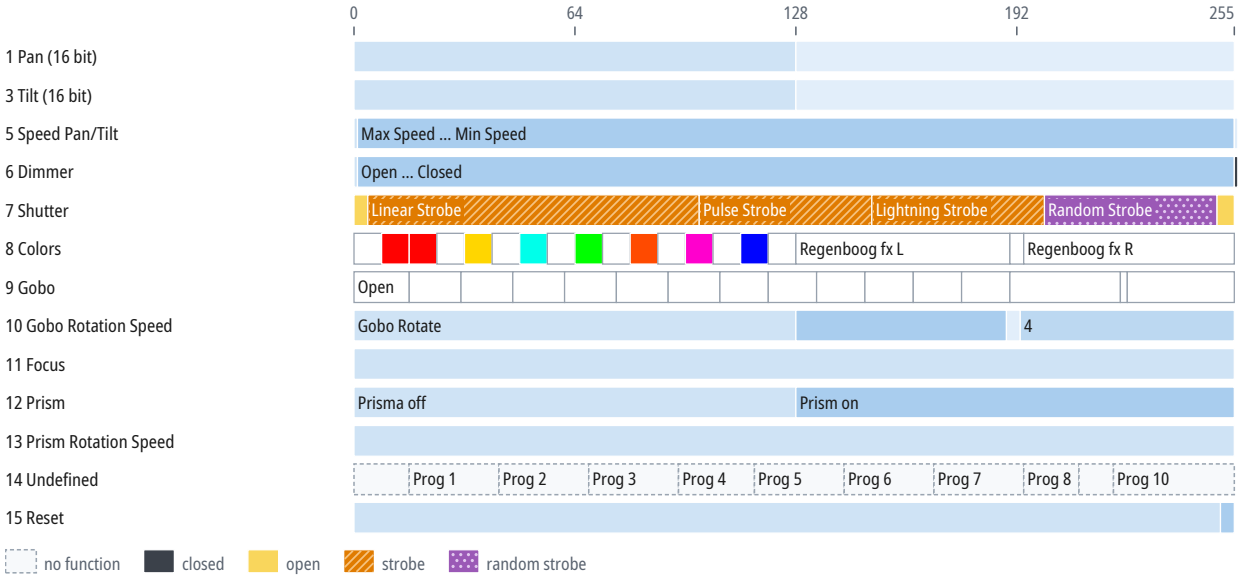

CH	Function	DMX	Description
1	Pan	0–128	Pan 1
		128	Center
		128–255	Pan 1
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–128	Tilt 1
		128	Center
		128–255	Tilt 1
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0	Max Speed
		1–254	Max Speed ... Min Speed
		255	Min Speed
6	Dimmer	0	Open
		1–254	Open ... Closed
		255	Closed
7	Shutter	0–3	Shutter Open
		4–99	Linear Strobe
		100–149	Pulse Strobe
		150–199	Lightning Strobe
		200–249	Random Strobe
		250–255	Shutter open
8	Colors	0–7	Wit

CH	Function	DMX	Description
8	Colors (continued)	8–15	Wit + rood
		16–23	Rood
		24–31	Rood + geel
		32–39	Geel
		40–47	Geel + cyaan
		48–55	Cyaan
		56–63	Cyaan + groen
		64–71	Groen
		72–79	Groen + oranje
		80–87	Oranje
		88–95	Oranje + magenta
		96–103	Magenta
		104–111	Magenta + blauw
		112–119	Blauw
		120–127	Blauw + wit
		128–189	Regenboog fx L
		190–193	Stop
		194–255	Regenboog fx R
9	Gobo	0–15	Open
		16–30	Gobo 1
		31–45	Gobo 2
		46–60	Gobo 3
		61–75	Gobo 4
		76–90	Gobo 5
		91–105	Gobo 6
		106–119	Rot Gobo 1 shake
		120–133	Rot Gobo 2 shake
		134–147	Rot Gobo 3 shake
		148–161	Rot Gobo 4 shake
		162–175	Rot Gobo 5 shake
		176–189	Rot Gobo 6 shake
		190–221	Gobo Stream Right CW
		222–223	Stop
		224–255	Gobo Stream Left CCW
10	Gobo Rotation Speed	0–127	Gobo Rotate
		128–188	Gobo 1 Pos Rotate 2
		189–192	Stop 3
		193–255	4
11	Focus	0–255	
12	Prism	0–127	Prisma off
		128–255	Prism on
13	Prism Rotation Speed	0–255	0–5 °/s

CH	Function	DMX	Description
14	Undefined	0–15	No function
		16–41	Prog 1
		42–67	Prog 2
		68–93	Prog 3
		94–115	Prog 4
		116–141	Prog 5
		142–167	Prog 6
		168–193	Prog 7
		194–209	Prog 8
		210–219	Prog 9
		220–255	Prog 10
15	Reset	0–250	Fixture Global Reset 1
		251–255	Fixture Global Reset 2

10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	105 W
Color temperature	6,000 K
Color rendering index (CRI)	100
Optics	
Beam angle	6°
Movement	
Pan	540°
Tilt	220°
Dimensions and construction	
Weight	6 kg
Operating environment	
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	0–20 Hz
Prism rotation	up to 5 °/s (0.8 rpm)

Spot diameter

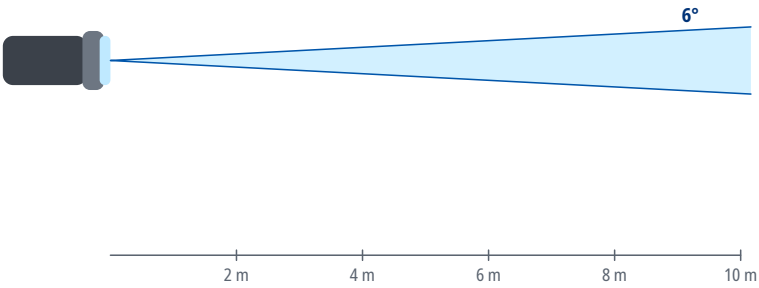

Distance	Ø 6°
2 m	0.21 m
4 m	0.42 m
6 m	0.63 m
8 m	0.84 m
10 m	1 m
15 m	1.6 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.