DMX REFERENCE

BSW_400

Soniprof

Manufacturer	Soniprof
GDTF file	Soniprof_BSW_400_144290.gdtf
GDTF revision	Primera · 2026-05-25
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 8
Mode 24 ch 8
10 Technical specifications 11
11 Maintenance and cleaning 12
12 Troubleshooting 12
13 Disposal 13

1 About this manual

This document describes the BSW 400 by Soniprof. It was compiled from the GDTF file Soniprof_BSW_400_144290.gdtf from the GDTF-Share library.

File revision: “Primera”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Soniprof; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	850 W
Weight	22.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
24 ch	24	21	1, 25, 49, 73, …

No light? Check these channels

- 24 ch: CH 7 Shutter at 104–107, 208–212 or 252–255 “Open”; CH 8 Dimmer above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

⚠ WARNING


- The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
- Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
- Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement


Pan 540°

top view

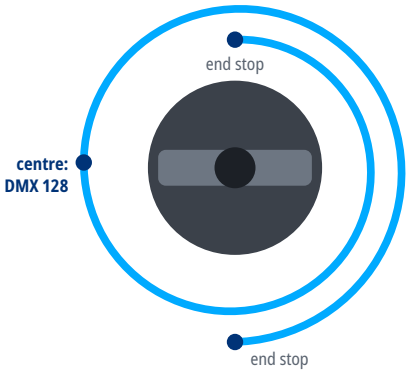

Tilt 250°

side view

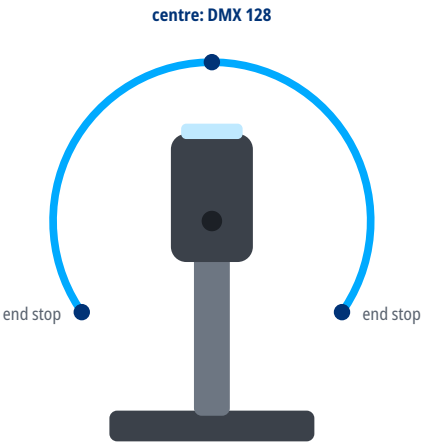

5 Installation


⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 22.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

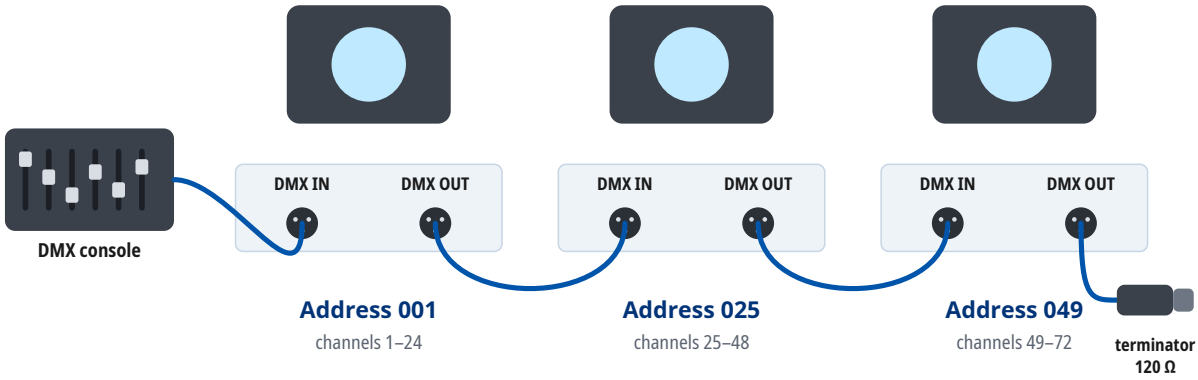

Mode 24 ch: every unit occupies 24 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address


- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “24 ch”: 24.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “24 ch”, you can use, for example, the start addresses 1, 25, 49, 73.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

8 Functions at a glance

Functions in each DMX mode

	24 ch 24 channels
Pan / Tilt	1, 2
Dimmer	8
Shutter / strobe	7
Color mixing	11–13
Color temperature	10
Color wheel	9
Gobo wheel	14, 16
Gobo rotation	17
Prism	18–21
Frost	6
Zoom	22
Focus	23

Color wheel

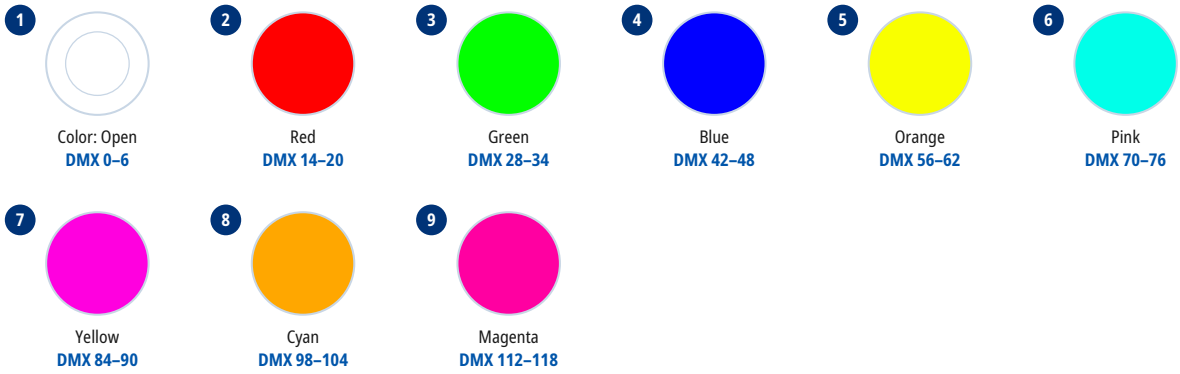

1. Color: Open — DMX 0–6
2. Red — DMX 14–20
3. Green — DMX 28–34
4. Blue — DMX 42–48
5. Orange — DMX 56–62
6. Pink — DMX 70–76
7. Yellow — DMX 84–90
8. Cyan — DMX 98–104
9. Magenta — DMX 112–118

Gobo wheel 1


1	Open	DMX 0–4	6 Gobo5	DMX 25–29	11 Gobo10	DMX 50–54
2	Gobo1	DMX 5–9	7 Gobo6	DMX 30–34	12 Gobo11	DMX 55–59
3	Gobo2	DMX 10–14	8 Gobo7	DMX 35–39	13 Gobo12	
4	Gobo3	DMX 15–19	9 Gobo8	DMX 40–44		
5	Gobo4	DMX 20–24	10 Gobo9	DMX 45–49		

Gobo wheel 2

1	Open	DMX 0–9	4 Rot_Gobo3	DMX 30–39	7 Rot_Gobo6	DMX 60–69
2	Rot_Gobo1	DMX 10–19	5 Rot_Gobo4	DMX 40–49	8 Rot_Gobo7	DMX 70–79
3	Rot_Gobo2	DMX 20–29	6 Rot_Gobo5	DMX 50–59		

9 DMX channels

Units in one DMX universe

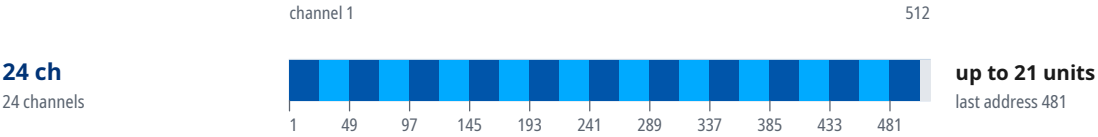

Start addresses of 20 units in the mode “24 ch”


Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	121	11	241	16	361
2	25	7	145	12	265	17	385
3	49	8	169	13	289	18	409
4	73	9	193	14	313	19	433
5	97	10	217	15	337	20	457

Mode 24 ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 7 Shutter at 104–107, 208–212 or 252–255 “Open”; CH 8 Dimmer above 0.

Channel functions at a glance

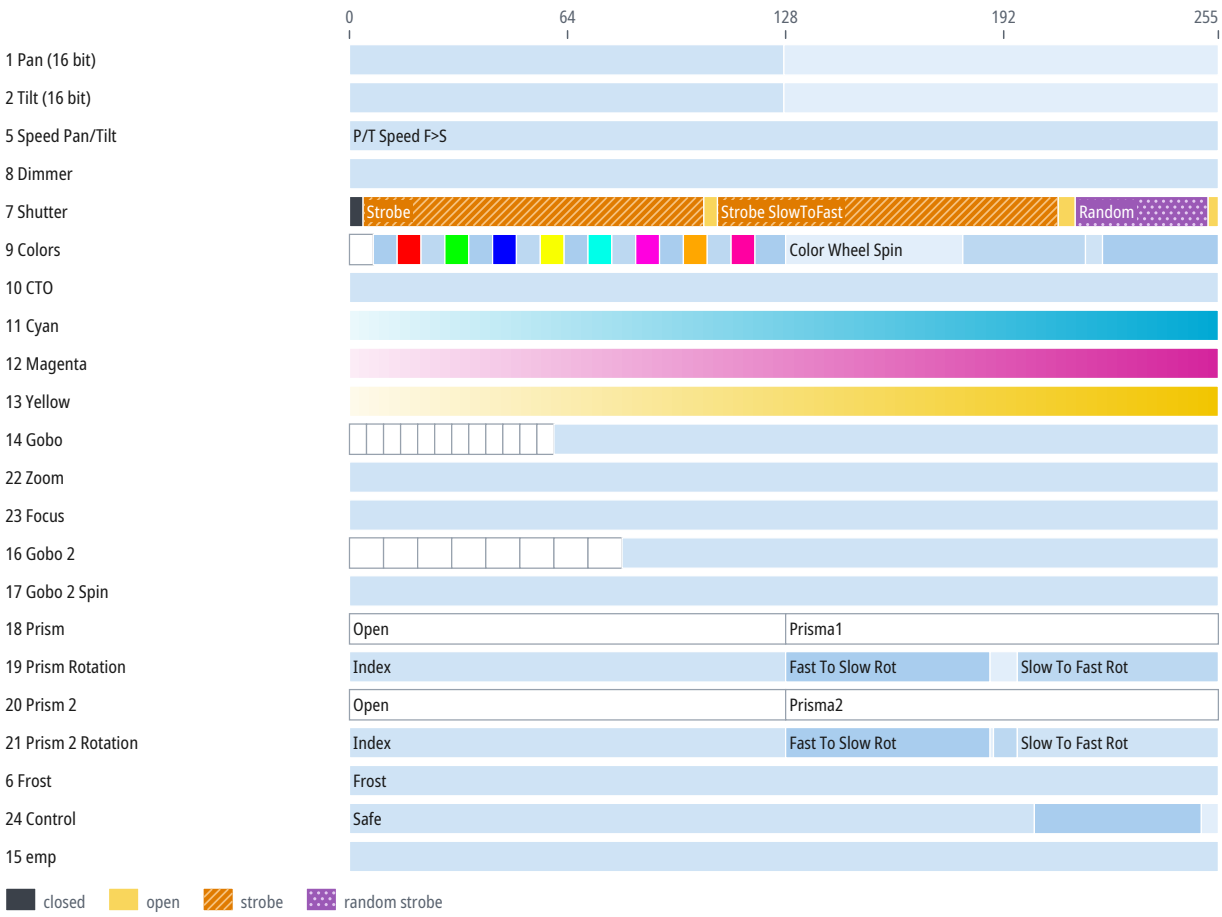

CH	Function	DMX	Description
1	Pan	0–127	Pan 1
		128	Home
		128–255	Pan 1
2	Tilt	0–127	Tilt 1
		128	Home
		128–255	Tilt 1
3	Pan Fine	0–255	Fine adjustment of CH 1
4	Tilt Fine	0–255	Fine adjustment of CH 2
5	Speed Pan/Tilt	0–255	P/T Speed F>S
6	Frost	0–255	Frost
7	Shutter	0–3	Closed
		4–103	Strobe
		104–107	Open
		108–207	Strobe SlowToFast
		208–212	Open
		213–251	Random
		252–255	Open
8	Dimmer	0–255	
9	Colors	0–6	Color: Open
		7–13	Open ... Red
		14–20	Red
		21–27	Red ... Green
		28–34	Green
		35–41	Green ... Blue
		42–48	Blue
		49–55	Blue ... Orange
		56–62	Orange
		63–69	Orange ... Pink
		70–76	Pink
		77–83	Pink ... Yellow
		84–90	Yellow
		91–97	Yellow ... Cyan
		98–104	Cyan
		105–111	Cyan ... Magenta
		112–118	Magenta
		119–127	Color
		128–179	Color Wheel Spin
		180–215	Wheel Rotation Fast To Slow (0–0.47 °/s)
		216–220	Stop Rotation (0.48–0.53 °/s)
		221–255	Wheel Rotation Slow To Fast (0.55–1 °/s)
10	CTO	0–255	

CH	Function	DMX	Description
11	Cyan	0–255	
12	Magenta	0–255	
13	Yellow	0–255	
14	Gobo	0–4	Open
		5–9	Gobo1
		10–14	Gobo2
		15–19	Gobo3
		20–24	Gobo4
		25–29	Gobo5
		30–34	Gobo6
		35–39	Gobo7
		40–44	Gobo8
		45–49	Gobo9
		50–54	Gobo10
		55–59	Gobo11
		60–255	Gobo 1 1
15	emp	0–255	
16	Gobo 2	0–9	Open
		10–19	Rot_Gobo1
		20–29	Rot_Gobo2
		30–39	Rot_Gobo3
		40–49	Rot_Gobo4
		50–59	Rot_Gobo5
		60–69	Rot_Gobo6
		70–79	Rot_Gobo7
		80–255	Gobo 2 1
17	Gobo 2 Spin	0–255	
18	Prism	0–127	Open
		128–255	Prisma1
19	Prism Rotation	0–127	Index
		128–187	Fast To Slow Rot
		188–195	Rotation: Stop
		196–255	Slow To Fast Rot
20	Prism 2	0–127	Open
		128–255	Prisma2
21	Prism 2 Rotation	0–127	Index
		128–187	Fast To Slow Rot
		188	Fast To Slow Rot ... Stop
		189–195	Rotation: Stop
		196–255	Slow To Fast Rot
22	Zoom	0–255	

CH	Function	DMX	Description
23	Focus	0–255	
24	Control	0–249	Safe
		250–255	Reset ALL


10 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	700 W
Luminous flux	1,000 lm
Color temperature	6,000 K
Color rendering index (CRI)	85
Optics	
Beam angle	25°
Movement	
Pan	540°
Tilt	250°
Control	
DMX connection	5-pin XLR IN/OUT, 3-pin XLR IN/OUT
RJ45 connectors	RJ45 IN
Electrical	
Power supply	100–240 V, 50/60 Hz
Power consumption	850 W
Power connectors	powerCON TRUE1 IN/OUT
Dimensions and construction	
Weight	22.5 kg
Operating environment	
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Color wheel rotation	up to 1 °/s (0.2 rpm)

Spot diameter

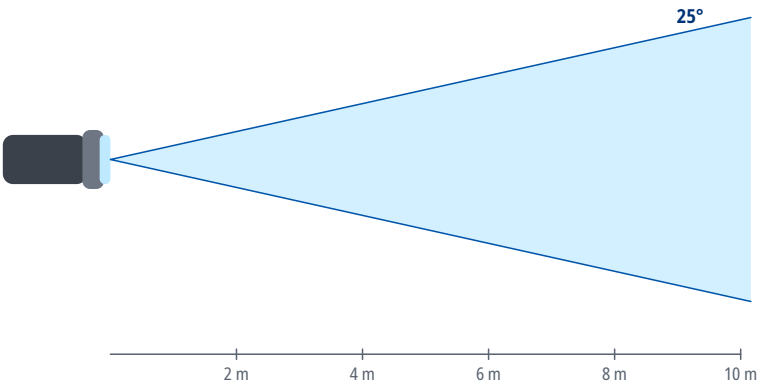

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.