DMX REFERENCE

SUNRAY 150 TOCO

Stage4



Manufacturer	Stage4
GDTF file	Stage4_SUNRAY_150_TOCO_131857.gdtf
GDTF revision	Rev3 · 2026-03-04
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 8
Mode 4ch 8
Mode 5ch 9
Mode 10ch 10
Mode 12ch 11
9 Technical specifications 12
10 Maintenance and cleaning 12
11 Troubleshooting 13
12 Disposal 13

1 About this manual

This document describes the SUNRAY 150 TOCO by Stage4. It was compiled from the GDTF file Stage4_SUNRAY_150_TOCO_131857.gdtf from the GDTF-Share library.

File revision: “Rev3”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Stage4; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Power consumption	30 W
Weight	5.8 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
4ch	4	128	1, 5, 9, 13, ...
5ch	5	102	1, 6, 11, 16, ...
10ch	10	51	1, 11, 21, 31, ...
12ch	12	42	1, 13, 25, 37, ...

No light? Check these channels

- 4ch: CH 1 Dimmer 1 above 0; CH 2 Dimmer 2 above 0
- 5ch: CH 1 Dimmer above 0
- 10ch: CH 1 Dimmer 1 above 0; CH 4 Dimmer 2 above 0; CH 6 Dimmer 3 above 0
- 12ch: CH 1 Dimmer 1 above 0; CH 6 Dimmer 2 above 0; CH 8 Dimmer 3 above 0


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

3 Safety instructions


Read the manual before use


Risk of electric shock


Do not stare into the light


Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- Connect the device only to a properly installed mains outlet with a protective earth (ground) contact. The outlet or other means of disconnection must remain easily accessible.
- Power supply: 100–240 V, 50/60 Hz. Before connecting, make sure that the mains voltage matches this value and the value on the rating plate of the device.
- Do not connect the device to a dimmer or to a dimmed circuit.
- Use only the original power cable or a cable with identical ratings. Protect the cable from damage, do not run it over sharp edges, and never unplug it by pulling on the cable.
- When connecting several devices to one circuit, do not exceed its permitted load.
- Do not touch the device with wet hands.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ **CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 5.8 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

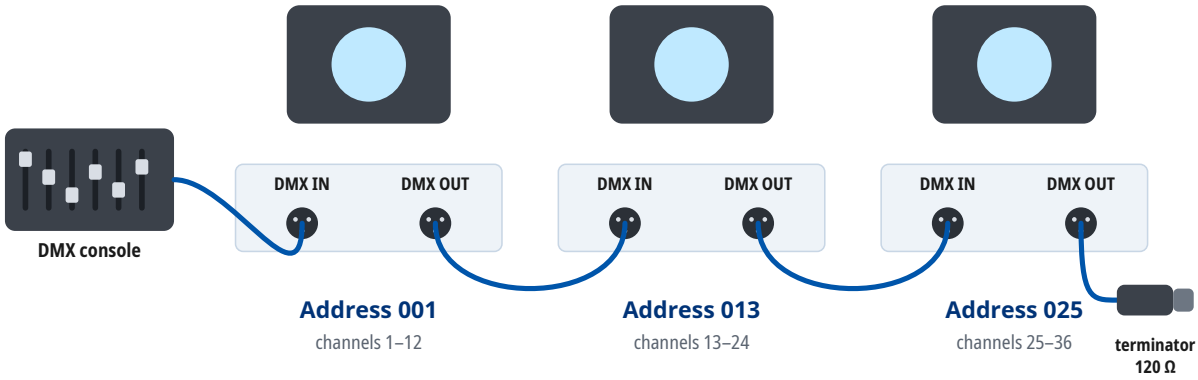

Mode 12ch: every unit occupies 12 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “12ch”: 12.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “12ch”, you can use, for example, the start addresses 1, 13, 25, 37.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	4ch 4 channels	5ch 5 channels	10ch 10 channels	12ch 12 channels
Dimmer	1, 2	1	1, 4, 6	1, 6, 8
Dimmer resolution	8 bit	8 bit	16 bit	16 bit
Color temperature		3	3	4, 5
Zoom	3	4	8	10
Pixel control			✓	✓

LED colors

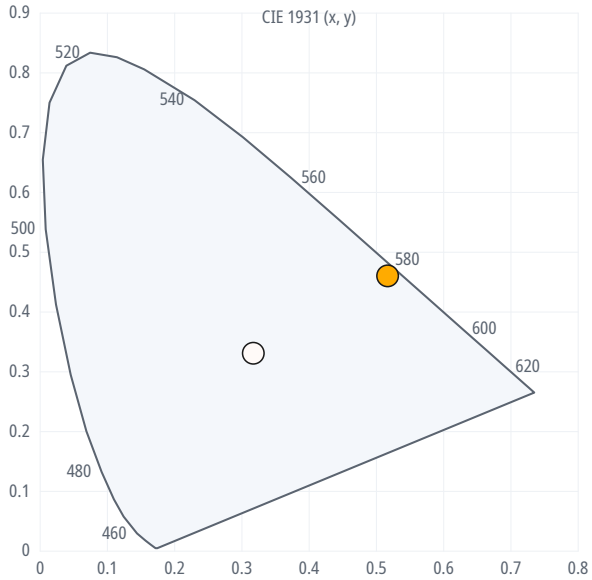

LED	x	y
Cold White	0.317	0.331
Warm White	0.517	0.461

The dots are the LED colors the GDTF file states.

8 DMX channels

Units in one DMX universe

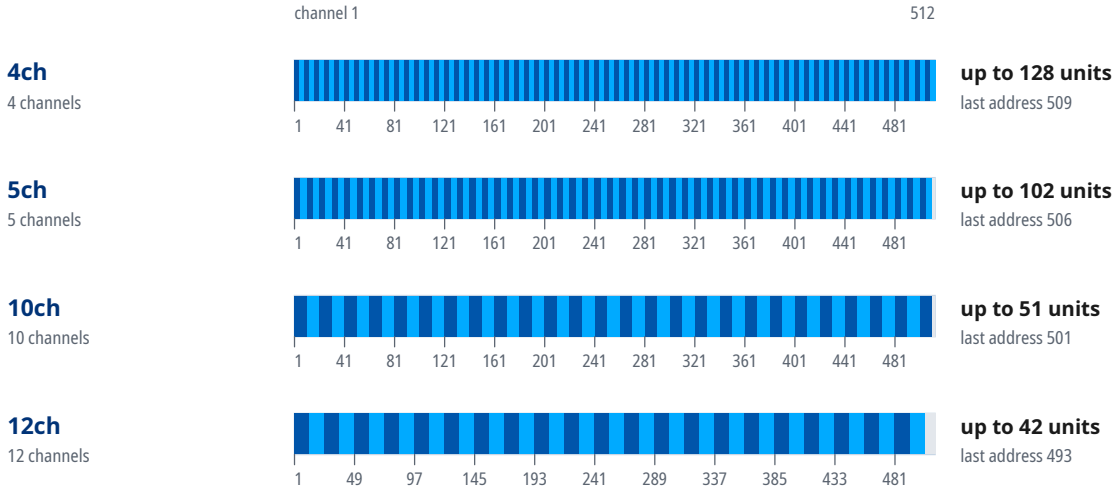

Start addresses of 20 units in the mode “12ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	61	11	121	16	181
2	13	7	73	12	133	17	193
3	25	8	85	13	145	18	205
4	37	9	97	14	157	19	217
5	49	10	109	15	169	20	229

Mode 4ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer 1 above 0; CH 2 Dimmer 2 above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 1 255, CH 2 Dimmer 2 255.

Channel functions at a glance

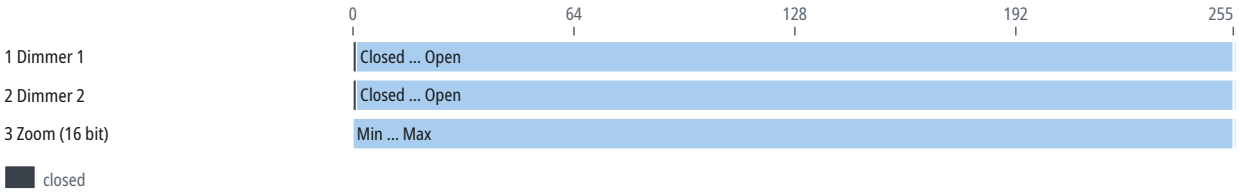

CH	Function	DMX	Description
1	Dimmer 1	0	Closed
		1–254	Closed ... Open
		255	Open
2	Dimmer 2	0	Closed
		1–254	Closed ... Open
		255	Open

CH	Function	DMX	Description
3	Zoom	0–255	Min ... Max
		255	Max
4	Zoom Fine	0–255	Fine adjustment of CH 3

Mode 5ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Strobe 0, CH 3 Color Temperature 255.

Channel functions at a glance

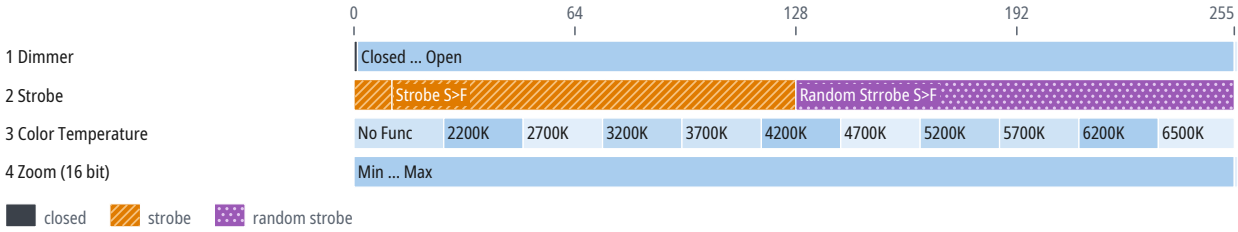

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
2	Strobe	0–10	No Func
		11–127	Strobe S>F
		128–255	Random Strrobe S>F
3	Color Temperature	0–25	No Func
		26–48	2200K
		49–71	2700K
		72–94	3200K
		95–117	3700K
		118–140	4200K
		141–163	4700K
		164–186	5200K
		187–209	5700K
		210–232	6200K
		233–255	6500K
4	Zoom		Same as CH 3 in the mode “4ch” (p. 9)
5	Zoom Fine	0–255	Fine adjustment of CH 4

Mode 10ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer 1 above 0; CH 4 Dimmer 2 above 0; CH 6 Dimmer 3 above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 1 255, CH 2 Strobe 0, CH 4 Dimmer 2 255, CH 6 Dimmer 3 255.

Channel functions at a glance

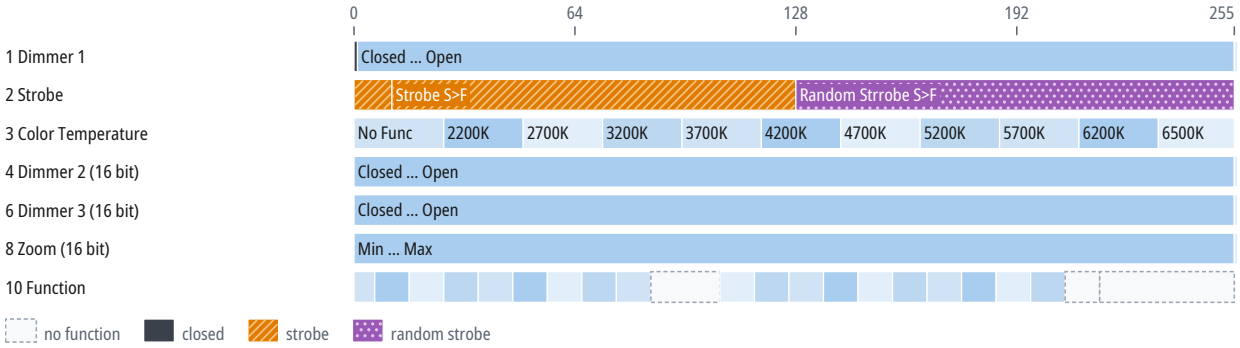

CH	Function	DMX	Description
1	Dimmer 1		Same as CH 1 in the mode “4ch” (p. 8)
2	Strobe		Same as CH 2 in the mode “5ch” (p. 9)
3	Color Temperature		Same as CH 3 in the mode “5ch” (p. 9)
4	Dimmer 2	0–255	Closed ... Open
		255	Open
5	Dimmer 2 Fine	0–255	Fine adjustment of CH 4
6	Dimmer 3	0–255	Closed ... Open
		255	Open
7	Dimmer 3 Fine	0–255	Fine adjustment of CH 6
8	Zoom		Same as CH 3 in the mode “4ch” (p. 9)
9	Zoom Fine	0–255	Fine adjustment of CH 8
10	Function	0–5	No Func
		6–15	Linear Curve
		16–25	Square Law
		26–35	Inv Square Law
		36–45	S-Curve
		46–55	Dimmer Speed: Auto
		56–65	Dimmer Speed: Slow
		66–75	Medium
		76–85	Dimmer Speed: Fast
		86–105	No Feature: NoFeature
		106–115	Display Normal
		116–125	Display Inverted
		126–135	1000Hz
		136–145	3000Hz
		146–155	6000Hz

CH	Function	DMX	Description
10	Function (continued)	156–165	12000Hz
		166–175	25000Hz
		176–185	Fan Mode: Auto
		186–195	Fan Mode: High
		196–205	Fan Mode: Low
		206–215	Fan Mode: Off
		216–255	No Feature: NoFeature

Mode 12ch

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer 1 above 0; CH 6 Dimmer 2 above 0; CH 8 Dimmer 3 above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 1 255, CH 3 Strobe 0, CH 6 Dimmer 2 255, CH 8 Dimmer 3 255.

Channel functions at a glance

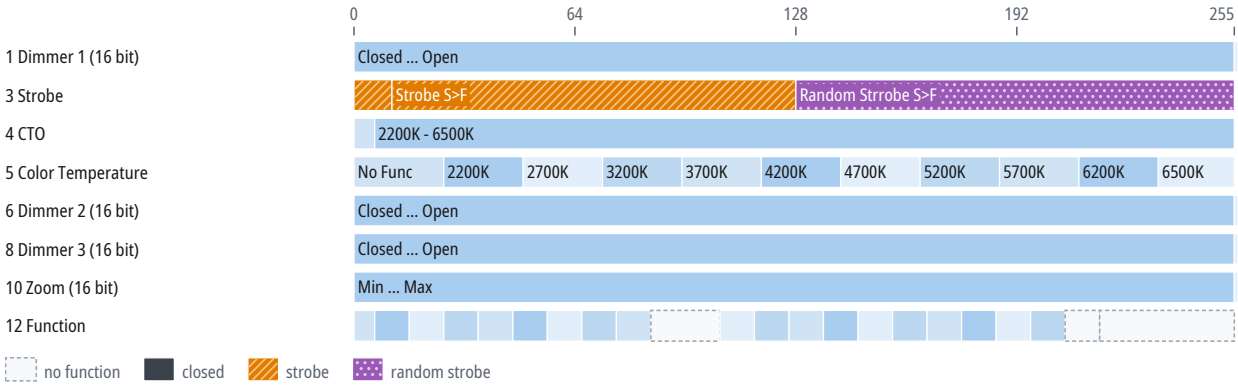

CH	Function	DMX	Description
1	Dimmer 1	0–255	Closed ... Open
		255	Open
2	Dimmer 1 Fine	0–255	Fine adjustment of CH 1
3	Strobe		Same as CH 2 in the mode “5ch” (p. 9)
4	CTO	0–5	No Func
		6–255	2200K - 6500K
5	Color Temperature		Same as CH 3 in the mode “5ch” (p. 9)
6	Dimmer 2		Same as CH 4 in the mode “10ch” (p. 10)
7	Dimmer 2 Fine	0–255	Fine adjustment of CH 6
8	Dimmer 3		Same as CH 6 in the mode “10ch” (p. 10)
9	Dimmer 3 Fine	0–255	Fine adjustment of CH 8
10	Zoom		Same as CH 3 in the mode “4ch” (p. 9)
11	Zoom Fine	0–255	Fine adjustment of CH 10
12	Function		Same as CH 10 in the mode “10ch” (p. 10)

9 Technical specifications

Parameter	Value
Light source	LED
DMX connection	5-pin XLR IN/OUT
Power supply	100–240 V, 50/60 Hz
Power consumption	30 W
Power connectors	powerCON TRUE1 IN
Weight	5.8 kg
Operating temperature	-10 to 40 °C

Spot diameter

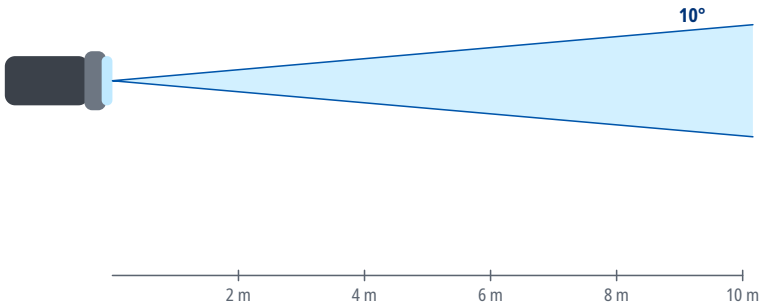

Distance	Ø 10°
2 m	0.35 m
4 m	0.7 m
6 m	1 m
8 m	1.4 m
10 m	1.7 m
15 m	2.6 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.