DMX REFERENCE

ParKolor 60HD

Starway



Manufacturer	Starway
GDTF file	Starway_ParKolor_60HD_80333.gdtf
GDTF revision	V1-00 · 2024-12-06
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 13
Mode Enh16Bit 15CH 13
Mode Enh8Bit 10CH 15
Mode RGBW 7CH 16
Mode HSI 6CH 17
Mode RGBW 6CH 17
9 Technical specifications 18
10 Maintenance and cleaning 18
11 Troubleshooting 19
12 Disposal 19

1 About this manual

This document describes the ParKolor 60HD by Starway. It was compiled from the GDTF file Starway_ParKolor_60HD_80333.gdtf from the GDTF-Share library.

File revision: “V1-00”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Starway; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	4.2 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Enh16Bit 15CH	15	34	1, 16, 31, 46, ...
Enh8Bit 10CH	10	51	1, 11, 21, 31, ...
RGBW 7CH	7	73	1, 8, 15, 22, ...
HSI 6CH	6	85	1, 7, 13, 19, ...
RGBW 6CH	6	85	1, 7, 13, 19, ...

No light? Check these channels

- Enh16Bit 15CH: CH 1 Dimmer above 0
- Enh8Bit 10CH: CH 1 Dimmer above 0
- RGBW 7CH: CH 1 Dimmer above 0
- HSI 6CH: CH 3 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 4.2 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

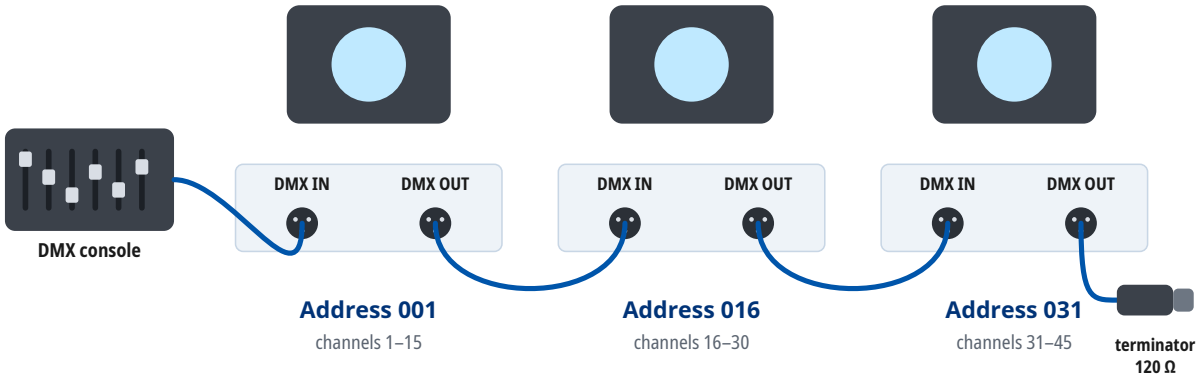

Mode Enh16Bit 15CH: every unit occupies 15 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Enh16Bit 15CH”: 15.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Enh16Bit 15CH”, you can use, for example, the start addresses 1, 16, 31, 46.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	Enh16Bit 15CH 15 channels	Enh8Bit 10CH 10 channels	RGBW 7CH 7 channels	HSI 6CH 6 channels	RGBW 6CH 6 channels
Pan / Tilt	✓	✓	✓	✓	✓
Dimmer	1	1	1	3	✓
Dimmer resolution	16 bit	8 bit	8 bit	8 bit	
Shutter / strobe	3	2	2		
Color mixing	4× (5–11)	4–7	3–6		1–4
Color wheel	13	8			
Zoom	4	3	7	4	
Effects / macros				5	5

Color wheel

1 Full power RGBL **DMX 0**

2 10000K **DMX 1**

3 8000K **DMX 2**

4 6500K **DMX 3**

5 5600K **DMX 4**

6 5000K **DMX 5**

7 4500K **DMX 6**

8 4000K **DMX 7**

9 3200K **DMX 8**

10 3000K **DMX 9**

11 2700K **DMX 10**

12 Color 1 **DMX 11**

13 Color2...238 **DMX 12**

14 Color3 **DMX 13**

15 Color4 **DMX 14**

16 Color5 **DMX 15**

17 Color6 **DMX 16**

18 Color7 **DMX 17**

19 Color8 **DMX 18**

20 Color9 **DMX 19**

21 Color10 **DMX 20**

22 Color11 **DMX 21**

23 Color12 **DMX 22**

24 Color13 **DMX 23**

25 Color14 **DMX 24**

26 Color15 **DMX 25**

27 Color16 **DMX 26**

28 Color17 **DMX 27**

29 Color18 **DMX 28**

30 Color19 **DMX 30**

31 Color20 **DMX 31**

32 Color21 **DMX 32**

33 Color22 **DMX 33**

34 Color23 **DMX 34**

35 Color24 **DMX 35**

36 Color25 **DMX 36**

37 Color26 **DMX 38**

38 Color27 **DMX 39**

39 Color28 **DMX 40**

40 Color29 **DMX 41**

41 Color30 **DMX 42**

42 Color31 **DMX 43**

43 Color32 **DMX 44**

44 Color33 **DMX 45**

45 Color34 **DMX 46**

46 Color35 **DMX 47**

47 Color36 **DMX 48**

48 Color37 **DMX 49**

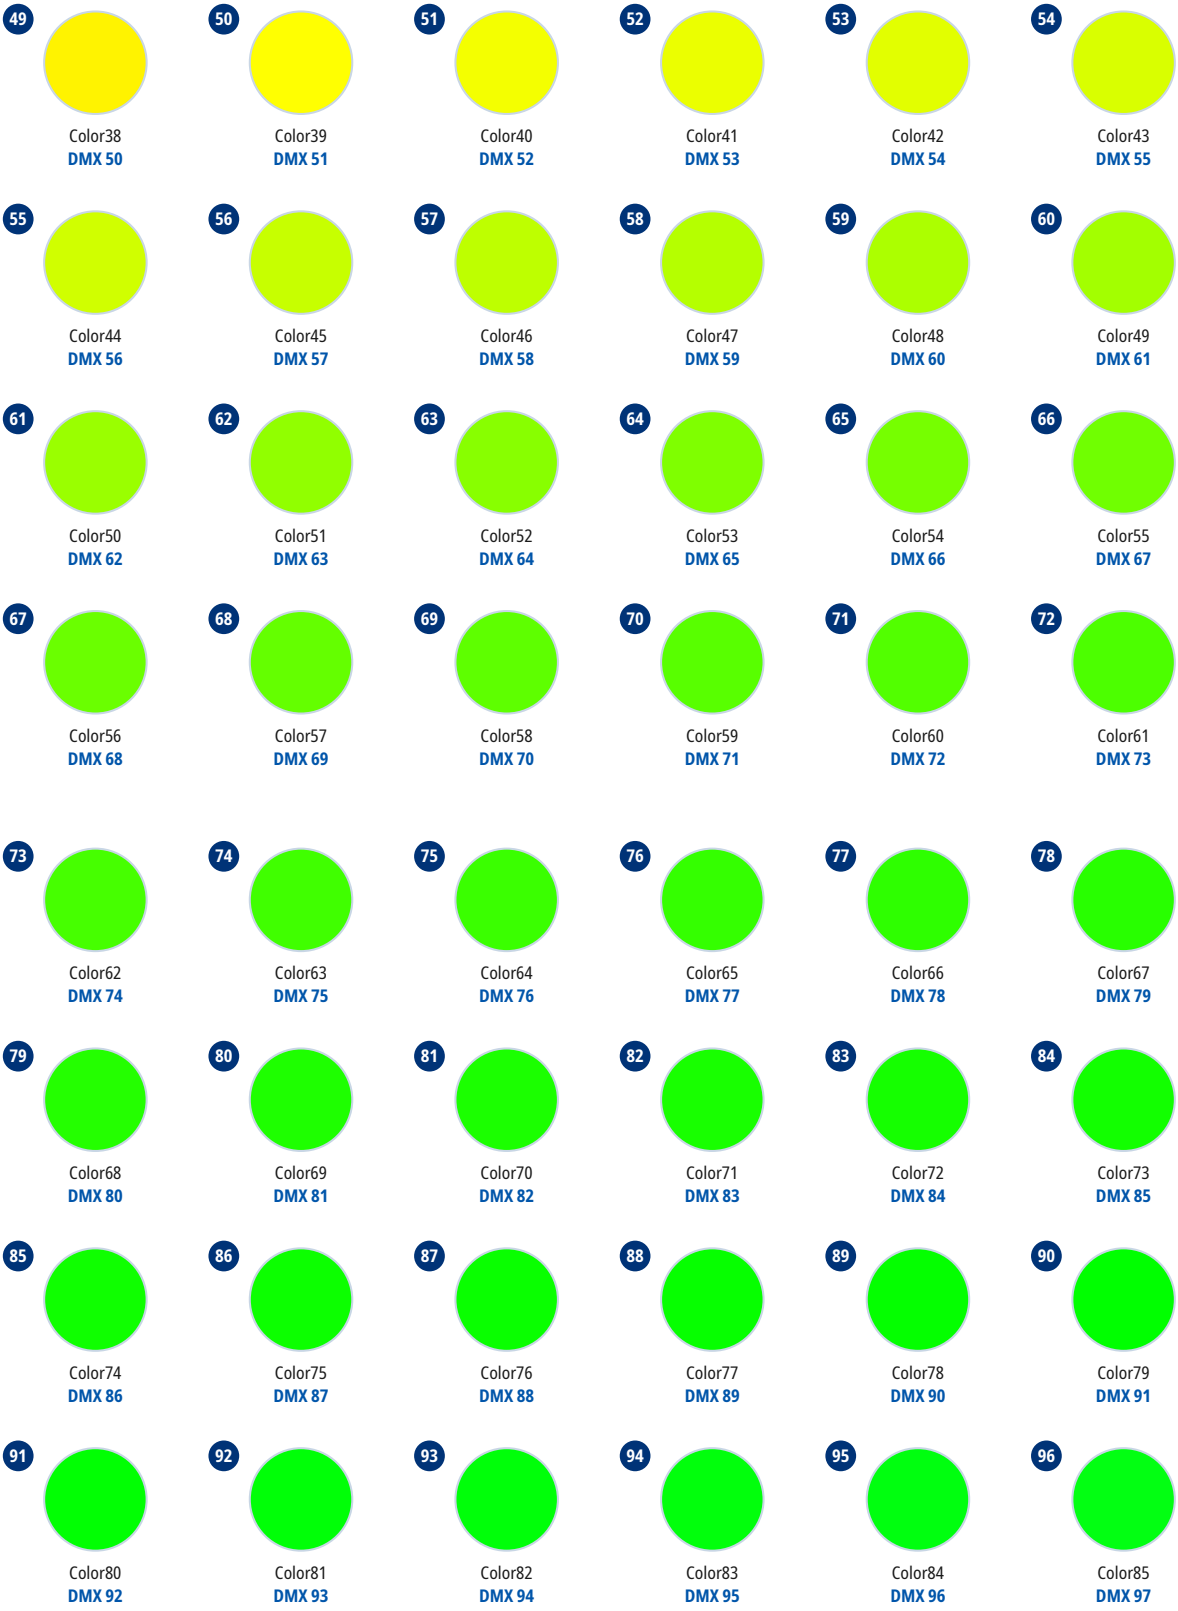
49
Color38
DMX 50
50
Color39
DMX 51
51
Color40
DMX 52
52
Color41
DMX 53
53
Color42
DMX 54
54
Color43
DMX 55
55
Color44
DMX 56
56
Color45
DMX 57
57
Color46
DMX 58
58
Color47
DMX 59
59
Color48
DMX 60
60
Color49
DMX 61
61
Color50
DMX 62
62
Color51
DMX 63
63
Color52
DMX 64
64
Color53
DMX 65
65
Color54
DMX 66
66
Color55
DMX 67
67
Color56
DMX 68
68
Color57
DMX 69
69
Color58
DMX 70
70
Color59
DMX 71
71
Color60
DMX 72
72
Color61
DMX 73
73
Color62
DMX 74
74
Color63
DMX 75
75
Color64
DMX 76
76
Color65
DMX 77
77
Color66
DMX 78
78
Color67
DMX 79
79
Color68
DMX 80
80
Color69
DMX 81
81
Color70
DMX 82
82
Color71
DMX 83
83
Color72
DMX 84
84
Color73
DMX 85
85
Color74
DMX 86
86
Color75
DMX 87
87
Color76
DMX 88
88
Color77
DMX 89
89
Color78
DMX 90
90
Color79
DMX 91
91
Color80
DMX 92
92
Color81
DMX 93
93
Color82
DMX 94
94
Color83
DMX 95
95
Color84
DMX 96
96
Color85
DMX 97

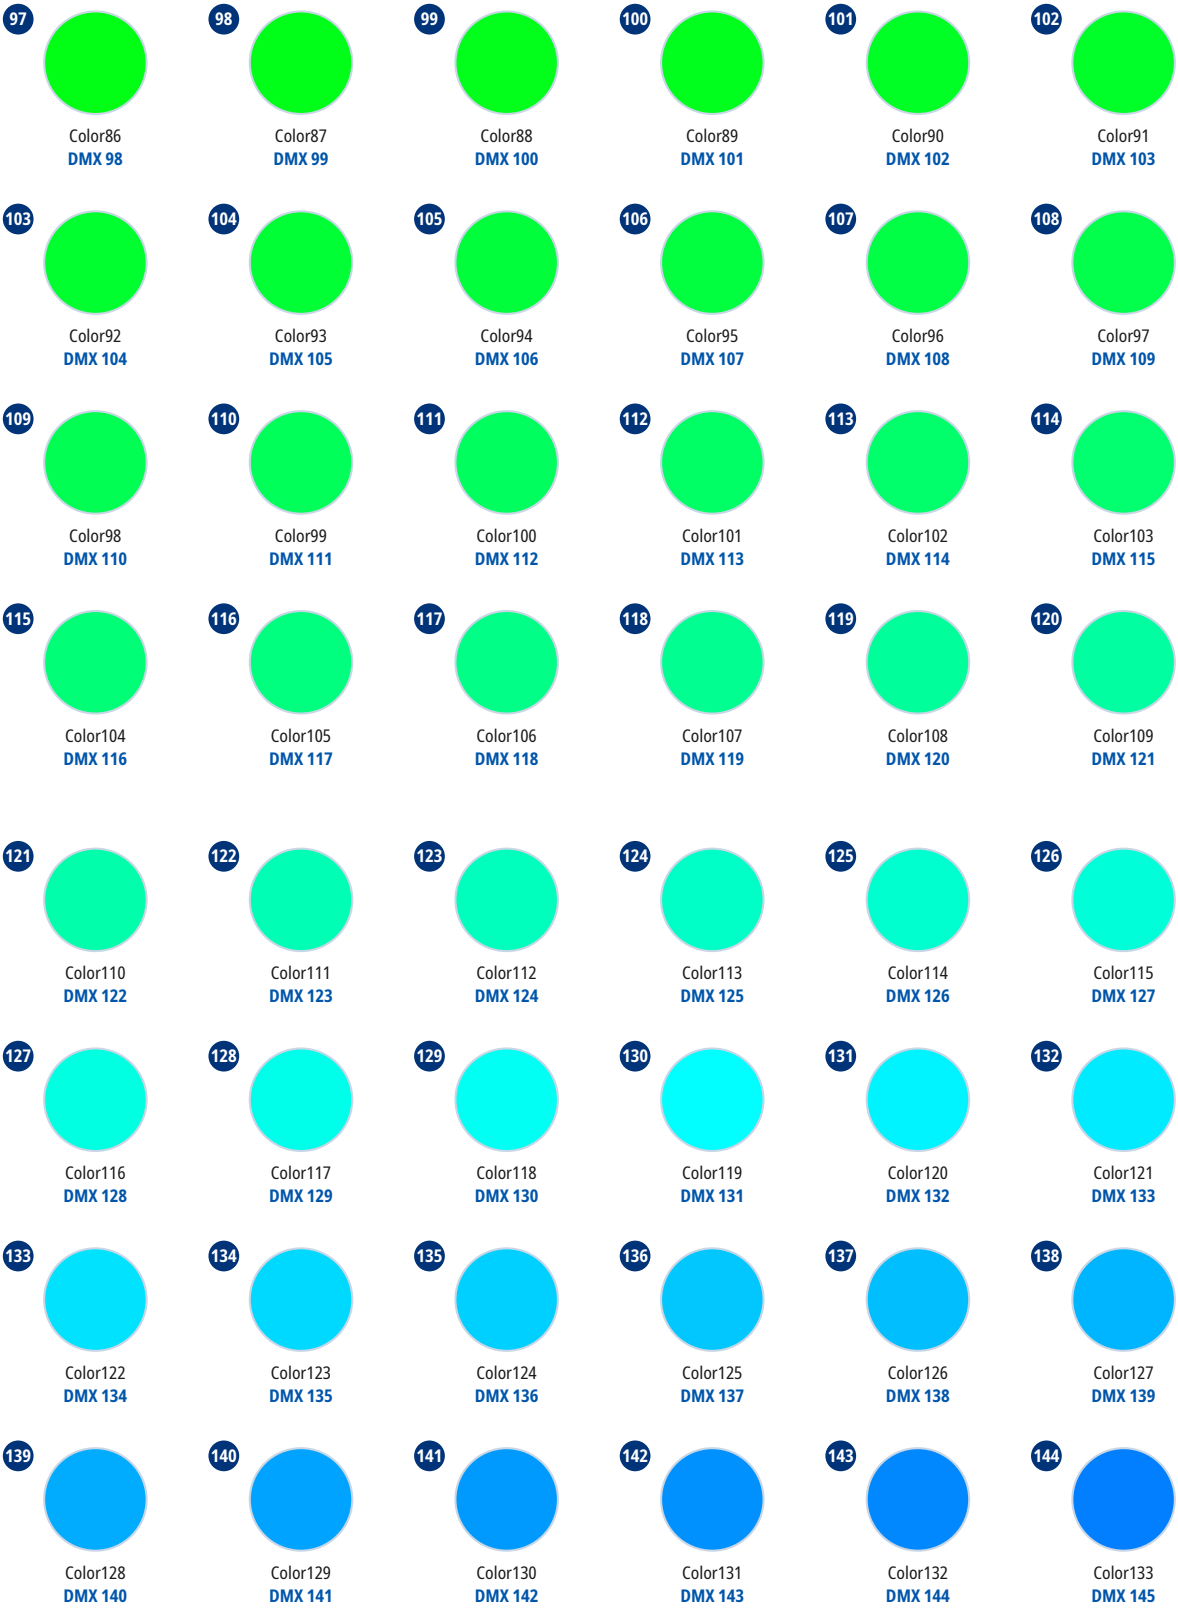
97
Color86
DMX 98
98
Color87
DMX 99
99
Color88
DMX 100
100
Color89
DMX 101
101
Color90
DMX 102
102
Color91
DMX 103
103
Color92
DMX 104
104
Color93
DMX 105
105
Color94
DMX 106
106
Color95
DMX 107
107
Color96
DMX 108
108
Color97
DMX 109
109
Color98
DMX 110
110
Color99
DMX 111
111
Color100
DMX 112
112
Color101
DMX 113
113
Color102
DMX 114
114
Color103
DMX 115
115
Color104
DMX 116
116
Color105
DMX 117
117
Color106
DMX 118
118
Color107
DMX 119
119
Color108
DMX 120
120
Color109
DMX 121
121
Color110
DMX 122
122
Color111
DMX 123
123
Color112
DMX 124
124
Color113
DMX 125
125
Color114
DMX 126
126
Color115
DMX 127
127
Color116
DMX 128
128
Color117
DMX 129
129
Color118
DMX 130
130
Color119
DMX 131
131
Color120
DMX 132
132
Color121
DMX 133
133
Color122
DMX 134
134
Color123
DMX 135
135
Color124
DMX 136
136
Color125
DMX 137
137
Color126
DMX 138
138
Color127
DMX 139
139
Color128
DMX 140
140
Color129
DMX 141
141
Color130
DMX 142
142
Color131
DMX 143
143
Color132
DMX 144
144
Color133
DMX 145

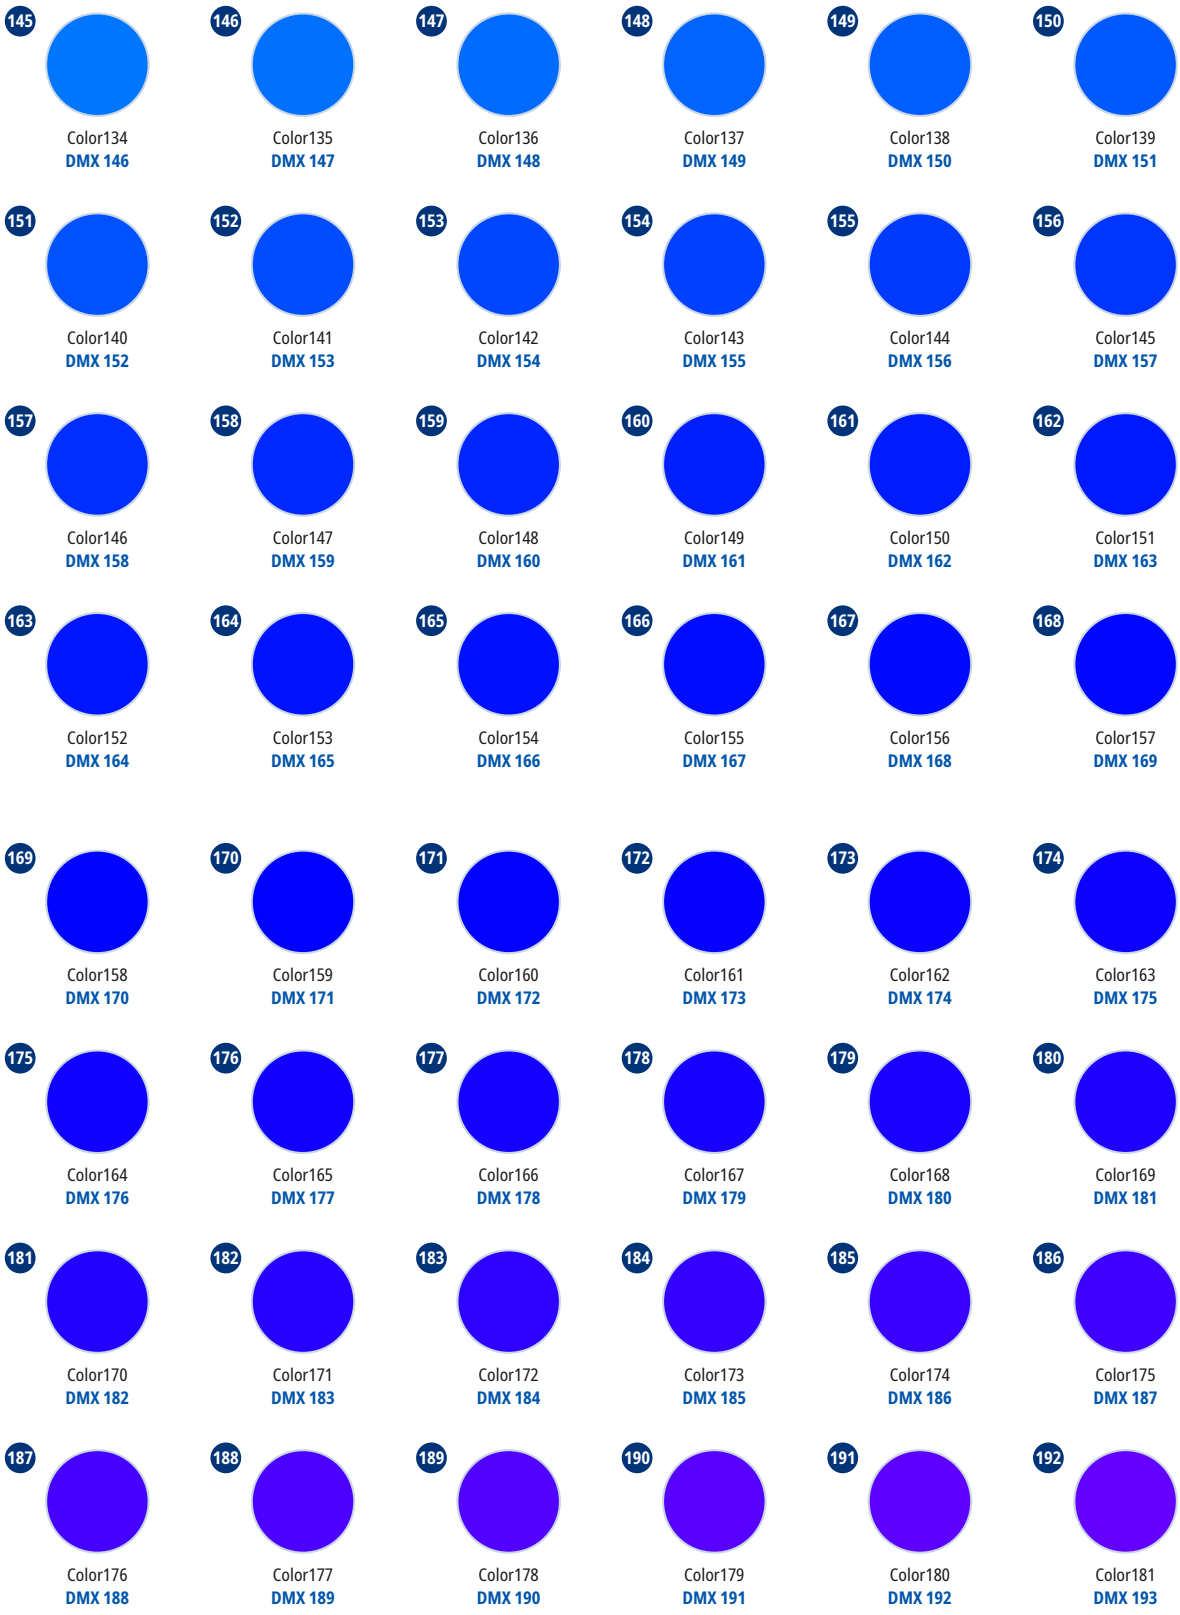
145
Color134
DMX 146
146
Color135
DMX 147
147
Color136
DMX 148
148
Color137
DMX 149
149
Color138
DMX 150
150
Color139
DMX 151
151
Color140
DMX 152
152
Color141
DMX 153
153
Color142
DMX 154
154
Color143
DMX 155
155
Color144
DMX 156
156
Color145
DMX 157
157
Color146
DMX 158
158
Color147
DMX 159
159
Color148
DMX 160
160
Color149
DMX 161
161
Color150
DMX 162
162
Color151
DMX 163
163
Color152
DMX 164
164
Color153
DMX 165
165
Color154
DMX 166
166
Color155
DMX 167
167
Color156
DMX 168
168
Color157
DMX 169
169
Color158
DMX 170
170
Color159
DMX 171
171
Color160
DMX 172
172
Color161
DMX 173
173
Color162
DMX 174
174
Color163
DMX 175
175
Color164
DMX 176
176
Color165
DMX 177
177
Color166
DMX 178
178
Color167
DMX 179
179
Color168
DMX 180
180
Color169
DMX 181
181
Color170
DMX 182
182
Color171
DMX 183
183
Color172
DMX 184
184
Color173
DMX 185
185
Color174
DMX 186
186
Color175
DMX 187
187
Color176
DMX 188
188
Color177
DMX 189
189
Color178
DMX 190
190
Color179
DMX 191
191
Color180
DMX 192
192
Color181
DMX 193


193
Color182
DMX 194
194
Color183
DMX 195
195
Color184
DMX 196
196
Color185
DMX 197
197
Color186
DMX 198
198
Color187
DMX 199
199
Color188
DMX 200
200
Color189
DMX 201
201
Color190
DMX 202
202
Color191
DMX 203
203
Color192
DMX 204
204
Color193
DMX 205
205
Color194
DMX 206
206
Color195
DMX 207
207
Color196
DMX 208
208
Color197
DMX 209
209
Color199
DMX 210
210
Color200
DMX 211
211
Color201
DMX 212
212
Color202
DMX 213
213
Color203
DMX 214
214
Color204
DMX 215
215
Color205
DMX 216
216
Color206
DMX 217
217
Color207
DMX 218
218
Color208
DMX 219
219
Color209
DMX 220
220
Color210
DMX 221
221
Color211
DMX 222
222
Color212
DMX 223
223
Color213
DMX 224
224
Color214
DMX 225
225
Color215
DMX 226
226
Color216
DMX 227
227
Color217
DMX 228
228
Color218
DMX 229
229
Color219
DMX 230
230
Color220
DMX 231
231
Color221
DMX 232
232
Color222
DMX 233
233
Color223
DMX 234
234
Color224
DMX 235
235
Color225
DMX 236
236
Color226
DMX 237
237
Color227
DMX 238
238
Color228
DMX 239
239
Color229
DMX 240
240
Color230
DMX 241

241 Color231 **DMX 242**

242 Color232 **DMX 243**

243 Color233 **DMX 244**

244 Color234 **DMX 245**

245 Color235 **DMX 246**

246 Color236 **DMX 247**

247 Color237 **DMX 248**

248 Color239 **DMX 249**

249 Color239 **DMX 250–251**

250 Color240

251 Color241 **DMX 29**

Strobe rate

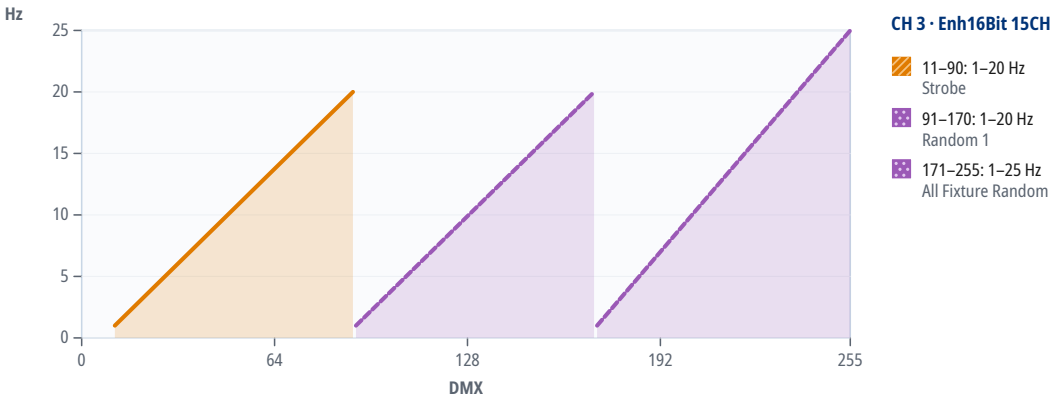

8 DMX channels

Units in one DMX universe

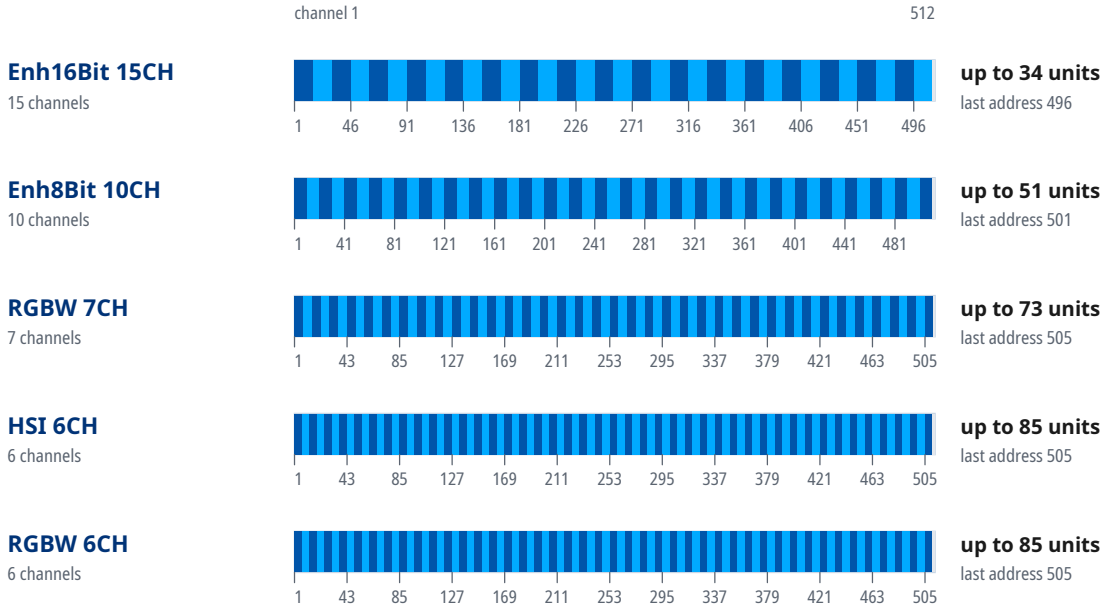

Start addresses of 20 units in the mode “Enh16Bit 15CH”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	76	11	151	16	226
2	16	7	91	12	166	17	241
3	31	8	106	13	181	18	256
4	46	9	121	14	196	19	271
5	61	10	136	15	211	20	286

Mode Enh16Bit 15CH

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

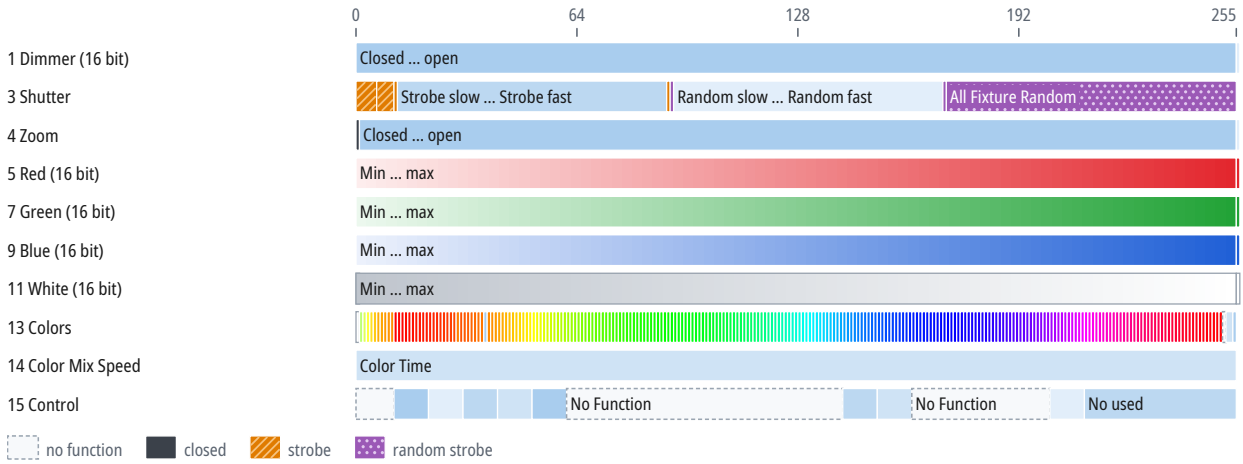

CH	Function	DMX	Description
1	Dimmer	0–255	Closed ... open
		255	Open
2	Dimmer Fine	0–255	Fine adjustment of CH 1
3	Shutter	0–5	Forward Setting
		6–10	Reverse Setting
		11	Strobe slow
		12–89	Strobe slow ... Strobe fast
		90	Strobe fast
		91	Random slow
		92–169	Random slow ... Random fast
		170	Random fast
		171–255	All Fixture Random (1–25 Hz)
4	Zoom	0	Closed
		1–254	Closed ... open
		255	Open
5	Red	0–255	Min ... max
		255	Max
6	Red Fine	0–255	Fine adjustment of CH 5
7	Green	0–255	Min ... max
		255	Max
8	Green Fine	0–255	Fine adjustment of CH 7
9	Blue	0–255	Min ... max
		255	Max
10	Blue Fine	0–255	Fine adjustment of CH 9
11	White	0–255	Min ... max
		255	Max
12	White Fine	0–255	Fine adjustment of CH 11
13	Colors	0	Full power RGBL
		1	10000K
		2	8000K
		3	6500K
		4	5600K
		5	5000K
		6	4500K
		7	4000K
		8	3200K
		9	3000K
		10	2700K
		11	Color 1
		12–248	Color2...238
		249–250	Color239

CH	Function	DMX	Description
13	Colors (continued)	251	No Function
		252–253	CW (0–180 °/s)
		254–255	CCW (180–0 °/s)
14	Color Mix Speed	0–255	Color Time
15	Control	0–10	No Function
		11–20	Dim0
		21–30	Dim1
		31–40	Dim2
		41–50	Dim3
		51–60	Dim4
		61–140	No Function
		141–150	Fast Dimmer off
		151–160	Fast Dimmer on
		161–200	No Function
		201–210	Zoom Reset
		211–255	No used

Mode Enh8Bit 10CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

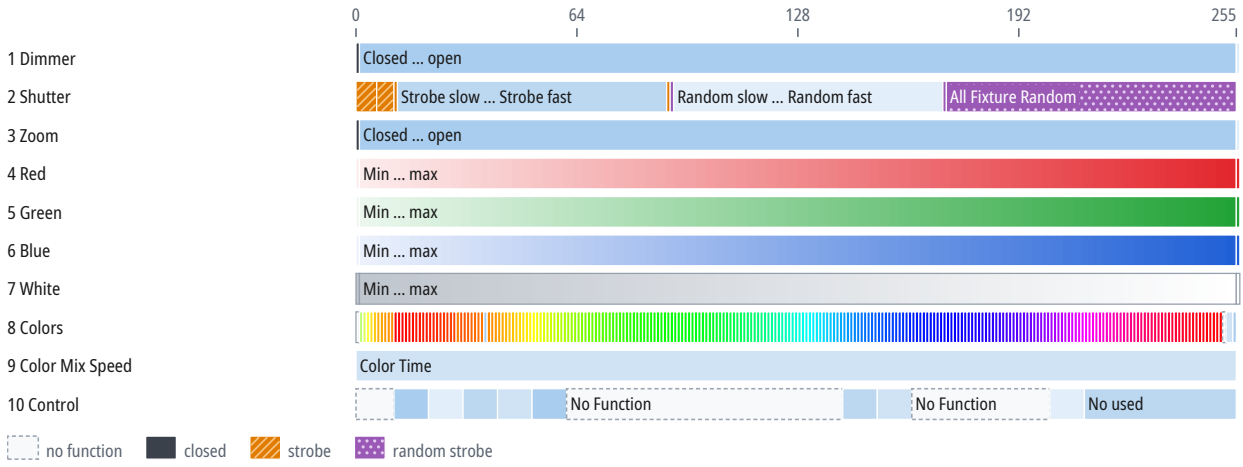

CH	Function	DMX	Description
1	Dimmer	0	Closed
		1–254	Closed ... open
		255	Open
2	Shutter		Same as CH 3 in the mode “Enh16Bit 15CH” (p. 14)
3	Zoom		Same as CH 4 in the mode “Enh16Bit 15CH” (p. 14)
4	Red	0	Min
		1–254	Min ... max
		255	Max
5	Green	0	Min

CH	Function	DMX	Description
5	Green (continued)	1–254	Min … max
		255	Max
6	Blue	0	Min
		1–254	Min … max
		255	Max
7	White	0	Min
		1–254	Min … max
		255	Max
8	Colors		Same as CH 13 in the mode “Enh16Bit 15CH” (p. 14)
9	Color Mix Speed	0–255	Color Time
10	Control		Same as CH 15 in the mode “Enh16Bit 15CH” (p. 15)

Mode RGBW 7CH

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0.

Channel functions at a glance

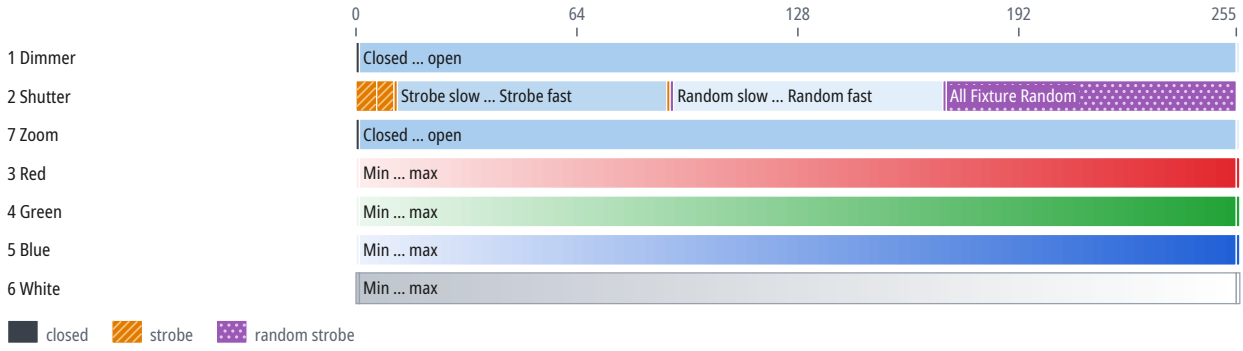

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Enh8Bit 10CH” (p. 15)
2	Shutter		Same as CH 3 in the mode “Enh16Bit 15CH” (p. 14)
3	Red		Same as CH 4 in the mode “Enh8Bit 10CH” (p. 15)
4	Green		Same as CH 5 in the mode “Enh8Bit 10CH” (p. 15)
5	Blue		Same as CH 6 in the mode “Enh8Bit 10CH” (p. 16)
6	White		Same as CH 7 in the mode “Enh8Bit 10CH” (p. 16)
7	Zoom		Same as CH 4 in the mode “Enh16Bit 15CH” (p. 14)

Mode HSI 6CH

If the device receives DMX in this mode but gives no light, check these channels: CH 3 Dimmer above 0.

Channel functions at a glance

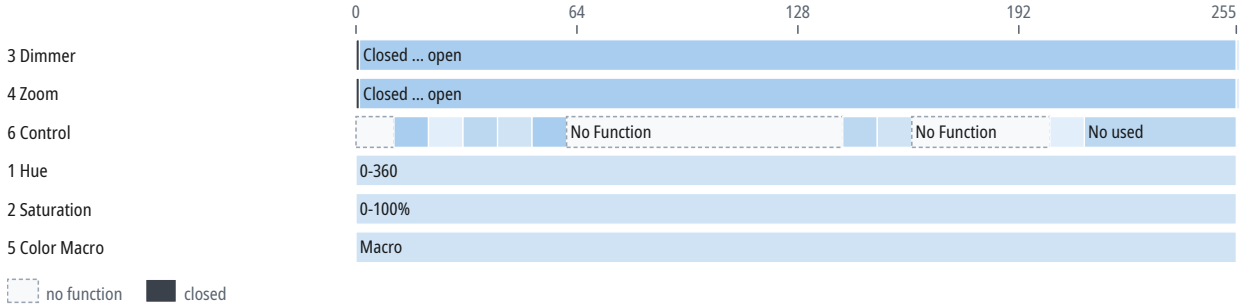

CH	Function	DMX	Description
1	Hue	0–255	0-360
2	Saturation	0–255	0-100%
3	Dimmer		Same as CH 1 in the mode “Enh8Bit 10CH” (p. 15)
4	Zoom		Same as CH 4 in the mode “Enh16Bit 15CH” (p. 14)
5	Color Macro	0–255	Macro
6	Control		Same as CH 15 in the mode “Enh16Bit 15CH” (p. 15)

Mode RGBW 6CH

Channel functions at a glance

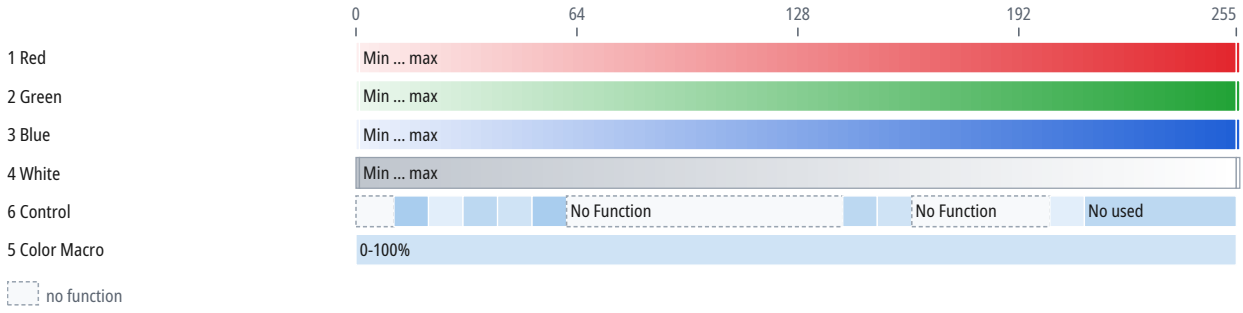

CH	Function	DMX	Description
1	Red		Same as CH 4 in the mode “Enh8Bit 10CH” (p. 15)
2	Green		Same as CH 5 in the mode “Enh8Bit 10CH” (p. 15)
3	Blue		Same as CH 6 in the mode “Enh8Bit 10CH” (p. 16)
4	White		Same as CH 7 in the mode “Enh8Bit 10CH” (p. 16)
5	Color Macro	0–255	0-100%
6	Control		Same as CH 15 in the mode “Enh16Bit 15CH” (p. 15)

9 Technical specifications

Parameter	Value
Light	
Light source	LED
LED power	60 W
Luminous flux	1,110 lm
Color temperature	6,500 K
Color rendering index (CRI)	80
Optics	
Beam angle	53°
Control	
DMX connection	5-pin XLR IN/OUT
Electrical	
Power connectors	powerCON TRUE1 IN
Dimensions and construction	
Weight	4.2 kg
Operating environment	
Operating temperature	-25 to 45 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–20 Hz
Color wheel rotation	up to 180 °/s (30 rpm)

Spot diameter

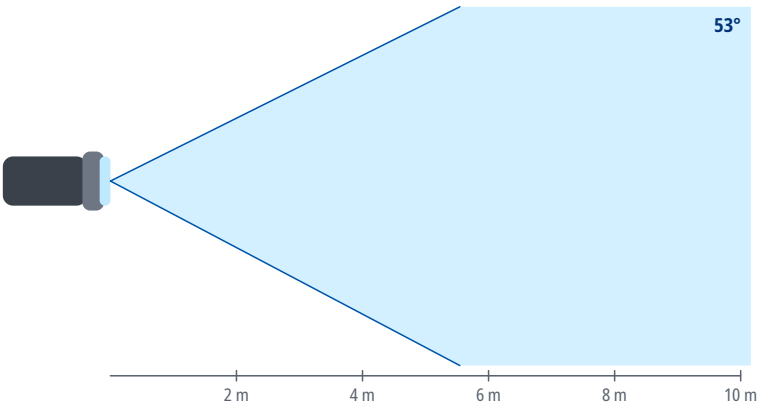

Distance	Ø 53°
2 m	2 m
4 m	4 m
6 m	6 m
8 m	8 m
10 m	10 m
15 m	15 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.

- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.