DMX REFERENCE

Cyclone 1320

Taurus Cyclone 1320

Taurus Light



Manufacturer	Taurus Light
GDTF file	Taurus_Light_Cyclone_1320_146875.gdtf
GDTF revision	Version 2 · 2026-06-13
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Installation 5
5 Connections 5
6 Operation 6
7 Functions at a glance 6
8 DMX channels 9
Mode 15 Channel 9
Mode 13 Channel 11
9 Technical specifications 12
10 Maintenance and cleaning 12
11 Troubleshooting 12
12 Disposal 13

1 About this manual

This document describes the Taurus Cyclone 1320 by Taurus Light. It was compiled from the GDTF file Taurus_Light_Cyclone_1320_146875.gdtf from the GDTF-Share library.

File revision: “Version 2”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Taurus Light; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	18 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
Mode 15 Channel	15	34	1, 16, 31, 46, ...
Mode 13 Channel	13	39	1, 14, 27, 40, ...

No light? Check these channels

- Mode 15 Channel: CH 1 Dimmer above 0
- Mode 13 Channel: CH 1 Dimmer above 0


Read the manual before use


Do not stare into the light


Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

4 Installation

⚠ WARNING

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 18 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

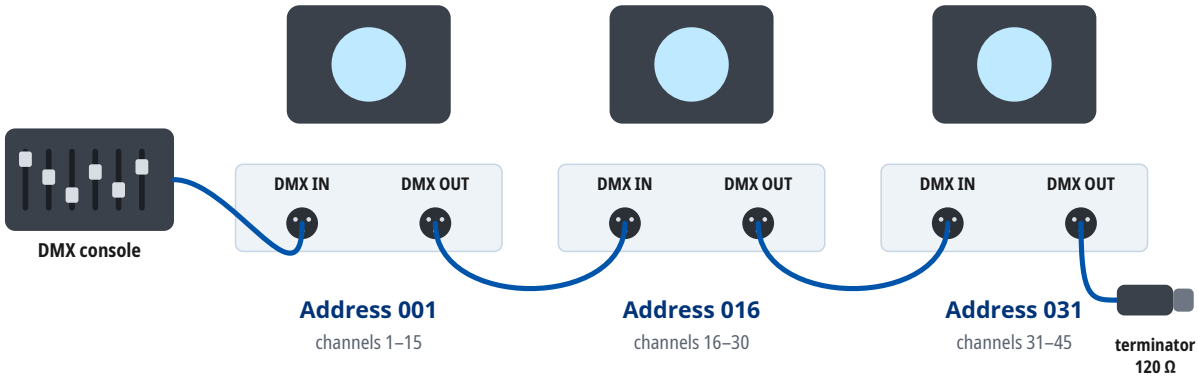

Mode 15 Channel: every unit occupies 15 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Mode 15 Channel”: 15.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Mode 15 Channel”, you can use, for example, the start addresses 1, 16, 31, 46.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	Mode 15 Channel 15 channels	Mode 13 Channel 13 channels
Dimmer	1	1
Shutter / strobe	6–8	6
Color mixing	2–5, 12–15	2–5, 10–13
Effects / macros	9, 11	7, 9

Color wheel


1
Open
2
Color 1
3
Color 2
4
Color 3
5
Color 4
6
Color 5
7
Color 6
8
Color 7
9
Color 8
10
Color 9
11
Color 10
12
Color 11
13
Color 12
14
Color 13
15
Color 14
16
Color 15
17
Color 16
18
Color 17
19
Color 18
20
Color 19
21
Color 20
22
Color 21
23
Color 22
24
Color 23
25
Color 24
26
Color 25
27
Color 26
28
Color 27
29
Color 28
30
Color 29
31
Color 30
32
Color 31

LED colors and the colors they mix

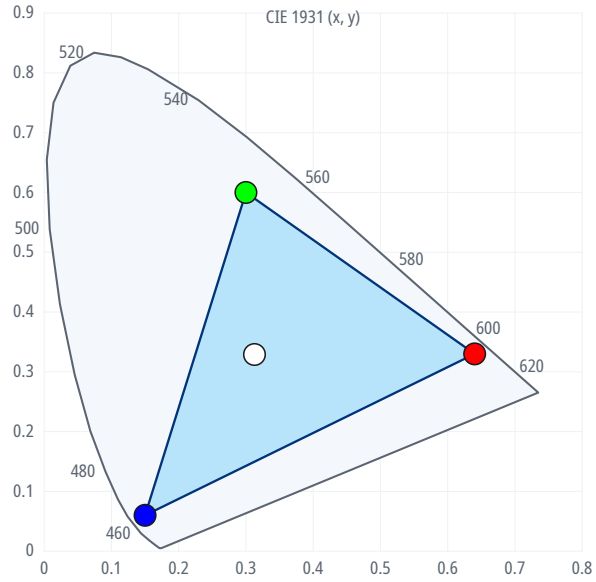

LED	x	y
Red	0.640	0.330
Green	0.300	0.600
Blue	0.150	0.060
White	0.313	0.329

The shaded area holds the colors the LEDs can mix; the dots are the LED colors the GDTF file states.

Cells (pixels)



10 cells where the GDTF file places them (seen from above), numbered in the file's order; the mode “Mode 15 Channel” drives them together.

8 DMX channels

Units in one DMX universe

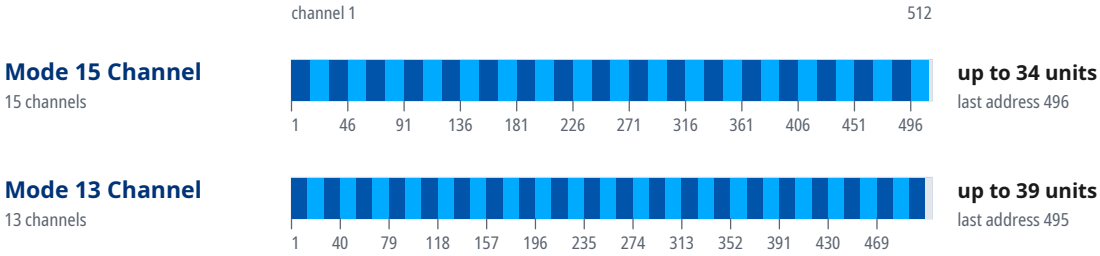

Start addresses of 20 units in the mode “Mode 15 Channel”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	76	11	151	16	226
2	16	7	91	12	166	17	241
3	31	8	106	13	181	18	256
4	46	9	121	14	196	19	271
5	61	10	136	15	211	20	286

Mode 15 Channel

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 1 255, CH 3 Green 1 255, CH 4 Blue 1 255, CH 6 Strobe Duration 255, CH 7 Strobe Frequency 255, CH 8 Strobe Random 0.

Channel functions at a glance

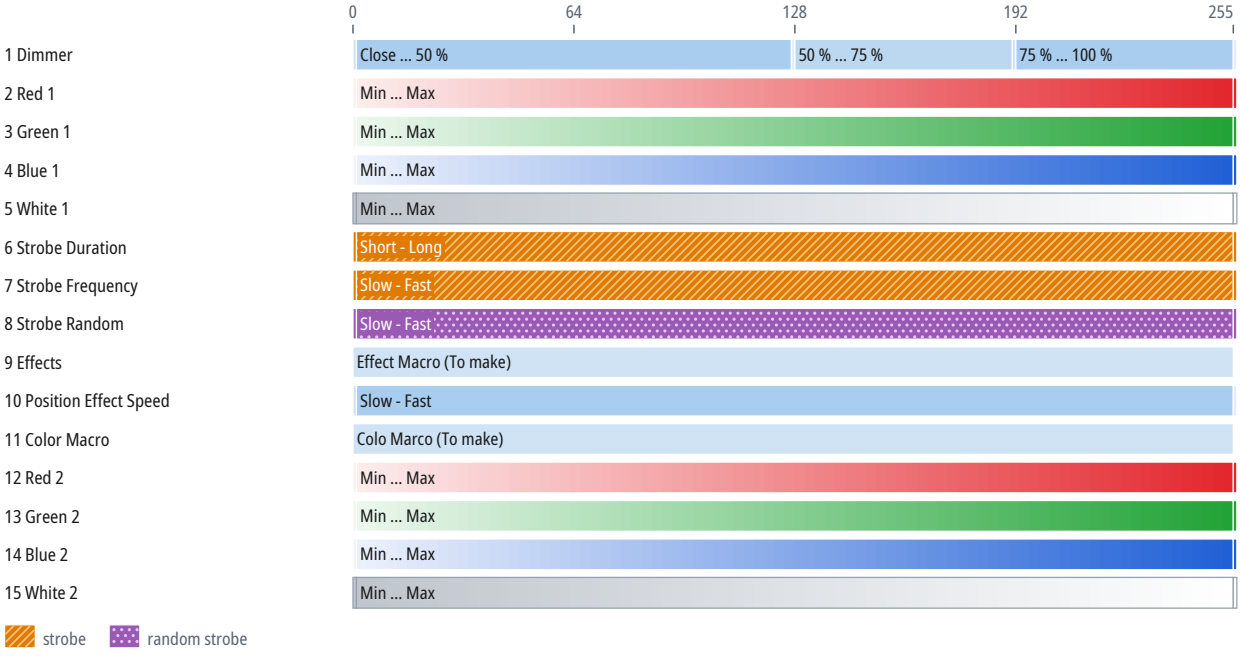

CH	Function	DMX	Description
1	Dimmer	0	Close
		1–126	Close ... 50 %
		127	50 %
		128–190	50 % ... 75 %
		191	75 %
		192–254	75 % ... 100 %
		255	100 %
2	Red 1		Red FG
		0	Min
		1–254	Min ... Max
		255	Max
3	Green 1		Green FG
		0	Min
		1–254	Min ... Max
		255	Max
4	Blue 1		Blue FG
		0	Min
		1–254	Min ... Max
		255	Max
5	White 1		White FG
		0	Min
		1–254	Min ... Max
		255	Max
6	Strobe Duration	0	Short
		1–254	Short - Long
		255	Long
7	Strobe Frequency	0	Slow
		1–254	Slow - Fast
		255	Fast
8	Strobe Random		Shutter 1 Strobe Effect 1
		0	Slow
		1–254	Slow - Fast
		255	Fast
9	Effects	0–255	Effect Macro (To make)
10	Position Effect Speed	0	Slow
		1–254	Slow - Fast
		255	Fast
11	Color Macro	0–255	Colo Marco (To make)
12	Red 2		Red BG
		0	Min

CH	Function	DMX	Description
12	Red 2 (continued)	1–254	Min ... Max
		255	Max
13	Green 2		Green BG
		0	Min
		1–254	Min ... Max
		255	Max
14	Blue 2		Blue BG
		0	Min
		1–254	Min ... Max
		255	Max
15	White 2		White BG
		0	Min
		1–254	Min ... Max
		255	Max

Mode 13 Channel

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 255, CH 2 Red 1 255, CH 3 Green 1 255, CH 4 Blue 1 255, CH 6 Shutter 255.

Channel functions at a glance

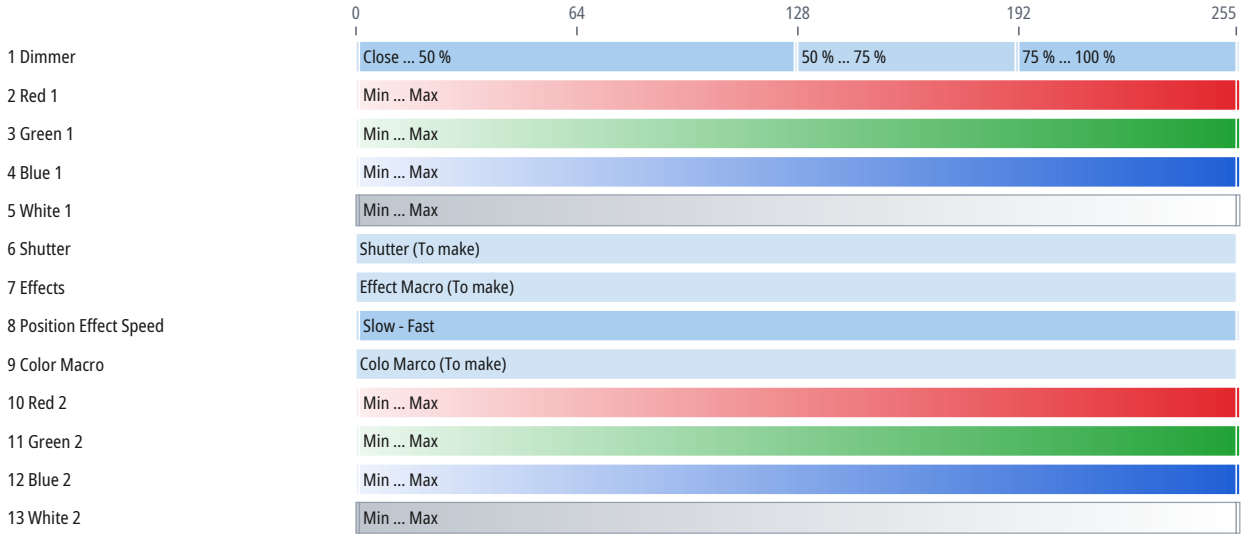

CH	Function	DMX	Description
1	Dimmer		Same as CH 1 in the mode “Mode 15 Channel” (p. 10)
2	Red 1		Same as CH 2 in the mode “Mode 15 Channel” (p. 10)
3	Green 1		Same as CH 3 in the mode “Mode 15 Channel” (p. 10)
4	Blue 1		Same as CH 4 in the mode “Mode 15 Channel” (p. 10)
5	White 1		Same as CH 5 in the mode “Mode 15 Channel” (p. 10)
6	Shutter	0–255	Shutter (To make)
7	Effects	0–255	Effect Macro (To make)

CH	Function	DMX	Description
8	Position Effect Speed		Same as CH 10 in the mode “Mode 15 Channel” (p. 10)
9	Color Macro	0–255	Colo Marco (To make)
10	Red 2		Same as CH 12 in the mode “Mode 15 Channel” (p. 10)
11	Green 2		Same as CH 13 in the mode “Mode 15 Channel” (p. 11)
12	Blue 2		Same as CH 14 in the mode “Mode 15 Channel” (p. 11)
13	White 2		Same as CH 15 in the mode “Mode 15 Channel” (p. 11)

9 Technical specifications

Parameter	Value
Light source	LED
Weight	18 kg
Operating temperature	0 to 40 °C

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.