DMX REFERENCE

GLW760 IP

Terbly GLW760 IP

Terbly



Manufacturer	Terbly
GDTF file	Terbly_GLW760_IP_69389.gdtf
GDTF revision	Updated the default value of strobe · 2024-07-30
Generated	2026-11-24

Contents

1 About this manual 2
2 Quick reference 3
3 Safety instructions 4
4 Product description 5
5 Installation 5
6 Connections 5
7 Operation 6
8 Functions at a glance 7
9 DMX channels 9
Mode Standard 10
Mode Basic 14
Mode Extended 16
10 Technical specifications 21
11 Maintenance and cleaning 21
12 Troubleshooting 22
13 Disposal 22

1 About this manual

This document describes the Terbly GLW760 IP by Terbly. It was compiled from the GDTF file Terbly_GLW760_IP_69389.gdtf from the GDTF-Share library.

File revision: “Updated the default value of strobe”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Terbly; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Ingress protection	IP65

DMX modes

Mode	Channels	Units in one universe	First start addresses
Standard	26	19	1, 27, 53, 79, ...
Basic	20	25	1, 21, 41, 61, ...
Extended	48	10	1, 49, 97, 145, ...

No light? Check these channels

- Standard: CH 8 Shutter at 32–63 “Open” or 96–127 or 160–191 or 224–255; CH 9 Dimmer above 0
- Basic: CH 6 Shutter at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 7 Dimmer above 0
- Extended: CH 8 Shutter at 32–63 “Open” or 96–127 or 160–191 or 224–255; CH 9 Dimmer above 0



Read the manual before use



Do not stare into the light

3 Safety instructions



Read the manual before use



Do not stare into the light

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ CAUTION

- The device is rated IP65 and may be used outdoors within the limits of this rating.
- This protection is effective only when all connectors are mated or closed with their protective caps and all seals are intact. Use cables and connectors with the same or a higher protection rating.
- Do not open the housing; opening it breaks the seals and the protection rating can no longer be guaranteed.
- Install the device so that water cannot collect around connectors and cable glands, and inspect seals and cables regularly.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

⚠ CAUTION

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

4 Product description

Range of movement

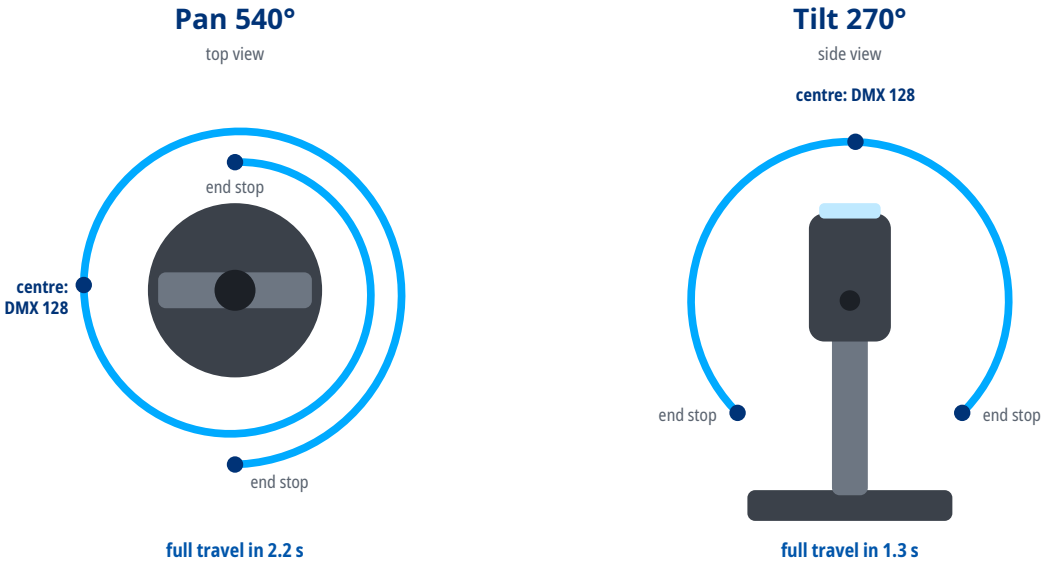

Full-travel times as stated in the GDTF file.

5 Installation

> ⚠ **WARNING**
>
> - Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
> - The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
> - Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
> - Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
> - During installation and removal, keep people out of the area below the work position.
> - Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is

not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

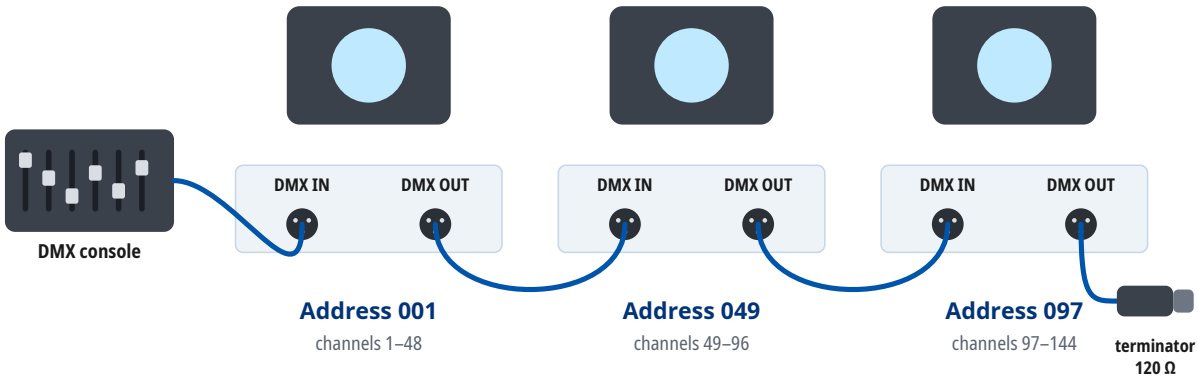

Mode Extended: every unit occupies 48 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

7 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Extended”: 48.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Extended”, you can use, for example, the start addresses 1, 49, 97, 145.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

8 Functions at a glance

Functions in each DMX mode

	Standard 26 channels	Basic 20 channels	Extended 48 channels
Pan / Tilt	**1, 3**	**1, 2**	**1, 3**
Pan / Tilt resolution	16 bit	8 bit	16 bit
Dimmer	**9**	**7**	**9**
Dimmer resolution	8 bit	8 bit	16 bit
Shutter / strobe	**8**	**6**	**8**
Color mixing	**4× (12–18) ***	**10–13 ***	**21–48 ***
Color wheel	**21**	**15**	**15**
Zoom	**11**	**9**	**12**
Effects / macros	**20, 23, 24**	**14, 17, 18**	**14, 17, 18**
Pixel control			✓

* The function works only when another channel switches it on; see the DMX table.

Color wheel

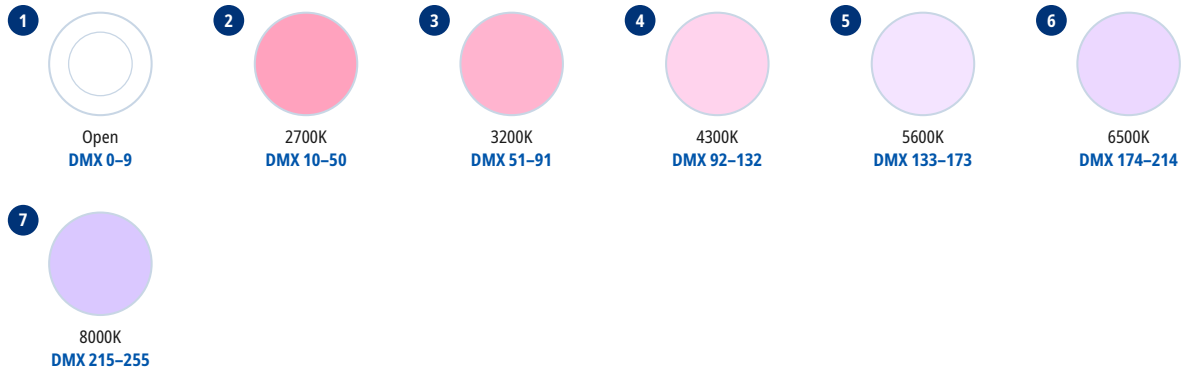

Strobe rate

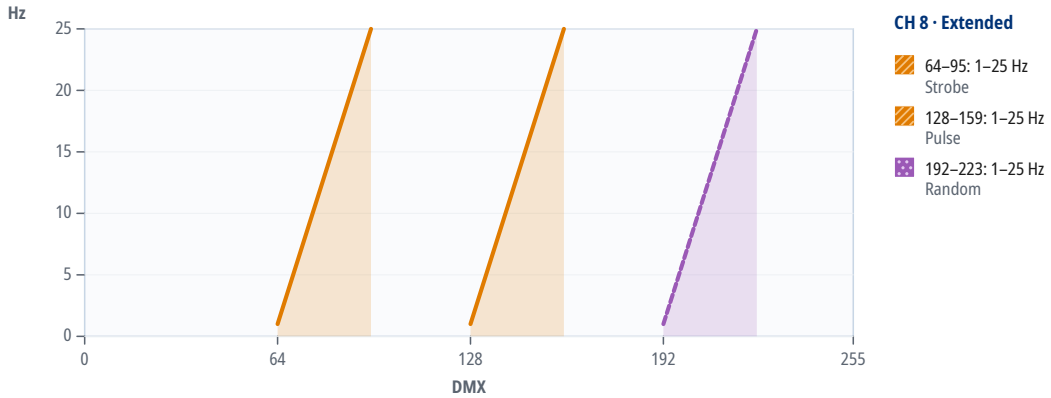

Cells (pixels)

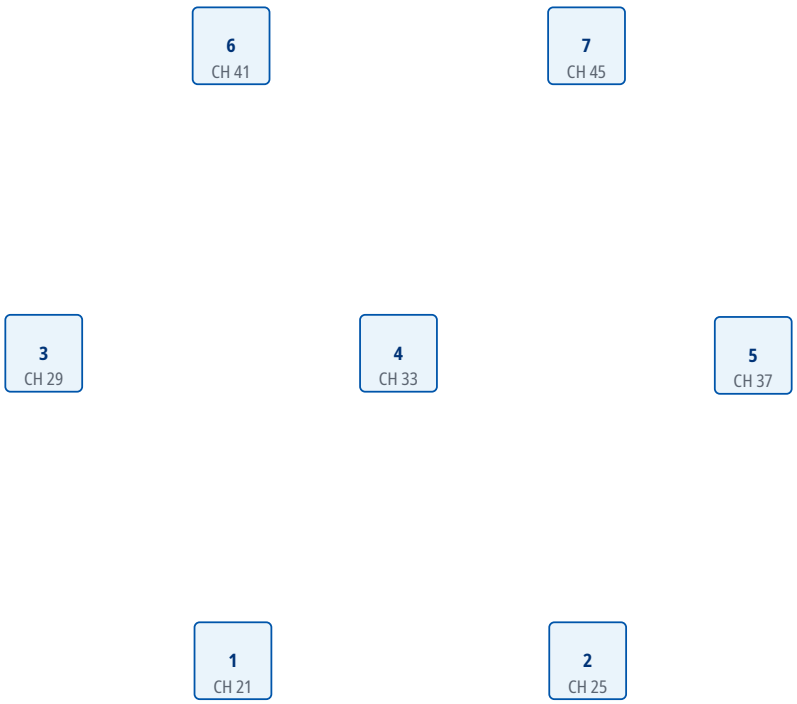

7 cells where the GDTF file places them (seen from above), numbered by their first DMX channel (CH) in the mode “Extended”.

9 DMX channels

Units in one DMX universe

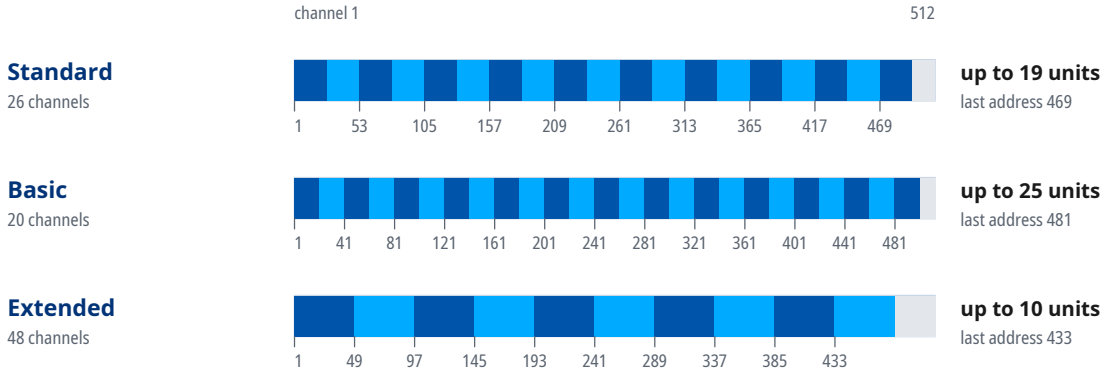

Start addresses of 20 units in the mode “Extended”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	241	11	U2 · 1	16	U2 · 241
2	49	7	289	12	U2 · 49	17	U2 · 289
3	97	8	337	13	U2 · 97	18	U2 · 337
4	145	9	385	14	U2 · 145	19	U2 · 385
5	193	10	433	15	U2 · 193	20	U2 · 433

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode Standard

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 8 Shutter at 32–63 “Open” or 96–127 or 160–191 or 224–255; CH 9 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 8 Shutter 63, CH 9 Dimmer 255, CH 12 Red 255, CH 14 Green 255, CH 16 Blue 255, CH 18 White 0.

Channel functions at a glance



CH	Function	DMX	Description
1	Pan	0–127	Min ... center
		128–255	Center ... max
		255	Max
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt	0–127	Min ... center
		128–255	Center ... max
		255	Max
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt	0	Max
		1–224	Max ... min
		225	Min
		226–235	BO Movement
		236–255	Position MSpeed 1

CH	Function	DMX	Description
6	Pan Mode	0–127	Normal
		128	>>>
		129–188	>>
		189	>
		190–193	Stop
		194	<
		195–254	<<
		255	<<<
7	Tilt Mode	0–127	Normal
		128	>>>
		129–188	>>
		189	>
		190–193	Stop
		194	<
		195–254	<<
		255	<<<
8	Shutter	0–31	Shutter: Closed
		32–63	Shutter: Open
		64	Min Strobe
		65–94	Min Strobe ... max Strobe
		95	Max Strobe
		96–127	Open 2
		128	Min Pulse
		129–158	Min Pulse ... max Pulse
		159	Max Pulse
		160–191	Open 3
		192	Min Rnd
		193–222	Min Rnd ... maxRnd
		223	maxRnd
		224–255	Open 4
9	Dimmer	0	Closed
		1–254	Closed ... Open
		255	Open
10	Dimmer Curve	0–20	Standard
		21–40	Stage
		41–60	TV
		61–80	Architectural
		81–100	Theatre
		101–255	Default
11	Zoom	0	Narrow
		1–127	Narrow ... normal
		128	Normal

CH	Function	DMX	Description
11	Zoom (continued)	129–254	Normal ... wide
		255	Wide
12	Red		When CH 21 is 0:
		0	Min
		1–254	Min ... max
		255	Max
13	Red Fine	0–255	Fine adjustment of CH 12
14	Green		When CH 21 is 0:
		0	Min
		1–254	Min ... max
		255	Max
15	Green Fine	0–255	Fine adjustment of CH 14
16	Blue		When CH 21 is 0:
		0	Min
		1–254	Min ... max
		255	Max
17	Blue Fine	0–255	Fine adjustment of CH 16
18	White		When CH 21 is 0:
		0	Min
		1–254	Min ... max
		255	Max
19	White Fine	0–255	Fine adjustment of CH 18
20	Color Macro	0–7	Normal
		8–39	Red to Yellow
		40–71	Yellow to Green
		72–103	Green to Cyan
		104–135	Cyan to Blue
		136–167	Blue to Magenta
		168–199	Magenta to Red
		200–231	Red to White
		232–255	Cross fading
21	Colors	0–9	Open
		10–50	2700K
		51–91	3200K
		92–132	4300K
		133–173	5600K
		174–214	6500K
		215–255	8000K
22	Dim		Preset DIm
		0	Open
		1–254	Open ... Closed
		255	Closed

CH	Function	DMX	Description
23	Effects	0–10	Safe
		11–40	Chase 1
		41–70	Chase 2
		71–100	Chase 3
		101–130	Chase 4
		131–160	Chase 5
		161–190	Chase 6
		191–220	Chase 7
		221–255	Chase 8
24	Effects Speed	0	>>>
		1–254	>>
		255	>
25	Colors Mode	0–189	Normal
		190–254	Edit
		255	Store
26	Control	0–79	Normal
		80–84	Reset all
		85–87	Reset P/T
		88–90	No function
		91–93	Store white balance
		94–96	No function
		97–99	Reset others
		100–119	Program 1
		120–139	Program 2
		140–159	Program 3
		160–179	Program 4
		180–199	Program 5
		200–219	Program 6
		220–239	Program 7
		240–255	No function

Mode Basic

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 32–63, 96–127, 160–191 or 224–255 “Open”; CH 7 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 63, CH 7 Dimmer 255, CH 10 Red 255, CH 11 Green 255, CH 12 Blue 255, CH 13 White 0.

Channel functions at a glance

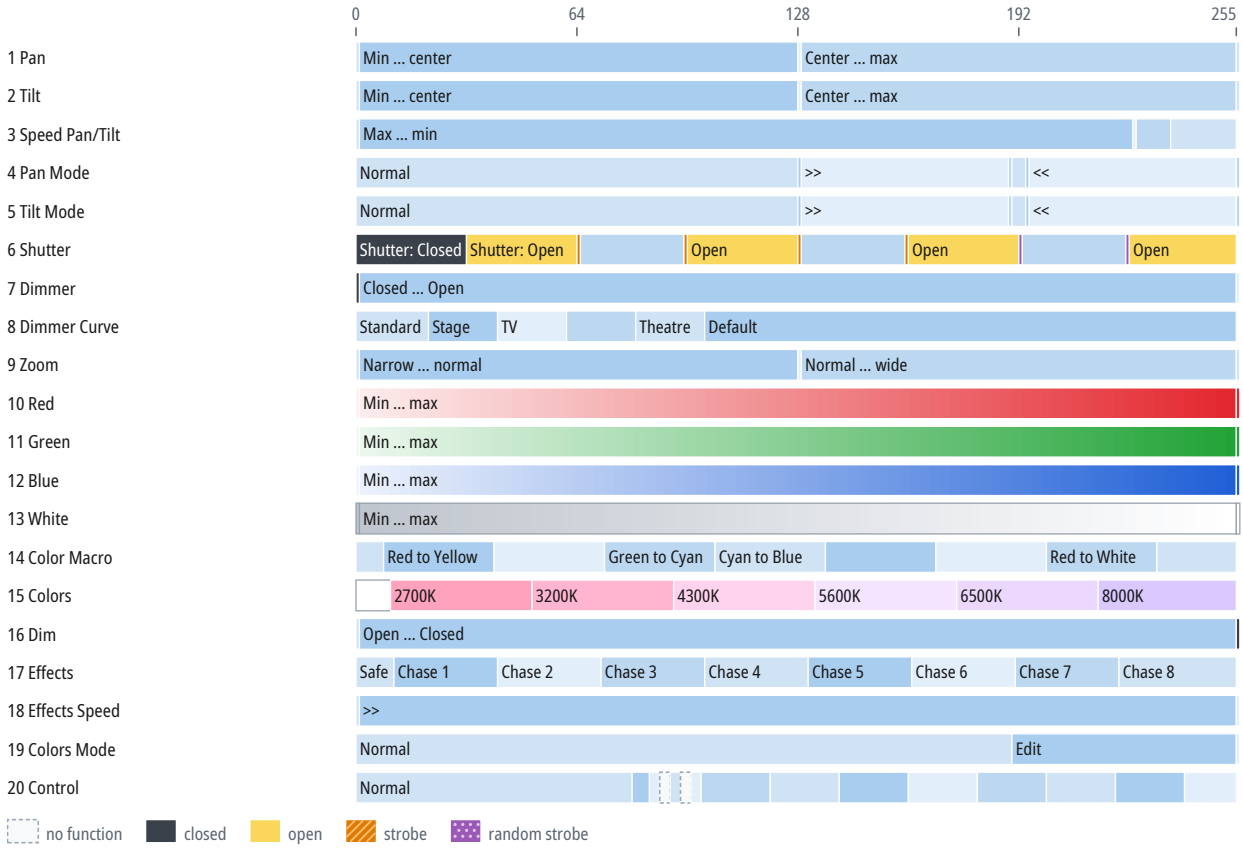

CH	Function	DMX	Description
1	Pan	0	Min
		1–127	Min ... center
		128	Center
		129–254	Center ... max
		255	Max
2	Tilt	0	Min
		1–127	Min ... center
		128	Center
		129–254	Center ... max
		255	Max
3	Speed Pan/Tilt		Same as CH 5 in the mode “Standard” (p. 10)
4	Pan Mode		Same as CH 6 in the mode “Standard” (p. 11)
5	Tilt Mode		Same as CH 7 in the mode “Standard” (p. 11)
6	Shutter	0–31	Shutter: Closed
		32–63	Shutter: Open

CH	Function	DMX	Description
6	Shutter (continued)	64	Min Strobe
		65–94	Min Strobe ... max Strobe
		95	Max Strobe
		96–127	Open
		128	Min Pulse
		129–158	Min Pulse ... max Pulse
		159	Max Pulse
		160–191	Open
		192	Min Rnd
		193–222	Min Rnd ... maxRnd
		223	maxRnd
		224–255	Open
7	Dimmer		Same as CH 9 in the mode “Standard” (p. 11)
8	Dimmer Curve		Same as CH 10 in the mode “Standard” (p. 11)
9	Zoom		Same as CH 11 in the mode “Standard” (p. 11)
10	Red		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
11	Green		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
12	Blue		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
13	White		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
14	Color Macro		Same as CH 20 in the mode “Standard” (p. 12)
15	Colors		Same as CH 21 in the mode “Standard” (p. 12)
16	Dim		Same as CH 22 in the mode “Standard” (p. 12)
17	Effects		Same as CH 23 in the mode “Standard” (p. 13)
18	Effects Speed		Same as CH 24 in the mode “Standard” (p. 13)
19	Colors Mode		Same as CH 25 in the mode “Standard” (p. 13)
20	Control		Same as CH 26 in the mode “Standard” (p. 13)

Mode Extended

16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 8 Shutter at 32–63 “Open” or 96–127 or 160–191 or 224–255; CH 9 Dimmer above 0. The GDTF file gives these values for a console's Highlight function: CH 8 Shutter 63, CH 9 Dimmer 0, CH 21 Red 1 255, CH 22 Green 1 255, CH 23 Blue 1 255, CH 24 White 1 0, CH 25 Red 2 255, CH 26 Green 2 255, CH 27 Blue 2 255, CH 28 White 2 0, CH 29 Red 3 255, CH 30 Green 3 255, CH 31 Blue 3 255, CH 32 White 3 0, CH 33 Red 4 255, CH 34 Green 4 255, CH 35 Blue 4 255, CH 36 White 4 0, CH 37 Red 5 255, CH 38 Green 5 255, CH 39 Blue 5 255, CH 40 White 5 0, CH 41 Red 6 255, CH 42 Green 6 255, CH 43 Blue 6 255, CH 44 White 6 0, CH 45 Red 7 255, CH 46 Green 7 255, CH 47 Blue 7 255, CH 48 White 7 0.

Channel functions at a glance

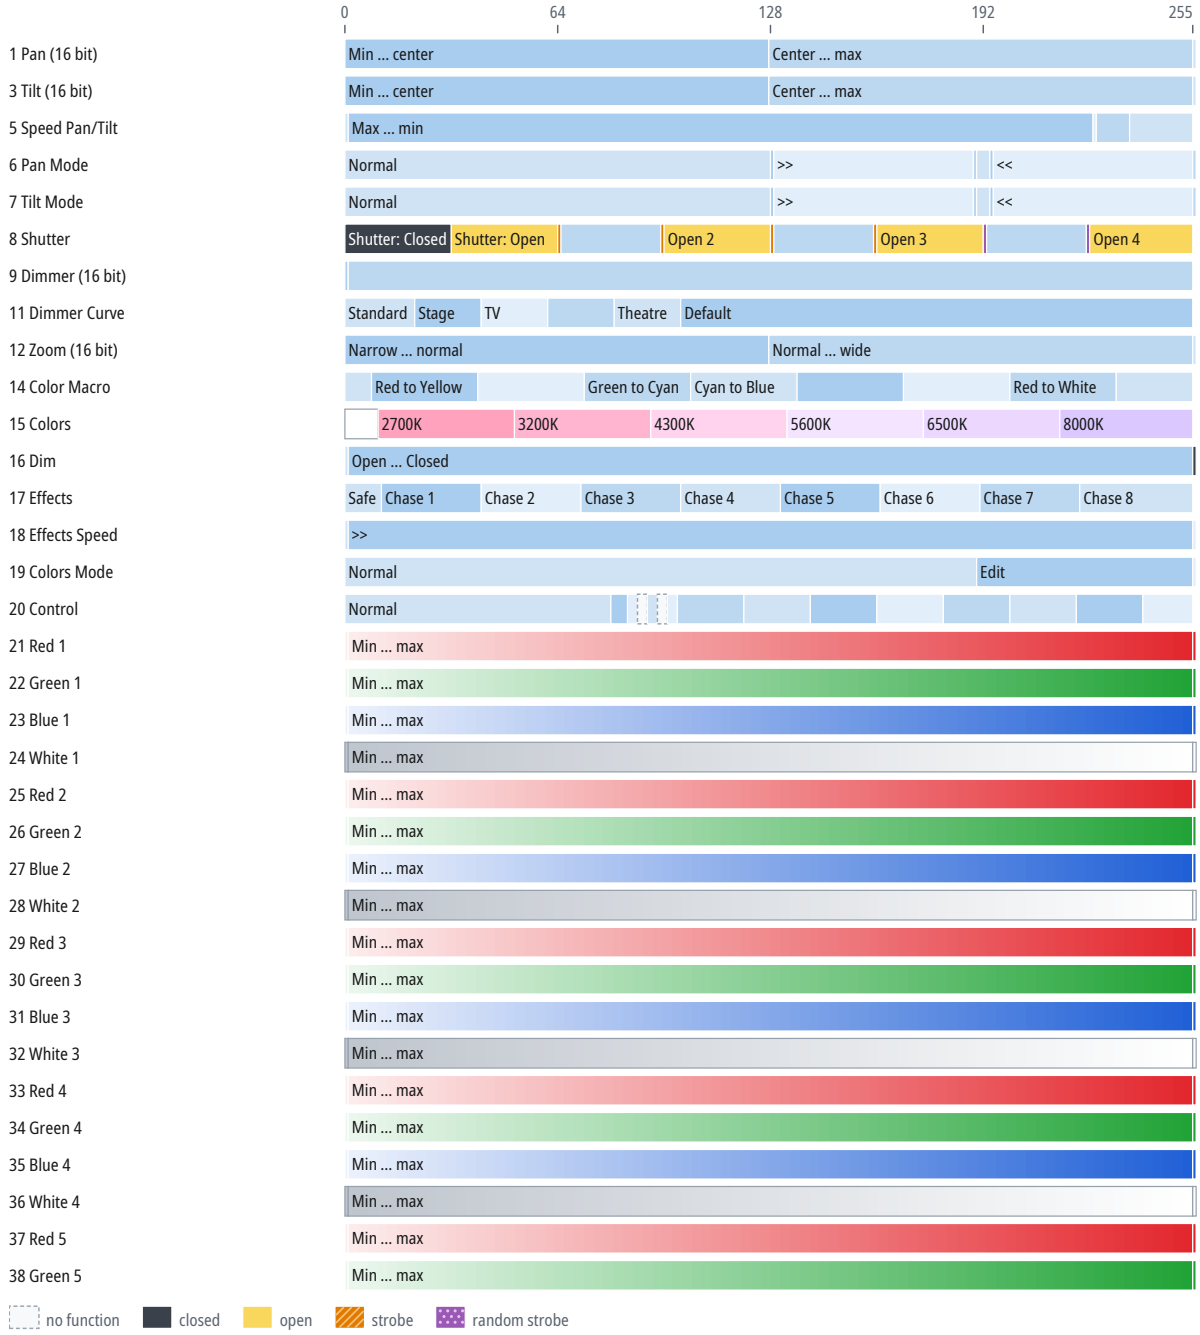

Channel functions at a glance

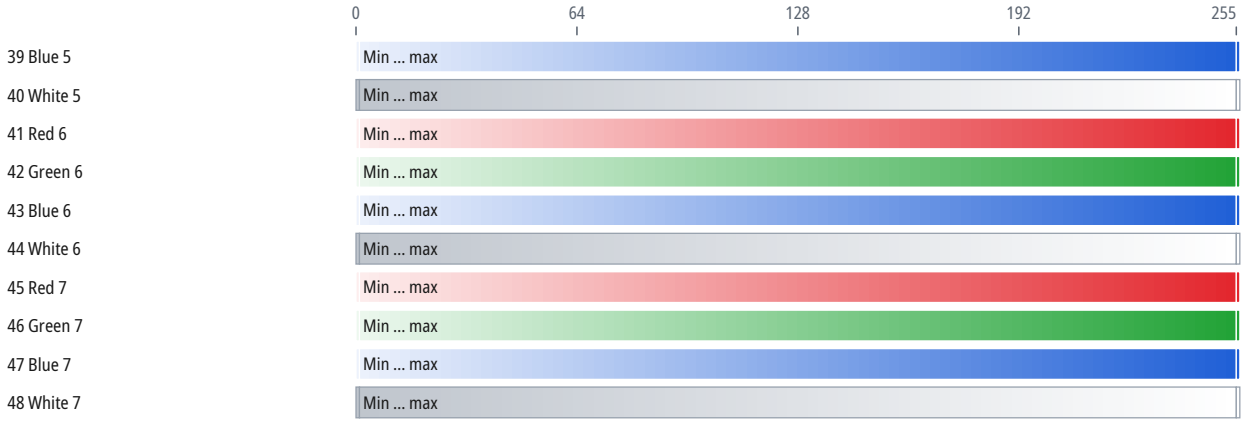

CH	Function	DMX	Description
1	Pan		Same as CH 1 in the mode “Standard” (p. 10)
2	Pan Fine	0–255	Fine adjustment of CH 1
3	Tilt		Same as CH 3 in the mode “Standard” (p. 10)
4	Tilt Fine	0–255	Fine adjustment of CH 3
5	Speed Pan/Tilt		Same as CH 5 in the mode “Standard” (p. 10)
6	Pan Mode		Same as CH 6 in the mode “Standard” (p. 11)
7	Tilt Mode		Same as CH 7 in the mode “Standard” (p. 11)
8	Shutter		Same as CH 8 in the mode “Standard” (p. 11)
9	Dimmer	0	Closed ... Open
		0	Open
		1–255	Dimmer 1
10	Dimmer Fine	0–255	Fine adjustment of CH 9
11	Dimmer Curve		Same as CH 10 in the mode “Standard” (p. 11)
12	Zoom	0–127	Narrow ... normal
		128–255	Normal ... wide
		255	Wide
13	Zoom Fine	0–255	Fine adjustment of CH 12
14	Color Macro		Same as CH 20 in the mode “Standard” (p. 12)
15	Colors		Same as CH 21 in the mode “Standard” (p. 12)
16	Dim		Same as CH 22 in the mode “Standard” (p. 12)
17	Effects		Same as CH 23 in the mode “Standard” (p. 13)
18	Effects Speed		Same as CH 24 in the mode “Standard” (p. 13)
19	Colors Mode		Same as CH 25 in the mode “Standard” (p. 13)
20	Control		Same as CH 26 in the mode “Standard” (p. 13)
21	Red 1		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
22	Green 1		When CH 15 is 0:
		0	Min

CH	Function	DMX	Description
22	Green 1 (continued)	1–254	Min … max
		255	Max
23	Blue 1		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
24	White 1		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
25	Red 2		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
26	Green 2		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
27	Blue 2		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
28	White 2		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
29	Red 3		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
30	Green 3		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
31	Blue 3		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
32	White 3		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max

CH	Function	DMX	Description
33	Red 4		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
34	Green 4		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
35	Blue 4		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
36	White 4		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
37	Red 5		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
38	Green 5		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
39	Blue 5		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
40	White 5		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
41	Red 6		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
42	Green 6		When CH 15 is 0:
		0	Min
		1–254	Min … max
		255	Max
43	Blue 6		When CH 15 is 0:
		0	Min

CH	Function	DMX	Description
43	Blue 6 (continued)	1–254	Min ... max
		255	Max
44	White 6		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
45	Red 7		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
46	Green 7		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
47	Blue 7		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max
48	White 7		When CH 15 is 0:
		0	Min
		1–254	Min ... max
		255	Max

10 Technical specifications

Parameter	Value
Light	
Light source	LED
Optics	
Zoom	5–45°
Movement	
Pan	540°
Tilt	270°
Control	
RDM	yes (manufacturer ID 0x4753, device model ID 0x0632)
Operating environment	
Ingress protection	IP65
Meaning of the IP code (IEC 60529)	Dust-tight; protected against water jets
Operating temperature	0 to 40 °C

Speeds and ranges

Parameter	Value
Strobe frequency	1–25 Hz

Spot diameter

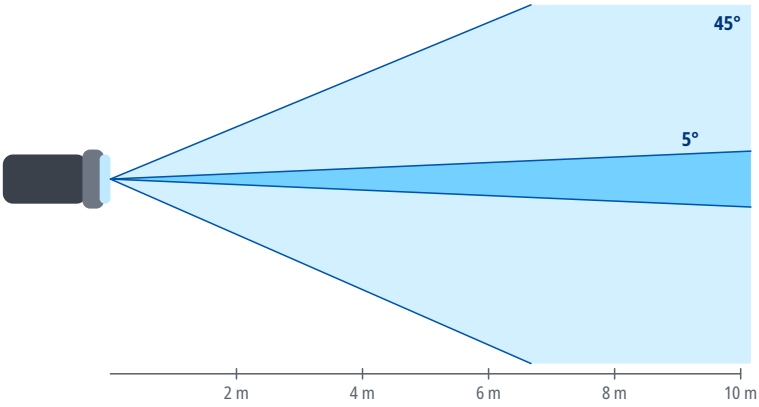

Distance	Ø 5°	Ø 45°
2 m	0.17 m	1.7 m
4 m	0.35 m	3.3 m
6 m	0.52 m	5 m
8 m	0.7 m	6.6 m
10 m	0.87 m	8.3 m
15 m	1.3 m	12.4 m

Spot diameter square to the beam axis, calculated from the beam angle.

11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much

faster.

12 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.
Movement is reversed	Check whether Pan/Tilt inversion is enabled in the device menu or in the controller.
Moving parts do not reach the correct position after power-on or transport	Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center.
Movement is jerky	Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal.

13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.