GDTF Fixture Reference · by SOH

DMX REFERENCE

R560

Uplus Lighting



Manufacturer	Uplus Lighting
GDTF file	Uplus_Lighting_R560_115825.gdtf
GDTF revision	final improoved · 2025-10-30
Generated	2026-11-24

Contents

1 About this manual ... 2
2 Quick reference ... 2
3 Safety instructions ... 3
4 Installation ... 4
5 Connections ... 4
6 Operation ... 5
7 Functions at a glance ... 5
8 DMX channels ... 10
Mode 35ch ... 11
9 Technical specifications ... 12
10 Maintenance and cleaning ... 12
11 Troubleshooting ... 13
12 Disposal ... 13

1 About this manual

This document describes the R560 by Uplus Lighting. It was compiled from the GDTF file Uplus_Lighting_R560_115825.gdtf from the GDTF-Share library.

File revision: “final improoved”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by Uplus Lighting; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

2 Quick reference

Parameter	Value
Weight	7.5 kg

DMX modes

Mode	Channels	Units in one universe	First start addresses
35ch	35	14	1, 36, 71, 106, ...

No light? Check these channels

- 35ch: CH 1 Dimmer 1 above 0; CH 2 Dimmer 2 above 0; CH 3 Dimmer 3 above 0; CH 4 Dimmer 4 above 0; CH 5 Dimmer 5 above 0



Read the manual before use



Do not stare into the light



Indoor use only

3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

⚠ WARNING

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

⚠ WARNING

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

⚠ CAUTION

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.

4 Installation

⚠ **WARNING**

- Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
- The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
- Weight of the device: 7.5 kg.
- Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
- Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
- During installation and removal, keep people out of the area below the work position.
- Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.

5 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is not suitable for DMX, especially over longer distances.
- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

DMX line

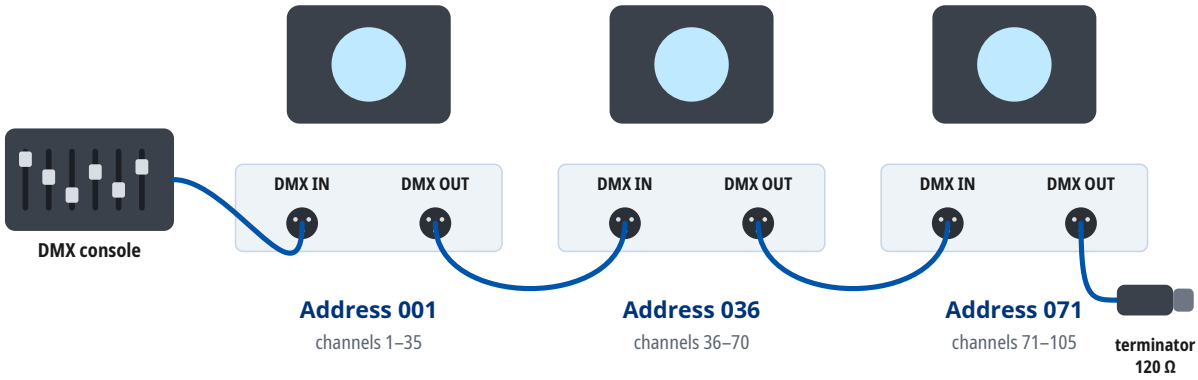

Mode 35ch: every unit occupies 35 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

6 Operation

Setting the DMX address

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “35ch”: 35.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “35ch”, you can use, for example, the start addresses 1, 36, 71, 106.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.

7 Functions at a glance

Functions in each DMX mode

	35ch 35 channels
Dimmer	1–5
Color mixing	6–35
Pixel control	10 cells

Color wheel

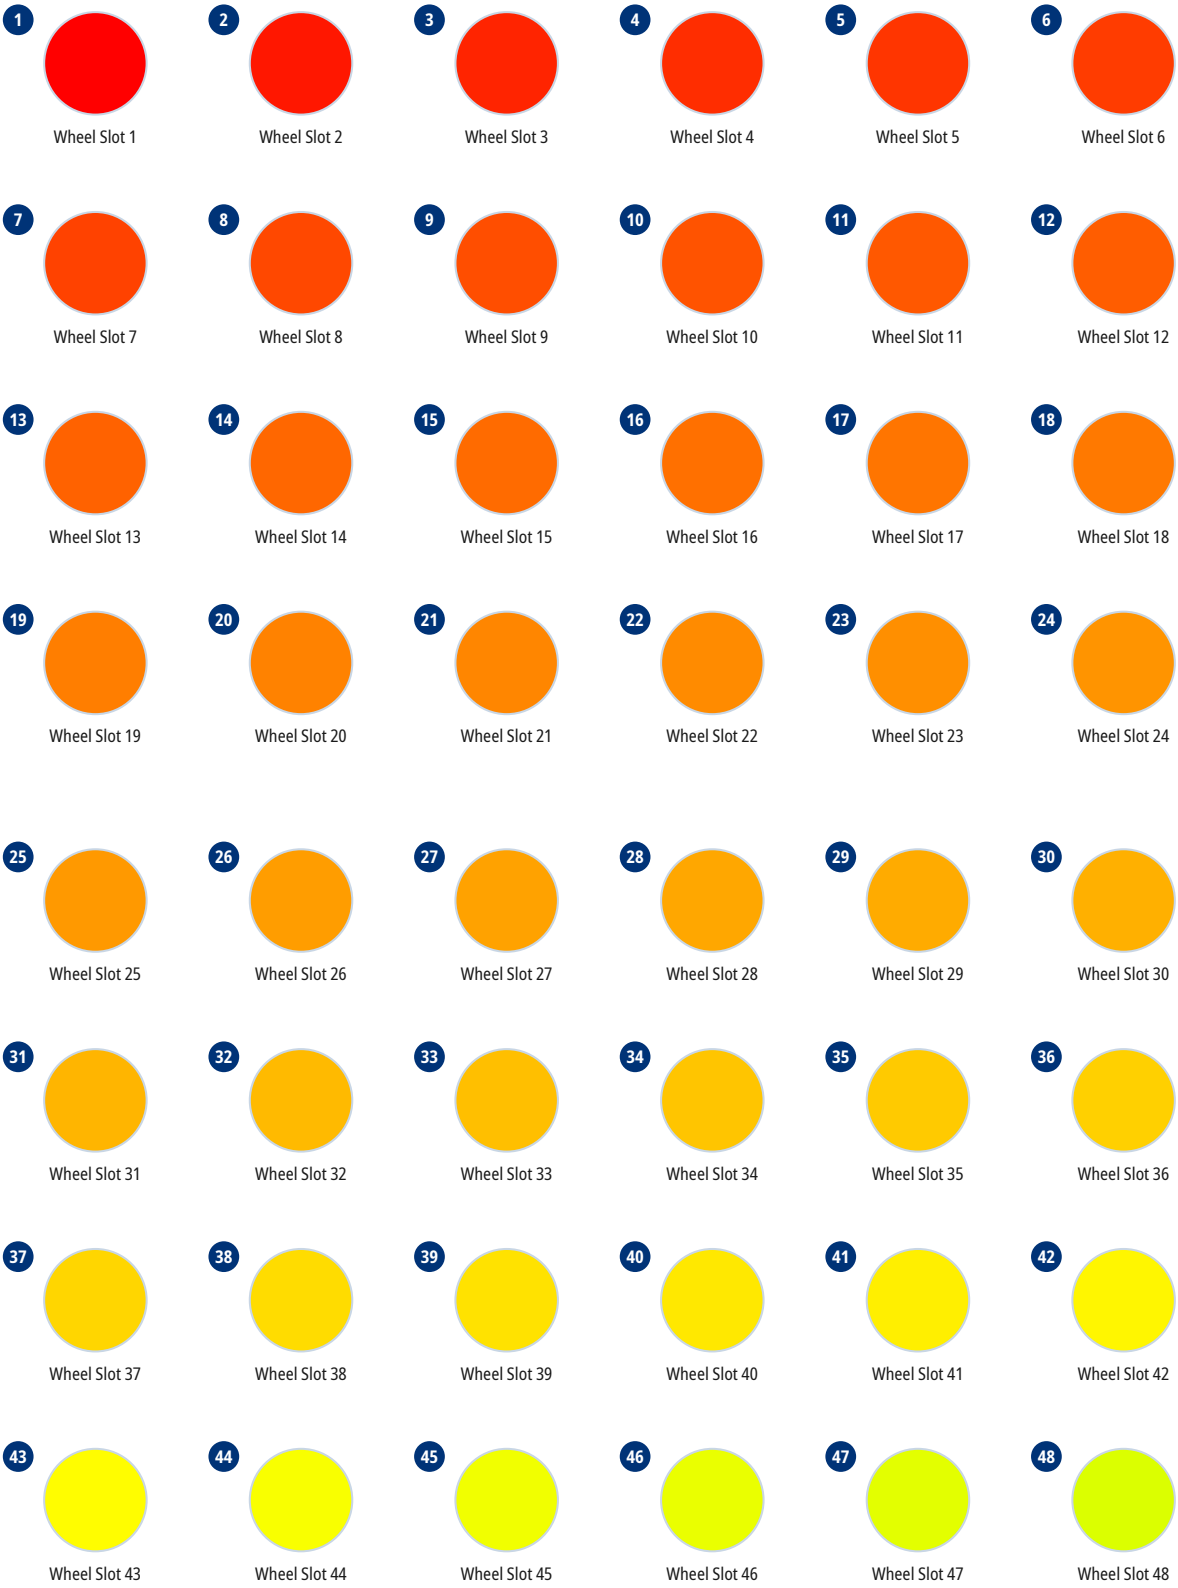
1
Wheel Slot 1
2
Wheel Slot 2
3
Wheel Slot 3
4
Wheel Slot 4
5
Wheel Slot 5
6
Wheel Slot 6
7
Wheel Slot 7
8
Wheel Slot 8
9
Wheel Slot 9
10
Wheel Slot 10
11
Wheel Slot 11
12
Wheel Slot 12
13
Wheel Slot 13
14
Wheel Slot 14
15
Wheel Slot 15
16
Wheel Slot 16
17
Wheel Slot 17
18
Wheel Slot 18
19
Wheel Slot 19
20
Wheel Slot 20
21
Wheel Slot 21
22
Wheel Slot 22
23
Wheel Slot 23
24
Wheel Slot 24
25
Wheel Slot 25
26
Wheel Slot 26
27
Wheel Slot 27
28
Wheel Slot 28
29
Wheel Slot 29
30
Wheel Slot 30
31
Wheel Slot 31
32
Wheel Slot 32
33
Wheel Slot 33
34
Wheel Slot 34
35
Wheel Slot 35
36
Wheel Slot 36
37
Wheel Slot 37
38
Wheel Slot 38
39
Wheel Slot 39
40
Wheel Slot 40
41
Wheel Slot 41
42
Wheel Slot 42
43
Wheel Slot 43
44
Wheel Slot 44
45
Wheel Slot 45
46
Wheel Slot 46
47
Wheel Slot 47
48
Wheel Slot 48


49
Wheel Slot 49
50
Wheel Slot 50
51
Wheel Slot 51
52
Wheel Slot 52
53
Wheel Slot 53
54
Wheel Slot 54
55
Wheel Slot 55
56
Wheel Slot 56
57
Wheel Slot 57
58
Wheel Slot 58
59
Wheel Slot 59
60
Wheel Slot 60
61
Wheel Slot 61
62
Wheel Slot 62
63
Wheel Slot 63
64
Wheel Slot 64
65
Wheel Slot 65
66
Wheel Slot 66
67
Wheel Slot 67
68
Wheel Slot 68
69
Wheel Slot 69
70
Wheel Slot 70
71
Wheel Slot 71
72
Wheel Slot 72
73
Wheel Slot 73
74
Wheel Slot 74
75
Wheel Slot 75
76
Wheel Slot 76
77
Wheel Slot 77
78
Wheel Slot 78
79
Wheel Slot 79
80
Wheel Slot 80
81
Wheel Slot 81
82
Wheel Slot 82
83
Wheel Slot 83
84
Wheel Slot 84
85
Wheel Slot 85
86
Wheel Slot 86
87
Wheel Slot 87
88
Wheel Slot 88
89
Wheel Slot 89
90
Wheel Slot 90
91
Wheel Slot 91
92
Wheel Slot 92
93
Wheel Slot 93
94
Wheel Slot 94
95
Wheel Slot 95
96
Wheel Slot 96

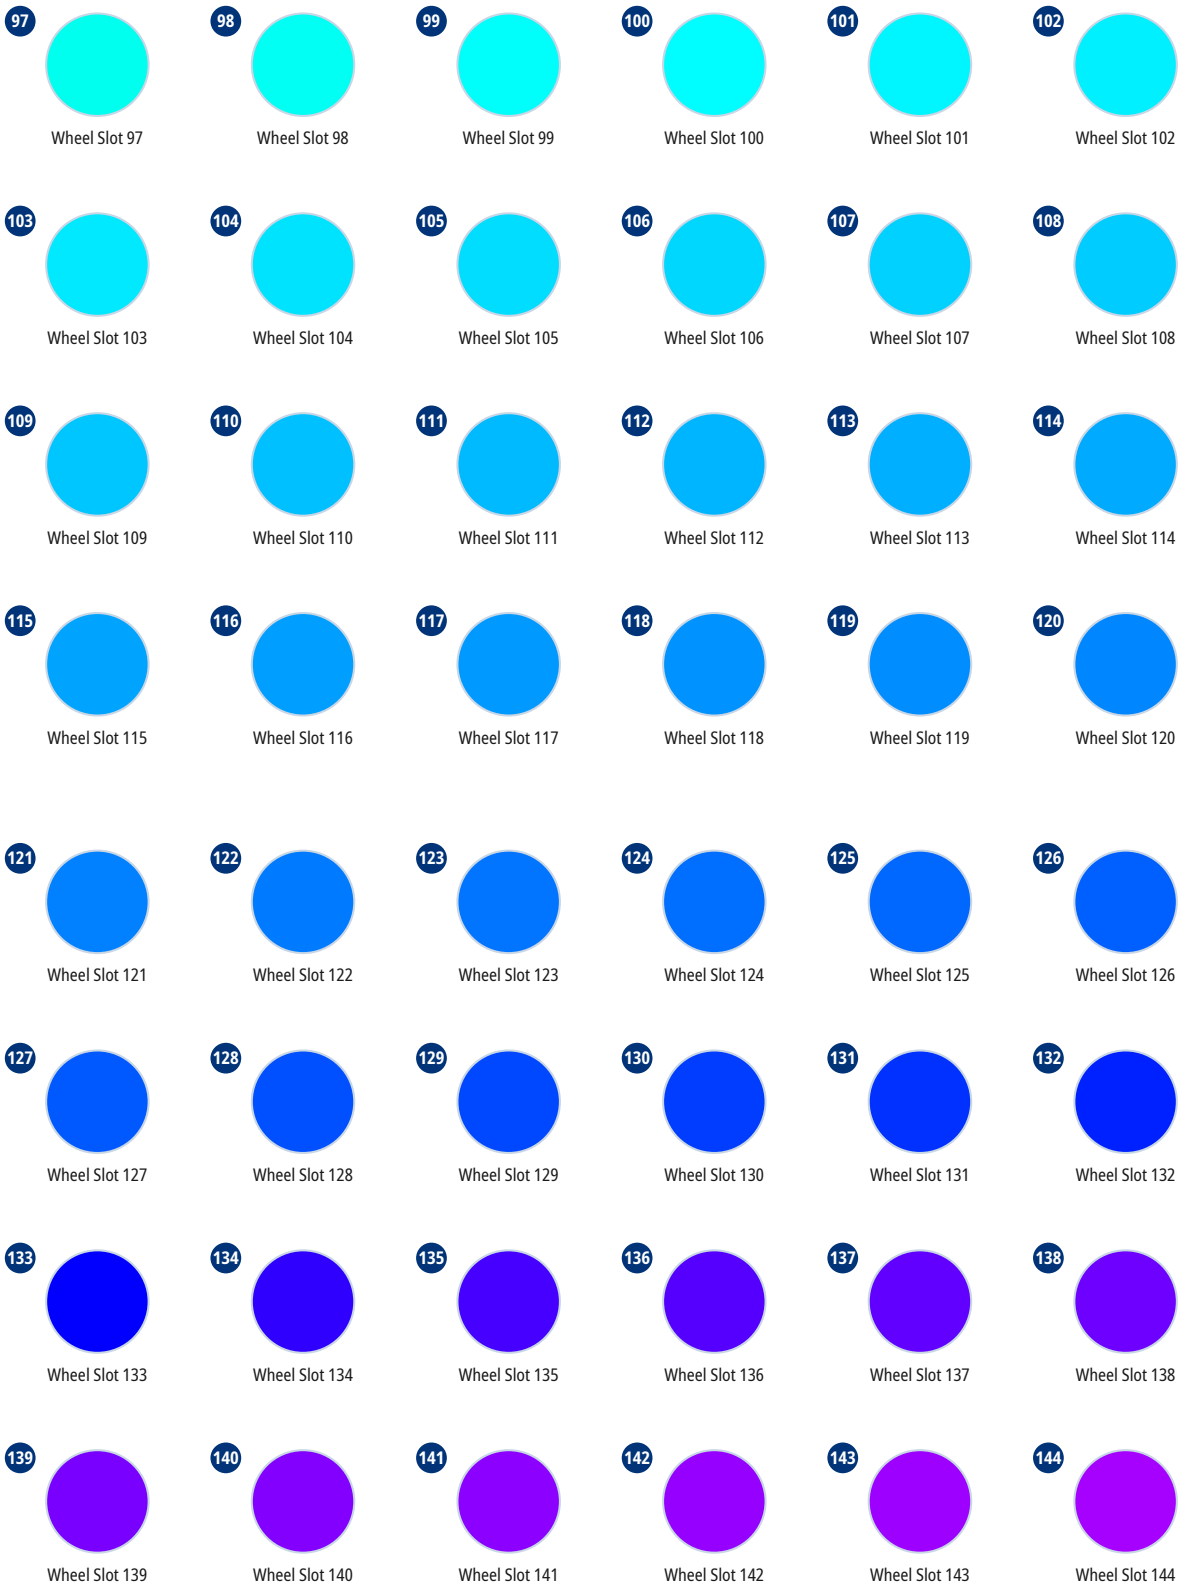
97
Wheel Slot 97
98
Wheel Slot 98
99
Wheel Slot 99
100
Wheel Slot 100
101
Wheel Slot 101
102
Wheel Slot 102
103
Wheel Slot 103
104
Wheel Slot 104
105
Wheel Slot 105
106
Wheel Slot 106
107
Wheel Slot 107
108
Wheel Slot 108
109
Wheel Slot 109
110
Wheel Slot 110
111
Wheel Slot 111
112
Wheel Slot 112
113
Wheel Slot 113
114
Wheel Slot 114
115
Wheel Slot 115
116
Wheel Slot 116
117
Wheel Slot 117
118
Wheel Slot 118
119
Wheel Slot 119
120
Wheel Slot 120
121
Wheel Slot 121
122
Wheel Slot 122
123
Wheel Slot 123
124
Wheel Slot 124
125
Wheel Slot 125
126
Wheel Slot 126
127
Wheel Slot 127
128
Wheel Slot 128
129
Wheel Slot 129
130
Wheel Slot 130
131
Wheel Slot 131
132
Wheel Slot 132
133
Wheel Slot 133
134
Wheel Slot 134
135
Wheel Slot 135
136
Wheel Slot 136
137
Wheel Slot 137
138
Wheel Slot 138
139
Wheel Slot 139
140
Wheel Slot 140
141
Wheel Slot 141
142
Wheel Slot 142
143
Wheel Slot 143
144
Wheel Slot 144

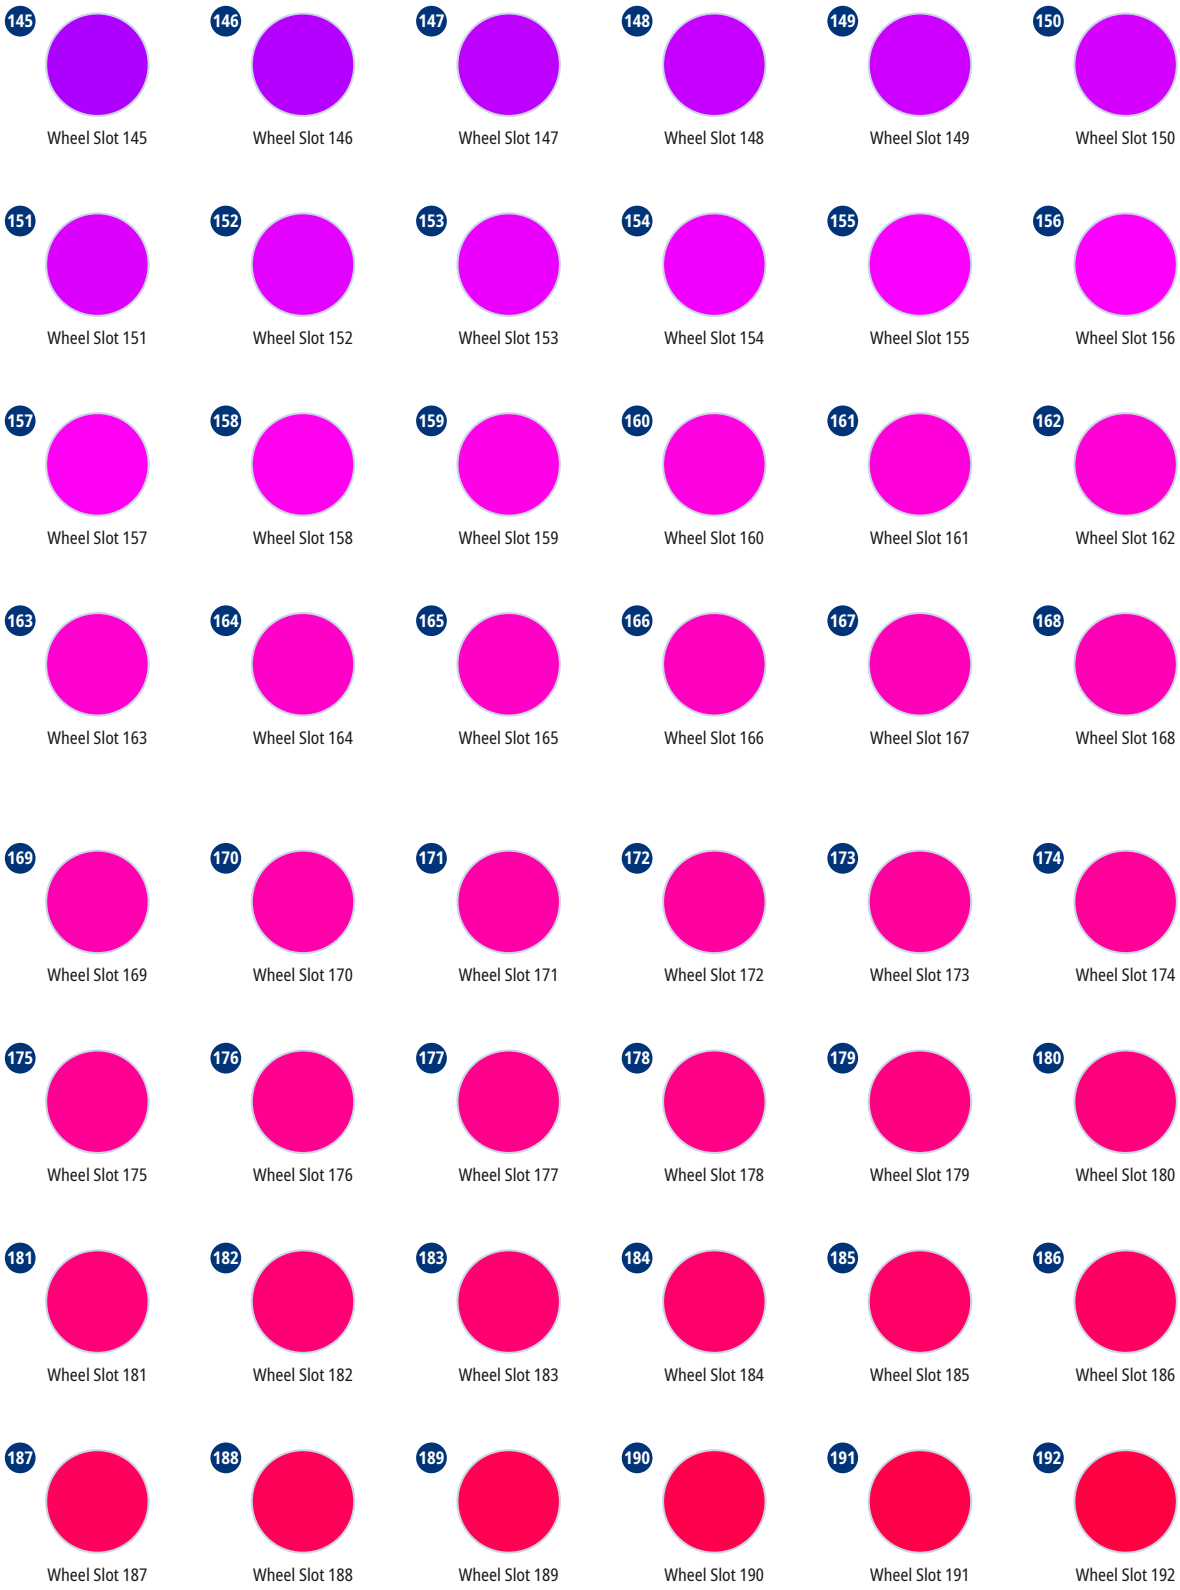
145
Wheel Slot 145
146
Wheel Slot 146
147
Wheel Slot 147
148
Wheel Slot 148
149
Wheel Slot 149
150
Wheel Slot 150
151
Wheel Slot 151
152
Wheel Slot 152
153
Wheel Slot 153
154
Wheel Slot 154
155
Wheel Slot 155
156
Wheel Slot 156
157
Wheel Slot 157
158
Wheel Slot 158
159
Wheel Slot 159
160
Wheel Slot 160
161
Wheel Slot 161
162
Wheel Slot 162
163
Wheel Slot 163
164
Wheel Slot 164
165
Wheel Slot 165
166
Wheel Slot 166
167
Wheel Slot 167
168
Wheel Slot 168
169
Wheel Slot 169
170
Wheel Slot 170
171
Wheel Slot 171
172
Wheel Slot 172
173
Wheel Slot 173
174
Wheel Slot 174
175
Wheel Slot 175
176
Wheel Slot 176
177
Wheel Slot 177
178
Wheel Slot 178
179
Wheel Slot 179
180
Wheel Slot 180
181
Wheel Slot 181
182
Wheel Slot 182
183
Wheel Slot 183
184
Wheel Slot 184
185
Wheel Slot 185
186
Wheel Slot 186
187
Wheel Slot 187
188
Wheel Slot 188
189
Wheel Slot 189
190
Wheel Slot 190
191
Wheel Slot 191
192
Wheel Slot 192

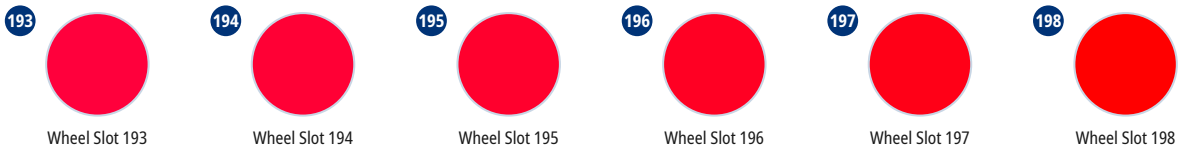

Cells (pixels)



5 cells where the GDTF file places them (seen from above), numbered in the file's order; the mode “35ch” drives them together.

8 DMX channels

Units in one DMX universe

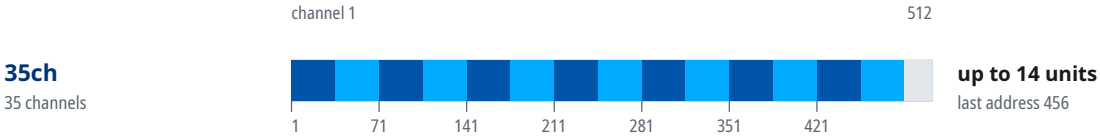

Start addresses of 20 units in the mode “35ch”

Unit	Start address	Unit	Start address	Unit	Start address	Unit	Start address
1	1	6	176	11	351	16	U2 · 36
2	36	7	211	12	386	17	U2 · 71
3	71	8	246	13	421	18	U2 · 106
4	106	9	281	14	456	19	U2 · 141
5	141	10	316	15	U2 · 1	20	U2 · 176

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

Mode 35ch

If the device receives DMX in this mode but gives no light, check these channels: CH 1 Dimmer 1 above 0; CH 2 Dimmer 2 above 0; CH 3 Dimmer 3 above 0; CH 4 Dimmer 4 above 0; CH 5 Dimmer 5 above 0. The GDTF file gives these values for a console's Highlight function: CH 1 Dimmer 1 255, CH 2 Dimmer 2 255, CH 3 Dimmer 3 255, CH 4 Dimmer 4 255, CH 5 Dimmer 5 255.

Channel functions at a glance

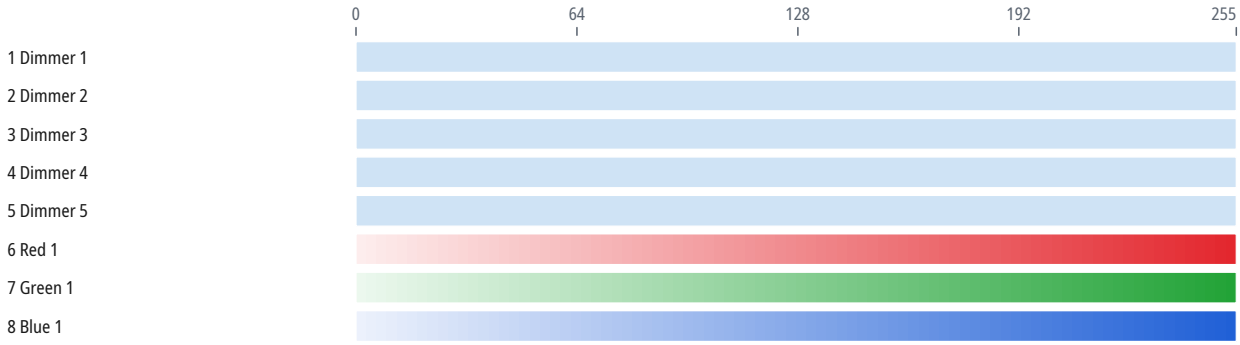

CH	Function	DMX	Description
1	Dimmer 1	0–255	
2	Dimmer 2	0–255	
3	Dimmer 3	0–255	
4	Dimmer 4	0–255	
5	Dimmer 5	0–255	
6	Red 1	0–255	
7	Green 1	0–255	
8	Blue 1	0–255	

CH 6–35: 10 cells of 3 channels each. Every cell works as cell 1 in the table above (CH 6–8); the table below gives each cell's channel numbers.

Cell	Red	Green	Blue	Cell	Red	Green	Blue	Cell	Red	Green	Blue
1	6	7	8	2	9	10	11	3	12	13	14
4	15	16	17	5	18	19	20	6	21	22	23
7	24	25	26	8	27	28	29	9	30	31	32
10	33	34	35								

9 Technical specifications

Parameter	Value
Weight	7.5 kg
Operating temperature	0 to 45 °C

Spot diameter

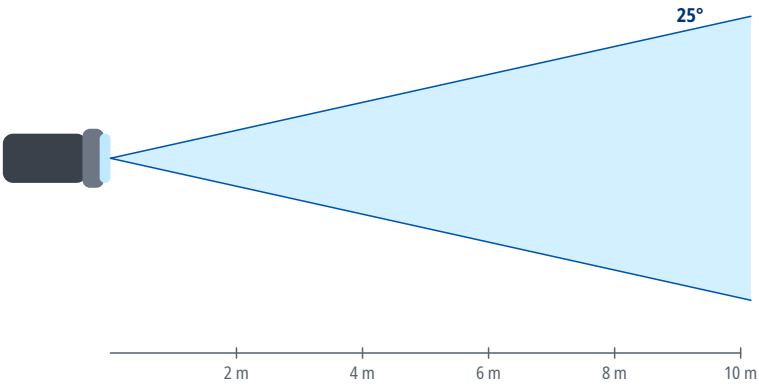

Distance	Ø 25°
2 m	0.89 m
4 m	1.8 m
6 m	2.7 m
8 m	3.5 m
10 m	4.4 m
15 m	6.7 m

Spot diameter square to the beam axis, calculated from the beam angle.

10 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

11 Troubleshooting

Problem	Remedy
The device does not switch on	Check the supply voltage, the cables and the fuse, if the device has one.
The device does not respond to DMX	Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe).
The device behaves erratically or flickers	Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter.
Only some devices on the line respond	Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on.
Devices respond to the wrong channels or affect each other	Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller.
The device or the connected load does not light up although it receives DMX	Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open.

12 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.