## DMX REFERENCE

# LH270

User Test




| | |
|---|---|
| **Manufacturer** | User Test |
| **GDTF file** | User_Test_LH270_8849.gdtf |
| **GDTF revision** | Test V1.3 · 2020-10-20 |
| **Generated** | 2026-11-24 |

# Contents

1 About this manual 2
2 Quick reference 2
3 Safety instructions 3
4 Product description 4
5 Installation 4
6 Connections 4
7 Operation 5
8 Functions at a glance 6
9 DMX channels 8
Mode Standard 9
10 Technical specifications 18
11 Maintenance and cleaning 18
12 Troubleshooting 19
13 Disposal 19

# 1 About this manual

This document describes the LH270 by User Test. It was compiled from the GDTF file User_Test_LH270_8849.gdtf from the GDTF-Share library.

File revision: “Test V1.3”.

The DMX modes, the channel functions and the technical data are given as the GDTF file states them. Installation, operation from the device's control panel, service and safety instructions are described in the manufacturer's original user manual, which takes precedence over this document.

This document was not issued or endorsed by User Test; product names and trademarks belong to their owners.

Safety notices are marked with signal words according to the severity of the hazard: DANGER – an imminent hazard that will result in death or serious injury; WARNING – a potential hazard that could result in death or serious injury; CAUTION – a potential hazard that could result in minor injury or property damage; NOTE – additional information for correct and safe use.

> **NOTE** This product is designed for stage and effect lighting. It is not suitable for household room illumination.

# 2 Quick reference

### DMX modes

| Mode | Channels | Units in one universe | First start addresses |
|---|---|---|---|
| Standard | 39 | 13 | 1, 40, 79, 118, ... |

### No light? Check these channels

- Standard: CH 6 Shutter at 32–63, 96–127, 160–191 or 224–255 “Open”


Read the manual before use


Do not stare into the light


Indoor use only

# 3 Safety instructions



Read the manual before use



Do not stare into the light



Indoor use only

**⚠ WARNING**

- This device is intended for professional use. Installation, connection, setup and maintenance must be carried out only by suitably qualified persons who have read this manual.
- Use the device only for its intended purpose and as described in this manual.
- Do not open the housing and do not modify or tamper with the device. Refer all repairs to an authorized service center.
- Do not use the device if its housing, power or data cable, or a connector is damaged, if the device has been dropped, or if liquid or a foreign object has entered it. In such a case, have it checked by a service center.
- Disconnect the device from the power supply before cleaning, maintenance or any work on the connections.
- After moving the device from a cold to a warm environment, let it reach room temperature before switching it on to prevent condensation inside.
- The device is not a toy; keep it out of the reach of children.

**⚠ WARNING**

- This device is designed for indoor use only. Protect it from rain, splashing water, moisture and dust, and do not place containers with liquids on it.
- Do not operate the device in high humidity, near water, or where condensation can form on it.

**⚠ CAUTION**

- This device emits intense light. Do not look directly into the light source or the beam at close range; doing so may damage your eyes.
- Do not aim the beam at the eyes of people or animals at close range, and do not view the light source through optical instruments (binoculars, camera lenses).
- Do not aim the beam at flammable or heat-sensitive materials at close range.


**⚠ CAUTION**

- Strobe and fast flashing light effects can trigger epileptic seizures in susceptible people (photosensitive epilepsy) and can cause nausea or disorientation.
- Inform the audience and performers in advance that strobe effects will be used, for example with a notice at the entrance, and do not use them longer than necessary.

> ⚠ **WARNING**
>
> - The moving parts of the device (for example the head or arms) can move quickly and unexpectedly at any time – after power-on, during a reset, or on a command from the controller.
> - Keep yourself and any objects out of the range of movement. While the device is switched on, do not touch the moving parts, move them by hand, or obstruct their movement; this can cause injury (pinching) and damage the drive.
> - Do not carry the device by its moving parts. If the device has a transport lock, engage it before transport and release it before switching on.

# 4 Product description

**Range of movement**

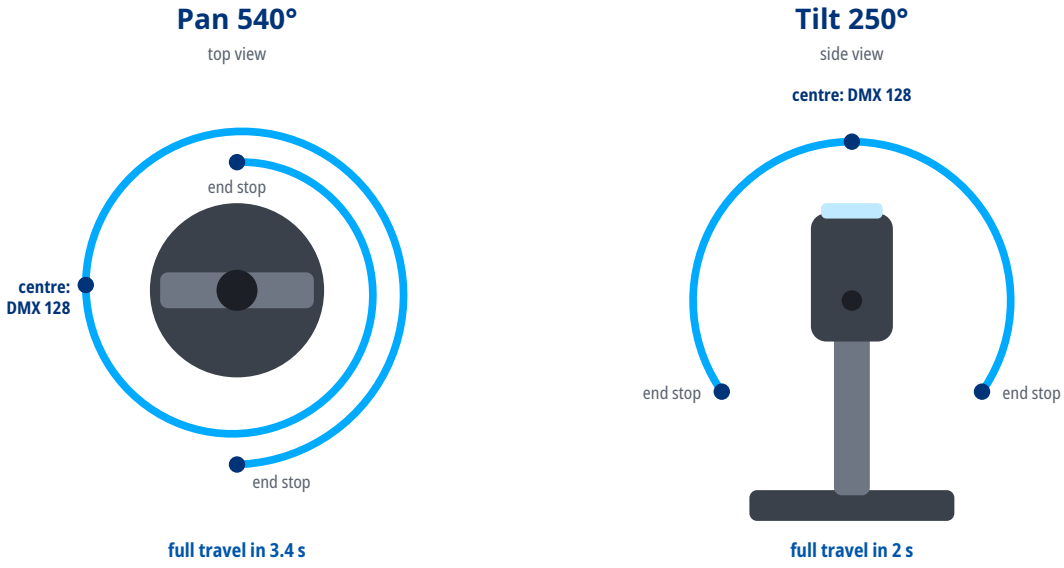


Full-travel times as stated in the GDTF file.

# 5 Installation

> ⚠ **WARNING**
>
> - Rigging must be carried out only by qualified persons in accordance with applicable regulations, in particular those for work at height.
> - The supporting structure and fixings must safely carry the weight of all suspended devices; verify their load capacity in advance.
> - Use suitable mounting hardware (for example truss clamps) and tighten all screw connections properly.
> - Always secure the suspended device against falling with a safety cable of adequate load capacity, routed through a fixed point of the device and around the supporting structure.
> - During installation and removal, keep people out of the area below the work position.
> - Regularly inspect the fixings and the safety cable for damage, corrosion and loosening.


# 6 Connections

- Use shielded cable designed for DMX512 with an impedance of 110 Ω. Ordinary microphone cable is

not suitable for DMX, especially over longer distances.

- Connect the devices in a daisy chain: connect the DMX OUT of one device to the DMX IN of the next. Do not split the line with Y-cables or wire it in a star; the line may be split only with a DMX splitter.
- Connect the shield to pin 1 only. Do not connect the shield (ground) to the metal shell of the connector; this can cause short circuits or erratic behavior.
- XLR pin assignment: pin 1 – shield (ground), pin 2 – Data- (Data Complement), pin 3 – Data+ (Data True). On 5-pin connectors, pins 4 and 5 are not connected; a 5-pin connector can be connected to a 3-pin one with a cable adapter.
- Terminate the end of the line (for impedance matching): plug an XLR connector with a 120 Ω, ¼ W resistor between pins 2 and 3 into the DMX OUT of the last device. This reduces the risk of erratic behavior.
- Connect no more than 32 devices to one DMX line. For more devices or longer runs, use a DMX splitter or booster.

**DMX line**

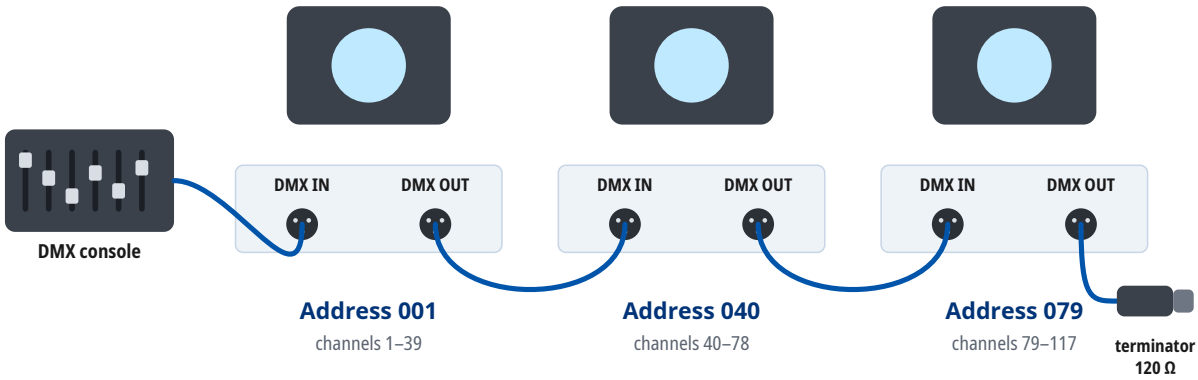


Mode Standard: every unit occupies 39 channels from its address. At most 32 units on one line; for more units or longer runs use a DMX splitter. A 120 Ω terminator closes the last DMX OUT.

# 7 Operation

**Setting the DMX address**

- The device occupies as many consecutive channels in the DMX universe as the selected DMX mode uses, starting at the set start address.
- Number of channels occupied in the DMX mode “Standard”: 39.
- Choose start addresses so that the channels of individual devices do not overlap and the last occupied channel does not exceed 512. Devices with the same start address and mode respond identically.
- For several devices in a row in the DMX mode “Standard”, you can use, for example, the start addresses 1, 40, 79, 118.
- The DMX mode set on the device must match the fixture profile (personality) used in the controller.
- The device supports RDM (Remote Device Management), two-way communication with the controller over the DMX line.

# 8 Functions at a glance


## Functions in each DMX mode


| | Standard<br>39 channels |
|---|---|
| Pan / Tilt | 1, 3 |
| Dimmer | 7, 8 * |
| Shutter / strobe | 6 |
| Color mixing | 15–17 |
| Color wheel | 14 |
| Gobo wheel | 20, 22 |
| Gobo rotation | 21 |
| Prism | 25, 26 |
| Frost | 27 |
| Zoom | 10 * |
| Focus | 11–13 |
| Iris | 24 |
| Animation wheel | 23 |
| Effects / macros | 18, 25, 38 |


* The function works only when another channel switches it on; see the DMX table.

## Color wheel

1 Color 1: Open
DMX 0–19

2 
Red
DMX 20–37

3 
Green
DMX 38–55

4 
Blue
DMX 56–73

5 
Orange
DMX 74–91

## Gobo wheel 1

1 Gobo 1: Open
DMX 0–15

2 
RG1
DMX 16–27

3 
RG2
DMX 28–39


4 
RG3
DMX 40–51

5 
RG4
DMX 52–63

6 
RG5
DMX 64–75


7 
RG6
DMX 76–88

## Gobo wheel 2

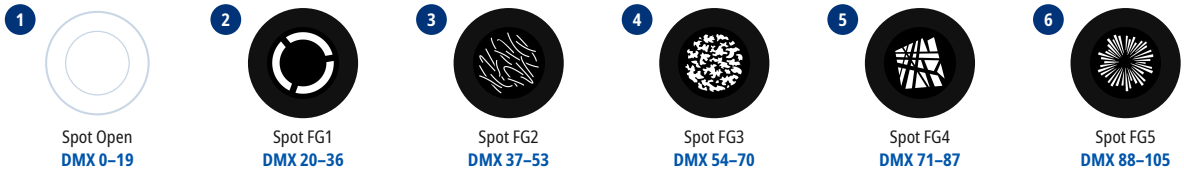


1 Spot Open DMX 0–19
2 Spot FG1 DMX 20–36
3 Spot FG2 DMX 37–53
4 Spot FG3 DMX 54–70
5 Spot FG4 DMX 71–87
6 Spot FG5 DMX 88–105
7 Spot Open DMX 0–19
8 Spot FG1 DMX 20–36
9 Spot FG2 DMX 37–53
10 Spot FG3 DMX 54–70
11 Spot FG4 DMX 71–87
12 Laser FG5 DMX 88–105

## Prism

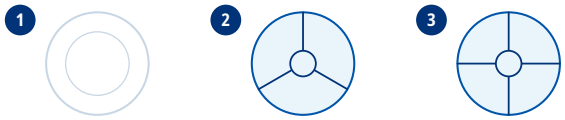

1 Prism 1: Open DMX 0–31
2 3 facets 3 Prism DMX 32–63
3 4 facets Linear Prism DMX 64–95


## Strobe rate

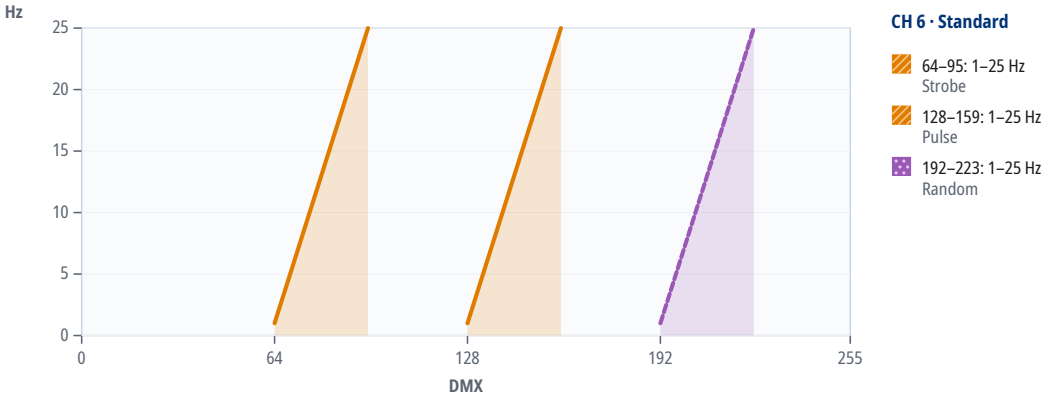

# 9 DMX channels

### Units in one DMX universe

**Standard**
39 channels

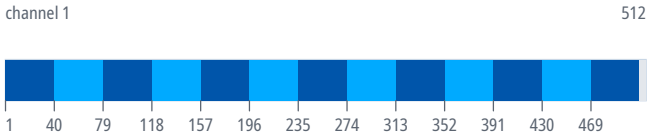


**up to 13 units**
last address 469

### Start addresses of 20 units in the mode “Standard”

| Unit | Start address | Unit | Start address | Unit | Start address | Unit | Start address |
|---|---|---|---|---|---|---|---|
| 1 | 1 | 6 | 196 | 11 | 391 | 16 | U2 · 79 |
| 2 | 40 | 7 | 235 | 12 | 430 | 17 | U2 · 118 |
| 3 | 79 | 8 | 274 | 13 | 469 | 18 | U2 · 157 |
| 4 | 118 | 9 | 313 | 14 | U2 · 1 | 19 | U2 · 196 |
| 5 | 157 | 10 | 352 | 15 | U2 · 40 | 20 | U2 · 235 |

Where a DMX universe is full, the next units continue in the next universe: “U2 · 1” is address 1 in the second universe, counted from the universe of the first unit.

## Mode Standard


16-bit parameters use two channels, coarse and fine: value = 256 × coarse value + fine value.

If the device receives DMX in this mode but gives no light, check these channels: CH 6 Shutter at 32–63, 96–127, 160–191 or 224–255 “Open”. The GDTF file gives these values for a console's Highlight function: CH 6 Shutter 63, CH 7 Dimmer 1 255, CH 15 Cyan 0, CH 16 Magenta 0, CH 17 Yellow 0.

### Channel functions at a glance



## Channel functions at a glance

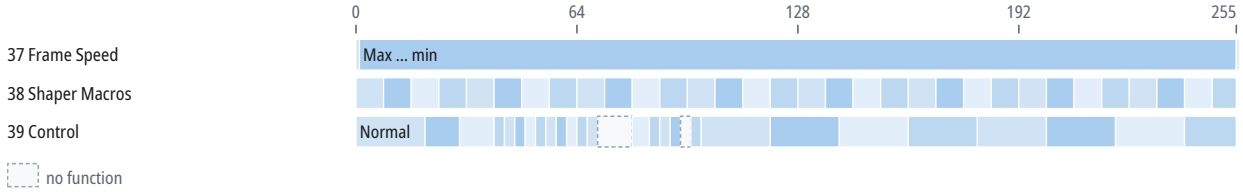


| CH | Function | DMX | Description |
|---|---|---|---|
| **1** | Pan | 0–127 | Min ... center |
| | | 128–255 | Center ... max |
| | | 255 | Max |
| **2** | Pan Fine | 0–255 | Fine adjustment of CH 1 |
| **3** | Tilt | 0–127 | Min ... center |
| | | 128–255 | Center ... max |
| | | 255 | Max |
| **4** | Tilt Fine | 0–255 | Fine adjustment of CH 3 |
| **5** | Speed Pan/Tilt | 0 | Max |
| | | 1–224 | Max ... min |
| | | 225 | Min |
| | | 226–235 | BO by Movement |
| | | 236–245 | BO by all Wheel |
| | | 246–255 | Position MSpeed 1 |
| **6** | Shutter | 0–31 | Shutter: Closed |
| | | 32–63 | Shutter: Open |
| | | 64 | Min Strobe |
| | | 65–94 | Min Strobe ... max Strobe |
| | | 95 | Max Strobe |
| | | 96–127 | Open |
| | | 128 | Min Pulse |
| | | 129–158 | Min Pulse ... max Pulse |
| | | 159 | Max Pulse |
| | | 160–191 | Open |
| | | 192 | Min Rnd |
| | | 193–222 | Min Rnd ... maxRnd |
| | | 223 | maxRnd |
| | | 224–255 | Open |
| **7** | Dimmer 1 | | When Dimmer Mode is 0: |
| | | 0 | Closed |
| | | 1–254 | Closed ... Open |
| | | 255 | Open |
| **8** | Dimmer 2 | | When Dimmer Mode is 0: |
| | | 0 | Closed |
| | | 1–254 | Closed ... Open |

| CH | Function | DMX | Description |
|---|---|---|---|
| **8** | Dimmer 2 (continued) | 255 | Open |
| **9** | Dimmer Curve | 0–20 | Standard |
| | | 21–40 | Stage |
| | | 41–60 | TV |
| | | 61–80 | Architecural |
| | | 81–100 | Theatre |
| | | 101–255 | Default to Unit Setting |
| **10** | Zoom | | When Dimmer Mode is 0: |
| | | 0 | Narrow |
| | | 1–126 | Narrow ... normal |
| | | 127 | Normal |
| | | 128–254 | Normal ... wide |
| | | 255 | Wide |
| | | | When Dimmer Mode is 0: |
| | | 0 | Narrow |
| | | 1–126 | Narrow ... normal |
| | | 127 | Normal |
| | | 128–254 | Normal ... wide |
| | | 255 | Wide |
| **11** | Focus | 0 | Min |
| | | 1–254 | Min ... max |
| | | 255 | Max |
| **12** | Focus Distance | 0–50 | Safe |
| | | 51–100 | 10m(LED/LED+Laser) |
| | | 101–150 | 12m(all mode) |
| | | 151–200 | 15m(all mode) |
| | | 201–255 | 17m(Laser mode) |
| **13** | Focus Adjust | 0 | Min |
| | | 1–254 | Min ... max |
| | | 255 | Max |
| **14** | Colors | 0–19 | Color 1: Open |
| | | 20–37 | Red |
| | | 38–55 | Green |
| | | 56–73 | Blue |
| | | 74–91 | Orange |
| | | 92–127 | Color 1 1 |
| | | 128 | >>> |
| | | 129–188 | >> (1125–0.84 °/s) |
| | | 189 | > |
| | | 190–193 | Color Spin: Stop |
| | | 194 | < |
| | | 195–254 | << (0.84–1125 °/s) |

| CH | Function | DMX | Description |
|---|---|---|---|
| **14** | Colors (continued) | 255 | <<< |
| **15** | Cyan | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **16** | Magenta | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **17** | Yellow | 0 | Min |
| | | 1–254 | Min ... Max |
| | | 255 | Max |
| **18** | Color Macro | 0–31 | Safe |
| | | 32–39 | Macro 1 |
| | | 40–47 | Macro 2 |
| | | 48–55 | Macro 3 |
| | | 56–63 | Macro 4 |
| | | 64–71 | Macro 5 |
| | | 72–79 | Macro 6 |
| | | 80–87 | Macro 7 |
| | | 88–95 | Macro 8 |
| | | 96–103 | Macro 9 |
| | | 104–111 | Macro 10 |
| | | 112–119 | Macro 11 |
| | | 120–127 | Macro 12 |
| | | 128–135 | Macro 13 |
| | | 136–143 | Macro 14 |
| | | 144–151 | Macro 15 |
| | | 152–159 | Macro 16 |
| | | 160–167 | Macro 17 |
| | | 168–175 | Macro 18 |
| | | 176–183 | Macro 19 |
| | | 184–191 | Macro 20 |
| | | 192–199 | Macro 21 |
| | | 200–207 | Macro 22 |
| | | 208–215 | Macro 23 |
| | | 216–223 | Macro 24 |
| | | 224–231 | Macro 25 |
| | | 232–239 | Macro 26 |
| | | 240–247 | Macro 27 |
| | | 248–255 | Random CMY |
| **19** | Color Mix Speed | 0 | Max |
| | | 1–254 | Max ... min |
| | | 255 | Min |

| CH | Function | DMX | Description |
|---|---|---|---|
| **20** | Gobo | 0–15 | Gobo 1: Open |
| | | 16–27 | RG1 |
| | | 28–39 | RG2 |
| | | 40–51 | RG3 |
| | | 52–63 | RG4 |
| | | 64–75 | RG5 |
| | | 76–87 | RG6 |
| | | 88–104 | RG1 Shake (1–10 Hz) |
| | | 105–121 | RG2 Shake (1–10 Hz) |
| | | 122–138 | RG3 Shake (1–10 Hz) |
| | | 139–155 | RG4 Shake (1–10 Hz) |
| | | 156–172 | RG5 Shake (1–10 Hz) |
| | | 173–189 | RG6 Shake (1–10 Hz) |
| | | 190 | >>> |
| | | 191–220 | >> (878.4–0.84 °/s) |
| | | 221 | > |
| | | 222–223 | Gobo Wheel 1 Spin: Stop |
| | | 224 | < |
| | | 225–254 | << (0.84–878.4 °/s) |
| | | 255 | <<< |
| **21** | Gobo Rotation | 0 | Zero |
| | | 1–126 | Zero ... max Index |
| | | 127 | Max Index |
| | | 128 | >>> |
| | | 129–188 | >> (439.2–0.84 °/s) |
| | | 189 | > |
| | | 190–193 | Spin: Stop |
| | | 194 | < |
| | | 195–254 | << (0.84–439.2 °/s) |
| | | 255 | <<< |
| **22** | Gobo 2 | | When Dimmer Mode.Dimmer Mode.Dimmer Mode 1 is 0: |
| | | 0–19 | Spot Open |
| | | 20–36 | Spot FG1 |
| | | 37–53 | Spot FG2 |
| | | 54–70 | Spot FG3 |
| | | 71–87 | Spot FG4 |
| | | 88–104 | Spot FG5 |
| | | 105–121 | Spot FG1 Shake (1–10 Hz) |
| | | 122–138 | Spot FG2 Shake (1–10 Hz) |
| | | 139–155 | Spot FG3 Shake (1–10 Hz) |
| | | 156–172 | Spot FG4 Shake (1–10 Hz) |
| | | 173–189 | Spot FG5 Shake (1–10 Hz) |

| CH | Function | DMX | Description |
|---|---|---|---|
| **22** | Gobo 2 (continued) | 190 | >>> |
| | | 191–220 | >> (615–0.84 °/s) |
| | | 221 | > |
| | | 222–223 | Gobo Wheel 2 Spin: Stop |
| | | 224 | < |
| | | 225–254 | << (0.84–615 °/s) |
| | | 255 | <<< |
| | | | When Dimmer Mode.Dimmer Mode.Dimmer Mode 1 is 0: |
| | | 0–19 | Laser Open |
| | | 20–36 | Laser FG1 |
| | | 37–53 | Laser FG2 |
| | | 54–70 | Laser FG3 |
| | | 71–87 | Laser FG4 |
| | | 88–104 | Laser FG5 |
| | | 105–121 | Laser FG1 Shake (1–10 Hz) |
| | | 122–138 | Laser FG2 Shake (1–10 Hz) |
| | | 139–155 | Laser FG3 Shake (1–10 Hz) |
| | | 156–172 | Laser FG4 Shake (1–10 Hz) |
| | | 173–189 | Laser FG5 Shake (1–10 Hz) |
| | | 190 | >>> |
| | | 191–220 | >> (615–0.84 °/s) |
| | | 221 | > |
| | | 222–223 | Gobo Wheel 3 Spin: Stop |
| | | 224 | < |
| | | 225–254 | << (0.84–615 °/s) |
| | | 255 | <<< |
| **23** | Animation Wheel | 0–7 | Animation Wheel 1: Open |
| | | 8 | >>> |
| | | 9–126 | >> |
| | | 127 | > |
| | | 128–135 | Animation Rot: Stop |
| | | 136 | < |
| | | 137–254 | << |
| | | 255 | <<< |
| **24** | Iris | 0 | Iris: Open |
| | | 1–190 | Iris: Open ... Closed |
| | | 191 | Iris: Closed |
| | | 192 | Pulse closing fast |
| | | 193–222 | Pulse closing fast ... Pulse closing slow |
| | | 223 | Pulse closing slow |
| | | 224 | Pulse opening slow |
| | | 225–254 | Pulse opening slow ... Pulse opening fast |

| CH | Function | DMX | Description |
|---|---|---|---|
| **24** | Iris (continued) | 255 | Pulse opening fast |
| **25** | Prism | 0–31 | Prism 1: Open |
| | | 32–63 | 3 Prism |
| | | 64–95 | Linear Prism |
| | | 96–127 | 3+Linear Prism |
| | | 128–135 | Macro 1 |
| | | 136–143 | Macro 2 |
| | | 144–151 | Macro 3 |
| | | 152–159 | Macro 4 |
| | | 160–167 | Macro 5 |
| | | 168–175 | Macro 6 |
| | | 176–183 | Macro 7 |
| | | 184–191 | Macro 8 |
| | | 192–199 | Macro 9 |
| | | 200–207 | Macro 10 |
| | | 208–215 | Macro 11 |
| | | 216–223 | Macro 12 |
| | | 224–231 | Macro 13 |
| | | 232–239 | Macro 14 |
| | | 240–247 | Macro 15 |
| | | 248–255 | Macro 16 |
| **26** | Prism Rotation | 0 | Zero |
| | | 1–126 | Zero ... max Index |
| | | 127 | Max Index |
| | | 128 | >>> |
| | | 129–188 | >> (729.5–0.84 °/s) |
| | | 189 | > |
| | | 190–193 | Prism 1 Rot: Stop |
| | | 194 | < |
| | | 195–254 | << (0.84–729.5 °/s) |
| | | 255 | <<< |
| **27** | Frost | 0 | Open |
| | | 1–254 | Open ... 100% Frost |
| | | 255 | 100% Frost |
| **28** | Blade 1 A | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **29** | Blade 1 B | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **30** | Blade 2 A | 0 | Open |
| | | 1–254 | Open ... Closed |

| CH | Function | DMX | Description |
|---|---|---|---|
| **30** | Blade 2 A (continued) | 255 | Closed |
| **31** | Blade 2 B | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **32** | Blade 3 A | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **33** | Blade 3 B | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **34** | Blade 4 A | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **35** | Blade 4 B | 0 | Open |
| | | 1–254 | Open ... Closed |
| | | 255 | Closed |
| **36** | Shaper Rotation | 0 | 45 Deg |
| | | 1–127 | 45 Deg ... 0 |
| | | 128 | 0 |
| | | 129–254 | 0 ... -45 Deg |
| | | 255 | -45 Deg |
| **37** | Frame Speed | 0 | Max |
| | | 1–254 | Max ... min |
| | | 255 | Min |
| **38** | Shaper Macros | 0–7 | Safe |
| | | 8–15 | Macro 1 |
| | | 16–23 | Macro 2 |
| | | 24–31 | Macro 3 |
| | | 32–39 | Macro 4 |
| | | 40–47 | Macro 5 |
| | | 48–55 | Macro 6 |
| | | 56–63 | Macro 7 |
| | | 64–71 | Macro 8 |
| | | 72–79 | Macro 9 |
| | | 80–87 | Macro 10 |
| | | 88–95 | Macro 11 |
| | | 96–103 | Macro 12 |
| | | 104–111 | Macro 13 |
| | | 112–119 | Macro 14 |
| | | 120–127 | Macro 15 |
| | | 128–135 | Macro 16 |
| | | 136–143 | Macro 17 |

| CH | Function | DMX | Description |
|---|---|---|---|
| **38** | Shaper Macros (continued) | 144–151 | Macro 18 |
| | | 152–159 | Macro 19 |
| | | 160–167 | Macro 20 |
| | | 168–175 | Macro 21 |
| | | 176–183 | Macro 22 |
| | | 184–191 | Macro 23 |
| | | 192–199 | Macro 24 |
| | | 200–207 | Macro 25 |
| | | 208–215 | Macro 26 |
| | | 216–223 | Macro 27 |
| | | 224–231 | Macro 28 |
| | | 232–239 | Macro 29 |
| | | 240–247 | Macro 30 |
| | | 248–255 | Macro 31 |
| **39** | Control | 0–19 | Normal |
| | | 20–29 | Col any pos |
| | | 30–39 | Col/Gobo any pos |
| | | 40–42 | Display Off |
| | | 43–45 | Display ON |
| | | 46–48 | Fan Auto |
| | | 49–51 | Fan High |
| | | 52–54 | Fan Silent |
| | | 55–57 | Gamma=2'0 |
| | | 58–60 | Gamma=2'2 |
| | | 61–63 | Gamma=2'4 |
| | | 64–66 | Gamma=2'6 |
| | | 67–69 | Gamma=2'8 |
| | | 70–79 | No function |
| | | 80–84 | Reset All |
| | | 85–87 | Reset P/T |
| | | 88–90 | Reset Colors |
| | | 91–93 | Reset Gobos |
| | | 94–96 | No function |
| | | 97–99 | Reset Others |
| | | 100–119 | Internal pro 1 |
| | | 120–139 | Internal pro 2 |
| | | 140–159 | Internal pro 3 |
| | | 160–179 | Internal pro 4 |
| | | 180–199 | Internal pro 5 |
| | | 200–219 | Internal pro 6 |
| | | 220–239 | Internal pro 7 |
| | | 240–255 | Internal programs |


# 10 Technical specifications

| Parameter | Value |
|---|---|
| Light source | LED |
| Zoom | 6–47.5° |
| Pan | 540° |
| Tilt | 250° |
| RDM | yes (manufacturer ID 0x4753, device model ID 0x0640) |

### Speeds and ranges

| Parameter | Value |
|---|---|
| Strobe frequency | 1–25 Hz |
| Color wheel rotation | up to 1125 °/s (188 rpm) |
| Gobo wheel 1 rotation | up to 878.4 °/s (146 rpm) |
| Gobo wheel 2 rotation | up to 615 °/s (102 rpm) |
| Gobo 1 rotation | up to 439.2 °/s (73 rpm) |
| Prism rotation | up to 729.5 °/s (122 rpm) |
| Animation wheel rotation | up to 210.9 °/s (35 rpm) |

### Spot diameter

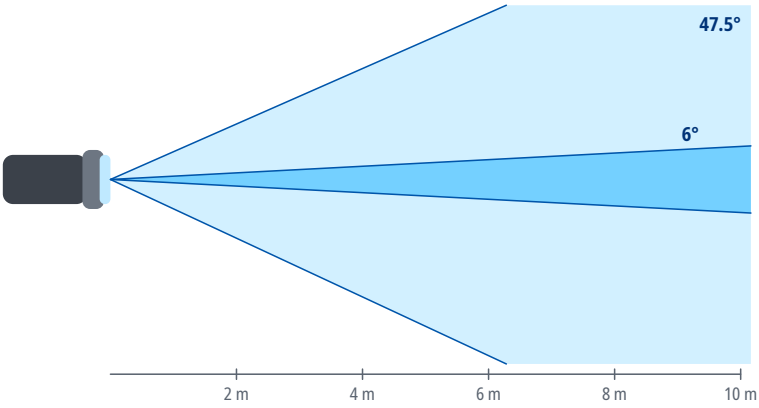


| Distance | Ø 6° | Ø 47.5° |
|---|---|---|
| 2 m | 0.21 m | 1.8 m |
| 4 m | 0.42 m | 3.5 m |
| 6 m | 0.63 m | 5.3 m |
| 8 m | 0.84 m | 7 m |
| 10 m | 1 m | 8.8 m |
| 15 m | 1.6 m | 13.2 m |

Spot diameter square to the beam axis, calculated from the beam angle.

# 11 Maintenance and cleaning

- Before cleaning and maintenance, switch the device off, disconnect it from the power supply and let it cool down.
- Clean the housing with a soft, dry or slightly damp cloth. Do not use solvents, abrasive cleaners or pressure washers, and make sure no liquid gets into the device.
- Clean optical parts (lenses, front glass), if the device has any, with a soft lint-free cloth and a cleaner intended for optics or glass.
- Regularly inspect the housing, cables, connectors and fixings. Have damaged parts replaced by a service center.
- How often to clean depends on the environment; dust, smoke and fog make the device dirty much faster.

# 12 Troubleshooting

| Problem | Remedy |
|---|---|
| The device does not switch on | Check the supply voltage, the cables and the fuse, if the device has one. |
| The device does not respond to DMX | Check the start address, the selected DMX mode and whether it matches the profile in the controller, the cable connection to DMX IN, and the controller output (universe). |
| The device behaves erratically or flickers | Check the terminator at the end of the line, the condition and wiring of the cables (shield on pin 1 only), the number of devices on the line (32 at most), and that the line is not split without a splitter. |
| Only some devices on the line respond | Check the cable and connectors between the last working and the first non-working device, and make sure all devices on the line are switched on. |
| Devices respond to the wrong channels or affect each other | Check that the addresses do not overlap and that the DMX mode on the devices matches the patch in the controller. |
| The device or the connected load does not light up although it receives DMX | Check the values of the dimmer, shutter and strobe channels against the DMX channel table. For the DMX modes for which the sources state it, the chapter DMX channels gives under the mode's heading which channels must be open. |
| Movement is reversed | Check whether Pan/Tilt inversion is enabled in the device menu or in the controller. |
| Moving parts do not reach the correct position after power-on or transport | Switch the device off and on again to reset the position, and make sure the transport lock, if any, is released. If this does not help, contact a service center. |
| Movement is jerky | Check the value of the Pan/Tilt speed channel, if the device has one, and the stability of the DMX signal. |

# 13 Disposal

The crossed-out wheeled bin symbol on the product, in the manual or on the packaging means that the product must not be disposed of with unsorted household waste at the end of its life.

Take the end-of-life equipment to a collection point, for example a municipal collection site or a retailer. Proper disposal enables materials to be recycled and helps prevent possible negative effects on the environment and human health.

Follow the regulations applicable in your country; in the Czech Republic, take-back is governed by Act No. 542/2020 Coll., on End-of-Life Products.

Recycle the packaging materials according to their type.